

PROFESSIONAL'S CHOICE!

PRE-INSTALLED STANDARD NOZZLE PERFORMANCE

Nozzle	Pressure PSI	Radius Ft.	Flow GPM
#1.5	30	28'	1.5
	40	32'	1.8
	50	34'	2.0
	60	35'	2.3
#3.0	30	32'	3.0
	40	35'	3.6
	50	37'	4.2
	60	39'	4.7
#4.5	30	32'	4.2
	40	40'	5.1
	50	41'	6.0
	60	43'	6.7
#6.0	30	35'	5.2
	40	38'	6.1
	50	43'	7.2
	60	44'	8.0

PRE-INSTALLED LOW ANGLE NOZZLE PERFORMANCE

Nozzle	Pressure PSI	Radius Ft.	Flow GPM
#1	30	15'	0.8
	40	19'	1.1
	50	21'	1.2
	60	22'	1.4
#2	30	26'	1.6
	40	29'	1.8
	50	31'	2.1
	60	32'	2.3
#3	30	25'	2.3
	40	29'	2.6
	50	31'	2.8
	60	33'	3.2
#4	30	30'	3.0
	40	33'	3.5
	50	35'	4.3
	60	37'	4.8

DATA REPRESENTS TEST RESULTS IN ZERO WIND FOR DIAL-A-NOZZLE. ADJUST FOR LOCAL CONDITIONS. RADIUS MAY BE REDUCED WITH NOZZLE RADIUS SCREW. ADJUSTMENT KEY AND NOZZLE RADIUS SCREW INCLUDED.



K-Rain Manufacturing Corp.
1640 Australian Avenue
Riviera Beach, FL 33404
Email: krain@k-rain.com
Web: http://www.k-rain.com

Made in U.S.A.

© K-Rain Manufacturing Corp.



**DIAL-A-NOZZLE®
GEAR DRIVEN SPRINKLER
WITH 8 PRE-INSTALLED
NOZZLES**

**ASPERSOR DE TURBINA CON
8 BOQUILLAS PREINSTALADAS**



4 STANDARD ANGLE NOZZLES



4 LOW ANGLE NOZZLES

**IT'S AS EASY AS 1..2..3
TO SET A K-RAIN SPRINKLER**

INSTALLATION: Sprinkler should be installed with the top even with ground level.

SETTING INSTRUCTIONS:



1. In order to set sprinkler you must establish the left starting point. **Standing behind the sprinkler, and using the palm of your hand or fingers, turn the top center of the sprinkler to the right until it stops; then turn it back to the left until it stops.**



2. Sprinkler must now be aligned so that the raised arrow points where you want the sprinkler to begin spraying. The operating nozzle is located under this arrow. To change your left start position, using the curved tip of the adjustment key, insert the key into the nozzle selection slot and angle back. Pull the riser up slowly and then grab with your hand. Turn riser in can so that the raised arrow is pointing to your left start position. **Or, turn the can on the pipe to align the arrow where you want the sprinkler to begin spraying.**



3. Set the spray pattern. The spray pattern can be adjusted anywhere from 40°-360°. **Hold the top center of the sprinkler (at the left starting point) and insert K-Rain key or screwdriver into center arrow. Turn until arrow points to desired setting.** You have now set the spray pattern.

TO SELECT NOZZLE:

With sprinkler running or riser popped up, insert flat screwdriver or K-Key into nozzle selection slot on top of the sprinkler. Rotate screwdriver or K-Key until desired nozzle is aligned with raised arrow on top. Radius adjustment screw can be inserted into the raised arrow to reduce the throw of water. Turn screw down with small flatblade screwdriver until it depresses the tip of the nozzle and desired radius is reached.

(NOTE: Nozzle Selection Can Not Be Changed When Radius Adjustment Screw is Installed!)

NOTE: Do not force or turn the sprinkler in the opposite way it is currently turning or you may damage the sprinkler.

FOR MEDIUM TO LARGE TURF WATERING

- Quiet, smooth rotation
- Waters 15' - 44'
- Adjustable & continuous full circle sprinkler in one
- 3/4" female inlet
- Replaces all major brands
- 1 year guarantee

**EASY DIAL-IN SPRAY PATTERN
40° - 360°**

