

F notice d'instruction

P 2
CIRCUIT IMPRIME
GB user instructions

P 3
PRINTED CIRCUIT BOARD
I istruzioni d'impiego

P 4
CIRCUITO STAMPATO

Code	Description	Parameter							
		220	228	231	232	233	234	247	248
		Soft ignition	Boiler version	Max CH Adjustable	Max DHW RPM percentage	min RPM percentage	Max CH RPM percentage	CH Press Detection Device	Semi-auto Filling
3580762	Genus Premium HP 45 FF	60	2	99	82	12	82	0	0
3580763	Genus Premium HP 45 FF	60	2	99	82	12	82	0	0
3580764	Genus Premium HP 45 FF	60	2	99	82	12	82	0	0
3580765	Genus Premium HP 65 FF	60	2	99	88	13	88	0	0
3580766	Genus Premium HP 65 FF	60	2	99	88	13	88	0	0
3580767	Genus Premium HP 65 FF	60	2	99	88	13	88	0	0
3580768	Talia Green System HP 45 FF	60	1	99	82	12	82	0	0
3580769	Talia Green System HP 65 FF	60	1	99	88	13	88	0	0
3580976	Genus Premium HP 85 FF	60	2	99	96	10	96	0	0
3580977	Genus Premium HP 85 FF	60	2	99	96	10	96	0	0
3580978	Genus Premium HP 85 FF	60	2	99	96	10	96	0	0
3580979	Genus Premium HP 100 FF	60	2	99	99	12	99	0	0
3580980	Genus Premium HP 100 FF	60	2	99	99	12	99	0	0
3580981	Genus Premium HP 100 FF	60	2	99	99	12	99	0	0
3580982	Talia Green System HP 85 FF	60	1	99	96	10	96	0	0
3580983	Talia Green System HP 100 FF	60	1	99	99	12	99	0	0

* Boiler version = 2 means storage with thermostat


* Boiler version = 1 means storage with NTC

INFORMATION

Replace the printed circuit :

PRINCIPAL printed circuit : 000342014400 - 000342016000

CONFIGURATION

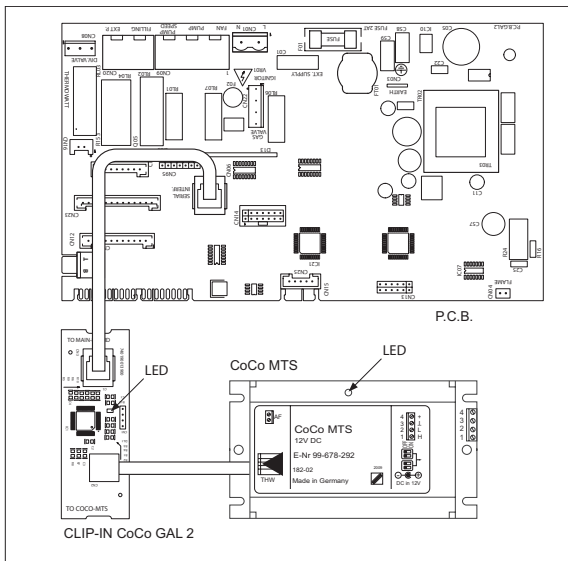

ADJUSTMENTS

SETTING THE LANGUAGE

1. Press the ON/OFF key to turn on the boiler.
2. Press Menu/OK. A blinking '0' is displayed
(The following text is displayed on the line below "Time-Date-Language").
3. Press Menu/OK again.
The numbers '00' will appear, with the second number blinking (language).
4. Press Menu/OK and turn the button of adjustment of 'temperature heating' to set language.
5. After selecting the language, press Menu/OK to confirm.
6. Press 'ESC' to return to the main screen.

PARAMETERS TO BE CHECKED :

Configure the parameters below according to the indications of the table pages 5>8.

- Parameter 21 : **Access code** : **234**
- Parameter 220 : Soft ignition
- Parameter 228 : Boiler version
- Parameter 231 : Max. CH Adjustable
- Parameter 232 : Max DHW RPM percentage
- Parameter 233 : Min RPM percentage
- Parameter 234 : Max CH RPM percentage
- Parameter 247 : CH Press Detection Device
- Parameter 248 : Semi-auto Filling

Adjust the parameters according to the configuration of the installation (see the installation instructions).