

1/16 SCALE BATTLE TANK (INSTRUCTION MANUAL)

2.4GHz REAL RADIO CONTROL



2.4GHz 对码确认方法:

Instruction on decoding confirmation

首次使用该坦克时，如果未有对码确认频率，须先进行频率配对。步骤如下：

- 1、打开遥控器和坦克车电源，遥控器电源灯亮和坦克车前灯闪烁；
- 2、按住遥控器启动按钮“S”不放，再按一次坦克车底的“ST”对码键，坦克启动并发出启动声，对码成功，可以正常操作。

When it is the first time you use this tank, if there is no decoding confirmation frequency, please make decoding first. Steps are as below:

1. Switch on the power of the transmitter and the tank, this time the power light of the transmitter will be ON and the headlight of the tank will be flashing;
2. Press the START key “S” on the transmitter and then press the decoding key “ST” at the base of the tank, the tank will start and send out starting sound and this means that decoding is successfully finished, it can operate normally.

注意 Cautions:


2.4GHz系列坦克，只须通过2.4GHz对码确认方法进行确频，就可实现在同一场地多台坦克进行操作，如果多台坦克同时操作频点相同时，须重新确频，确频时，坦克接收机会自动寻找最近遥控器发射的信号进行配对（遥控器与其它遥控器距离最少1.5米），配对成功后，可正常操作。

2.4GHz series of tanks, you can simply confirm the frequency by making 2.4GHz decoding, then you can realize more tanks to work in the same time. If more tanks are using the same frequency in the same time, please make decoding once again. When making decoding, the tank receiver will automatically search the nearest signal sent from the transmitter and make decoding (the shortest distance between the transmitter and other transmitter should be 1.5 meter). When decoding is successfully finished, you can operate normally.

注意 Caution:


- ① 充电器的额定输入电压必须与当地的家用电压相符；
 - ② 充电时，充电器和电池会微热属正常。
 - ③ 在插入或拔出充电器时，要注意手指不能接触到充电器的端子。
 - ④ 插头连接时，务必认清正负极。
- ①. The rated input voltage battery charger with the home must be in line voltage.
 - ②. When charging, it is normal that the transformer and the battery may get mild heat.
 - ③. During the insertion or removal of transformer, please pay attention that the finger should not be contacted to the end of the transformer.
 - ④. The plug connection, must recognize the positive and negative pole.

1 遥控器各个部分的名称 Controller Parts Identification

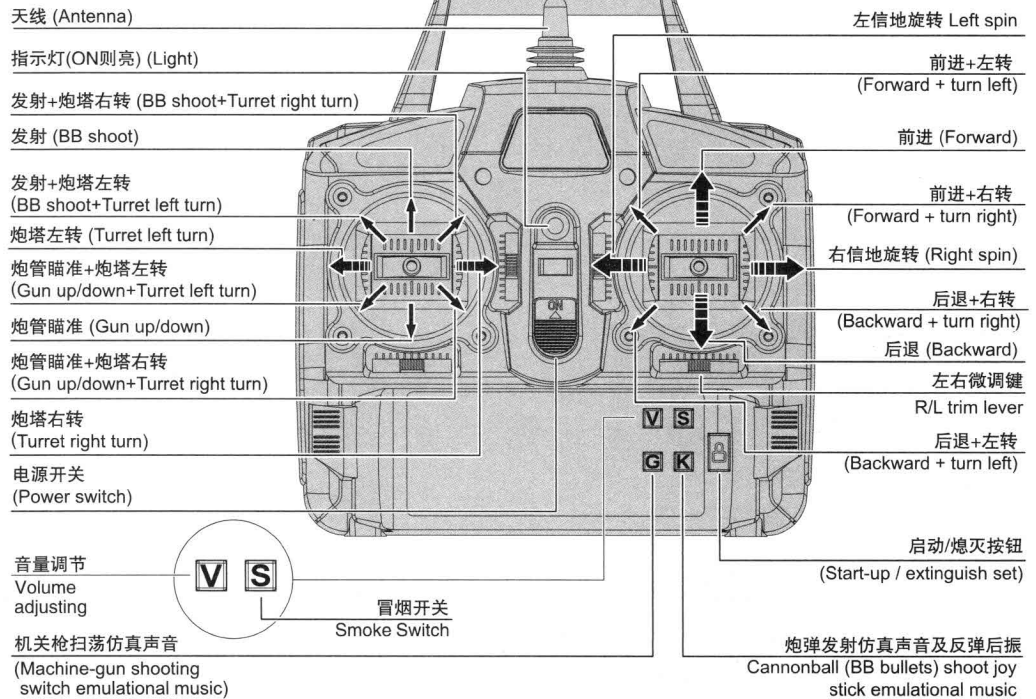

特别提示: 当坦克直线前进或后退存在偏向时，可通过“R/L”左右微调键进行调节。偏左时微调键向右调节，偏右时则向左调节，直到坦克直线行走为止。

Special tip When the tanks forward or backward be deflection, can be adjusted through the “R/L” left and right trim button. When fine-tuning button to the right to adjust to the left and right on the left, until the tank walk straight.

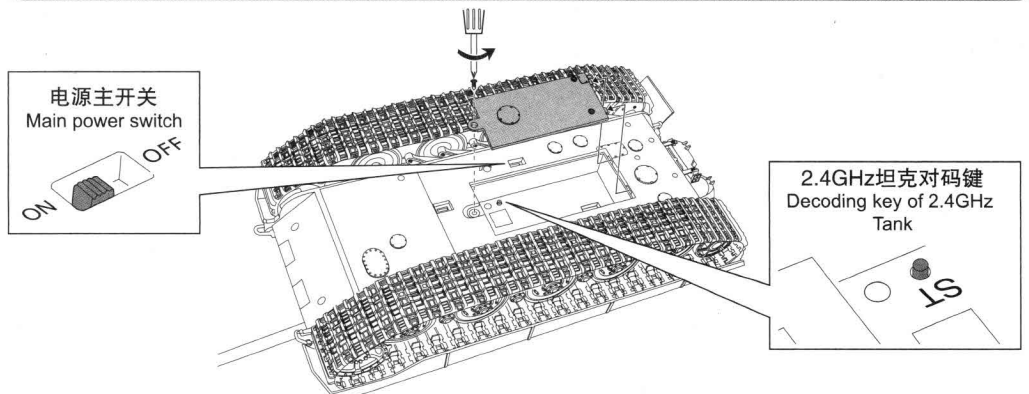

2 充电 Charge

- ① 将充电器插头插入电源插座，这时充电器上的绿灯(电源/充电指示灯)亮起。再将充电器电源输出插头连接到充电电池接头，此时充电器上的绿灯变成红灯，表示正在充电。当充电器上的红灯变成绿灯时，则表示充电电池电量已充满，此时充电结束。充电时间大约为2小时。
 - ② 充电完毕，把充电器插头拔出。
- ①. Will charger plug insert Power socket, then the green light on the charger (power/charge indicator) light. Again will charger power output connector to connect to the rechargeable battery when. At this time the green light on the charger into become the red light. When the red light on the charger into a green light indicates that power has been full of rechargeable batteries, charging the end of this time. The charge time is about 2 hours.
 - ②. Disconnect the charger plug after the charge.

警告 Warning

若电池正负极接反，会引起漏液和故障，要小心。

If the battery connection is made the opposite, battery leakage or device malfunction may be caused.

