

Vacuum cleaner

User's manual

EN



SENCOR®

SVC 730RD / SVC 730GR

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when you're already familiarised with previous use of similar types of appliances. Use the appliance only as described in this user's manual. Store the user's manual in a safe place for future reference.

Vacuum cleaner

SVC 730RD / SVC 730GR

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
DESCRIPTION	3
ASSEMBLY	4
USING YOUR VACUUM CLEANER	4
STORAGE AND ACCESSORIES	5
MAINTENANCE AND CLEANING	5
TROUBLESHOOTING	7
TECHNICAL SPECIFICATIONS	7
LIQUIDATION OF USED ELECTRIC AND ELECTRONIC EQUIPMENT	8
HANDLING INSTRUCTIONS FOR DISPOSAL OF USED PACKAGING MATERIALS	8

IMPORTANT SAFETY INSTRUCTIONS

- 1) We recommend saving the original shipping cardboard box, packaging material, receipt and warranty card at least for the duration of the validity of the warranty policy. In case of transportation, pack the product using the original packaging materials only.
- 2) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 3) Children should be supervised to ensure that they will play with the appliance.
- 4) Before connecting the appliance to the wall outlet, make sure the voltage stated on the label corresponds with the voltage in your wall outlet.
- 5) Never use accessories, which have not been supplied with this appliance or which are not designed for this appliance.
- 6) Do not spray the device with water or any other liquid. Do not pour water or any other liquids into the vacuum cleaner. Do not submerge the appliance under water or any other liquid.
- 7) Do not use the vacuum cleaner near bathtub or shower.
- 8) If the appliance is being used, do not block its air input and output openings. Blocked air vents may cause overheating and motor damage.
- 9) If the vacuum cleaner is not used, turn it off and disconnect the supply cable from the wall outlet. Prior to cleaning, proceed in the same manner.
- 10) Vacuuming objects mentioned below may damage your appliance or cause injuries to operating person:
 - wet floor, water or other liquids,
 - any sort of sharp objects such as needles, pins,
 - burning cigarettes, or smouldering pieces, matches or any other flammable or volatile liquids (e.g. gasoline, paint thinners, etc.)
 - baking flour, cement or cleaning dust during wall drilling
- 11) Pulling the supply cable from the wall power outlet by force may cause damages.
- 12) In order to avoid damages to furniture or injuries to persons, hold the cable in your hands as it winds up.
- 13) In order to avoid deformation or fire of plastic components of the vacuum cleaner, do not expose the vacuum to direct sunlight, do not place it close to heaters, open fire or other sources of heat and do not leave the vacuum cleaner operating for too long, if the air input is blocked.
- 14) Do not vacuum larger pieces of paper or plastic bags. They may easily clog the pipe or hose. In case the vacuum becomes clogged for any reason, turn it off by removing the supply cable from the wall outlet and clean the pipe or hose.
- 15) Do not use the appliance in an environment with excessive dust.


Vacuum cleaner

SVC 730RD / SVC 730GR

EN

- 16) In order to avoid damaging the hose, do not step on it or bend it with force. Do not use the vacuum if the hose is bent or damaged in any other way.
- 17) Do not place the electric cord near hot surfaces, or over sharp objects. Do not place heavy objects on the cable, position the cable so that it is not stepped on, or tripped over. Make sure the electric cord is not touching any hot surface.
- 18) If the supply cable of the vacuum is damaged, have an authorised service or qualified person replaced it, in order to prevent dangerous situations. It is forbidden to use the vacuum if it has a damaged electric supply cable or plug.
- 19) In no case should you attempt to repair the unit yourself, do not make any amendments to it – danger of electric shock. Entrust all repairs and adjustments to a specialised company/service. Failure to do so will void the warranty policy.
- 20) Never use the vacuum cleaner without the protective motor filter, output filter or without the dust container installed.
- 21) Pay extra attention if the vacuum is used near children. Always place the vacuum away from the reach of children.
- 22) This appliance is designed for household use. Do not use in industrial surroundings or outdoors!
- 23) Do not use the appliance for other purposes than intended.

DESCRIPTION

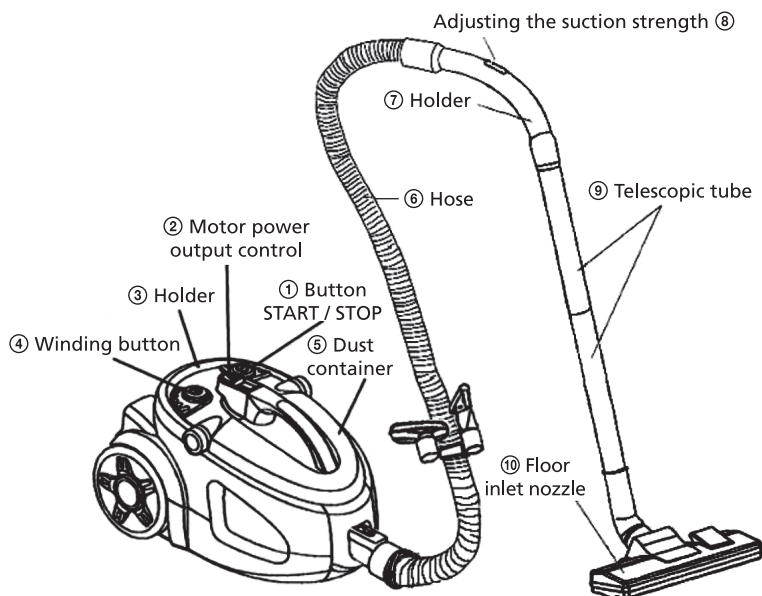

Vacuum cleaner

SVC 730RD / SVC 730GR

ASSEMBLY

Inserting the hose ⑥ into the air suction hole on the vacuum cleaner.

Press the safety button on the hose end and insert the hose end into the air suction hole on the vacuum cleaner until you hear „click“. The hose is now secured in correct position.

Place the holder ⑦ on the telescopic tube ⑨

Make sure to install the holder on the wider part of the telescopic tube.

Install the floor inlet nozzle ⑩ on the telescopic tube ⑨

Make sure to install the floor nozzle on the narrower part of the telescopic tube.

Adjust the length of the telescopic tube ⑨ as needed.

Adjust the length of the telescopic tube as follow: Move and hold the button on the tube forward as shown by arrows and adjust the length of the tube as needed. Release the button and move the tube little bit forward until you hear „click“. The telescopic tube is now securely set in position.

USING YOUR VACUUM CLEANER

Connecting your vacuum cleaner to power source - wall outlet

Pull the plug of the supply cable from the vacuum cleaner until the desired length of the cable is out of the appliance. Insert the plug to the wall outlet.



Warning:

Yellow marking on the supply cable tells you that the cable is close to its end. Do not pull the cable more than to the red marking.

Adjusting the floor inlet nozzle ⑩ according to the floor surface.

You may set the inlet nozzle according to the floor surface by adjusting the inlet flap:

- If you want to vacuum carpets, close the bristles of the inlet inside the inlet nozzle, by turning the flap accordingly.
- If you want to vacuum hard and smooth surface, move the bristles out of the nozzle, by turning the flap accordingly.

Turning your vacuum cleaner on and off

To switch your machine on and off, press the START / STOP button ① on the vacuum cleaner body.

Adjusting the suction strength ⑧

The suction strength may be adjusted by moving the rider on the appliance body (small range) or by the moveable rider ⑥ on the hose handler.



Tip:

If the hose holder ⑦ on the hose ⑥ gets clogged during vacuuming, disconnect it from the telescopic tube ⑨ and also disconnect the hose ⑥ from the vacuum cleaner body. Then place the holder ⑦ inside the suction hole on the vacuum cleaner body and vacuum the stuck dirt out.

Temporary interruption of the vacuuming process

If you want to stop the vacuuming process temporarily, place the telescopic tube ⑨ in the parking position on the rear of your appliance, using the notch on the floor inlet nozzle ⑩



Warning:

Do not move the appliance from place to place if the hose is in the parking position! You may break the parking position holder!

Vacuum cleaner

SVC 730RD / SVC 730GR

NE

Using your accessories

- The narrow slot nozzle may be used to vacuum in hard to reach spaces such as window frames, libraries, upholstery corners, joints, etc.
- Pillow nozzle may be used for bed vacuuming or upholstered furniture, etc.



Tip:

Use the narrow nozzle with brush to vacuum in hard to reach spaces that may be scratched easily!

Ending the vacuuming process

At first, switch the vacuum cleaner off by pressing the START / STOP button ① and then disconnect the supply cable plug from the wall outlet.

Hold the cable with one hand during the winding process. With your other hand press and hold the winding button ④. „Lead" the cable towards the winding mechanism to protect the vacuum cleaner input area from damages.



Tip:

If the winding process stops and part of the supply cable is still outside, release the winding button ④ and pull the cable out again by about 50cm and press the winding button again and repeat the winding process.

Carrying your vacuum cleaner

Your appliance may be carried from place to place by holding it by handle ③.



Warning:

Never try to carry your vacuum cleaner by holding the dust container handler ⑤!

STORAGE AND ACCESSORIES

Before storage you may disassemble your appliance to each individual part or you may store it assembled and with the telescopic tube ⑨ stored in one of the „parking" positions (the rear or front position)

MAINTENANCE AND CLEANING

Emptying the dust container ⑤

Disconnect the hose ⑥ from the vacuum cleaner.

Pull the handle ③ up and remove the dust container ⑤.

Place the dust container ⑤ above a waste bin

Press the safety button underneath the suction opening ⑤ and the dust bottom will open.

Dust and dirt may be put in regular household waste.

Also remove the dust filter from the dust container ⑤. Turn the filter partially and empty the remaining dirt and dust from the filter to the waste bin as well.

Install the dust filter back to the dust container ⑤ and secure it in place by turning the filter to the opposite direction.

Close the bottom lid of the container ⑤. Make sure the safety lock button is engaged.

Place the dust container ⑤ back to the vacuum cleaner.



Warning:

Before installing the dust container ⑤ and the dust filter back to your appliance, make sure that both the container and the filter are completely dry.

**Tip:**

We recommend washing the dust container ⑤ and the dust filter under running, lukewarm water.

Replacing and cleaning of filters**Replacing the inflow H.E.P.A. filter**

Remove the dust container ⑤ from the vacuum cleaner. Pull it up to release the safety lock on the filter cartridge and remove it out of the vacuum cleaner by tilting it to the side. Replace the filter cassette for a new one and click it back into place. Place the dust container ⑤ back into the vacuum cleaner.

Changing the outlet filter

Press the safety button on the filter grill and remove it by tilting it to the side. Change the filter for a new one. Then insert the ribbing together with the filter back into the vacuum cleaner.

**Warning:**

Make sure to put the filter in the vacuum cleaner with the plastic grill facing out!

Cleaning of filters

All filters inside the vacuum cleaner are washable. If they are soiled wash them under running lukewarm water. If the filters are so soiled that washing does not help, replace with new filters. Before placing the filter back into the vacuum cleaner ensure that it is completely dry.

**Warning:**

The vacuum cleaner is equipped with a heat safety fuse, which in the case of over-loading (e.g. blocked filters) will turn it off. The vacuum cleaner may then only be switched on once it has cooled. **For this reason carry out regular cleaning, i.e. replace filters – this will extend the life of your vacuum cleaner.**

Cleaning your vacuum cleaner.

Use only clean, soft and dry cloth. However, you may dip the cloth slightly into water. Do not use aggressive solutions or paint thinners!

Vacuum cleaner

SVC 730RD / SVC 730GR

NE

TROUBLESHOOTING

Before you decide to contact authorized service centre, read these following tips in the troubleshooting chart:

Problem	Possible cause	Recommended action
The engine will not start	- The supply cable is not connected correctly in the wall power outlet. - The wall power outlet is damaged. - The vacuum cleaner is not switched on.	- Inspect the supply cable plug. Make sure that it is firmly inserted in the wall outlet. - Inspect the wall outlet. - Turn the appliance on.
The suction output is insufficient	- Vacuum cleaner or its air passageways are clogged with dirt or foreign object. - The dust filter needs cleaning. - The dust container ⑤ has been installed incorrectly, or in wrong position. - Filter is clogged.	- Remove the clogging or foreign object. - Clean the dust filter. - Close the dust container ⑤. - Clean the filter.
The cable is not wound in completely.	The cable may have slipped down from the winding pulley during winding.	Hold the cable during the winding. Make sure to apply slight tension (by pulling the cable back) to the cable during the winding process.
The cable cannot be pulled out.	The cable is wound up incorrectly	Press the winding button ④ and try to rewind the cable again.
The speed control is not working.	The appliance has been broken down.	Have the vacuum cleaner repaired by technician. (only by qualified technician)
The supply cable starts to wind in when you do not need that.	The winding mechanism has broken down.	Have the vacuum cleaner repaired by technician. (only by qualified technician)
The dust container ⑤ cannot be closed.	The dust filter is installed incorrectly or in incorrect position.	Reinstall and secure the filter in position and try again.

TECHNICAL SPECIFICATIONS

Voltage	220-240 V
Nominal frequency:	50-60 Hz
Rated power input:	800 W
Protective class (with regards to protection from electric shock):	II
Noise level	76 dB(A)
Supply cable length	5 m
Operational range	7,5 m
Dust container capacity	1,5 l
5 times filtrating system (inlet H.E.P.A filter)	
Weight	5,8 kg

The declared noise emission level for this appliance is 76 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

Changes in text and technical parameters reserved.

Vacuum cleaner

SVC 730RD / SVC 730GR

PRODUCT INFORMATION SHEET

Name/trademark	SENCOR
Model identification number	SVC 730GR, 730RD
Energy efficiency class *	A
Annual power consumption (in kWh)**	28
Carpet cleaning efficiency class	C
Hard floor cleaning efficiency class	A
Vacuum cleaner dust emission class	C
Level of acoustic power (dB(A))	76
Rated power input (W)	800

* Class A (highest efficiency class, low power consumption) to Class G (lowest efficiency class, high power consumption)

** Approximate annual power consumption (in kWh per year) based on 50 cleaning cycles. Actual power consumption will depend on how the appliance is used.

The values are determined pursuant to (EU) No. 665/2013.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

Vacuum cleaner

SVC 730RD / SVC 730GR