

# COMBINATION LOCK **3** WHEELS, KEY CHANGING

The lock is supplied with the following **INITIAL COMBINATION: 20 - 40 - 60**


Set your personal combination. You can choose among **1.440.000 POSSIBLE COMBINATIONS**.

**DON'T USE RED NUMBERS FOR YOUR FOURTH NUMBER.** To unlock "dial" the "set" combination by turning the dial (Fig.1).

## A) HOW TO DIAL THE COMBINATION

For example 20 - 40 - 60

- 1) Starting from any number,  
**Turn left 3 times and continue up to the 1<sup>st</sup> number (20).**
- 2) Starting from the 1<sup>st</sup> number (20),  
**Turn right 2 times and continue up to the 2<sup>nd</sup> number (40).**
- 3) Starting from the 2<sup>nd</sup> number (40),  
**Turn left 1 time and continue up to the 3<sup>rd</sup> number (60).**

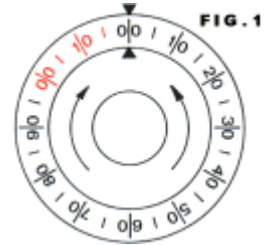

## B) TO UNLOCK

Dial the combination (A), then **turn the dial slowly left hand until it stops.**


## C) TO LOCK

**Turn right hand at least 4 full revolutions** to break the combination completely.

## D) CHANGING TO A NEW COMBINATION (FIG.2).

This operation (**SETTING A NEW COMBINATION**) should be done with the door open and the combination locked.

- 1) Dial the set combination (A).
- 2) Insert the changing key in the key hole at the back of the door, in line with direction 1 (IN) (Fig.2).  
If the key does not enter freely up to a positive stop, the combination has been wrongly dialled. Redial the combination.
- 3) **Turn the key from position 1 (IN) to position 2** (changing area). If it doesn't turn, it was not full inserted.
- 4) Accurately dial the **new** combination (A).

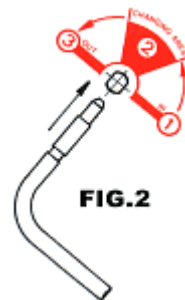

**ATTENTION! DO NOT USE THE RED NUMBERS FOR YOUR FOURTH NUMBER.**

- 5) Turn the key from position 2 to position 3 (OUT).
- 6) Remove the key. The new combination is now set in the lock.
- 7) **CAUTION! BEFORE CLOSING THE DOOR, TRY THE NEW COMBINATION SEVERAL TIMES (A-B-C).**

If an error has been made in setting a new combination, the lock cannot be unlocked and you should reset to zero (E).

## E) HOW TO SET TO ZERO (FIG.3).

This operation can be done only if, having opened the door, we don't know which is the set combination.

- 1) Insert the key (Fig.3) into the hole at the back of the door and keep **lightly** pressed towards the inside of the lock.
- 2) Turn the dial 4 times left hand till the key advances towards the inside (5 mm approx.).
- 3) Turn the dial 3 times right hand till the key advances a second time.
- 4) Turn the dial 2 times left hand till key advances a third time.
- 5) Remove the key and insert it from its other side (Fig.2, D, 2).
- 6) Now set your chosen combination (D, 3....7).

