



## Mount for Blaser

### Mount Adjustment:

The locking lever should close easily but still should exert some pressure onto the mount locating lugs in the Blaser barrel. If your mount is too tight or too loose you will need to adjust it with the wrenches supplied in the box. Follow the simple instructions below:

1. Slacken Lock Screw
2. Turn the Adjusting screw clockwise to tighten / anti-clockwise to loosen the tension on the clamping lever.
3. Tighten Lock Screw when finished

