

### Tecsun PL-990(x) Hidden Features Reference

FUNCTION	WHAT DOES IT DO?	RADIO STATE	WHAT KEY?	WHAT BANDS?	WHAT MODES?	WHAT DO I NEED TO DO?
<b>Bluetooth</b>	Enable Bluetooth to playback music from a Bluetooth enabled device (e.g. smartphone, tablet or digital audio player).	OFF	RADIO/MP3	N/A	N/A	Hint: After enabling Bluetooth, press [ RADIO/MP3 ] to swith between radio, audio player and Bluetooth. 1. Select a band/mode (FM, AM, SW, USB/LSB or SYNC), each band/mode has its own setting 2. Press and hold key '9' until the current level flashes in the main display area 3. Adjust with either tuning knob (the best setting should be '00') 4. Press key '9' to save
<b>Additional Features</b>	Enables Muting Threshold & DNR features for MW, LW & SW	ON	4	AM (MW, LW) SW	AM, USB, LSB	Hint: The Additional Features key '4' MUST be set to 'ON' before the Muting Threshold (Key '9') or DNR (Key '6') will work on MW, LW & SW.  Press and hold key '4' to toggle Additional Features 'ON' and 'OFF'
<b>DNR</b>	Enables Dynamic Noise Reduction	ON	6	AM (MW, LW) SW	AM, USB, LSB, SYNC	Hint: The Additional Features key '4' MUST be enabled before this will work. DNR auto adjusts bandwidth.  Press and hold key '6' to toggle DNR 'ON' and 'OFF'
<b>Muting Threshold</b>	Allows adjustment of the squelch threshold, reducing the muting of weak stations	ON	9	FM AM (MW, LW) SW	FM, AM, USB, LSB	Hint: The Additional Features key '4' MUST be enabled before this will work on MW, LW or SW. 1. Select a band/mode (FM, AM, SW, USB/LSB or SYNC), each band/mode has its own setting 2. Press and hold key '9' until the current level flashes in the main display area 3. Adjust with either tuning knob (the best setting should be '00') 4. Press key '9' to save
<b>FM De-emphasis</b>	Alters the time setting for FM De-emphasis	ON	5	FM	FM	Press and hold key '5' to toggle between '75.US' (USA Setting) and '50.US' (European Setting)
<b>Line Output Level</b>	Adjusts the audio level on the line output socket	ON	7	FM AM (MW, LW), SW	AM, USB, LSB, SYNC	Hint: You will notice FM & AM (LW, MW, SW) have independent line output level settings. This setting also affects the current volume level setting. 1. Press and hold key '7' until the current level flashes in the main display area 2. Adjust this setting with either tuning knob 3. Press key '7' to save
<b>Seconds on clock</b>	Add seconds to the clock	OFF	8	N/A	N/A	Press and hold key '8' to toggle the seconds ON and OFF