

Dear users:

Thanks for your buying of the remote control fishing bait boat with two motors. Your kind trust for us is a great motive, we will keep moving to supply the best item to you. Every boat is with an independently life. We pursue the best quality through the strict production and controlling. We are seeking the happy fishing from the product to service. So our company make this manual for your reference. Your happy is the best for us. "

Contents

- I. Product Feature Introduction..... 1  
material/digital FM/resistance wind and wave/lasting/operation and carry
- II. Accessories..... 2  
motor/battery/night light/remote controller/boat body
- III. Boat Body Introduction..... 4  
bin  
plane details
- IV. Remote Controller Details..... 5
- V. Maintenance ..... 7
- VI. Fault Detection and Solutions..... 8

"FISH" IS A LIFE OF MY LIFE

Feature Introduction:

- ◆Best Quality  
The boat adopts the ABS which is without the poison and smell, the ABS is with the strong anti-resistant and abrasion resistance, the boat color can be kept a long time. It is easy to clean as the ABS can beat the chemical pollution.
- ◆Professional Digital Full Automatic FM Device  
It can solve the problems: interference of different boats' frequency; short distance of remote controlling; pick up the boat when it is out of control.
- ◆Resistant the Strong Wind and Wave  
Two motors with the waterproof design, which can stop the water through the boat, and also can run well under 3-4 level wind.
- ◆Long Battery Life  
Simple operation, strong stability, change the speed and direction easily.
- ◆Carry Easily  
It is easy to carry with the boat handle.

"FISH" IS A LIFE OF MY LIFE

Accessories Introduction:

- ◆Motor  
turn radiustum radius 0.8-1.0M
- ◆Battery  
power: 7.4V 5200mAh, maintenance-free battery, battery life is above 2 hours  
alarm: setting for low battery to ensure the boat back safely.
- ◆Night Light  
the night light can help to distinguish the direction and lure the fish
- ◆Remote Controller  
remote control distance above 400M-500M
- ◆Boat Body  
direction: forward, backward, right and left turn, release the bait flexibly and precisely, can resist the wind under 3-4 level.

"FISH" IS A LIFE OF MY LIFE

◆Charging fastly

Two bins design :

1. Every bait bin can be controlled independently.
  2. The night light is designed with the blue color.
- Functions:
- ① can help know the direction during the night fishing
  - ② lure the fish

- ◆loading weight above 1kg



"FISH" IS A LIFE OF MY LIFE

Boat Body Introduction



"FISH" IS A LIFE OF MY LIFE

Streamline boat body

- ◆running more stable
- ◆Resistance to the wind and wave more strong

7.4V\*5200mAh high capacity battery


- ◆fast charging
- ◆long battery life



"FISH" IS A LIFE OF MY LIFE

Remote Controller Details

- Forward: ↑↑
- Backward: ↓↓
- Turn left: ↶
- Turn right: ↷

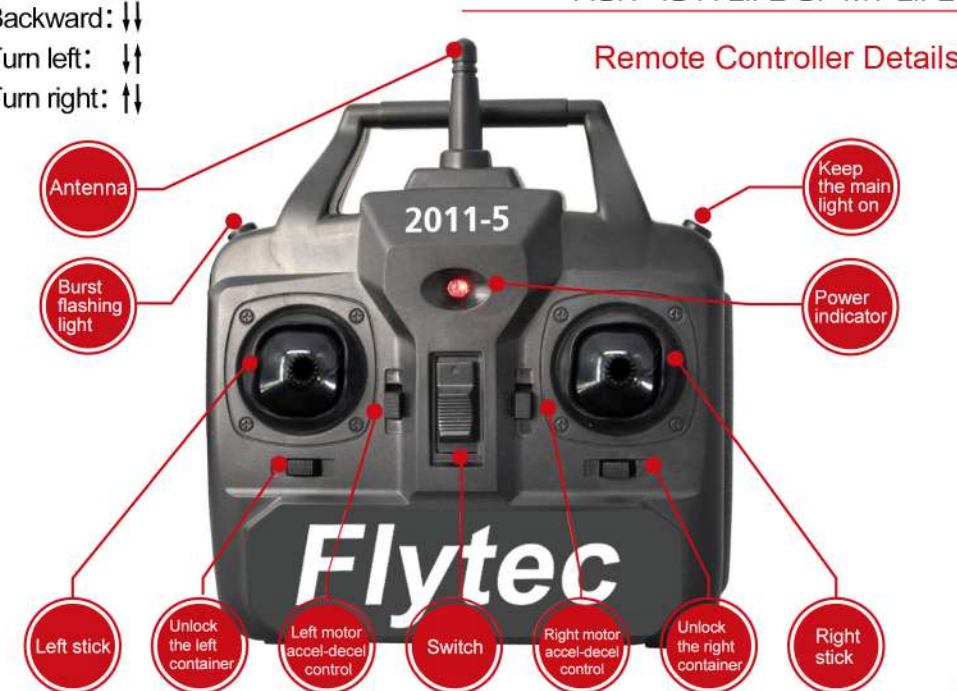

"FISH" IS A LIFE OF MY LIFE

Maintenance

- ◆Controller  
please kindly take out the battery if there is a long time for leaving unused.
- ◆Night Light  
please kindly take out the battery if there a long time for leaving unused.
- ◆Boat Body  
1. please keep dry and clean for the boat after using the boat.  
2. please take out the battery and keep well if do not use the boat.  
3. please do not put the boat with the corrosive liquid.  
4. Don't use or leave the battery near a heat source such as fire or heater.  
5. please put the boat into the bag to keep the boat from the dusty if do not use the boat.



"FISH" IS A LIFE OF MY LIFE

Fault Detection and Solutions

- ◆ No response when turn on the switch  
**Analysis and solution:**  
1. First of all, please check whether the battery is fully charged (check the indicator light on the boat), if not, please use the configured charger to charge (Figure 1).  
2. It's still not responding when it's fully charged, it may be poor contact of battery connector in the battery compartment. You can squeeze the connector by hand or pliers before connecting the battery (Figure 2).  
3. If there is no improvement after two solutions, please unscrew the cover to check the internal situation, the connection line on the receiving board may fall off during transportation. If it is found that the connection line is loose, you can put it in place (Figure 3), and then turn on the switch to confirm whether the power supply is abnormal. If it cannot be solved, please contact the local dealer or client for guidance.



"FISH" IS A LIFE OF MY LIFE

◆Hopper can't work

Analysis and solution:

1. Press the feeding button (Figure 4), to check if the steering gear is working and whether the pull rod is pulled in and out (Figure 5). If everything is normal, that is the pull rod movements not in place. You can cut off the pull rod with tongs. Subtract a little at a time until normal (Figure 6).
2. If the steering gear is responsive and the pull rod is unresponsive, open the boat cover to check if the servo chain is too long or broken, if it is, cut it shorter or connect it well. (Figure 7).
3. If the steering gear does not respond, unscrew the cover to check the internal situation, the cable between the circuit board and the steering gear may fall off during transportation. If it is found that the connection line is loose, you can put it in place (Figure 8).



"FISH" IS A LIFE OF MY LIFE

◆ Remote control rod shedding

Analysis and solution:

Press the joystick by hand until the remote control pole is in place (Figure 9).

◆ The hopper bounces automatically

Analysis and solution:

1. It can be adjusted by turn the switch on and off repeatedly. The toggle cannot be quickly and frequently. Move it once every three seconds or more, and after repeated several times, it will be normal (Figure 10).
2. If the above operation method is not feasible, the steering gear lever can be adjusted. The steering gear has a power on automatic reset function, after power on the steering gear will return to the middle position. The steering gear lever will rotate left and right once, so it will drive the pull bar, causing the hopper to bounce. In the production process, we will adjust the swing bar to the best state, which is generally not to bounce. If there is a error, open the boat cover, loosen the swing rod screw, and move the swing rod to a position (Figure 11).



"FISH" IS A LIFE OF MY LIFE

◆ Unable to charge

Analysis and solution:

1. Check the charger first (Figure 12).
2. Check if the charging port is connected correctly, and then check if the interface is poor contact (Figure 13).



- ◆ If the steering gear and the boat are on power, controlling the remote controller, the boat does not respond. You need to match controller and boat. Long press ①, turn on the boat, and then open ② as picture shown (Figure 14), the operation needs to be completed in 3 seconds. When the controller makes "beep" sound, it means the controller and boat match successful.
- ◆ More details of the fault repair video, please check out our website: <http://www.iRctoy.com>