


## NORDEX HEATER- Installation Diagram for Separate Control

**NOTE:**  
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

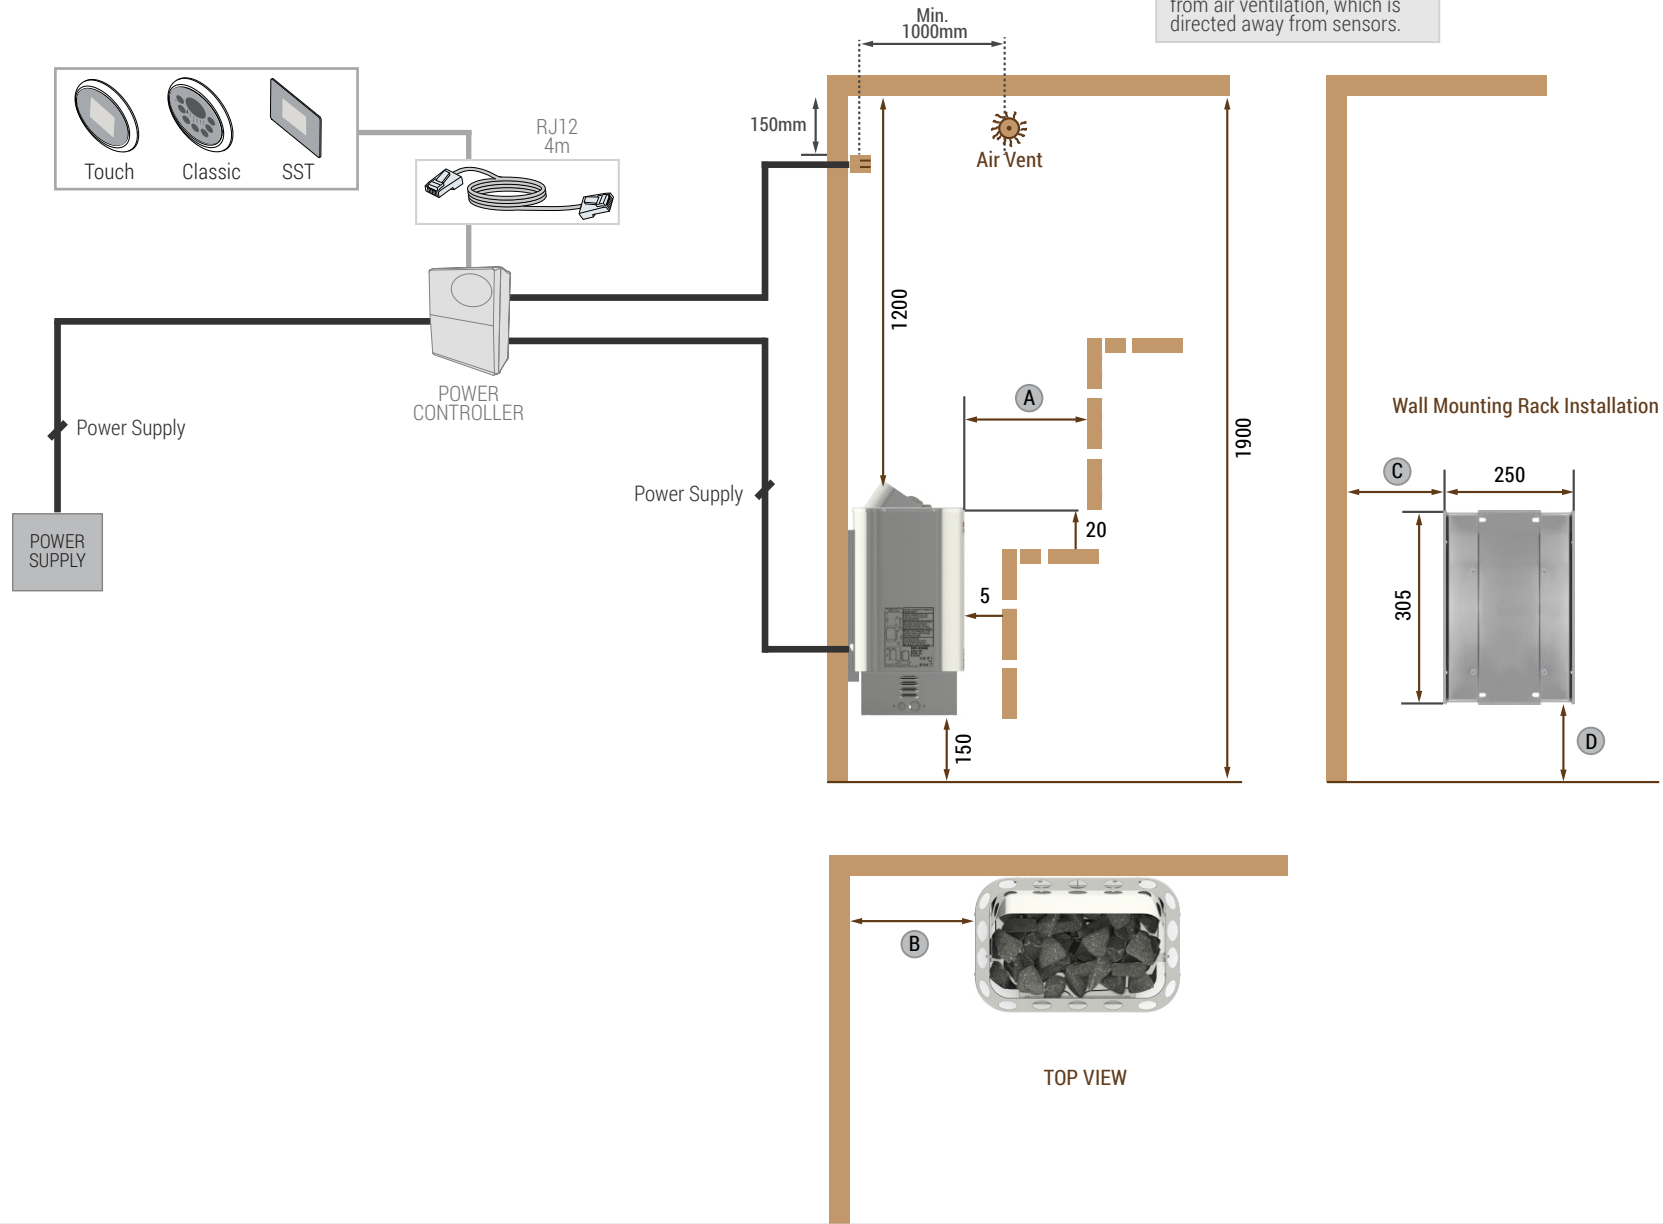

**Minimum Safety Distances**

	A	B	C	D
NR-45NS	50	50	130	270
NR-60NS	50	50	130	270
NR-80NS	80	80	160	330
NR-90NS	80	80	160	330

## NORDEX HEATER- Installation Diagram for Built-in Control

Minimum Safety Distances

	A	B	C	D
NR-45NB	50	50	130	270
NR-60NB	50	50	130	270
NR-80NB	80	80	160	360
NR-90NB	80	80	160	360

