

**Tecsun PL-368 Hidden Features Reference**

FUNCTION	WHAT DOES IT DO?	RADIO STATE	WHAT KEY?	WHAT BANDS?	WHAT MODES?	WHAT DO I NEED TO DO?
<b>Adjust SW-ETM scanning speed</b>	Increases or reduces the speed at which the ETM scan takes place.	ON	6	SW	ETM	Hint: A higher value represents a slower scanning speed (4 is the slowest). Press and hold key '6' until the display shows a value (1-4), then rotate to adjust.
<b>Extend SW-range</b>	Changes the SW range from 1711-29999kHz to 1621-29999kHz	ON	5	SW	SW	Hint: Mainly useful for listeners outside of the Americas. 1. Select the SW band. 2. Press and hold key '5' for about 10 seconds until the display shows 1621 kHz. 3. Press and hold key '5' again to return to 1711 kHz.
<b>Adjusting the maximum volume level</b>	Allows to lower/increase the volume level setting per band	ON	7	FM, AM (MW, LW), SW	FM, AM, USB, LSB, SYNC	1. Select a frequency band. 2. Press and hold key '7' for about 2 seconds until a value is displayed. 3. Rotate the [ TUNING ] knob to adjust and press key '7' again to save and exit.
<b>FM De-emphasis</b>	Alters the time setting for FM De-emphasis	ON	5	FM	FM	Press and hold key '5' to toggle between '75.US' (USA Setting) and '50.US' (European Setting)
<b>Calibrate LSB/USB</b>	Allows calibration of each sideband	ON	LSB / USB	AM(MW,LW) SW	USB, LSB	Hint: The LSB and USB modes need to be calibrated independently. When calibrating LSB, you need to press the LSB button to zero the calibration. When calibrating USB, you need to press the USB button to zero the calibration. 1. Tune in a strong AM (MW, LW) or SW station. 2. Then use LSB USB modes to fine tune the receiver as close to zero beat as possible (fine-tuning: Press the 'STEP' key twice to place the cursor to the right). 3. Then press and hold the USB or LSB key until display backlight flashes two times.
<b>Switch between the internal ferrite rod to the whip on AM (MW &amp; LW)</b>	Allows selection of the internal ferrite rod or the whip antenna for AM (MW & LW) reception	ON	3	AM (MW, LW)	AM, USB, LSB, SYNC	Hint: This setting is retained after Power Off/On. 1. Select the MW or LW band. 2. Press and hold key '3' for about 2 seconds.  When the display briefly shows "CH-5" this means that the device is set to MW/LW reception using the telescopic antenna. The display shows MW (or LW) and SW on the left side of the screen.  When the display briefly shows "CH-A" this means that the device is set to MW/LW reception using the internal ferrite antenna. The display shows only MW (or LW) on the left side of the screen.