

Quick guide for the SCANGRIP APP

Table of contents

1. Settings	2
2. Scanning and connecting.....	3
3. Group function	4
3.1. Units screen.....	4
3.2. Groups screen	5
3.3. Group control screen.....	6
4. Light control functions for NOVA 12K.....	7
5. Light control functions for NOVA SPS series	8
6. Light control functions for MULTIMATCH Series	9
7. Light control functions for AREA 10 SPS	10
8. Light control functions for NOVA CAS series	11
9. Light control functions for AREA 10 CAS	12
10. Light control functions for SITE LIGHT Series	13

1. Settings

Settings

Enable or disable notification of low battery or adjust the time in which the app scans for new lamps.

Consent

Review and change your consent to gathering of analytical and crash data.

Web Site


Press to access our [web site](#).

Privacy policy

Press to read the privacy policy.

Help

Press to access the [Scangrip App Quick Guide](#).

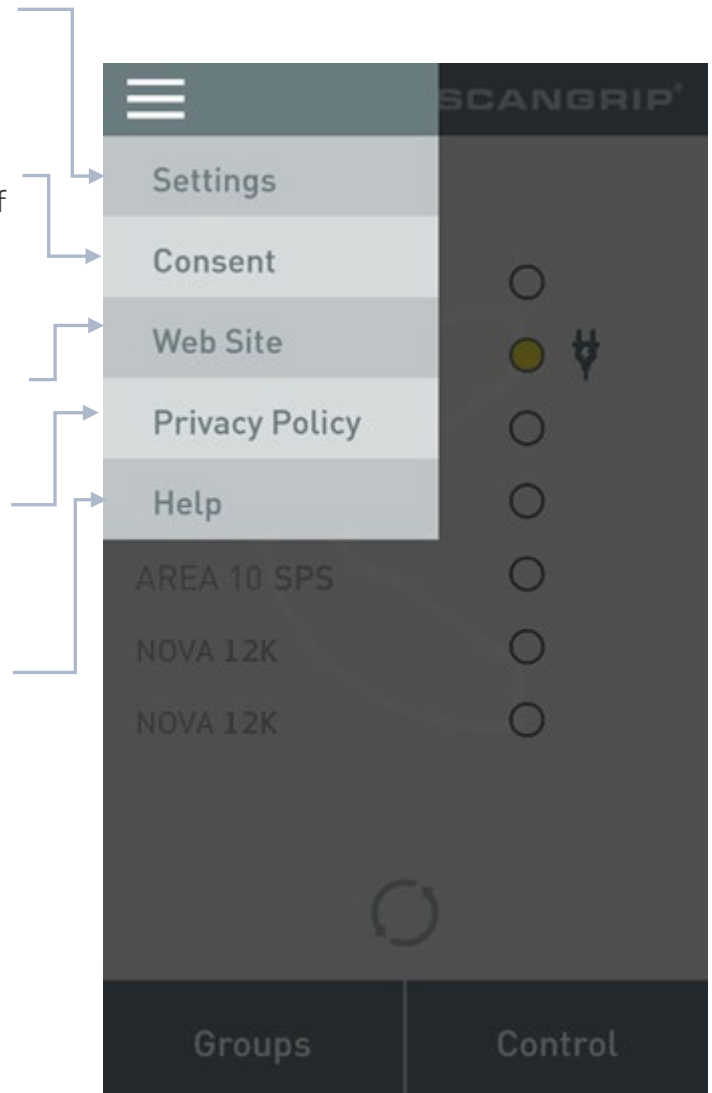

2. Scanning and connecting

Lamp status

Is shown when an active connection is made. Displays power status and if the lamp has PIN lock enabled.

Select up to 4 lamps

Select a lamp by pressing their name or the yellow selection dot.

Control > Lamp


Press "Control" and select a lamp to control one of the connected lights.

Refresh/Scan

Press the update icon or swipe down to update the list of lamps.

Groups

Press "Groups" to access Groups screen. Can also be accessed by swiping to the left.

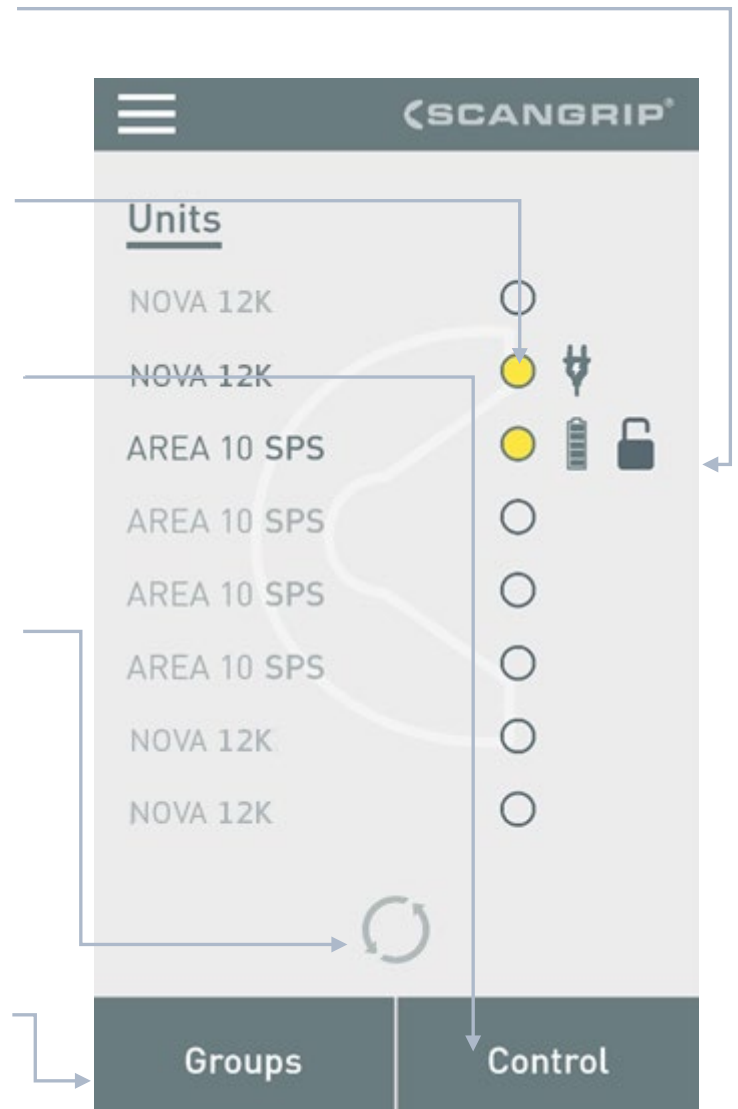

NOTE:

If the lamp or no lamps can be found on Android, check that location data (GPS) is enabled and the app has permission to access location.

3. Group function

3.1. Units screen

Select up to 4 lamps


Select a lamp by pressing name or the yellow selection dot.
NOVA 12K, NOVA SPS and NOVA CAS lamps can be grouped. So can AREA 10 SPS and AREA 10 CAS.
Other models can only be grouped with lamps from the same series.

Control -> Create group

Press "Control" and select "Create group" to create a group with the connected lights.

Groups

Press "Groups" to access Groups screen.
Can also be accessed by swiping to the left.

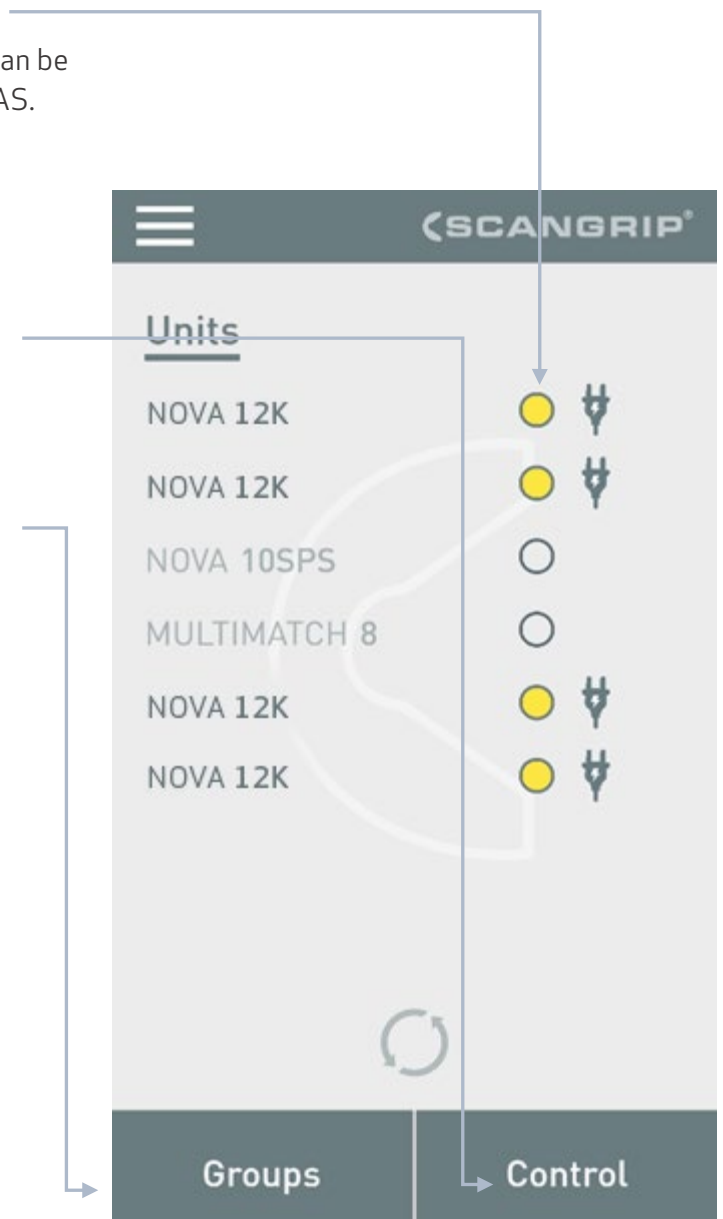

3.2.Groups screen

Control


Press to control or delete the selected group.

Group selection

Select a group by pressing name or the yellow selection dot.

Units screen

Press to access Units screen.

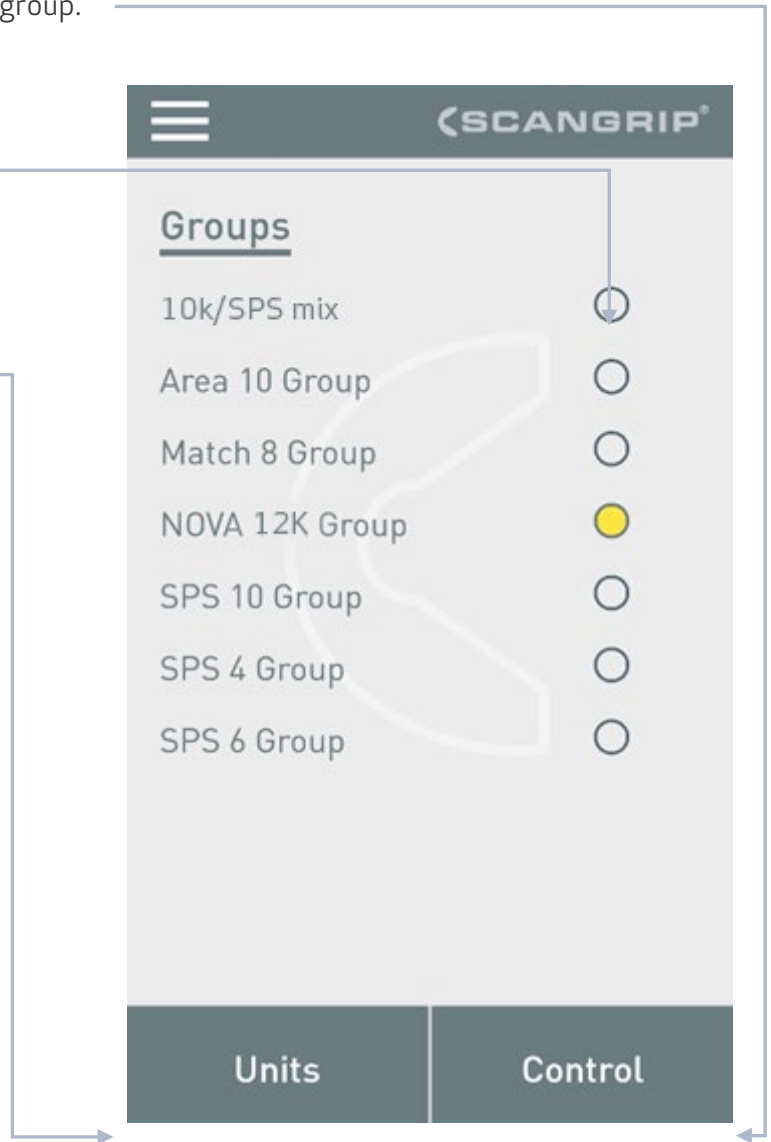

3.3.Group control screen

On/Off synchronization

The first press of the button turns on the lamps and synchronizes the group to the chosen setting.

Light icon


Will be off until first press on On/Off, no matter if a lamp in the group is on.

Sliders

Values will not be sent to lamps until the group is turned on.

Groups

Press to access Groups screen.

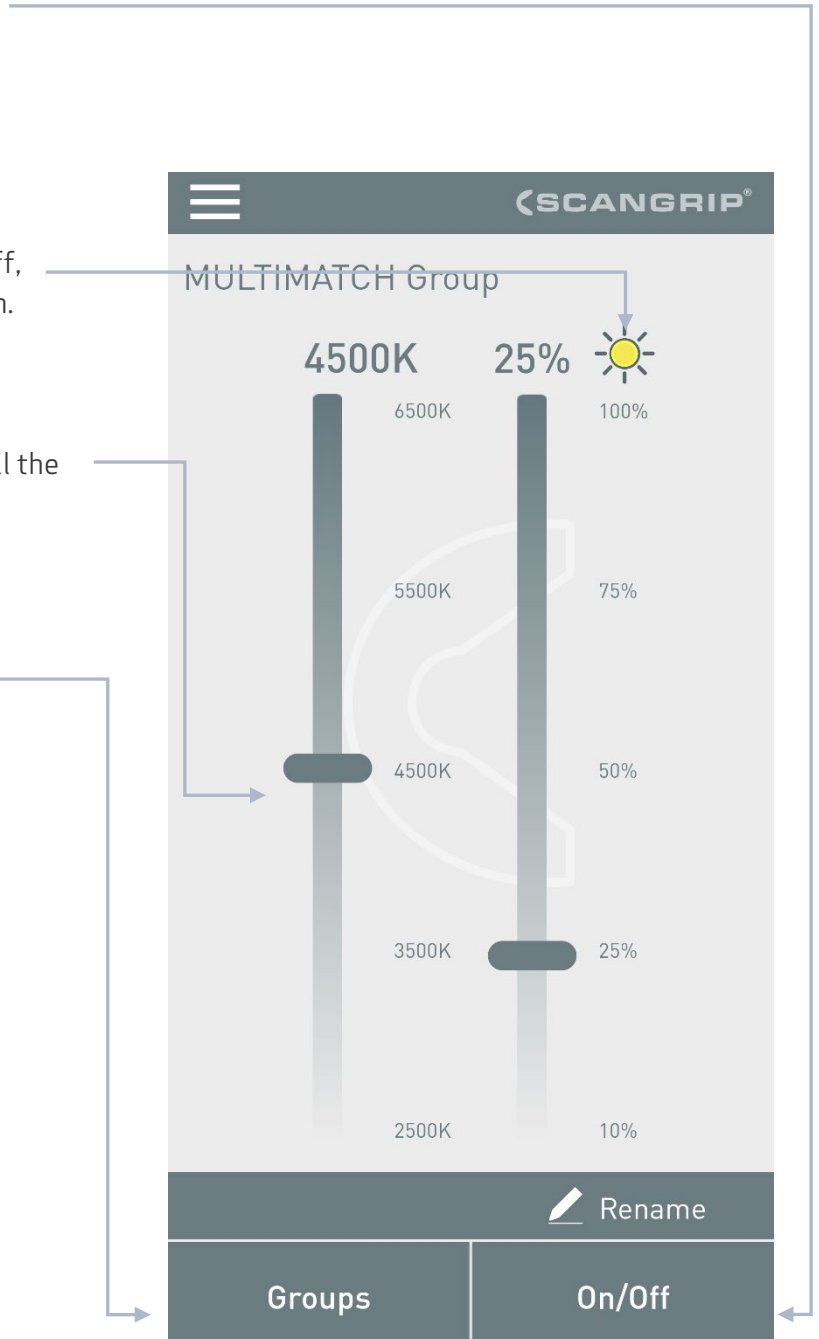

4. Light control functions for NOVA 12K

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider


Adjust slider or press value to the right to change the brightness.

Rename

Press to change the name of the lamp in the app.

Units

Press 'Units' button to return to the Units screen.

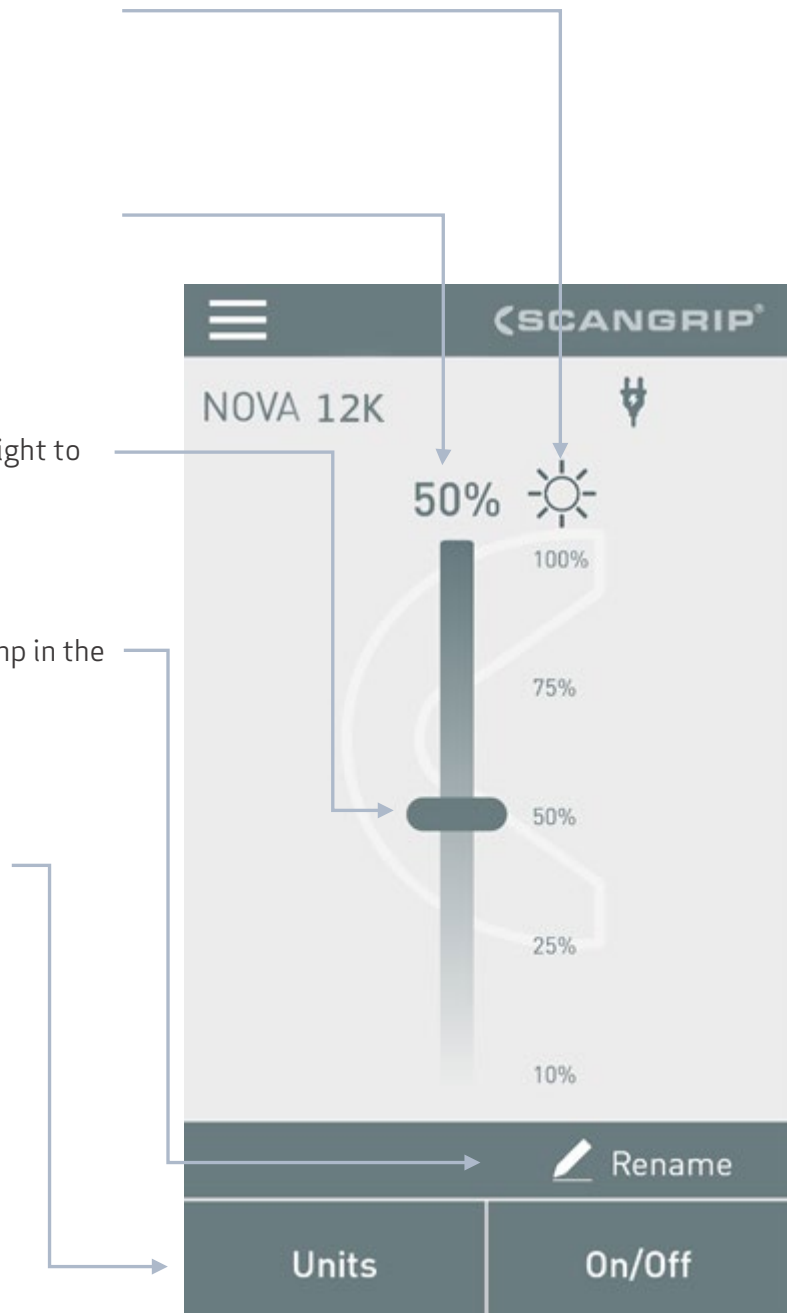

5. Light control functions for NOVA SPS series

Power status

Shows operation time left and battery level as well as when in back-up mode and connected to mains power. Time left is updated every time a command is sent.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press 'Units' button to return to the Units screen.

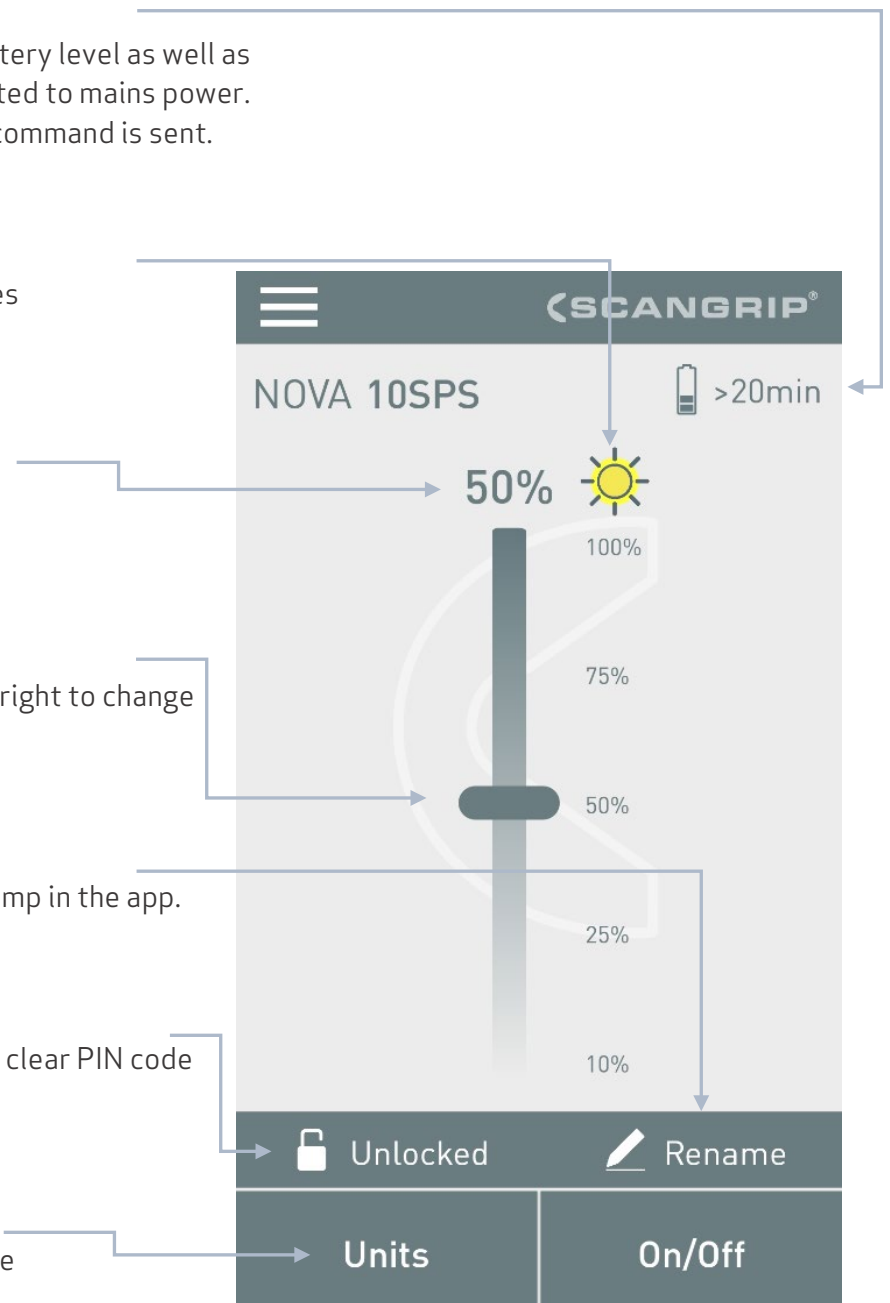

6. Light control functions for MULTIMATCH Series

Power status

Shows operation time left and battery level depending on whether it is connected to power supply or is in back-up mode. Time left is updated every time a command is sent.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Current CCT

Changes to display the current color temperature (CCT) as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

CCT slider

Adjust slider or press value to the right to change the color temperature.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press 'Units' button to return to the Units screen.

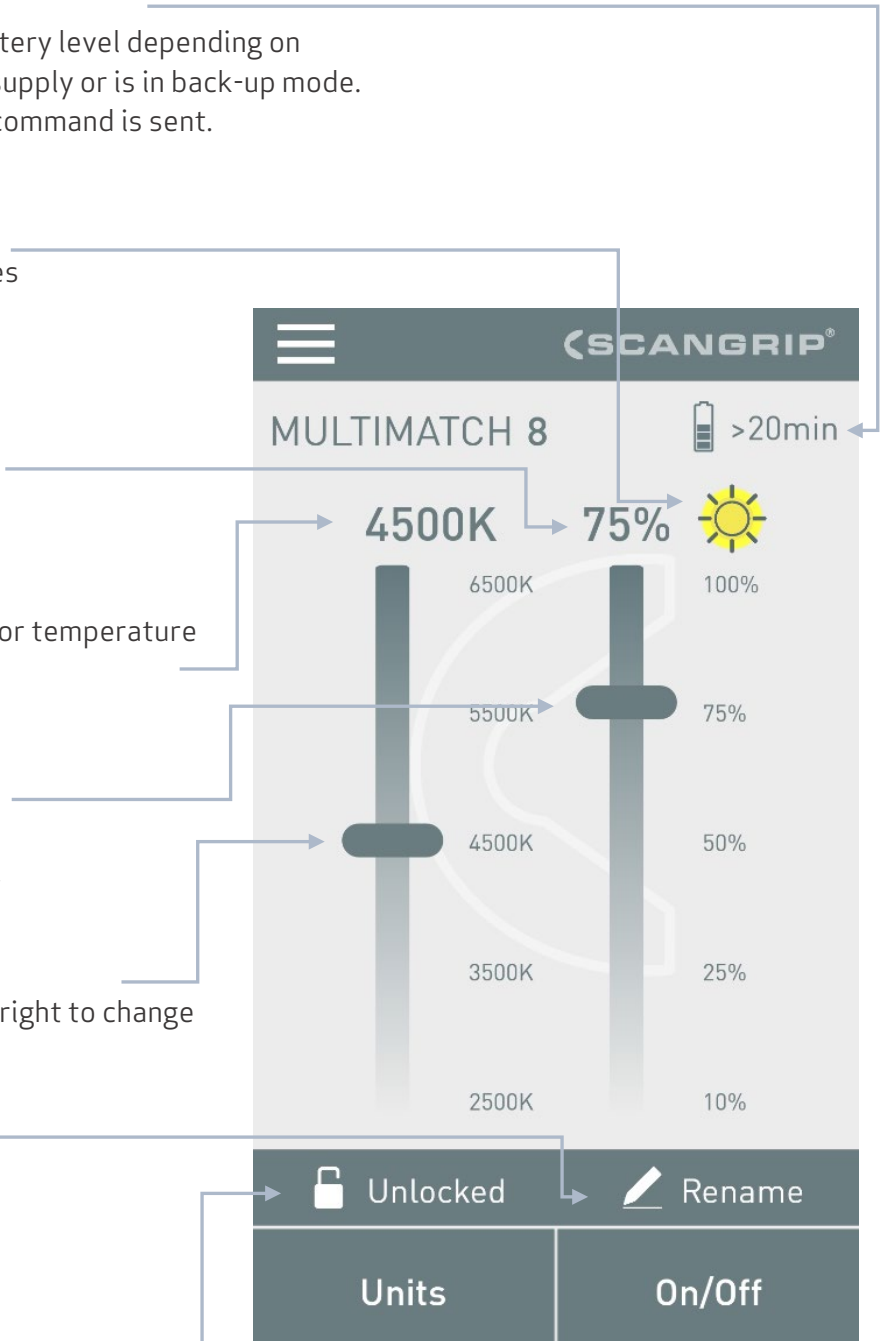

7. Light control functions for AREA 10 SPS

Power status

Shows operation time left and battery level as well as when in back-up mode and connected to mains power. Time left is updated every time a command is sent.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

180°/360° buttons

Press to change between complete and directional lighting.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press 'Units' button to return to the Units screen.

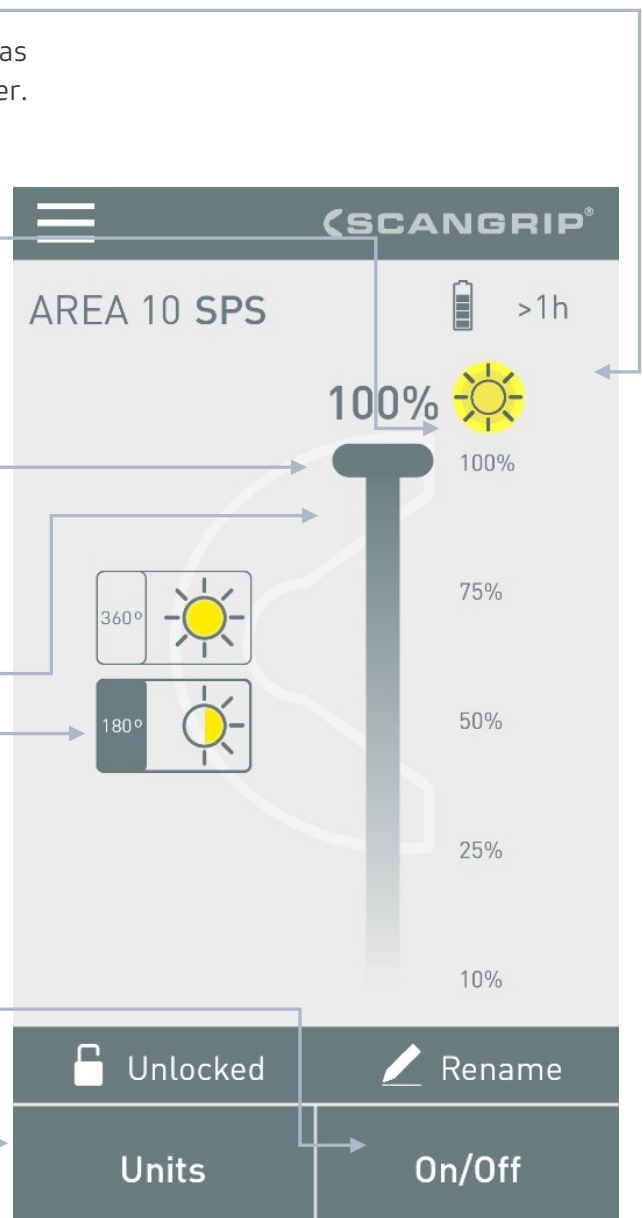

8. Light control functions for NOVA CAS series

Power status

Shows remaining battery in % and battery level depending on whether it is connected to power supply or is in back-up mode. Battery level is updated every time a command is sent.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press 'Units' button to return to the Units screen.

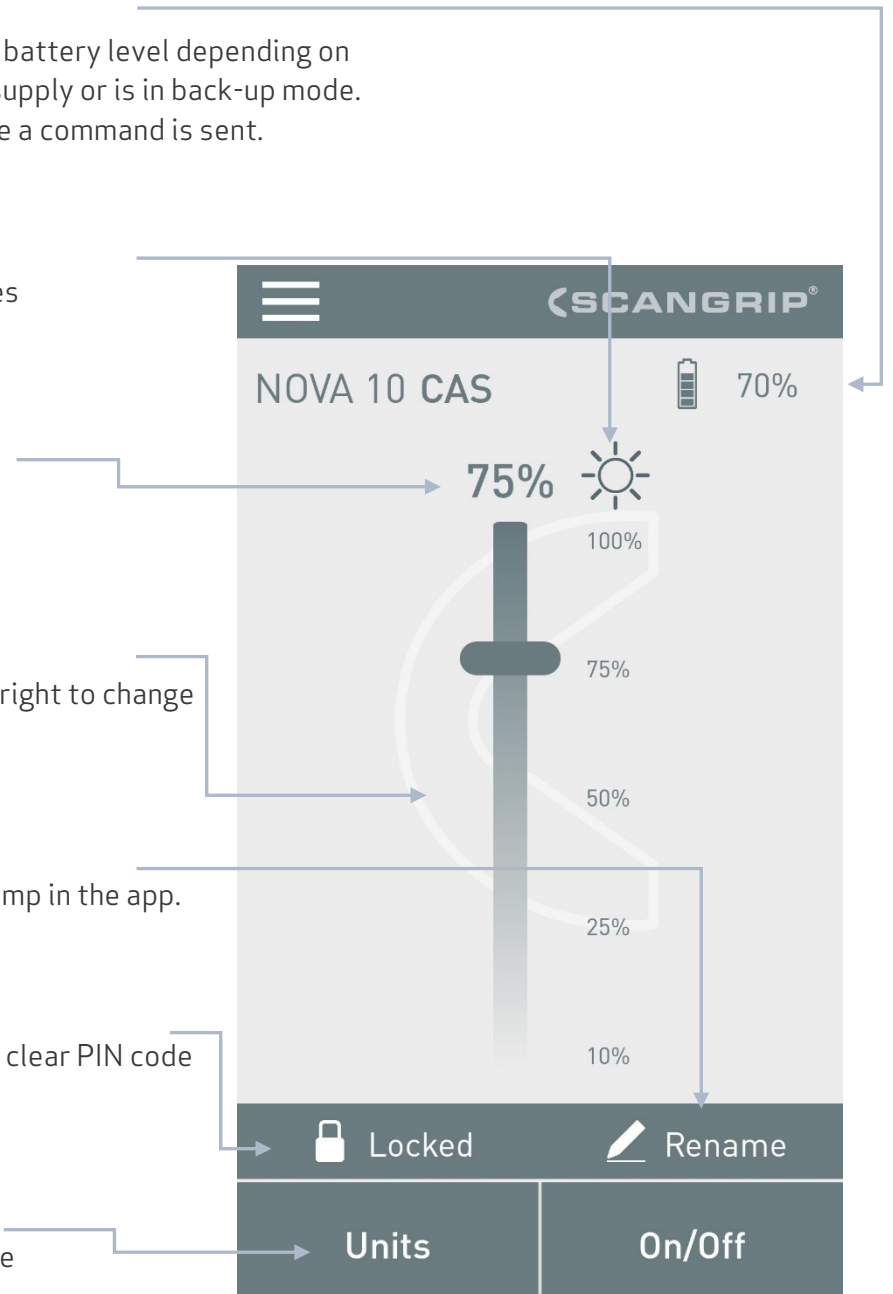

9. Light control functions for AREA 10 CAS

Power status

Shows remaining battery in % and battery level depending on whether it is connected to power supply or is in back-up mode. Battery level is updated every time a command is sent.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

180°/360° buttons

Press to change between complete and directional lighting.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press 'Units' button to return to the Units screen.

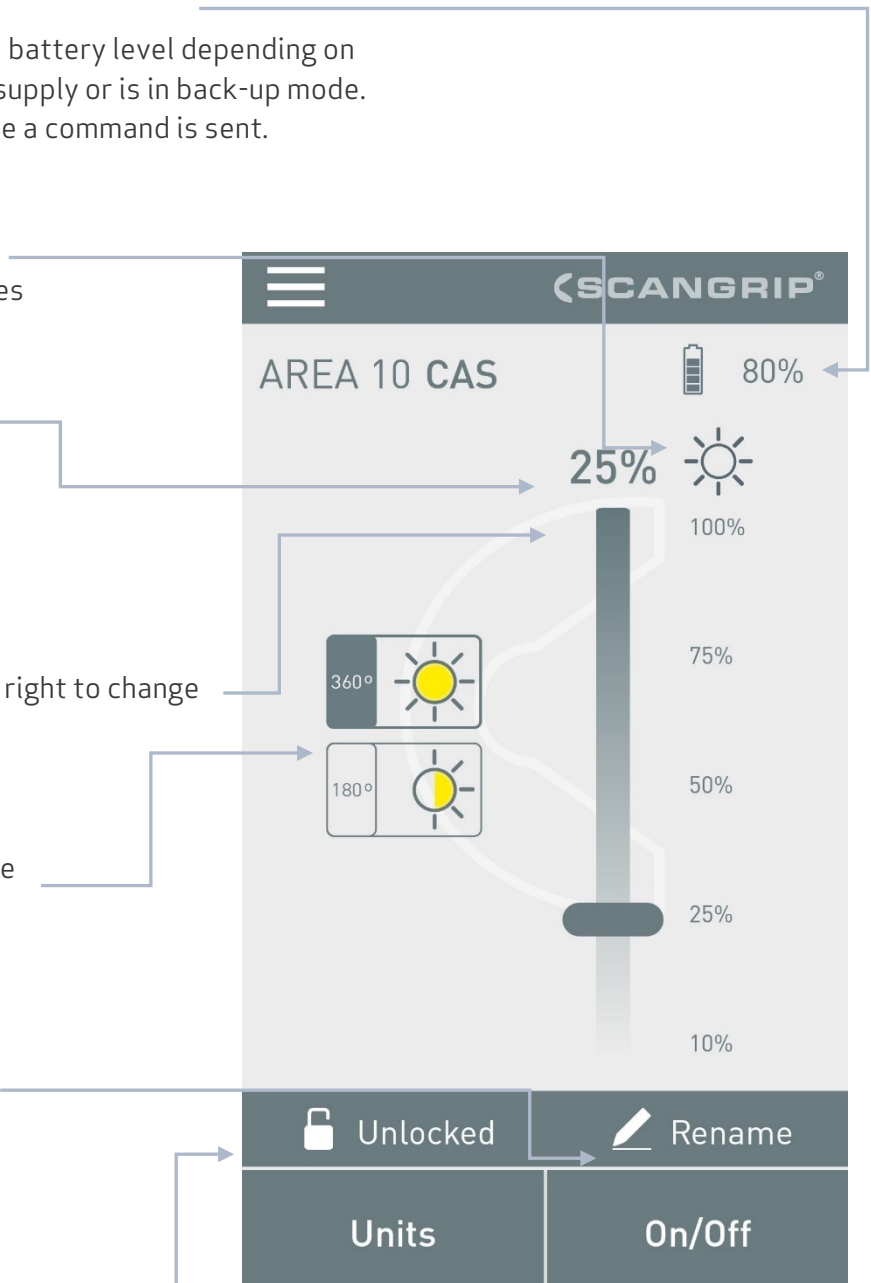

10. Light control functions for SITE LIGHT Series

Power status

Only mains powered. A loading spinner appear until the command has been received.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

Rename

Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press "Units" button to return to the Units screen.

