

Клапан запорный для стиральной машины LG, (CNKB FPS-180A, 2/180, d=10.5 мм), - 5221EN1005B (оригинал)

Двойной выход под 180° относительно входа

Диаметр патрубков: 10.5 мм (расширение 12 мм).

Тип подключения: отдельные клеммы.

Производитель: KEBO Electrical (Китай).

Маркировка: CNKB FPS-180A.

Коды замены и аналогов: Atlant 903428600010, Atlant 908092004511, Gorenje 608557, Gorenje 196237, Indesit C00378124, LG 5220FR1251E, LG 5221EN1005B, LG 5221EN1005A, LG 5220FR1251A, LG 5220FR2067B, LG 3911EZ9022B, LG 4925EN1003C, LG AGF76751651, LG 3911EN9025G, LG AJU71115201, Samsung DC62-00024F, Samsung DC62-00024M, Samsung DC62-00266B, Samsung DC62-00024Y, Whirlpool 481981729331.

Подходит к таким моделям:

Gorenje	00.116.153 8 (ART.NO 187804)	Gorenje	WA60149 (ART.NO 223313)
Gorenje	00.116.153 8 (ART.NO 262189)	Gorenje	WA60149 (ART.NO 224815)
Gorenje	00.121.661 3 (ART.NO 187792)	Gorenje	WA60149 (ART.NO 228545)
Gorenje	00.121.676 1 (ART.NO 187787)	Gorenje	WA60149 (ART.NO 232106)
Gorenje	116.153 8 (ART.NO 187804)	Gorenje	WA60149 (ART.NO 260612)
Gorenje	121.661 3 (ART.NO 187792)	Gorenje	WA60149 (ART.NO 267616)
Gorenje	121.676 1 (ART.NO 187787)	Gorenje	WA60149 (ART.NO 284477)
Gorenje	312 (ART.NO 266240)	Gorenje	WA60149 (ART.NO 285402)
Gorenje	314 (ART.NO 266228)	Gorenje	WA60149 (ART.NO 286449)
Gorenje	BWA50089 (ART.NO 246644)	Gorenje	WA60149 (ART.NO 288608)

Gorenje	ELF614D2 (ART.NO 260612)	Gorenje	WA60149 (ART.NO 297586)
Gorenje	ELF614D3 (ART.NO 297120)	Gorenje	WA60149 (ART.NO 304257)
Gorenje	EWM246DWIT (ART.NO 450615)	Gorenje	WA60149 (ART.NO 314716)
Gorenje	EWM246DWIT/E01 (ART.NO 450615)	Gorenje	WA60149 GOR (ART.NO 232106)
Gorenje	EWM246KWIT (ART.NO 450616)	Gorenje	WA60149S (ART.NO 301951)
Gorenje	EWM246KWIT/E01 (ART.NO 450616)	Gorenje	WA6065 (ART.NO 385592)
Gorenje	EWM247DWIT (ART.NO 450614)	Gorenje	WA6089 (ART.NO 385589)
Gorenje	EWM247DWIT/E01 (ART.NO 450614)	Gorenje	WA61014 (ART.NO 304277)
Gorenje	GWA755 (ART.NO 260589)	Gorenje	WA6109 (ART.NO 385541)
Gorenje	GWA755 (ART.NO 297116)	Gorenje	WA6109 (ART.NO 404784)
Gorenje	K5.1100N (ART.NO 295678)	Gorenje	WA610SYB (ART.NO 276299)
Gorenje	K5.1200N (ART.NO 295677)	Gorenje	WA610SYW (ART.NO 276321)
Gorenje	K6.1000N (ART.NO 295679)	Gorenje	WA610SYW (ART.NO 278907)
Gorenje	K6.1100N (ART.NO 295676)	Gorenje	WA61210 (ART.NO 339117)
Gorenje	K6.1200N (ART.NO 417987)	Gorenje	WA61210DI (ART.NO 339354)
Gorenje	K7.1100N (ART.NO 417988)	Gorenje	WA61214 (ART.NO 304276)
Gorenje	KWA50085 (ART.NO 226175)	Gorenje	WA6129 (ART.NO 385537)

Gorenje	KWA50085 (ART.NO 296401)	Gorenje	WA6129 (ART.NO 389570)
Gorenje	KWA60065 (ART.NO 291594)	Gorenje	WA6129 (ART.NO 404785)
Gorenje	KWA60089W (ART.NO 421169)	Gorenje	WA612SYA (ART.NO 297437)
Gorenje	KWA60105 (ART.NO 291574)	Gorenje	WA612SYB (ART.NO 276300)
Gorenje	KWS50.100 (ART.NO 309478)	Gorenje	WA612SYB (ART.NO 329236)
Gorenje	PESUKARHU5012D (ART.No 297440)	Gorenje	WA612SYW (ART.NO 276298)
Gorenje	PESUKARHU6012 (ART.No 297139)	Gorenje	WA612SYW (ART.NO 327304)
Gorenje	PESUKARHU6012D (ART.No 297471)	Gorenje	WA612SYW (ART.NO 329235)
Gorenje	PESUKARHU6014D (ART.No 297141)	Gorenje	WA6139 (ART.NO 405802)
Gorenje	PK5012D (ART.No 297440)	Gorenje	WA61410 (ART.NO 339352)
Gorenje	PK512D (ART.NO 417985)	Gorenje	WA61410DI (ART.NO 339353)
Gorenje	PK6012D (ART.No 297471)	Gorenje	WA61412 (ART.NO 293236)
Gorenje	PK6014D (ART.No 297141)	Gorenje	WA61414 (ART.NO 293235)
Gorenje	PK714D (ART.NO 417964)	Gorenje	WA61424 (ART.NO 299494)
Gorenje	SWA 50129 (ART.NO 252999)	Gorenje	WA61432 (ART.NO 304311)
Gorenje	SWA50129 (ART.NO 297483)	Gorenje	WA6145B (ART.NO 295160)
Gorenje	VITAL 522 (ART.NO 262189)	Gorenje	WA6145B (ART.NO 350027)

Gorenje	W509/S (ART.NO 415570)	Gorenje	WA614SYA (ART.NO 297438)
Gorenje	W525S (ART.NO 313325)	Gorenje	WA614SYB (ART.NO 276327)
Gorenje	W529/S (ART.NO 415571)	Gorenje	WA614SYW (ART.NO 276297)
Gorenje	W605 (ART.NO 415569)	Gorenje	WA614SYW (ART.NO 327330)
Gorenje	W6140 (ART.NO 303331)	Gorenje	WA626 (ART.NO 262189)
Gorenje	W729 (ART.NO 415572)	Gorenje	WA635 (ART.NO 338660)
Gorenje	W729 (ART.NO 417346)	Gorenje	WA635BK (ART.NO 338659)
Gorenje	W749 (ART.NO 415568)	Gorenje	WA635RD (ART.NO 338640)
Gorenje	W749 (ART.NO 417324)	Gorenje	WA639 (ART.NO 288586)
Gorenje	WA 1253D (ART.NO 297107)	Gorenje	WA70109 (ART.NO 372016)
Gorenje	WA 1453D (ART.NO 282866)	Gorenje	WA70129 (ART.NO 372017)
Gorenje	WA2990ECOSTAR (ART.NO 363316)	Gorenje	WA70129 (ART.NO 382557)
Gorenje	WA369 (ART.NO 285407)	Gorenje	WA70139S (ART.NO 369399)
Gorenje	WA4014 (ART.NO 332962)	Gorenje	WA70149 (ART.NO 369400)
Gorenje	WA450S (ART.NO 301163)	Gorenje	WA70149 (ART.NO 382560)
Gorenje	WA459 (ART.NO 280146)	Gorenje	WA7039 (ART.NO 377031)
Gorenje	WA459S (ART.NO 301150)	Gorenje	WA714SYB (ART.NO 406244)

Gorenje	WA50065 (ART.NO 195634)	Gorenje	WA714SYW (ART.NO 382523)
Gorenje	WA50065 (ART.NO 199123)	Gorenje	WA71Z45B (ART.NO 350027)
Gorenje	WA50065 (ART.NO 199270)	Gorenje	WA7239 (ART.NO 378843)
Gorenje	WA50065 (ART.NO 235433)	Gorenje	WA7239 (ART.NO 385880)
Gorenje	WA50065 (ART.NO 251923)	Gorenje	WA7339 (ART.NO 403298)
Gorenje	WA50075 (ART.NO 262270)	Gorenje	WA735 (ART.NO 392213)
Gorenje	WA50075 (ART.NO 301856)	Gorenje	WA735BK (ART.NO 382521)
Gorenje	WA50085 (ART.NO 192453)	Gorenje	WA735RD (ART.NO 382519)
Gorenje	WA50085 (ART.NO 195636)	Gorenje	WA7435 (ART.NO 377358)
Gorenje	WA50085 (ART.NO 198838)	Gorenje	WA7439 (ART.NO 377360)
Gorenje	WA50085 (ART.NO 199168)	Gorenje	WA7439 (ART.NO 385881)
Gorenje	WA50085 (ART.NO 222841)	Gorenje	WA7439 (ART.NO 392588)
Gorenje	WA50085 (ART.NO 251929)	Gorenje	WA7439SAT (ART.No 453305)
Gorenje	WA50085 (ART.NO 260589)	Gorenje	WA76129 (ART.NO 362362)
Gorenje	WA50085 (ART.NO 284448)	Gorenje	WA76149 (ART.NO 362298)
Gorenje	WA50089 (ART.NO 192420)	Gorenje	WA77145ECO (ART.NO 399304)
Gorenje	WA50089 (ART.NO 192813)	Gorenje	WA87439 (ART.NO 432300)

Gorenje	WA50089 (ART.NO 195680)	Gorenje	WAE7499 (ART.NO 453309)
Gorenje	WA50089 (ART.NO 199283)	Gorenje	WAS526 (ART.NO 327296)
Gorenje	WA50089 (ART.NO 246644)	Gorenje	WAS529 (ART.NO 327342)
Gorenje	WA50089 (ART.NO 284451)	Gorenje	WAS546 (ART.NO 327072)
Gorenje	WA50089 (ART.NO 301854)	Gorenje	WAS549 (ART.NO 327071)
Gorenje	WA50105 (ART.NO 192452)	Gorenje	WD-6800 J (ART.NO 329723)
Gorenje	WA50105 (ART.NO 228541)	Gorenje	WF5012D (ART.NO 297439)
Gorenje	WA50105 (ART.NO 228692)	Gorenje	WF5012D -5-KILO (ART.NO 297439)
Gorenje	WA50105 (ART.NO 247476)	Gorenje	WK6101 (ART.NO 366727)
Gorenje	WA50105 (ART.NO 284449)	Gorenje	WK6121 (ART.NO 366728)
Gorenje	WA50105S (ART.No 435831)	Gorenje	WS345 (ART.NO 258501)
Gorenje	WA50109 (ART.NO 192349)	Gorenje	WS346 (ART.NO 306856)
Gorenje	WA50109 (ART.NO 192808)	Gorenje	WS40085 (ART.NO 195921)
Gorenje	WA50109 (ART.NO 195681)	Gorenje	WS40085 (ART.NO 198928)
Gorenje	WA50109 (ART.NO 233917)	Gorenje	WS40085 (ART.NO 226201)
Gorenje	WA50109 (ART.NO 284452)	Gorenje	WS40085 (ART.NO 228542)
Gorenje	WA50109 (ART.NO 301855)	Gorenje	WS40085 (ART.NO 247478)

Gorenje	WA50115 (ART.NO 222013)	Gorenje	WS40089 (ART.NO 199166)
Gorenje	WA50125 (ART.NO 193766)	Gorenje	WS40089 (ART.NO 247457)
Gorenje	WA50125 (ART.NO 192451)	Gorenje	WS40095 (ART.NO 267557)
Gorenje	WA50125 (ART.NO 194356)	Gorenje	WS40105 (ART.NO 195154)
Gorenje	WA50125 (ART.NO 228691)	Gorenje	WS40105 (ART.NO 195934)
Gorenje	WA50125 (ART.NO 284450)	Gorenje	WS40105 (ART.NO 222811)
Gorenje	WA50125 (ART.NO 304258)	Gorenje	WS40105 (ART.NO 226191)
Gorenje	WA50125S (ART.NO 297490)	Gorenje	WS40105 (ART.NO 234893)
Gorenje	WA50129 (ART.NO 193753)	Gorenje	WS40105 (ART.NO 244104)
Gorenje	WA50129 (ART.NO 192348)	Gorenje	WS40109 (ART.NO 239745)
Gorenje	WA50129 (ART.NO 192771)	Gorenje	WS40109 (ART.NO 195155)
Gorenje	WA50129 (ART.NO 197812)	Gorenje	WS40109 (ART.NO 195311)
Gorenje	WA50129 (ART.NO 234251)	Gorenje	WS40109 (ART.NO 199164)
Gorenje	WA50129 (ART.NO 277752)	Gorenje	WS40109 (ART.NO 222803)
Gorenje	WA50129 (ART.NO 284453)	Gorenje	WS40109 (ART.NO 226183)
Gorenje	WA50129 (ART.NO 304254)	Gorenje	WS40109 (ART.NO 228544)
Gorenje	WA50129S (ART.NO 334800)	Gorenje	WS40109 (ART.NO 247477)

Gorenje	WA50129SBK (ART.NO 363958)	Gorenje	WS40109 (ART.NO 304252)
Gorenje	WA50129SRD (ART.NO 363880)	Gorenje	WS401091 (ART.NO 270032)
Gorenje	WA50145 (ART.NO 193763)	Gorenje	WS40115 (ART.NO 267539)
Gorenje	WA50145 (ART.NO 194362)	Gorenje	WS40125 (ART.NO 195935)
Gorenje	WA50145 (ART.NO 237064)	Gorenje	WS40125 (ART.NO 226156)
Gorenje	WA50145 (ART.NO 285685)	Gorenje	WS40125 (ART.NO 240825)
Gorenje	WA50145 (ART.NO 304259)	Gorenje	WS40129 (ART.NO 195135)
Gorenje	WA50145S (ART.NO 297489)	Gorenje	WS40129 (ART.NO 195310)
Gorenje	WA50149 (ART.NO 193750)	Gorenje	WS40129 (ART.NO 199163)
Gorenje	WA50149 (ART.NO 193409)	Gorenje	WS40129 (ART.NO 222710)
Gorenje	WA50149 (ART.NO 195682)	Gorenje	WS40129 (ART.NO 226249)
Gorenje	WA50149 (ART.NO 197803)	Gorenje	WS40129 (ART.NO 247467)
Gorenje	WA50149 (ART.NO 277757)	Gorenje	WS40129 (ART.NO 304251)
Gorenje	WA50149 (ART.NO 296583)	Gorenje	WS40145 (ART.NO 230554)
Gorenje	WA50149S (ART.NO 297488)	Gorenje	WS40145 (ART.NO 277762)
Gorenje	WA51149 (ART.NO 296729)	Gorenje	WS40145 GOR (ART.NO 230554)
Gorenje	WA51412 (ART.NO 293237)	Gorenje	WS40149 (ART.NO 230547)

Gorenje	WA546 (ART.NO 187792)	Gorenje	WS40149 (ART.NO 274698)
Gorenje	WA60.9 (ART.NO 288585)	Gorenje	WS40149 (ART.NO 276710)
Gorenje	WA60055N (ART.NO 306853)	Gorenje	WS40149 (ART.NO 277759)
Gorenje	WA60065 (ART.NO 267621)	Gorenje	WS40149GOR (ART.NO 230547)
Gorenje	WA60065 (ART.NO 270630)	Gorenje	WS4143B (ART.NO 297883)
Gorenje	WA60065 (ART.NO 286414)	Gorenje	WS4143B (ART.NO 349893)
Gorenje	WA60065 (ART.NO 287357)	Gorenje	WS41Z43B (ART.NO 349893)
Gorenje	WA60065 (ART.NO 291594)	Gorenje	WS50085 (ART.NO 292192)
Gorenje	WA60085 (ART.NO 267619)	Gorenje	WS50085 (ART.NO 285556)
Gorenje	WA60085 (ART.NO 286415)	Gorenje	WS50085 (ART.NO 293238)
Gorenje	WA60089 (ART.NO 198932)	Gorenje	WS50089 (ART.NO 292196)
Gorenje	WA60089 (ART.NO 192450)	Gorenje	WS50089 (ART.NO 285684)
Gorenje	WA60089 (ART.NO 247473)	Gorenje	WS50089 (ART.NO 294343)
Gorenje	WA60089 (ART.NO 267930)	Gorenje	WS50095 (ART.NO 292236)
Gorenje	WA60089 (ART.NO 284454)	Gorenje	WS50095 (ART.NO 293861)
Gorenje	WA60089 (ART.NO 286416)	Gorenje	WS50105 (ART.NO 292235)
Gorenje	WA60089 (ART.NO 405821)	Gorenje	WS50105 (ART.NO 285555)

Gorenje	WA60089S (ART.NO 301948)	Gorenje	WS50105 (ART.NO 293239)
Gorenje	WA60105 (ART.NO 270629)	Gorenje	WS501052 (ART.NO 335913)
Gorenje	WA60105 (ART.NO 274720)	Gorenje	WS50109 (ART.NO 292201)
Gorenje	WA60105 (ART.NO 287358)	Gorenje	WS50109 (ART.NO 293234)
Gorenje	WA60105 (ART.NO 291574)	Gorenje	WS50109 (ART.NO 285371)
Gorenje	WA60105 (ART.NO 293081)	Gorenje	WS50109 (ART.NO 285403)
Gorenje	WA60105 (ART.NO 297118)	Gorenje	WS50109 (ART.NO 293241)
Gorenje	WA60109 (ART.NO 198931)	Gorenje	WS501091 (ART.NO 285378)
Gorenje	WA60109 (ART.NO 192439)	Gorenje	WS50109N (ART.NO 292931)
Gorenje	WA60109 (ART.NO 192815)	Gorenje	WS50115 (ART.NO 267539)
Gorenje	WA60109 (ART.NO 194439)	Gorenje	WS50119 (ART.NO 292683)
Gorenje	WA60109 (ART.NO 227647)	Gorenje	WS50125 (ART.NO 292684)
Gorenje	WA60109 (ART.NO 247474)	Gorenje	WS50125 (ART.NO 285369)
Gorenje	WA60109 (ART.NO 267916)	Gorenje	WS501252 (ART.NO 335914)
Gorenje	WA60109 (ART.NO 284455)	Gorenje	WS50129 (ART.NO 292253)
Gorenje	WA60109 (ART.NO 285400)	Gorenje	WS50129 (ART.NO 285375)
Gorenje	WA60109 (ART.NO 286447)	Gorenje	WS50129 (ART.NO 285404)

Gorenje	WA60109 (ART.NO 288609)	Gorenje	WS50129 (ART.NO 293240)
Gorenje	WA601091 (ART.NO 270031)	Gorenje	WS50129 (ART.NO 337695)
Gorenje	WA601091 (ART.NO 284480)	Gorenje	WS501291 (ART.NO 337695)
Gorenje	WA60109N (ART.NO 301105)	Gorenje	WS50129N (ART.NO 294232)
Gorenje	WA60109N (ART.NO 337700)	Gorenje	WS50129N (ART.NO 390621)
Gorenje	WA60109S (ART.NO 301945)	Gorenje	WS50129P (ART.NO 306341)
Gorenje	WA60119 (ART.NO 225676)	Gorenje	WS50129P (ART.NO 392587)
Gorenje	WA60119 (ART.NO 288506)	Gorenje	WS50129S (ART.NO 345203)
Gorenje	WA60125 (ART.NO 282697)	Gorenje	WS50135 (ART.NO 292685)
Gorenje	WA60125 (ART.NO 385536)	Gorenje	WS50139 (ART.NO 290317)
Gorenje	WA60125 (ART.NO 399575)	Gorenje	WS50149 (ART.NO 285405)
Gorenje	WA60125 (ART.NO 412226)	Gorenje	WS50149N (ART.NO 294234)
Gorenje	WA60129 (ART.NO 192421)	Gorenje	WS50149S (ART.NO 345204)
Gorenje	WA60129 (ART.NO 192816)	Gorenje	WS5029 (ART.NO 382737)
Gorenje	WA60129 (ART.NO 194348)	Gorenje	WS5085B (ART.NO 301173)
Gorenje	WA60129 (ART.NO 223314)	Gorenje	WS50Z129N (ART.NO 366175)
Gorenje	WA60129 (ART.NO 224814)	Gorenje	WS50Z149N (ART.NO 366141)

Gorenje	WA60129 (ART.NO 225676)	Gorenje	WS5105B (ART.NO 301104)
Gorenje	WA60129 (ART.NO 228670)	Gorenje	WS510SYB (ART.NO 276325)
Gorenje	WA60129 (ART.NO 247475)	Gorenje	WS510SYB (ART.NO 301225)
Gorenje	WA60129 (ART.NO 250787)	Gorenje	WS510SYW (ART.NO 276326)
Gorenje	WA60129 (ART.NO 267912)	Gorenje	WS510SYW (ART.NO 301226)
Gorenje	WA60129 (ART.NO 284456)	Gorenje	WS510SYW (ART.NO 303916)
Gorenje	WA60129 (ART.NO 285401)	Gorenje	WS510SYW (ART.NO 278183)
Gorenje	WA60129 (ART.NO 286448)	Gorenje	WS511SYW (ART.NO 303920)
Gorenje	WA60129 (ART.NO 288607)	Gorenje	WS511SYW (ART.NO 292212)
Gorenje	WA60129 (ART.NO 297117)	Gorenje	WS512SYB (ART.NO 276322)
Gorenje	WA60129 (ART.NO 297522)	Gorenje	WS512SYW (ART.NO 276323)
Gorenje	WA60129 (ART.NO 304256)	Gorenje	WS512SYW (ART.NO 301227)
Gorenje	WA60129 (ART.NO 314715)	Gorenje	WS512SYW (ART.NO 304221)
Gorenje	WA60129 (ART.NO 396560)	Gorenje	WS512SYW (ART.NO 278180)
Gorenje	WA601291 (ART.NO 303156)	Gorenje	WS5145B (ART.NO 301174)
Gorenje	WA60129S (ART.NO 301950)	Gorenje	WS5145B (ART.NO 350009)
Gorenje	WA60139 (ART.NO 225678)	Gorenje	WS514SYW (ART.NO 304222)

Gorenje	WA60139S (ART.NO 349409)	Gorenje	WS514SYW (ART.NO 362363)
Gorenje	WA60145 (ART.NO 266410)	Gorenje	WS514SYW (ART.NO 374925)
Gorenje	WA60149 (ART.NO 237034)	Gorenje	WS514SYW (ART.NO 281047)
Gorenje	WA60149 (ART.NO 295160)	Gorenje	WS51Z45B (ART.NO 350009)
Gorenje	WA60149 (ART.NO 192814)	Gorenje	WS5229 (ART.NO 389569)
Gorenje	WA60149 (ART.NO 193450)	Gorenje	WS5229 (ART.NO 389572)
Gorenje	WA60149 (ART.NO 194341)	Gorenje	WWA50085 (ART.NO 198369)
LG	E1039SD (E1039SD.ABWPRUS)	LG	FH0G6SD2 (FH0G6SD2.ABWPEXC)
LG	E1069LD (E1069LD.ABWPRUS)	LG	FH0G6SD5
LG	E1069SD (E1069SD.ABWPRUS)	LG	FH0G6SD5 (FH0G6SD5.ALSPRUS)
LG	E1091LD (E1091LD.ABWPRUS)	LG	FH0H3LD1
LG	E1092ND (E1092ND.ABWPRUS)	LG	FH0H3LD1 (FH0H3LD1.ABWPEXC)
LG	E1096SD3 (E1096SD3.ABWPEXC)	LG	FH0H3MD0
LG	E10B8LD0 (E10B8LD0.ABWPEXC)	LG	FH0H3MD0 (FH0H3MD0.ABWPRUS)
LG	E10B8ND (E10B8ND.ABWPRUS)	LG	FH0H3ND0
LG	E10B8SD0 (E10B8SD0.ABWPEXC)	LG	FH0H3ND0 (FH0H3ND0.ABWPRUS)
LG	E10B9LD (E10B9LD.ABWPRUS)	LG	FH0H3ND1

LG	E10B9SD (E10B9SD.ABWPEXC)	LG	FH0H3ND1 (FH0H3ND1.ABWPRUS)
LG	E10C9LD (E10C9LD.ABWPKIV)	LG	FH0H3NDS1
LG	E1289ND (E1289ND.ABWPRUS)	LG	FH0H3NDS1 (FH0H3NDS1.ABWPCIS)
LG	E1296ND3 (E1296ND3.ABWPRUS)	LG	FH0H3NDS1 (FH0H3NDS1.ABWPEXC)
LG	E8069LD (E8069LD.ABWPRUS)	LG	FH0H3QD0
LG	E8069SD (E8069SD.ABWPRUS)	LG	FH0H3QD0 (FH0H3QD0.ABWPRUS)
LG	F0J5LN3W	LG	FH0H3SD1
LG	F0J5LN3W (F0J5LN3W.ABWPCOM)	LG	FH0H3SD1 (FH0H3SD1.ABWPEXC)
LG	F0J5LN3W (F0J5LN3W.ABWPTSK)	LG	FH0H3WD2
LG	F0J5NN4L	LG	FH0H3WD2 (FH0H3WD2.ABWPRUS)
LG	F0J5NN4L (F0J5NN4L.ALSPKIV)	LG	FH0H4ND0
LG	F0J5NN4W	LG	FH0H4ND0 (FH0H4ND0.ABWPCIS)
LG	F0J5NN4W (F0J5NN4W.ABWPKIV)	LG	FH0H4ND0 (FH0H4ND0.ABWPEXC)
LG	F0J5NY3W	LG	FH0H4NDS0
LG	F0J5NY3W (F0J5NY3W.ABWQWMR)	LG	FH0H4NDS0 (FH0H4NDS0.ABWPEXC)
LG	F0J5WN3W	LG	FH0H4SDN0
LG	F0J5WN3W (F0J5WN3W.ABWQWMR)	LG	FH0H4SDN0 (FH0H4SDN0.ABWPCIS)

LG	F0J6NN0W	LG	FH0H4SDN0 (FH0H4SDN0.ABWPRUS)
LG	F0J6NN0W (F0J6NN0W.ABWPKIV)	LG	FH0J3NDN0
LG	F0J6NS1W	LG	FH0J3NDN0 (FH0J3NDN0.ABWPKIV)
LG	F0J6NS1W (F0J6NS1W.ABWPKIV)	LG	FH0M8MD0
LG	F0J6WN0W	LG	FH0M8MD0 (FH0M8MD0.ABWPEXC)
LG	F0J6WN0W (F0J6WN0W.ABWQRLA)	LG	FH296ND4
LG	F0J6WN0W (F0J6WN0W.ABWQWMR)	LG	FH296ND4 (FH296ND4.ALSPKIV)
LG	F1003ND	LG	FH296NDA3
LG	F1003ND (F1003ND.ABWPCOM)	LG	FH296NDA3 (FH296NDA3.ABWPBAL)
LG	F1003ND (F1003ND.ABWPEBY)	LG	FH296NDA3 (FH296NDA3.ABWQWLA)
LG	F1003ND (F1003ND.ABWPEUA)	LG	FH296SD3
LG	F1003ND (F1003ND.ABWPRUS)	LG	FH296SD3 (FH296SD3.ABWQRIS)
LG	F1003NDP	LG	FH296SD3 (FH296SD3.ABWQRM)
LG	F1003NDP (F1003NDP.ABWPRUS)	LG	FH296TD
LG	F1012NDR	LG	FH296TD (FH296TD.ABWPCOM)
LG	F1012NDR (F1012NDR.ABWPBWT)	LG	FH296WD
LG	F1012NDR (F1012NDR.ABWPEBY)	LG	FH296WD (FH296WD.ABWPCOM)

LG	F1020ND	LG	FH296WDS
LG	F1020ND (F1020ND.ABWPBWT)	LG	FH296WDS (FH296WDS.ABWPKIV)
LG	F1020ND (F1020ND.ABWPCIS)	LG	FH296WDS (FH296WDS.ABWQRLA)
LG	F1020ND (F1020ND.ABWPEAK)	LG	FH296WDS (FH296WDS.ABWQRMR)
LG	F1020ND (F1020ND.ABWPEUA)	LG	FH296WDS (FH296WDS.ABWQRPL)
LG	F1020ND1	LG	FH2A9TDP3S
LG	F1020ND1 (F1020ND1.ABWPCIS)	LG	FH2A9TDP3S (FH2A9TDP3S.ASSPCO)
LG	F1020ND1 (F1020ND1.ABWPRUS)	LG	FH2B8MD
LG	F1020ND5	LG	FH2B8MD (FH2B8MD.ABWPCOM)
LG	F1020ND5 (F1020ND5.ALSPBWT)	LG	FH2B8ND
LG	F1020ND5 (F1020ND5.ALSPCIS)	LG	FH2B8ND (FH2B8ND.ABWPCOM)
LG	F1020ND5 (F1020ND5.ALSPEUA)	LG	FH2B8NDA
LG	F1020ND5 (F1020ND5.AMSPBWT)	LG	FH2B8NDA (FH2B8NDA.ABWPBAL)
LG	F1020ND5 (F1020ND5.AMSPEAK)	LG	FH2B8NDA (FH2B8NDA.ABWQWLA)
LG	F1020NDP	LG	FH2B8NDA7
LG	F1020NDP (F1020NDP.ABWPEAK)	LG	FH2B8NDA7 (FH2B8NDA7.ABWPBAL)
LG	F1020NDP (F1020NDP.ABWPRUS)	LG	FH2B8NDA7 (FH2B8NDA7.ABWQRIS)

LG	F1020NDP5	LG	FH2B8NDA7 (FH2B8NDA7.ABWQWL)
LG	F1020NDP5 (F1020NDP5.ALSPBWT)	LG	FH2B8WDS7
LG	F1020NDR	LG	FH2B8WDS7 (FH2B8WDS7.ABWPKIV)
LG	F1020NDR (F1020NDR.ABWPBAL)	LG	FH2C3TD
LG	F1020NDR (F1020NDR.ABWPBWT)	LG	FH2C3TD (FH2C3TD.ABWQPCE)
LG	F1020NDR (F1020NDR.ABWPEBY)	LG	FH2C3WD
LG	F1020NDR (F1020NDR.ABWPRUS)	LG	FH2C3WD (FH2C3WD.ABWPCIS)
LG	F1020NDR5	LG	FH2C3WD (FH2C3WD.ABWQPCE)
LG	F1020NDR5 (F1020NDR5.ABWPBWT)	LG	FH2G6HDS2
LG	F1020NDR5 (F1020NDR5.ALSPRUS)	LG	FH2G6HDS2 (FH2G6HDS2.ABWPCIS)
LG	F1020NDR5 (F1020NDR5.AMSPBAL)	LG	FH2G6ND2
LG	F1020NDR5 (F1020NDR5.AMSPBWT)	LG	FH2G6ND2 (FH2G6ND2.ABWPCIS)
LG	F1020NDR5 (F1020NDR5.AMSPEBY)	LG	FH2G6ND4
LG	F1020TD	LG	FH2G6ND4 (FH2G6ND4.ALSPCIS)
LG	F1020TD (F1020TD.ABWPBWT)	LG	FH2G6NDN2
LG	F1020TD (F1020TD.ABWPCIS)	LG	FH2G6NDN2 (FH2G6NDN2.ABWQRP)
LG	F1020TD (F1020TD.ABWPEAK)	LG	FH2G6NDS2

LG	F1020TD (F1020TD.ABWPEUA)	LG	FH2G6NDS2 (FH2G6NDS2.ABWPEXC)
LG	F1020TD5	LG	FH2G6TD2
LG	F1020TD5 (F1020TD5.ALSPBWT)	LG	FH2G6TD2 (FH2G6TD2.ABWPEXC)
LG	F1020TD5 (F1020TD5.ALSPCIS)	LG	FH2G6TD4
LG	F1020TD5 (F1020TD5.ALSPEUA)	LG	FH2G6TD4 (FH2G6TD4.ALSPRUS)
LG	F1020TD5 (F1020TD5.AMSPBWT)	LG	FH2G6WD2
LG	F1020TDR	LG	FH2G6WD2 (FH2G6WD2.ABWPEXC)
LG	F1020TDR (F1020TDR.ABWPBWT)	LG	FH2G6WD2 (FH2G6WD2.ABWPMVI)
LG	F1020TDR (F1020TDR.ABWPRUS)	LG	FH2G6WD4
LG	F1021ND	LG	FH2G6WD4 (FH2G6WD4.ALSPEXC)
LG	F1021ND (F1021ND.ABWPBWT)	LG	FH2G6WD4 (FH2G6WD4.ALSPMVI)
LG	F1021ND (F1021ND.ABWPEAK)	LG	FH2G6WDS0
LG	F1021ND (F1021ND.ABWPEUA)	LG	FH2G6WDS0 (FH2G6WDS0.ABWPCIS)
LG	F1021NDR	LG	FH2G6WDS3
LG	F1021NDR (F1021NDR.ABWPBAL)	LG	FH2G6WDS3 (FH2G6WDS3.ABWPCIS)
LG	F1021NDR (F1021NDR.ABWPBWT)	LG	FH2G6WDS3 (FH2G6WDS3.ABWPEXC)
LG	F1021NDR (F1021NDR.ABWPEBY)	LG	FH2G6WDS3 (FH2G6WDS3.ABWPMVI)

LG	F1021NDR5	LG	FH2G6WDS5
LG	F1021NDR5 (F1021NDR5.AMSPBWT)	LG	FH2G6WDS5 (FH2G6WDS5.ALSPCIS)
LG	F1021SDP	LG	FH2G6WDS7
LG	F1021SDP (F1021SDP.ABWPBWT)	LG	FH2G6WDS7 (FH2G6WDS7.ALSPCIS)
LG	F1021SDP (F1021SDP.ABWPEAK)	LG	FH2G6WDS7 (FH2G6WDS7.ALSPEXC)
LG	F1021SDR	LG	FH2G6WDS7 (FH2G6WDS7.ALSPMVI)
LG	F1021SDR (F1021SDR.ABWPBWT)	LG	FH2G7QDN1
LG	F1021TD	LG	FH2G7QDN1 (FH2G7QDN1.ABWQWL)
LG	F1021TD (F1021TD.ABWPBWT)	LG	FH2H3HDS0
LG	F1022ND	LG	FH2H3HDS0 (FH2H3HDS0.ABWPCIS)
LG	F1022ND (F1022ND.ABWPBAL)	LG	FH2H3HDS1
LG	F1022ND (F1022ND.ABWPBWT)	LG	FH2H3HDS1 (FH2H3HDS1.ABWPCIS)
LG	F1022ND (F1022ND.ABWPCIS)	LG	FH2H3MD0
LG	F1022ND (F1022ND.ABWPEUA)	LG	FH2H3MD0 (FH2H3MD0.ABWPRUS)
LG	F1022ND5	LG	FH2H3MD1
LG	F1022ND5 (F1022ND5.ALSPCIS)	LG	FH2H3MD1 (FH2H3MD1.ABWPRUS)
LG	F1022ND5 (F1022ND5.ALSPEUA)	LG	FH2H3ND0

LG	F1022ND5 (F1022ND5.ALSPRUS)	LG	FH2H3ND0 (FH2H3ND0.ABWPRUS)
LG	F1022NDP	LG	FH2H3ND1
LG	F1022NDP (F1022NDP.ABWPRUS)	LG	FH2H3ND1 (FH2H3ND1.ABWPRUS)
LG	F1022NDR	LG	FH2H3QD5
LG	F1022NDR (F1022NDR.ABWPBAL)	LG	FH2H3QD5 (FH2H3QD5.ALSPRUS)
LG	F1022NDR (F1022NDR.ABWPBWT)	LG	FH2H3SD2
LG	F1022NDR (F1022NDR.ABWPEBY)	LG	FH2H3SD2 (FH2H3SD2.ABWPRUS)
LG	F1022NDR5	LG	FH2H3TD0
LG	F1022NDR5 (F1022NDR5.ALSPEBY)	LG	FH2H3TD0 (FH2H3TD0.ABWPRUS)
LG	F1022SD	LG	FH2H3TD5
LG	F1022SD (F1022SD.ABWPCIS)	LG	FH2H3TD5 (FH2H3TD5.ALSPRUS)
LG	F1022SD (F1022SD.ABWPEUA)	LG	FH2H3WD1
LG	F1022SDP	LG	FH2H3WD1 (FH2H3WD1.ABWPRUS)
LG	F1022SDP (F1022SDP.ABWPBWT)	LG	FH2H3WD2
LG	F1022SDP (F1022SDP.ABWPEAK)	LG	FH2H3WD2 (FH2H3WD2.ABWPRUS)
LG	F1022SDR	LG	FH2H3WD4
LG	F1022SDR (F1022SDR.ABWPBAL)	LG	FH2H3WD4 (FH2H3WD4.ALSPRUS)

LG	F1022SDR (F1022SDR.ABWPBWT)	LG	FH2H3WDS2
LG	F1022SDR (F1022SDR.ABWPEBY)	LG	FH2H3WDS2 (FH2H3WDS2.ABWPRU)
LG	F1022TD	LG	FH2H3WDS4
LG	F1022TD (F1022TD.ABWPBWT)	LG	FH2H3WDS4 (FH2H3WDS4.ALSPRUS)
LG	F1022TD (F1022TD.ABWPCIS)	LG	FH2J3TDN0
LG	F1022TD (F1022TD.ABWPCOM)	LG	FH2J3TDN0 (FH2J3TDN0.ABWQPCE)
LG	F1022TD (F1022TD.ABWPEUA)	LG	FH2J3WDN0
LG	F1022TDR	LG	FH2J3WDN0 (FH2J3WDN0.ABWQPCE)
LG	F1022TDR (F1022TDR.ABWPBAL)	LG	FH4G6TDN2
LG	F1023ND	LG	FH4G6TDN2 (FH4G6TDN2.ABWQWL)
LG	F1023ND (F1023ND.ABWPBWT)	LG	FH6296WDS (FH6296WDS.ABWQRCZ)
LG	F1023ND (F1023ND.ABWPEUA)	LG	FH8B8LD6
LG	F1023NDR	LG	FH8B8LD6 (FH8B8LD6.ABWPRUS)
LG	F1023NDR (F1023NDR.ABWPBAL)	LG	FH8C3LD
LG	F1023NDR (F1023NDR.ABWPBWT)	LG	FH8C3LD (FH8C3LD.ABWPCIS)
LG	F1023NDR (F1023NDR.ABWPEBY)	LG	FH8C3LD (FH8C3LD.ABWPCOM)
LG	F1023NDR5	LG	FH8C3LD (FH8C3LD.ABWPEUR)

LG	F1023NDR5 (F1023NDR5.AMSPBWT)	LG	FH8C3LD (FH8C3LD.ABWPKIV)
LG	F1029NDR	LG	FH8C3LD (FH8C3LD.ABWPRUS)
LG	F1029NDR (F1029NDR.ABWPRUS)	LG	FR096WD3 (FR096WD3.ABWPEXC)
LG	F1029SDR	LG	FR196ND (FR196ND.ABWPRUS)
LG	F1029SDR (F1029SDR.ABWPRUS)	LG	M1091LD1 (M1091LD1.ABWPRUS)
LG	F1039ND	LG	M1092ND1 (M1092ND1.ABWPRUS)
LG	F1039ND (F1039ND.ABWPRUS)	LG	M10B8ND1 (M10B8ND1.ABWPRUS)
LG	F1039ND3	LG	M10B8SD9 (M10B8SD9.ABWPRUS)
LG	F1039ND3 (F1039ND3.ABWPRUS)	LG	M10B9LD1 (M10B9LD1.ABWPRUS)
LG	F1039SD	LG	M10B9SD1 (M10B9SD1.ABWPRUS)
LG	F1039SD (F1039SD.ABWPCIS)	LG	M1222ND3 (M1222ND3.ABWPRUS)
LG	F1039SD (F1039SD.ABWPRUS)	LG	M1222NDR (M1222NDR.ABWPRUS)
LG	F1047ND	LG	M1222TD3 (M1222TD3.ABWPRUS)
LG	F1047ND (F1047ND.ABWPCOM)	LG	M1222WD3 (M1222WD3.ABWPRUS)
LG	F1047ND (F1047ND.ABWPEUA)	LG	M1222WDS (M1222WDS.ABWPEXC)
LG	F1048ND	LG	M1292QD1 (M1292QD1.ABWPCOM)
LG	F1048ND (F1048ND.ABWPBAL)	LG	M12B8QD1 (M12B8QD1.ABWPRUS)

LG	F1048ND (F1048ND.ABWPCIS)	LG	S00C3QDP
LG	F1048ND (F1048ND.ABWPCOM)	LG	S00C3QDP (S00C3QDP.ABWPBAL)
LG	F1048ND (F1048ND.ABWPEBY)	LG	S22B8QDW1
LG	F1048ND (F1048ND.ABWPRUS)	LG	S22B8QDW1 (S22B8QDW1.ABWPBAL)
LG	F1048ND1	LG	S4496TDW3
LG	F1048ND1 (F1048ND1.ABWPCOM)	LG	S4496TDW3 (S4496TDW3.ABWPBAL)
LG	F1048ND1 (F1048ND1.ABWPRUS)	LG	WD-10120ND
LG	F1048QD	LG	WD-10120ND (WD-10120ND.*)
LG	F1048QD (F1048QD.ABWPBAL)	LG	WD-10120ND (WD-10120ND.AOWPEA)
LG	F1048QD (F1048QD.ABWPCOM)	LG	WD-10130F
LG	F1056LD	LG	WD-10130F (WD-10130F.AOWPEAK)
LG	F1056LD (F1056LD.ABWPBAL)	LG	WD-10130F (WD-10130F.AOWPTSK)
LG	F1056LD (F1056LD.ABWPCIS)	LG	WD-10130N
LG	F1056LD (F1056LD.ABWPEUA)	LG	WD-10130N (WD-10130N.AOWPBWT)
LG	F1056LDP	LG	WD-10130N (WD-10130N.AOWPEAK)
LG	F1056LDP (F1056LDP.ABWPCOM)	LG	WD-10130NP
LG	F1056MD	LG	WD-10130NP (WD-10130NP.*)

LG	F1056MD (F1056MD.ABWPCIS)	LG	WD-10130NU
LG	F1056MD (F1056MD.ABWPEBY)	LG	WD-10130NU (WD-10130NU.*)
LG	F1056MD (F1056MD.ABWPEUA)	LG	WD-10130NUP
LG	F1056MD (F1056MD.ABWPRUS)	LG	WD-10130NUP (WD-10130NUP.*)
LG	F1056MD1	LG	WD-10130NUP (WD-10130NUP.AOWP)
LG	F1056MD1 (F1056MD1.ABWPCIS)	LG	WD-10130NUP (WD-10130NUP.AOWP)
LG	F1056MD1 (F1056MD1.ABWPEBY)	LG	WD-10130T
LG	F1056MD5	LG	WD-10130T (WD-10130T.*)
LG	F1056MD5 (F1056MD5.ALSPCIS)	LG	WD-10130TUP
LG	F1056MDP	LG	WD-10130TUP (WD-10130TUP.*)
LG	F1056MDP (F1056MDP.ABWPCOM)	LG	WD-10130TUP (WD-10130TUP.AOWP)
LG	F1056ND	LG	WD-10131N
LG	F1056ND (F1056ND.ABWPCIS)	LG	WD-10131N (WD-10131N.*)
LG	F1056ND (F1056ND.ABWPEBY)	LG	WD-10131NU
LG	F1056ND (F1056ND.ABWPEUA)	LG	WD-10131NU (WD-10131NU.*)
LG	F1056ND (F1056ND.ABWPRUS)	LG	WD-10131NUP
LG	F1056ND1	LG	WD-10131NUP (WD-10131NUP.*)

LG	F1056ND1 (F1056ND1.ABWPCOM)	LG	WD-10132N
LG	F1056ND1 (F1056ND1.ABWPRUS)	LG	WD-10132N (WD-10132N.AOWPBWT)
LG	F1056NDP1	LG	WD-10132NU
LG	F1056NDP1 (F1056NDP1.ABWPRUS)	LG	WD-10132NU (WD-10132NU.AOWPKZ)
LG	F1056QD	LG	WD-10132SU
LG	F1056QD (F1056QD.ABWPBAL)	LG	WD-10132SU (WD-10132SU.AOWPKZ)
LG	F1056QD (F1056QD.ABWPCOM)	LG	WD-10132T
LG	F1057LD	LG	WD-10132T (WD-10132T.AOWPBWT)
LG	F1057LD (F1057LD.ABWPEUA)	LG	WD-10132TU
LG	F1057ND	LG	WD-10132TU (WD-10132TU.AOWPKZ)
LG	F1057ND (F1057ND.ABWPCIS)	LG	WD-10150FB
LG	F1057ND (F1057ND.ABWPEBY)	LG	WD-10150FB (WD-10150FB.AOWPTS)
LG	F1057ND (F1057ND.ABWPEUA)	LG	WD-10150N
LG	F1057ND (F1057ND.ABWPRUS)	LG	WD-10150N (WD-10150N.AOWPBWT)
LG	F1058ND	LG	WD-10150N (WD-10150N.AOWPEAK)
LG	F1058ND (F1058ND.ABWPRUS)	LG	WD-10150NU
LG	F1058ND5	LG	WD-10150NU (WD-10150NU.*)

LG	F1058ND5 (F1058ND5.ALSPRUS)	LG	WD-10150NU (WD-10150NU.AOWPBW)
LG	F1059ND	LG	WD-10150NUP
LG	F1059ND (F1059ND.ABWPRUS)	LG	WD-10150NUP (WD-10150NUP.*)
LG	F1066LP	LG	WD-10150NUP (WD-10150NUP.AOWP)
LG	F1066LP (F1066LP.ABWPBWT)	LG	WD-10150NUP (WD-10150NUP.AOWP)
LG	F1068LD	LG	WD-10150NUP (WD-10150NUP.AOWP)
LG	F1068LD (F1068LD.ABWPBAL)	LG	WD-10150S
LG	F1068LD (F1068LD.ABWPCIS)	LG	WD-10150S (WD-10150S.AOWPBWT)
LG	F1068LD (F1068LD.ABWPCOM)	LG	WD-10150S (WD-10150S.AOWPEAK)
LG	F1068LD (F1068LD.ABWPEBY)	LG	WD-10150SU
LG	F1068LD (F1068LD.ABWPEUA)	LG	WD-10150SU (WD-10150SU.*)
LG	F1068LD (F1068LD.ABWPRUS)	LG	WD-10150SUP
LG	F1068LD1	LG	WD-10150SUP (WD-10150SUP.*)
LG	F1068LD1 (F1068LD1.ABWPEBY)	LG	WD-10150SUP (WD-10150SUP.AOWP)
LG	F1068LD1 (F1068LD1.ABWPRUS)	LG	WD-10150SUP (WD-10150SUP.AOWP)
LG	F1068LD9	LG	WD-10150SUP (WD-10150SUP.AOWP)
LG	F1068LD9 (F1068LD9.ABWPCOM)	LG	WD-10154N

LG	F1068LD9 (F1068LD9.ABWPRUS)	LG	WD-10154N (WD-10154N.AOWPBWT)
LG	F1068QD	LG	WD-10154NP
LG	F1068QD (F1068QD.ABWPCOM)	LG	WD-10154NP (WD-10154NP.AOWPEA)
LG	F1068QD (F1068QD.ABWPRUS)	LG	WD-10154NP (WD-10154NP.AOWPTS)
LG	F1068SD	LG	WD-10154SP
LG	F1068SD (F1068SD.ABWPCIS)	LG	WD-10154SP (WD-10154SP.*)
LG	F1068SD (F1068SD.ABWPEBY)	LG	WD-10154SP (WD-10154SP.AOWPBW)
LG	F1068SD (F1068SD.ABWPRUS)	LG	WD-10154TP
LG	F1068SD1	LG	WD-10154TP (WD-10154TP.AOWPTS)
LG	F1068SD1 (F1068SD1.ABWPRUS)	LG	WD-10155NU
LG	F1073ND	LG	WD-10155NU (WD-10155NU.AMSPEA)
LG	F1073ND (F1073ND.ABWPBAL)	LG	WD-10155NUP
LG	F1073ND (F1073ND.ABWPCOM)	LG	WD-10155NUP (WD-10155NUP.AMSP)
LG	F1073ND (F1073ND.ABWPRUS)	LG	WD-10156NU
LG	F1073ND3	LG	WD-10156NU (WD-10156NU.AGLPEA)
LG	F1073ND3 (F1073ND3.ABWPCOM)	LG	WD-10156NUP
LG	F1073ND5	LG	WD-10156NUP (WD-10156NUP.AGLP)

LG	F1073ND5 (F1073ND5.ALSPCOM)	LG	WD-10158NP
LG	F1073TD	LG	WD-10158NP (WD-10158NP.AMSPBW)
LG	F1073TD (F1073TD.ABWPCOM)	LG	WD-10158NP (WD-10158NP.AMSPEA)
LG	F1081HD5	LG	WD-10160N
LG	F1081HD5 (F1081HD5.ALSPRUS)	LG	WD-10160N (WD-10160N.AOWPBWT)
LG	F1081ND	LG	WD-10160N (WD-10160N.AOWPEAK)
LG	F1081ND (F1081ND.ABWPBAL)	LG	WD-10160NP
LG	F1081ND (F1081ND.ABWPCIS)	LG	WD-10160NP (WD-10160NP.*)
LG	F1081ND (F1081ND.ABWPCOM)	LG	WD-10160NU
LG	F1081ND (F1081ND.ABWPEBY)	LG	WD-10160NU (WD-10160NU.*)
LG	F1081ND (F1081ND.ABWPKIV)	LG	WD-10160NU (WD-10160NU.AOWPBW)
LG	F1081ND (F1081ND.ABWPRUS)	LG	WD-10160NUP
LG	F1081ND5	LG	WD-10160NUP (WD-10160NUP.AOWF)
LG	F1081ND5 (F1081ND5.ALSPBAL)	LG	WD-10160NUP (WD-10160NUP.AOWF)
LG	F1081ND5 (F1081ND5.ALSPCIS)	LG	WD-10160NUV
LG	F1081ND5 (F1081ND5.ALSPCOM)	LG	WD-10160NUV (WD-10160NUV.AOWF)
LG	F1081ND5 (F1081ND5.ALSPRUS)	LG	WD-10160S

LG	F1081TD	LG	WD-10160S (WD-10160S.AOWPBWT)
LG	F1081TD (F1081TD.ABWPCIS)	LG	WD-10160S (WD-10160S.AOWPEAK)
LG	F1081TD (F1081TD.ABWPCOM)	LG	WD-10160SP
LG	F1081TD (F1081TD.ABWPKIV)	LG	WD-10160SP (WD-10160SP.*)
LG	F1081TD (F1081TD.ABWPRUS)	LG	WD-10160SU
LG	F1088LD	LG	WD-10160SU (WD-10160SU.*)
LG	F1088LD (F1088LD.ABWPCOM)	LG	WD-10160SU (WD-10160SU.AOWPBW)
LG	F1088LD (F1088LD.ABWPRUS)	LG	WD-10160SUP
LG	F1089ND	LG	WD-10160SUP (WD-10160SUP.*)
LG	F1089ND (F1089ND.ABWPCIS)	LG	WD-10160SUV
LG	F1089ND (F1089ND.ABWPEBY)	LG	WD-10160SUV (WD-10160SUV.AOWP)
LG	F1089ND (F1089ND.ABWPRUS)	LG	WD-10160TP
LG	F1089ND5	LG	WD-10160TP (WD-10160TP.*)
LG	F1089ND5 (F1089ND5.ALSPCIS)	LG	WD-10160TUP
LG	F1089ND5 (F1089ND5.ALSPEBY)	LG	WD-10160TUP (WD-10160TUP.*)
LG	F1091LD	LG	WD-10163N
LG	F1091LD (F1091LD.ABWPBAL)	LG	WD-10163N (WD-10163N.AOWPBWT)

LG	F1091LD (F1091LD.ABWPCIS)	LG	WD-10163N (WD-10163N.AOWPEBY)
LG	F1091LD (F1091LD.ABWPCOM)	LG	WD-10163S
LG	F1091LD (F1091LD.ABWPEBY)	LG	WD-10163S (WD-10163S.AOWPBWT)
LG	F1091LD (F1091LD.ABWPRUS)	LG	WD-10163S (WD-10163S.AOWPEBY)
LG	F1091LD1	LG	WD-10164N
LG	F1091LD1 (F1091LD1.ABWPCIS)	LG	WD-10164N (WD-10164N.AOWPBAL)
LG	F1091LD1 (F1091LD1.ABWPCOM)	LG	WD-10164N (WD-10164N.AOWPBWT)
LG	F1091LD1 (F1091LD1.ABWPEBY)	LG	WD-10164N (WD-10164N.AOWPEUA)
LG	F1091QD	LG	WD-10164NP
LG	F1091QD (F1091QD.ABWPCOM)	LG	WD-10164NP (WD-10164NP.AOWPBW)
LG	F1092LD	LG	WD-10164NP (WD-10164NP.AOWPEA)
LG	F1092LD (F1092LD.ABWPCIS)	LG	WD-10164NP (WD-10164NP.AOWPTS)
LG	F1092MD	LG	WD-10164NV
LG	F1092MD (F1092MD.ABWPCIS)	LG	WD-10164NV (WD-10164NV.AOWPBA)
LG	F1092MD (F1092MD.ABWPCOM)	LG	WD-10164NV (WD-10164NV.AOWPEE)
LG	F1092MD (F1092MD.ABWPEBY)	LG	WD-10164NV (WD-10164NV.AOWPEU)
LG	F1092MD (F1092MD.ABWPRUS)	LG	WD-10164S

LG	F1092MD1	LG	WD-10164S (WD-10164S.AOWPBWT)
LG	F1092MD1 (F1092MD1.ABWPCIS)	LG	WD-10164S (WD-10164S.AOWPEBY)
LG	F1092MD1 (F1092MD1.ABWPCOM)	LG	WD-10164S (WD-10164S.AOWPEUA)
LG	F1092MD1 (F1092MD1.ABWPEBY)	LG	WD-10164SP
LG	F1092MD1 (F1092MD1.ABWPRUS)	LG	WD-10164SP (WD-10164SP.AOWPBW)
LG	F1092MD5	LG	WD-10164SV
LG	F1092MD5 (F1092MD5.ALSPCIS)	LG	WD-10164SV (WD-10164SV.AOWPEU)
LG	F1092MD5 (F1092MD5.ALSPCOM)	LG	WD-10164TP
LG	F1092ND	LG	WD-10164TP (WD-10164TP.AOWPBW)
LG	F1092ND (F1092ND.ABWPCIS)	LG	WD-10168NP
LG	F1092ND (F1092ND.ABWPCOM)	LG	WD-10168NP (WD-10168NP.AMSPBW)
LG	F1092ND (F1092ND.ABWPRUS)	LG	WD-10170TD (WD-10170TD.*)
LG	F1092ND1	LG	WD-10170TD (WD-10170TD.AOWPBW)
LG	F1092ND1 (F1092ND1.ABWPCOM)	LG	WD-10175ND
LG	F1092ND5	LG	WD-10175ND (WD-10175ND.AMSPBW)
LG	F1092ND5 (F1092ND5.ALSPRUS)	LG	WD-10175SD
LG	F1092QD	LG	WD-10175SD (WD-10175SD.AMSPBW)

LG	F1092QD (F1092QD.ABWPCOM)	LG	WD-10180N
LG	F1094HD	LG	WD-10180NU
LG	F1094HD (F1094HD.ABWPRUS)	LG	WD-10180NU (WD-10180NU.*)
LG	F1094ND	LG	WD-10180NU (WD-10180NU.AOWPBW)
LG	F1094ND (F1094ND.ABWPCIS)	LG	WD-10180NUP
LG	F1094ND (F1094ND.ABWPCOM)	LG	WD-10180NUP (WD-10180NUP.AOWPBW)
LG	F1094ND (F1094ND.ABWPRUS)	LG	WD-10180S
LG	F1094ND5	LG	WD-10180S (WD-10180S.AOWPFSK)
LG	F1094ND5 (F1094ND5.ALSPRUS)	LG	WD-10180SP
LG	F1096ND	LG	WD-10180SP (WD-10180SP.AOWPBW)
LG	F1096ND (F1096ND.ABWPCIS)	LG	WD-10180SU
LG	F1096ND (F1096ND.ABWPCOM)	LG	WD-10180SU (WD-10180SU.AOWPBW)
LG	F1096ND (F1096ND.ABWPKIV)	LG	WD-10180T (WD-10180T.*)
LG	F1096ND (F1096ND.ABWQEPL)	LG	WD-10180T (WD-10180T.AOWPEAK)
LG	F1096ND3	LG	WD-10180TU
LG	F1096ND3 (F1096ND3.ABWPCIS)	LG	WD-10180TU (WD-10180TU.*)
LG	F1096ND3 (F1096ND3.ABWPCOM)	LG	WD-10192N

LG	F1096ND3 (F1096ND3.ABWPKIV)	LG	WD-10192N (WD-10192N.*)
LG	F1096ND3 (F1096ND3.ABWPRUS)	LG	WD-10192N (WD-10192N.AOWPBWT)
LG	F1096ND4	LG	WD-10192N (WD-10192N.AOWPUKR)
LG	F1096ND4 (F1096ND4.ALSPCIS)	LG	WD-10192NV
LG	F1096ND4 (F1096ND4.ALSQEPL)	LG	WD-10192NV (WD-10192NV.AOWPEE)
LG	F1096ND5	LG	WD-10192S
LG	F1096ND5 (F1096ND5.ALSPCIS)	LG	WD-10192S (WD-10192S.*)
LG	F1096ND5 (F1096ND5.ALSPCOM)	LG	WD-10192S (WD-10192S.AOWPBW)
LG	F1096ND5 (F1096ND5.ALSPKIV)	LG	WD-10192SV
LG	F1096NDA	LG	WD-10192SV (WD-10192SV.AOWPBW)
LG	F1096NDA (F1096NDA.ABWQEIS)	LG	WD-10192T
LG	F1096NDA3	LG	WD-10192T (WD-10192T.*)
LG	F1096NDA3 (F1096NDA3.ABWPBAL)	LG	WD-10192T (WD-10192T.AOWPBWT)
LG	F1096NDA3 (F1096NDA3.ABWQCMR)	LG	WD-10192T (WD-10192T.AOWPUKR)
LG	F1096NDW3	LG	WD-10200ND
LG	F1096NDW3 (F1096NDW3.ABWPKIV)	LG	WD-10200ND (WD-10200ND.AOWPBW)
LG	F1096QD3	LG	WD-10200SD (WD-10200SD.*)

LG	F1096QD3 (F1096QD3.ABWPCOM)	LG	WD-10200SD (WD-10200SD.AOWPEA)
LG	F1096QD3 (F1096QD3.ABWPKIV)	LG	WD-10202TD
LG	F1096QDW3	LG	WD-10202TD (WD-10202TD.*)
LG	F1096QDW3 (F1096QDW3.ABWPKIV)	LG	WD-10202TD (WD-10202TD.AOWPEA)
LG	F1096SD3	LG	WD-10205ND
LG	F1096SD3 (F1096SD3.ABWPCIS)	LG	WD-10205ND (WD-10205ND.*)
LG	F1096SD3 (F1096SD3.ABWPRUS)	LG	WD-10205SD
LG	F1096TD	LG	WD-10205SD (WD-10205SD.*)
LG	F1096TD (F1096TD.ABWPCOM)	LG	WD-10207TD
LG	F1096TD3	LG	WD-10207TD (WD-10207TD.*)
LG	F1096TD3 (F1096TD3.ABWPCIS)	LG	WD-10230N
LG	F1096TD3 (F1096TD3.ABWPRUS)	LG	WD-10230N (WD-10230N.*)
LG	F1096WD	LG	WD-10230N (WD-10230N.AOWPEAK)
LG	F1096WD (F1096WD.ABWPCIS)	LG	WD-10230NU
LG	F1096WD (F1096WD.ABWPCOM)	LG	WD-10230NU (WD-10230NU.*)
LG	F1096WD (F1096WD.ABWPRUS)	LG	WD-10230NU (WD-10230NU.AOWPEA)
LG	F1096WD3	LG	WD-10230T

LG	F1096WD3 (F1096WD3.ABWPCIS)	LG	WD-10230T (WD-10230T.*)
LG	F1096WD3 (F1096WD3.ABWPCOM)	LG	WD-10230T (WD-10230T.AOWPEAK)
LG	F1096WD3 (F1096WD3.ABWPRUS)	LG	WD-10230TU
LG	F1096WD4	LG	WD-10230TU (WD-10230TU.*)
LG	F1096WD4 (F1096WD4.ALSPRUS)	LG	WD-10240N
LG	F1096WD5	LG	WD-10240N (WD-10240N.*)
LG	F1096WD5 (F1096WD5.ALSPRUS)	LG	WD-10240T
LG	F1096WDS5	LG	WD-10240T (WD-10240T.*)
LG	F1096WDS5 (F1096WDS5.ALSPRUS)	LG	WD-10240T (WD-10240T.AOWPEAK)
LG	F10A8HD	LG	WD-10260N
LG	F10A8HD (F10A8HD.ABWPRUS)	LG	WD-10260N (WD-10260N.*)
LG	F10A8HD5	LG	WD-10260N (WD-10260N.AOWPBWT)
LG	F10A8HD5 (F10A8HD5.ALSPRUS)	LG	WD-10260NP
LG	F10A8NDA	LG	WD-10260NP (WD-10260NP.*)
LG	F10A8NDA (F10A8NDA.ABWPBAL)	LG	WD-10260T
LG	F10B8LD0	LG	WD-10260T (WD-10260T.*)
LG	F10B8LD0 (F10B8LD0.ABWPCIS)	LG	WD-10264N

LG	F10B8LD0 (F10B8LD0.ABWPRUS)	LG	WD-10264N (WD-10264N.*)
LG	F10B8MD	LG	WD-10264NP
LG	F10B8MD (F10B8MD.ABWPCIS)	LG	WD-10264NP (WD-10264NP.*)
LG	F10B8MD (F10B8MD.ABWPKIV)	LG	WD-10264SP
LG	F10B8MD (F10B8MD.ABWPRUS)	LG	WD-10264SP (WD-10264SP.*)
LG	F10B8MD1	LG	WD-10264TP
LG	F10B8MD1 (F10B8MD1.ABWPCIS)	LG	WD-10264TP (WD-10264TP.*)
LG	F10B8MD1 (F10B8MD1.ABWPCOM)	LG	WD-10302NP
LG	F10B8MD1 (F10B8MD1.ABWPRUS)	LG	WD-10302NP (WD-10302NP.*)
LG	F10B8MD5	LG	WD-10302NUP (WD-10302NUP.AOWE)
LG	F10B8MD5 (F10B8MD5.ALSPCIS)	LG	WD-10302SP
LG	F10B8ND	LG	WD-10302SP (WD-10302SP.*)
LG	F10B8ND (F10B8ND.ABWPCIS)	LG	WD-10302SUP
LG	F10B8ND (F10B8ND.ABWPCOM)	LG	WD-10302SUP (WD-10302SUP.*)
LG	F10B8ND (F10B8ND.ABWPKIV)	LG	WD-10302TP
LG	F10B8ND (F10B8ND.ABWPRUS)	LG	WD-10302TP (WD-10302TP.*)
LG	F10B8ND (F10B8ND.ABWQEPL)	LG	WD-10302TUP

LG	F10B8ND0	LG	WD-10302TUP (WD-10302TUP.*)
LG	F10B8ND0 (F10B8ND0.ABWQEPL)	LG	WD-10330NDK
LG	F10B8ND1	LG	WD-10330NDK (WD-10330NDK.*)
LG	F10B8ND1 (F10B8ND1.ABWPCOM)	LG	WD-10330NDK (WD-10330NDK.AOW)
LG	F10B8ND1 (F10B8ND1.ABWPKIV)	LG	WD-10330NDK (WD-10330NDK.AOW)
LG	F10B8ND1 (F10B8ND1.ABWPRUS)	LG	WD-10340ND
LG	F10B8ND1 (F10B8ND1.ABWQEPL)	LG	WD-10340ND (WD-10340ND.*)
LG	F10B8ND5	LG	WD-10340ND (WD-10340ND.AOWPEA)
LG	F10B8ND5 (F10B8ND5.ALSPCIS)	LG	WD-10342TD
LG	F10B8ND5 (F10B8ND5.ALSPCOM)	LG	WD-10342TD (WD-10342TD.*)
LG	F10B8ND5 (F10B8ND5.ALSPKIV)	LG	WD-10344ND
LG	F10B8ND5 (F10B8ND5.ALSPRUS)	LG	WD-10344ND (WD-10344ND.*)
LG	F10B8NDA	LG	WD-10350NDK
LG	F10B8NDA (F10B8NDA.ABWQEIS)	LG	WD-10350NDK (WD-10350NDK.*)
LG	F10B8NDA0	LG	WD-10350NDK (WD-10350NDK.AOW)
LG	F10B8NDA0 (F10B8NDA0.ABWQCMR)	LG	WD-10353NDK
LG	F10B8NDA7	LG	WD-10353NDK (WD-10353NDK.AOW)

LG	F10B8NDA7 (F10B8NDA7.ABWQEPL)	LG	WD-10353NDK (WD-10353NDK.AOW)
LG	F10B8NDW	LG	WD-10353NDK (WD-10353NDK.AOW)
LG	F10B8NDW (F10B8NDW.ABWPKIV)	LG	WD-10355NDK
LG	F10B8NDW1	LG	WD-10355NDK (WD-10355NDK.*)
LG	F10B8NDW1 (F10B8NDW1.ABWPKIV)	LG	WD-10360ND
LG	F10B8NDW5	LG	WD-10360ND (WD-10360ND.*)
LG	F10B8NDW5 (F10B8NDW5.ALSPKIV)	LG	WD-10360ND (WD-10360ND.AOWPEA)
LG	F10B8QD	LG	WD-10360NDK
LG	F10B8QD (F10B8QD.ABWPCOM)	LG	WD-10360NDK (WD-10360NDK.*)
LG	F10B8QD (F10B8QD.ABWPKIV)	LG	WD-10360NDK (WD-10360NDK.AOW)
LG	F10B8QD (F10B8QD.ABWPRUS)	LG	WD-10360NDK (WD-10360NDK.AOW)
LG	F10B8QD1	LG	WD-10360SD
LG	F10B8QD1 (F10B8QD1.ABWPCOM)	LG	WD-10360SD (WD-10360SD.*)
LG	F10B8QD1 (F10B8QD1.ABWPRUS)	LG	WD-10360SDK
LG	F10B8QDW	LG	WD-10360SDK (WD-10360SDK.AOW)
LG	F10B8QDW (F10B8QDW.ABWPKIV)	LG	WD-10361TDK
LG	F10B8SD	LG	WD-10361TDK (WD-10361TDK.*)

LG	F10B8SD (F10B8SD.ABWPRUS)	LG	WD-10361TDK (WD-10361TDK.AOWP)
LG	F10B8SD0	LG	WD-10362TD
LG	F10B8SD0 (F10B8SD0.ABWPCIS)	LG	WD-10362TD (WD-10362TD.*)
LG	F10B8SD0 (F10B8SD0.ABWPRUS)	LG	WD-10362TD (WD-10362TD.AOWPEA)
LG	F10B9LD	LG	WD-10363NDK
LG	F10B9LD (F10B9LD.ABWPBAL)	LG	WD-10363NDK (WD-10363NDK.AOWP)
LG	F10B9LD (F10B9LD.ABWPCIS)	LG	WD-10363NDK (WD-10363NDK.AOWP)
LG	F10B9LD (F10B9LD.ABWPCOM)	LG	WD-10363NDK (WD-10363NDK.AOWP)
LG	F10B9LD (F10B9LD.ABWPKIV)	LG	WD-10365NDK
LG	F10B9LD (F10B9LD.ABWPRUS)	LG	WD-10365NDK (WD-10365NDK.*)
LG	F10B9LD1	LG	WD-10384N
LG	F10B9LD1 (F10B9LD1.ABWPCIS)	LG	WD-10384N (WD-10384N.*)
LG	F10B9LD1 (F10B9LD1.ABWPKIV)	LG	WD-10384T
LG	F10B9LDW	LG	WD-10384T (WD-10384T.*)
LG	F10B9LDW (F10B9LDW.ABWPKIV)	LG	WD-10390ND
LG	F10B9QD	LG	WD-10390ND (WD-10390ND.AOWPB)
LG	F10B9QD (F10B9QD.ABWPCIS)	LG	WD-10390NDK

LG	F10B9QD (F10B9QD.ABWPKIV)	LG	WD-10390NDK (WD-10390NDK.*)
LG	F10B9QD (F10B9QD.ABWPRUS)	LG	WD-10390NDK (WD-10390NDK.AOW)
LG	F10B9QDW	LG	WD-10390NDK (WD-10390NDK.AOW)
LG	F10B9QDW (F10B9QDW.ABWPKIV)	LG	WD-10390NDK (WD-10390NDK.AOW)
LG	F10B9SD	LG	WD-10390SD
LG	F10B9SD (F10B9SD.ABWPCIS)	LG	WD-10390SD (WD-10390SD.*)
LG	F10B9SD (F10B9SD.ABWPRUS)	LG	WD-10390SDK
LG	F10B9SD1	LG	WD-10390SDK (WD-10390SDK.AOW)
LG	F10B9SD1 (F10B9SD1.ABWPRUS)	LG	WD-10391TDK
LG	F10C3LD	LG	WD-10391TDK (WD-10391TDK.*)
LG	F10C3LD (F10C3LD.ABWPCOM)	LG	WD-10391TDK (WD-10391TDK.AOW)
LG	F10C3LD (F10C3LD.ABWPKIV)	LG	WD-10392TD
LG	F10C3LD (F10C3LD.ABWPRUS)	LG	WD-10392TD (WD-10392TD.*)
LG	F10C3LD (F10C3LD.ABWQCMR)	LG	WD-10393NDK
LG	F10C3LD (F10C3LD.ABWQEPL)	LG	WD-10393NDK (WD-10393NDK.AOW)
LG	F10C3LD1	LG	WD-10393NDK (WD-10393NDK.AOW)
LG	F10C3LD1 (F10C3LD1.ABWPKIV)	LG	WD-10393NDK (WD-10393NDK.AOW)

LG	F10C3LDP	LG	WD-10393NDK (WD-10393NDK.AOW)
LG	F10C3LDP (F10C3LDP.ABWPBAL)	LG	WD-10393SDK
LG	F10M8MD	LG	WD-10393SDK (WD-10393SDK.AOW)
LG	F10M8MD (F10M8MD.ABWPEXC)	LG	WD-10393SDK (WD-10393SDK.AOW)
LG	F1203ND	LG	WD-10395NDK
LG	F1203ND (F1203ND.ABWPBAL)	LG	WD-10395NDK (WD-10395NDK.AMS)
LG	F1203ND (F1203ND.ABWPCIS)	LG	WD10396ND (WD10396ND.ABWQCS)
LG	F1203ND (F1203ND.ABWPCOM)	LG	WD-10396TDK
LG	F1203ND (F1203ND.ABWPEBY)	LG	WD-10396TDK (WD-10396TDK.AMS)
LG	F1203ND (F1203ND.ABWPRUS)	LG	WD-10400NDK
LG	F1203ND5	LG	WD-10400NDK (WD-10400NDK.*)
LG	F1203ND5 (F1203ND5.ALSPCOM)	LG	WD-10400NDK (WD-10400NDK.AOW)
LG	F1203ND5 (F1203ND5.ALSPEBY)	LG	WD-10400NDK (WD-10400NDK.AOW)
LG	F1203ND5 (F1203ND5.ALSPEUA)	LG	WD-10400SDK
LG	F1203ND5 (F1203ND5.ALSPRUS)	LG	WD-10400SDK (WD-10400SDK.*)
LG	F1203NDP	LG	WD-10401TDK
LG	F1203NDP (F1203NDP.ABWPRUS)	LG	WD-10401TDK (WD-10401TDK.*)

LG	F1203NDP5	LG	WD-10401TDK (WD-10401TDK.AOWF)
LG	F1203NDP5 (F1203NDP5.ALSPRUS)	LG	WD-10403NDK
LG	F1211NDP	LG	WD-10403NDK (WD-10403NDK.AOWF)
LG	F1211NDP (F1211NDP.ABWPBWT)	LG	WD-10403NDK (WD-10403NDK.AOWF)
LG	F1211NDR	LG	WD-10403NDK (WD-10403NDK.AOWF)
LG	F1211NDR (F1211NDR.ABWPBAL)	LG	WD-10403SDK
LG	F1211NDR (F1211NDR.ABWPBWT)	LG	WD-10403SDK (WD-10403SDK.AOWF)
LG	F1211NDR5	LG	WD-10403SDK (WD-10403SDK.AOWF)
LG	F1211NDR5 (F1211NDR5.AMSPBWT)	LG	WD-10405NDK
LG	F1211TDR	LG	WD-10405NDK (WD-10405NDK.*)
LG	F1211TDR (F1211TDR.ABWPBWT)	LG	WD-10405NDK (WD-10405NDK.VLA)
LG	F1212NDR	LG	WD-10406NDK
LG	F1212NDR (F1212NDR.ABWPBWT)	LG	WD-10406NDK (WD-10406NDK.AMSI)
LG	F1212NDR (F1212NDR.ABWPEBY)	LG	WD-10406TDK
LG	F1220ND	LG	WD-10406TDK (WD-10406TDK.*)
LG	F1220ND (F1220ND.ABWPBWT)	LG	WD-10406TDK (WD-10406TDK.VLA)
LG	F1220ND (F1220ND.ABWPCIS)	LG	WD-1041WF

LG	F1220ND (F1220ND.ABWPEAK)	LG	WD-1041WF (WD-1041WF.OWPBWT)
LG	F1220ND (F1220ND.ABWPEUA)	LG	WD-10480N
LG	F1220ND5	LG	WD-10480N (WD-10480N.AOWPBAL)
LG	F1220ND5 (F1220ND5.ALSPBWT)	LG	WD-10480N (WD-10480N.AOWPBWT)
LG	F1220ND5 (F1220ND5.ALSPCIS)	LG	WD-10480N (WD-10480N.AOWPEAK)
LG	F1220ND5 (F1220ND5.ALSPEUA)	LG	WD-10480N (WD-10480N.AOWPEBY)
LG	F1220ND5 (F1220ND5.AMSPBWT)	LG	WD-10480N (WD-10480N.AOWPEUA)
LG	F1220NDP	LG	WD-10480NP
LG	F1220NDP (F1220NDP.ABWPEAK)	LG	WD-10480NP (WD-10480NP.AOWPBA)
LG	F1220NDP (F1220NDP.ABWPRUS)	LG	WD-10480NP (WD-10480NP.AOWPBW)
LG	F1220NDP5	LG	WD-10480NP (WD-10480NP.AOWPEA)
LG	F1220NDP5 (F1220NDP5.ALSPBWT)	LG	WD-10480NV
LG	F1220NDR	LG	WD-10480NV (WD-10480NV.AOWPB)
LG	F1220NDR (F1220NDR.ABWPBAL)	LG	WD-10480NV (WD-10480NV.AOWPEA)
LG	F1220NDR (F1220NDR.ABWPBWT)	LG	WD-10480NV (WD-10480NV.AOWPEU)
LG	F1220NDR (F1220NDR.ABWPEBY)	LG	WD-10480S
LG	F1220NDR (F1220NDR.ABWPRUS)	LG	WD-10480S (WD-10480S.AOWPBAL)

LG	F1220NDR5	LG	WD-10480S (WD-10480S.AOWPBWT)
LG	F1220NDR5 (F1220NDR5.ALSPRUS)	LG	WD-10480S (WD-10480S.AOWPEBY)
LG	F1220NDR5 (F1220NDR5.AMSPBAL)	LG	WD-10480S (WD-10480S.AOWPEUA)
LG	F1220NDR5 (F1220NDR5.AMSPBWT)	LG	WD-10480SP
LG	F1220NDR5 (F1220NDR5.AMSPEBY)	LG	WD-10480SP (WD-10480SP.AOWPBA)
LG	F1220TD	LG	WD-10480SP (WD-10480SP.AOWPBW)
LG	F1220TD (F1220TD.ABWPBWT)	LG	WD-10480SP (WD-10480SP.AOWPEA)
LG	F1220TD (F1220TD.ABWPCIS)	LG	WD-10480SP (WD-10480SP.AOWPTSK)
LG	F1220TD (F1220TD.ABWPEUA)	LG	WD-10480SV
LG	F1220TD5	LG	WD-10480SV (WD-10480SV.AOWPEU)
LG	F1220TD5 (F1220TD5.ALSPBWT)	LG	WD-10480T
LG	F1220TD5 (F1220TD5.ALSPCIS)	LG	WD-10480T (WD-10480T.AOWPBWT)
LG	F1220TD5 (F1220TD5.ALSPEUA)	LG	WD-10480TP
LG	F1220TD5 (F1220TD5.AMSPBWT)	LG	WD-10480TP (WD-10480TP.AOWPBA)
LG	F1220TDR	LG	WD-10480TP (WD-10480TP.AOWPBW)
LG	F1220TDR (F1220TDR.ABWPBWT)	LG	WD-10480TP (WD-10480TP.AOWPTSK)
LG	F1220TDR (F1220TDR.ABWPRUS)	LG	WD-10480TV

LG	F1221ND	LG	WD-10480TV (WD-10480TV.AOWPBA)
LG	F1221ND (F1221ND.ABWPBWT)	LG	WD-10481 N
LG	F1221ND (F1221ND.ABWPEAK)	LG	WD-10481N (WD-10481N.ABWPRUS)
LG	F1221ND (F1221ND.ABWPEUA)	LG	WD-10481N (WD-10481N.AOWPBAL)
LG	F1221NDR	LG	WD-10481N (WD-10481N.AOWPBWT)
LG	F1221NDR (F1221NDR.ABWPBAL)	LG	WD-10481N (WD-10481N.AOWPEBY)
LG	F1221NDR (F1221NDR.ABWPBWT)	LG	WD-10481N (WD-10481N.AOWPEUA)
LG	F1221NDR (F1221NDR.ABWPEBY)	LG	WD-10481NP
LG	F1221NDR5	LG	WD-10481NP (WD-10481NP.AOWPBA)
LG	F1221NDR5 (F1221NDR5.AMSPBWT)	LG	WD-10481NP (WD-10481NP.AOWPBW)
LG	F1221SDP	LG	WD-10481NP (WD-10481NP.AOWPEA)
LG	F1221SDP (F1221SDP.ABWPBWT)	LG	WD-10481NV
LG	F1221SDP (F1221SDP.ABWPEAK)	LG	WD-10481NV (WD-10481NV.AOWPEU)
LG	F1221SDR	LG	WD-10481S
LG	F1221SDR (F1221SDR.ABWPBWT)	LG	WD-10481S (WD-10481S.AOWPBWT)
LG	F1221TD	LG	WD-10481S (WD-10481S.AOWPEBY)
LG	F1221TD (F1221TD.ABWPBWT)	LG	WD-10481T

LG	F1221TD (F1221TD.ABWPEAK)	LG	WD-10481T (WD-10481T.AOWPBWT)
LG	F1222ND	LG	WD-10481TP
LG	F1222ND (F1222ND.ABWPBAL)	LG	WD-10481TP (WD-10481TP.*)
LG	F1222ND (F1222ND.ABWPBWT)	LG	WD-10481TP (WD-10481TP.AOWPBA)
LG	F1222ND (F1222ND.ABWPCIS)	LG	WD-10481TP (WD-10481TP.AOWPTS)
LG	F1222ND (F1222ND.ABWPEAK)	LG	WD-10481TV
LG	F1222ND (F1222ND.ABWPEUA)	LG	WD-10481TV (WD-10481TV.AOWPBA)
LG	F1222ND5	LG	WD-10482N
LG	F1222ND5 (F1222ND5.ALSPCIS)	LG	WD-10482N (WD-10482N.ABWPRUS)
LG	F1222ND5 (F1222ND5.ALSPEUA)	LG	WD-10482N (WD-10482N.AOWPBWT)
LG	F1222ND5 (F1222ND5.ALSPRUS)	LG	WD-10482N (WD-10482N.AOWPEBY)
LG	F1222NDP	LG	WD-10482S
LG	F1222NDP (F1222NDP.ABWPEAK)	LG	WD-10482S (WD-10482S.AOWPBWT)
LG	F1222NDP (F1222NDP.ABWPRUS)	LG	WD-10482S (WD-10482S.AOWPEBY)
LG	F1222NDR	LG	WD-10482T
LG	F1222NDR (F1222NDR.ABWPBAL)	LG	WD-10482T (WD-10482T.AOWPBWT)
LG	F1222NDR (F1222NDR.ABWPBWT)	LG	WD-10490N

LG	F1222NDR (F1222NDR.ABWPEBY)	LG	WD-10490N (WD-10490N.AOWPBAL)
LG	F1222NDR5	LG	WD-10490N (WD-10490N.AOWPBWT)
LG	F1222NDR5 (F1222NDR5.ALSPEBY)	LG	WD-10490N (WD-10490N.AOWPEAK)
LG	F1222NDR5 (F1222NDR5.AMSPBAL)	LG	WD-10490N (WD-10490N.AOWPEBY)
LG	F1222NDR5 (F1222NDR5.AMSPBWT)	LG	WD-10490N (WD-10490N.AOWPEUA)
LG	F1222SD	LG	WD-10490NP
LG	F1222SD (F1222SD.ABWPCIS)	LG	WD-10490NP (WD-10490NP.*)
LG	F1222SD (F1222SD.ABWPEUA)	LG	WD-10490NP (WD-10490NP.AOWPBA)
LG	F1222SDP	LG	WD-10490NP (WD-10490NP.AOWPEA)
LG	F1222SDP (F1222SDP.ABWPBWT)	LG	WD-10490NV
LG	F1222SDR	LG	WD-10490NV (WD-10490NV.AOWPBV)
LG	F1222SDR (F1222SDR.ABWPEBY)	LG	WD-10490NV (WD-10490NV.AOWPEU)
LG	F1222SDR (F1222SDR.ABWPRUS)	LG	WD-10490SV
LG	F1222TD	LG	WD-10490SV (WD-10490SV.AOWPBW)
LG	F1222TD (F1222TD.ABWPBWT)	LG	WD-10490SV (WD-10490SV.AOWPEB)
LG	F1222TD (F1222TD.ABWPCIS)	LG	WD-10490TP
LG	F1222TD (F1222TD.ABWPCOM)	LG	WD-10490TP (WD-10490TP.*)

LG	F1222TD (F1222TD.ABWPEAK)	LG	WD-10490TP (WD-10490TP.AOWPBA)
LG	F1222TD (F1222TD.ABWPEUA)	LG	WD-10490TP (WD-10490TP.AOWPTSE)
LG	F1222TDR	LG	WD-10490TV
LG	F1222TDR (F1222TDR.ABWPBAL)	LG	WD-10490TV (WD-10490TV.AOWPBA)
LG	F1222TDR5	LG	WD-10491N
LG	F1222TDR5 (F1222TDR5.ALSPRUS)	LG	WD-10491N (WD-10491N.AOWPBWT)
LG	F1222TDR5 (F1222TDR5.AMSPBWT)	LG	WD-10491N (WD-10491N.AOWPEBY)
LG	F1223ND	LG	WD-10491NV
LG	F1223ND (F1223ND.ABWPBWT)	LG	WD-10491NV (WD-10491NV.AOWPBWT)
LG	F1223ND (F1223ND.ABWPEAK)	LG	WD-10491S
LG	F1223ND (F1223ND.ABWPEUA)	LG	WD-10491S (WD-10491S.AOWPBWT)
LG	F1223NDR	LG	WD-10491SV
LG	F1223NDR (F1223NDR.ABWPBAL)	LG	WD-10491SV (WD-10491SV.AOWPEBY)
LG	F1223NDR (F1223NDR.ABWPBWT)	LG	WD-10492N
LG	F1223NDR (F1223NDR.ABWPEBY)	LG	WD-10492N (WD-10492N.AOWPBWT)
LG	F1223NDR5	LG	WD-10492N (WD-10492N.AOWPEBY)
LG	F1223NDR5 (F1223NDR5.AMSPBWT)	LG	WD-10492NV

LG	F1229NDR	LG	WD-10492NV (WD-10492NV.AOWPBWT)
LG	F1229NDR (F1229NDR.ABWPRUS)	LG	WD-10492S
LG	F1239SD	LG	WD-10492S (WD-10492S.AOWPBWT)
LG	F1239SD (F1239SD.ABWPCIS)	LG	WD-10492SV
LG	F1239SD (F1239SD.ABWPRUS)	LG	WD-10492SV (WD-10492SV.AOWPBWT)
LG	F1247ND	LG	WD-10499NE
LG	F1247ND (F1247ND.ABWPCOM)	LG	WD-10499NE (WD-10499NE.AOWPBWT)
LG	F1247ND (F1247ND.ABWPEUA)	LG	WD-1050F
LG	F1247ND5	LG	WD-1050F (WD-1050F.AOWPBWT)
LG	F1247ND5 (F1247ND5.ALSPCOM)	LG	WD-1050FB
LG	F1247ND5 (F1247ND5.ALSPEUA)	LG	WD-1050FB (WD-1050FB.AOWPBWT)
LG	F1248ND	LG	WD-1054FB
LG	F1248ND (F1248ND.ABWPCIS)	LG	WD-1054FB (WD-1054FB.AOWPBWT)
LG	F1248ND (F1248ND.ABWPCOM)	LG	WD-1055F
LG	F1248ND (F1248ND.ABWPEBY)	LG	WD-1055F (WD-1055F.MSPBWT)
LG	F1248ND (F1248ND.ABWPRUS)	LG	WD-1055FB
LG	F1248QD	LG	WD-1055FB (WD-1055FB.AMSPBWT)

LG	F1248QD (F1248QD.ABWPCOM)	LG	WD-1056FB
LG	F1256LD	LG	WD-1056FB (WD-1056FB.*)
LG	F1256LD (F1256LD.ABWPBAL)	LG	WD-1060FD
LG	F1256LD1	LG	WD-1060FD (WD-1060FD.OWPBWT)
LG	F1256LD1 (F1256LD1.ABWPEUA)	LG	WD-10660N
LG	F1256MD	LG	WD-10660N (WD-10660N.ABWPEBY)
LG	F1256MD (F1256MD.ABWPCIS)	LG	WD-10660N (WD-10660N.ABWPRUS)
LG	F1256MD (F1256MD.ABWPEBY)	LG	WD-10660T
LG	F1256MD (F1256MD.ABWPEUA)	LG	WD-10660T (WD-10660T.ABWPRUS)
LG	F1256MD (F1256MD.ABWPRUS)	LG	WD-10661N
LG	F1256MD1	LG	WD-10661N (WD-10661N.ABWPEBY)
LG	F1256MD1 (F1256MD1.ABWPCIS)	LG	WD-1070FB
LG	F1256MD1 (F1256MD1.ABWPCOM)	LG	WD-1070FB (WD-1070FB.AOWPBWT)
LG	F1256MD1 (F1256MD1.ABWPEUA)	LG	WD-1074FB
LG	F1256MDP	LG	WD-1074FB (WD-1074FB.AOWPBWT)
LG	F1256MDP (F1256MDP.ABWPCOM)	LG	WD-1080FD
LG	F1256ND	LG	WD-1080FD (WD-1080FD.AOWPBWT)

LG	F1256ND (F1256ND.ABWPBAL)	LG	WD-1090FB
LG	F1256ND (F1256ND.ABWPCIS)	LG	WD-1090FB (WD-1090FB.AOWPBWT)
LG	F1256ND (F1256ND.ABWPEBY)	LG	WD-11230FB
LG	F1256ND (F1256ND.ABWPRUS)	LG	WD-11230FB (WD-11230FB.AOWPEA)
LG	F1256ND1	LG	WD-12101FD
LG	F1256ND1 (F1256ND1.ABWPCOM)	LG	WD-12101FD (WD-12101FD.*)
LG	F1256ND1 (F1256ND1.ABWPEUA)	LG	WD-12120ND
LG	F1256ND1 (F1256ND1.ABWPRUS)	LG	WD-12120ND (WD-12120ND.*)
LG	F1256NDP1	LG	WD-12170ND
LG	F1256NDP1 (F1256NDP1.ABWPRUS)	LG	WD-12170SD (WD-12170SD.AOWPBW)
LG	F1256QD	LG	WD-12170TD
LG	F1256QD (F1256QD.ABWPBAL)	LG	WD-12170TD (WD-12170TD.*)
LG	F1256QD (F1256QD.ABWPCOM)	LG	WD-12170TD (WD-12170TD.AOWPBW)
LG	F1256QD1	LG	WD-12175ND
LG	F1256QD1 (F1256QD1.ABWPCOM)	LG	WD-12175ND (WD-12175ND.AMSPBW)
LG	F1257LD	LG	WD-12175SD
LG	F1257LD (F1257LD.ABWPEUA)	LG	WD-12175SD (WD-12175SD.AMSPBW)

LG	F1257ND	LG	WD-12200ND
LG	F1257ND (F1257ND.ABWPCIS)	LG	WD-12200ND (WD-12200ND.*)
LG	F1257ND (F1257ND.ABWPEBY)	LG	WD-12200SD
LG	F1257ND (F1257ND.ABWPEUA)	LG	WD-12200SD (WD-12200SD.*)
LG	F1257ND (F1257ND.ABWPRUS)	LG	WD-12200SD (WD-12200SD.AOWPEA)
LG	F1258ND	LG	WD-12202TD
LG	F1258ND (F1258ND.ABWPRUS)	LG	WD-12202TD (WD-12202TD.*)
LG	F1259ND	LG	WD-12202TD (WD-12202TD.AOWPEA)
LG	F1259ND (F1259ND.ABWPRUS)	LG	WD-12205ND
LG	F1268LD	LG	WD-12205ND (WD-12205ND.*)
LG	F1268LD (F1268LD.ABWPBAL)	LG	WD-12205SD
LG	F1268LD (F1268LD.ABWPCIS)	LG	WD-12205SD (WD-12205SD.*)
LG	F1268LD (F1268LD.ABWPEBY)	LG	WD-12207TD
LG	F1268LD1	LG	WD-12207TD (WD-12207TD.*)
LG	F1268LD1 (F1268LD1.ABWPBAL)	LG	WD-12220FD
LG	F1268LD1 (F1268LD1.ABWPCIS)	LG	WD-12220FD (WD-12220FD.AOWPEA)
LG	F1268LD1 (F1268LD1.ABWPCOM)	LG	WD-12270BD

LG	F1268LD1 (F1268LD1.ABWPEUA)	LG	WD-12270BD (WD-12270BD.*)
LG	F1268QD	LG	WD-12270BD (WD-12270BD.ABWPEA
LG	F1268QD (F1268QD.ABWPBAL)	LG	WD-12275BD
LG	F1273ND	LG	WD-12275BD (WD-12275BD.*)
LG	F1273ND (F1273ND.ABWPBAL)	LG	WD-12275BD (WD-12275BD.ABPPEA
LG	F1273ND (F1273ND.ABWPCOM)	LG	WD-12330ND
LG	F1273ND (F1273ND.ABWPRUS)	LG	WD-12330ND (WD-12330ND.AOWPEA
LG	F1273ND5	LG	WD-12330NDK
LG	F1273ND5 (F1273ND5.ALSPCOM)	LG	WD-12330NDK (WD-12330NDK.*)
LG	F1273TD	LG	WD-12330NDK (WD-12330NDK.AOW
LG	F1273TD (F1273TD.ABWPCOM)	LG	WD-12330NDK (WD-12330NDK.AOW
LG	F1273TD5	LG	WD-12340ND
LG	F1273TD5 (F1273TD5.ALSPCOM)	LG	WD-12340ND (WD-12340ND.*)
LG	F1280ND	LG	WD-12340ND (WD-12340ND.AOWPTS
LG	F1280ND (F1280ND.ABWPBAL)	LG	WD-12340NDK
LG	F1280ND (F1280ND.ABWPCIS)	LG	WD-12340NDK (WD-12340NDK.*)
LG	F1280ND (F1280ND.ABWPCOM)	LG	WD-12340NDK (WD-12340NDK.AOW

LG	F1280ND (F1280ND.ABWPEBY)	LG	WD-12340NDK (WD-12340NDK.AOW)
LG	F1280ND (F1280ND.ABWPRUS)	LG	WD-12341TDK
LG	F1280ND5	LG	WD-12341TDK (WD-12341TDK.*)
LG	F1280ND5 (F1280ND5.ALSPBAL)	LG	WD-12341TDK (WD-12341TDK.AOW)
LG	F1280ND5 (F1280ND5.ALSPCOM)	LG	WD-12342TD
LG	F1280ND5 (F1280ND5.ALSPEBY)	LG	WD-12342TD (WD-12342TD.*)
LG	F1280ND5 (F1280ND5.ALSPRUS)	LG	WD-12342TD (WD-12342TD.AOWPTS)
LG	F1281HD	LG	WD-12344ND
LG	F1281HD (F1281HD.ABWPCIS)	LG	WD-12344ND (WD-12344ND.*)
LG	F1281HD (F1281HD.ABWPRUS)	LG	WD-12345NDK
LG	F1281HD5	LG	WD-12345NDK (WD-12345NDK.*)
LG	F1281HD5 (F1281HD5.ALSPCIS)	LG	WD-12350NDK
LG	F1281HD5 (F1281HD5.ALSPRUS)	LG	WD-12350NDK (WD-12350NDK.*)
LG	F1281ND	LG	WD-12350NDK (WD-12350NDK.AOW)
LG	F1281ND (F1281ND.ABWPCIS)	LG	WD-12350NDK (WD-12350NDK.AOW)
LG	F1281ND (F1281ND.ABWPCOM)	LG	WD-12353NDK
LG	F1281ND (F1281ND.ABWPRUS)	LG	WD-12353NDK (WD-12353NDK.AOW)

LG	F1281ND5	LG	WD-12353NDK (WD-12353NDK.AOWPEBY)
LG	F1281ND5 (F1281ND5.ALSPCIS)	LG	WD-12353NDK (WD-12353NDK.AOWPEBY)
LG	F1281ND5 (F1281ND5.ALSPCOM)	LG	WD-12355NDK
LG	F1281ND5 (F1281ND5.ALSPPEBY)	LG	WD-12355NDK (WD-12355NDK.*)
LG	F1281ND5 (F1281ND5.ALSPKIV)	LG	WD-12360ND
LG	F1281TD	LG	WD-12360ND (WD-12360ND.*)
LG	F1281TD (F1281TD.ABWPCIS)	LG	WD-12360ND (WD-12360ND.AOWPEBY)
LG	F1281TD (F1281TD.ABWPCOM)	LG	WD-12360NDK
LG	F1281TD (F1281TD.ABWPKIV)	LG	WD-12360NDK (WD-12360NDK.*)
LG	F1281TD (F1281TD.ABWPRUS)	LG	WD-12360NDK (WD-12360NDK.AOWPEBY)
LG	F1281TD5	LG	WD-12360SD
LG	F1281TD5 (F1281TD5.ALSPCOM)	LG	WD-12360SD (WD-12360SD.*)
LG	F1281TD5 (F1281TD5.ALSPRUS)	LG	WD-12360SD (WD-12360SD.AOWPEBY)
LG	F1289ND	LG	WD-12360SDK
LG	F1289ND (F1289ND.ABWPCIS)	LG	WD-12360SDK (WD-12360SDK.*)
LG	F1289ND (F1289ND.ABWPEBY)	LG	WD-12360SDK (WD-12360SDK.AOWPEBY)
LG	F1289ND (F1289ND.ABWPRUS)	LG	WD-12360SDK (WD-12360SDK.AOWPEBY)

LG	F1289ND5	LG	WD-12361TDK
LG	F1289ND5 (F1289ND5.ALSPCIS)	LG	WD-12361TDK (WD-12361TDK.*)
LG	F1289ND5 (F1289ND5.ALSPEBY)	LG	WD-12362TD
LG	F1289ND5 (F1289ND5.ALSPRUS)	LG	WD-12362TD (WD-12362TD.*)
LG	F1291LD1	LG	WD-12362TD (WD-12362TD.AOWPEA
LG	F1291LD1 (F1291LD1.ABWPCIS)	LG	WD-12363NDK
LG	F1291LD1 (F1291LD1.ABWPCOM)	LG	WD-12363NDK (WD-12363NDK.AOW
LG	F1291LD1 (F1291LD1.ABWPBAL)	LG	WD-12363NDK (WD-12363NDK.AOW
LG	F1292LD	LG	WD-12363NDK (WD-12363NDK.AOW
LG	F1292LD (F1292LD.ABWPCIS)	LG	WD-12365NDK
LG	F1292MD	LG	WD-12365NDK (WD-12365NDK.*)
LG	F1292MD (F1292MD.ABWPCIS)	LG	WD-12390ND
LG	F1292MD (F1292MD.ABWPCOM)	LG	WD-12390ND (WD-12390ND.*)
LG	F1292MD (F1292MD.ABWPEBY)	LG	WD-12390ND (WD-12390ND.AOWPEA
LG	F1292MD (F1292MD.ABWPRUS)	LG	WD-12390NDK
LG	F1292MD1	LG	WD-12390NDK (WD-12390NDK.*)
LG	F1292MD1 (F1292MD1.ABWPCIS)	LG	WD-12390NDK (WD-12390NDK.AOW

LG	F1292MD1 (F1292MD1.ABWPCOM)	LG	WD-12390NDK (WD-12390NDK.AOW)
LG	F1292MD1 (F1292MD1.ABWPRUS)	LG	WD-12390NDK (WD-12390NDK.AOW)
LG	F1292ND	LG	WD-12390SD
LG	F1292ND (F1292ND.ABWPRUS)	LG	WD-12390SD (WD-12390SD.AOWPBW)
LG	F1292ND1	LG	WD-12390SDK
LG	F1292ND1 (F1292ND1.ABWPCIS)	LG	WD-12390SDK (WD-12390SDK.AOWF)
LG	F1292ND1 (F1292ND1.ABWPCOM)	LG	WD-12391TDK
LG	F1292ND1 (F1292ND1.ABWPRUS)	LG	WD-12391TDK (WD-12391TDK.*)
LG	F1292QD	LG	WD-12391TDK (WD-12391TDK.AOWF)
LG	F1292QD (F1292QD.ABWPCOM)	LG	WD-12392TD
LG	F1292QD5	LG	WD-12392TD (WD-12392TD.*)
LG	F1292QD5 (F1292QD5.ALSPCOM)	LG	WD-12393NDK
LG	F1294HD	LG	WD-12393NDK (WD-12393NDK.AOW)
LG	F1294HD (F1294HD.ABWPRUS)	LG	WD-12393NDK (WD-12393NDK.AOW)
LG	F1294HD5	LG	WD-12393NDK (WD-12393NDK.AOW)
LG	F1294HD5 (F1294HD5.ALSPRUS)	LG	WD-12393NDK (WD-12393NDK.AOW)
LG	F1294ND	LG	WD-12393SDK

LG	F1294ND (F1294ND.ABWPCIS)	LG	WD-12393SDK (WD-12393SDK.AOWF)
LG	F1294ND (F1294ND.ABWPCOM)	LG	WD-12393SDK (WD-12393SDK.AOWF)
LG	F1294ND (F1294ND.ABWPRUS)	LG	WD-12395ND
LG	F1294ND5	LG	WD-12395ND (WD-12395ND.*)
LG	F1294ND5 (F1294ND5.ALSPRUS)	LG	WD-12395NDK
LG	F1294TD	LG	WD-12395NDK (WD-12395NDK.*)
LG	F1294TD (F1294TD.ABWPCOM)	LG	WD-12395NDK (WD-12395NDK.AMSI)
LG	F1294TD (F1294TD.ABWPRUS)	LG	WD-12395NDK (WD-12395NDK.AMSI)
LG	F1294TD5	LG	WD-12396TDK
LG	F1294TD5 (F1294TD5.ALSPRUS)	LG	WD-12396TDK (WD-12396TDK.AMSP)
LG	F1296ND	LG	WD-12400NDK
LG	F1296ND (F1296ND.ABWPCIS)	LG	WD-12400NDK (WD-12400NDK.*)
LG	F1296ND (F1296ND.ABWPCOM)	LG	WD-12400NDK (WD-12400NDK.AOWF)
LG	F1296ND (F1296ND.ABWPKIV)	LG	WD-12400NDK (WD-12400NDK.AOWF)
LG	F1296ND (F1296ND.ABWPRUS)	LG	WD-12400SDK
LG	F1296ND (F1296ND.ABWQEPL)	LG	WD-12400SDK (WD-12400SDK.*)
LG	F1296ND3	LG	WD-12400SDK (WD-12400SDK.AOWF)

LG	F1296ND3 (F1296ND3.ABWPCIS)	LG	WD-12401TDK
LG	F1296ND3 (F1296ND3.ABWPCOM)	LG	WD-12401TDK (WD-12401TDK.*)
LG	F1296ND3 (F1296ND3.ABWPKIV)	LG	WD-12401TDK (WD-12401TDK.AOWF)
LG	F1296ND3 (F1296ND3.ABWPRUS)	LG	WD-12401TDK (WD-12401TDK.AOWF)
LG	F1296ND4	LG	WD-12403NDK
LG	F1296ND4 (F1296ND4.ALSPCIS)	LG	WD-12403NDK (WD-12403NDK.AOWF)
LG	F1296ND4 (F1296ND4.ALSPCOM)	LG	WD-12403NDK (WD-12403NDK.AOWF)
LG	F1296ND4 (F1296ND4.ALSPRUS)	LG	WD-12403NDK (WD-12403NDK.AOWF)
LG	F1296ND5	LG	WD-12403SDK
LG	F1296ND5 (F1296ND5.ALSPCIS)	LG	WD-12403SDK (WD-12403SDK.AOWF)
LG	F1296ND5 (F1296ND5.ALSPCOM)	LG	WD-12403SDK (WD-12403SDK.AOWF)
LG	F1296NDA3	LG	WD-12405NDK
LG	F1296NDA3 (F1296NDA3.ABWPBAL)	LG	WD-12405NDK (WD-12405NDK.*)
LG	F1296NDA3 (F1296NDA3.ABWQCMR)	LG	WD-12405NDK (WD-12405NDK.VLA)
LG	F1296NDW3	LG	WD-12406NDK
LG	F1296NDW3 (F1296NDW3.ABWPKIV)	LG	WD-12406NDK (WD-12406NDK.AMSI)
LG	F1296QD	LG	WD-12406TDK

LG	F1296QD (F1296QD.ABWPCOM)	LG	WD-12406TDK (WD-12406TDK.*)
LG	F1296QD (F1296QD.ABWPKIV)	LG	WD-12406TDK (WD-12406TDK.VLA)
LG	F1296QD3	LG	WD-12411TDK
LG	F1296QD3 (F1296QD3.ABWPCOM)	LG	WD-12411TDK (WD-12411TDK.AOWP)
LG	F1296QD3 (F1296QD3.ABWPKIV)	LG	WD-12430NDK
LG	F1296QDW3	LG	WD-12430NDK (WD-12430NDK.AOWP)
LG	F1296QDW3 (F1296QDW3.ABWPKIV)	LG	WD-1245FB
LG	F1296SD3	LG	WD-1245FB (WD-1245FB.*)
LG	F1296SD3 (F1296SD3.ABWPCIS)	LG	WD-12480N
LG	F1296SD3 (F1296SD3.ABWPRUS)	LG	WD-12480N (WD-12480N.AOWPBAL)
LG	F1296TD	LG	WD-12480N (WD-12480N.AOWPEUA)
LG	F1296TD (F1296TD.ABWPCOM)	LG	WD-12480NP
LG	F1296TD3	LG	WD-12480NP (WD-12480NP.*)
LG	F1296TD3 (F1296TD3.ABWPCIS)	LG	WD-12480NP (WD-12480NP.AOWPBA)
LG	F1296TD3 (F1296TD3.ABWPRUS)	LG	WD-12480NV
LG	F1296TD4	LG	WD-12480NV (WD-12480NV.*)
LG	F1296TD4 (F1296TD4.ALSPCIS)	LG	WD-12480NV (WD-12480NV.AOWPBA)

LG	F1296TD4 (F1296TD4.ALSPRUS)	LG	WD-12480NV (WD-12480NV.AOWPEE)
LG	F1296TD5	LG	WD-12480TP
LG	F1296TD5 (F1296TD5.ALSPCOM)	LG	WD-12480TP (WD-12480TP.*)
LG	F1296WD	LG	WD-12480TP (WD-12480TP.AOWPBA)
LG	F1296WD (F1296WD.ABWPCIS)	LG	WD-12480TP (WD-12480TP.AOWPTS)
LG	F1296WD (F1296WD.ABWPCOM)	LG	WD-12480TV
LG	F1296WD (F1296WD.ABWPRUS)	LG	WD-12480TV (WD-12480TV.AOWPBA)
LG	F1296WD3	LG	WD-12481N
LG	F1296WD3 (F1296WD3.ABWPCOM)	LG	WD-12481N (WD-12481N.AOWPBAL)
LG	F1296WD3 (F1296WD3.ABWPRUS)	LG	WD-12481N (WD-12481N.AOWPBWT)
LG	F1296WD4	LG	WD-12481N (WD-12481N.AOWPEUA)
LG	F1296WD4 (F1296WD4.ALSPCIS)	LG	WD-12481NP
LG	F1296WD4 (F1296WD4.ALSPCOM)	LG	WD-12481NP (WD-12481NP.*)
LG	F1296WD4 (F1296WD4.ALSPRUS)	LG	WD-12481NP (WD-12481NP.AOWPBA)
LG	F1296WD5	LG	WD-12481NP (WD-12481NP.AOWPBW)
LG	F1296WD5 (F1296WD5.ALSPCOM)	LG	WD-12481NP (WD-12481NP.AOWPEA)
LG	F1296WD5 (F1296WD5.ALSPRUS)	LG	WD-12481NV

LG	F1296WDS	LG	WD-12481NV (WD-12481NV.AOWPEE)
LG	F1296WDS (F1296WDS.ABWPCIS)	LG	WD-12481TP
LG	F1296WDS (F1296WDS.ABWPRUS)	LG	WD-12481TP (WD-12481TP.*)
LG	F1296WDS5	LG	WD-12481TP (WD-12481TP.AOWPBA)
LG	F1296WDS5 (F1296WDS5.ALSPCIS)	LG	WD-12481TP (WD-12481TP.AOWPTS)
LG	F1296WDS5 (F1296WDS5.ALSPRUS)	LG	WD-12481TV
LG	F12A8HD	LG	WD-12481TV (WD-12481TV.AOWPBA)
LG	F12A8HD (F12A8HD.ABWPCIS)	LG	WD-1255F
LG	F12A8HD (F12A8HD.ABWPCOM)	LG	WD-1255F (WD-1255F.MSPBWT)
LG	F12A8HD (F12A8HD.ABWPKIV)	LG	WD-1255FB
LG	F12A8HD (F12A8HD.ABWPRUS)	LG	WD-1255FB (WD-1255FB.AMSPBWT)
LG	F12A8HD5	LG	WD-1256FB
LG	F12A8HD5 (F12A8HD5.ALSPCIS)	LG	WD-1256FB (WD-1256FB.AMSPBWT)
LG	F12A8HD5 (F12A8HD5.ALSPCOM)	LG	WD-1260FD
LG	F12A8HD5 (F12A8HD5.ALSPKIV)	LG	WD-1260FD (WD-1260FD.OWPBWT)
LG	F12A8HD5 (F12A8HD5.ALSPRUS)	LG	WD-1270FB
LG	F12A8NDA	LG	WD-1270FB (WD-1270FB.AOWPBWT)

LG	F12A8NDA (F12A8NDA.ABWPBAL)	LG	WD-1274FB
LG	F12A8NDA5	LG	WD-1274FB (WD-1274FB.AOWPBWT)
LG	F12A8NDA5 (F12A8NDA5.ALSPBAL)	LG	WD-1275FB
LG	F12B8MD	LG	WD-1275FB (WD-1275FB.*)
LG	F12B8MD (F12B8MD.ABWPCIS)	LG	WD-1276FB
LG	F12B8MD (F12B8MD.ABWPCOM)	LG	WD-1276FB (WD-1276FB.AMSPBWT)
LG	F12B8MD (F12B8MD.ABWPRUS)	LG	WD-1280FD
LG	F12B8MD1	LG	WD-1280FD (WD-1280FD.AOWPBWT)
LG	F12B8MD1 (F12B8MD1.ABWPCIS)	LG	WD-1290FB
LG	F12B8MD1 (F12B8MD1.ABWPCOM)	LG	WD-1290FB (WD-1290FB.AOWPBWT)
LG	F12B8MD1 (F12B8MD1.ABWPRUS)	LG	WD-13235FB
LG	F12B8MDP1	LG	WD-13235FB (WD-13235FB.AMSPEAR)
LG	F12B8MDP1 (F12B8MDP1.SBWPCOM)	LG	WD-14310FD
LG	F12B8ND	LG	WD-14310FD (WD-14310FD.*)
LG	F12B8ND (F12B8ND.ABWPCOM)	LG	WD-14311FD
LG	F12B8ND (F12B8ND.ABWPKIV)	LG	WD-14311FD (WD-14311FD.*)
LG	F12B8ND (F12B8ND.ABWPRUS)	LG	WD-1460FD

LG	F12B8ND (F12B8ND.ABWQEPL)	LG	WD-1460FD (WD-1460FD.OWPBWT)
LG	F12B8ND0	LG	WD-1465FD
LG	F12B8ND0 (F12B8ND0.ABWQEPL)	LG	WD-1465FD (WD-1465FD.AMSPTSK)
LG	F12B8ND1	LG	WD-1485FD
LG	F12B8ND1 (F12B8ND1.ABWPCIS)	LG	WD-1485FD (WD-1485FD.AMSPBWT)
LG	F12B8ND1 (F12B8ND1.ABWPCOM)	LG	WD-16101FD (WD-16101FD.*)
LG	F12B8ND1 (F12B8ND1.ABWPKIV)	LG	WD-16101FD (WD-16101FD.AOWPBW)
LG	F12B8ND1 (F12B8ND1.ABWPRUS)	LG	WD-80130F
LG	F12B8ND1 (F12B8ND1.ABWQCMR)	LG	WD-80130N
LG	F12B8ND5	LG	WD-80130N (WD-80130N.AOWPBWT)
LG	F12B8ND5 (F12B8ND5.ALSPKIV)	LG	WD-80130N (WD-80130N.AOWPEAK)
LG	F12B8NDA	LG	WD-80130NP
LG	F12B8NDA (F12B8NDA.ABWPBAL)	LG	WD-80130NP (WD-80130NP.*)
LG	F12B8NDA7	LG	WD-80130NU
LG	F12B8NDA7 (F12B8NDA7.ABWQCMR)	LG	WD-80130NU (WD-80130NU.*)
LG	F12B8NDA7 (F12B8NDA7.ABWQEIS)	LG	WD-80130NU (WD-80130NU.AOWPTS)
LG	F12B8NDA7 (F12B8NDA7.ABWQEPL)	LG	WD-80130NUP

LG	F12B8NDW	LG	WD-80130NUP (WD-80130NUP.*)
LG	F12B8NDW (F12B8NDW.ABWPKIV)	LG	WD-80130NUP (WD-80130NUP.AOWP)
LG	F12B8NDW1	LG	WD-80130NUP (WD-80130NUP.AOWP)
LG	F12B8NDW1 (F12B8NDW1.ABWPKIV)	LG	WD-80130T
LG	F12B8NDW5	LG	WD-80130T (WD-80130T.*)
LG	F12B8NDW5 (F12B8NDW5.ALSPKIV)	LG	WD-80130TP
LG	F12B8QD	LG	WD-80130TP (WD-80130TP.*)
LG	F12B8QD (F12B8QD.ABWPCOM)	LG	WD-80130TUP
LG	F12B8QD (F12B8QD.ABWPRUS)	LG	WD-80130TUP (WD-80130TUP.*)
LG	F12B8QD1	LG	WD-80130TUP (WD-80130TUP.AOWP)
LG	F12B8QD1 (F12B8QD1.ABWPCIS)	LG	WD-80131N
LG	F12B8QD1 (F12B8QD1.ABWPCOM)	LG	WD-80131N (WD-80131N.*)
LG	F12B8QD5	LG	WD-80131NU
LG	F12B8QD5 (F12B8QD5.ALSPCIS)	LG	WD-80131NU (WD-80131NU.*)
LG	F12B8QD5 (F12B8QD5.ALSPRUS)	LG	WD-80131NUP
LG	F12B8QDA1	LG	WD-80131NUP (WD-80131NUP.*)
LG	F12B8QDA1 (F12B8QDA1.ABWPBAL)	LG	WD-80132N

LG	F12B8TD	LG	WD-80132N (WD-80132N.AOWPBWT)
LG	F12B8TD (F12B8TD.ABWPRUS)	LG	WD-80132NU
LG	F12B8TD5	LG	WD-80132NU (WD-80132NU.AOWPKZ)
LG	F12B8TD5 (F12B8TD5.ALSPRUS)	LG	WD-80132SP
LG	F12B8WD	LG	WD-80132SP (WD-80132SP.AOWPBW)
LG	F12B8WD (F12B8WD.ABWPRUS)	LG	WD-80132SU
LG	F12B8WD5	LG	WD-80132SU (WD-80132SU.AOWPKZ)
LG	F12B8WD5 (F12B8WD5.ALSPRUS)	LG	WD-80150N
LG	F12B8WD7	LG	WD-80150N (WD-80150N.AOWPBWT)
LG	F12B8WD7 (F12B8WD7.ABWPRUS)	LG	WD-80150N (WD-80150N.AOWPEAK)
LG	F12B8WD8	LG	WD-80150NU
LG	F12B8WD8 (F12B8WD8.ALSPRUS)	LG	WD-80150NU (WD-80150NU.*)
LG	F12B8WDS7	LG	WD-80150NU (WD-80150NU.AOWPBW)
LG	F12B8WDS7 (F12B8WDS7.ABWPRUS)	LG	WD-80150NUP
LG	F12B9LD	LG	WD-80150NUP (WD-80150NUP.*)
LG	F12B9LD (F12B9LD.ABWPCOM)	LG	WD-80150NUP (WD-80150NUP.AOWPBW)
LG	F12B9LD (F12B9LD.ABWPKIV)	LG	WD-80150NUP (WD-80150NUP.AOWPBW)

LG	F12B9LD (F12B9LD.ABWPRUS)	LG	WD-80150NUV
LG	F12B9LDW	LG	WD-80150NUV (WD-80150NUV.AOWP)
LG	F12B9LDW (F12B9LDW.ABWPKIV)	LG	WD-80150S
LG	F12B9QD	LG	WD-80150S (WD-80150S.AOWPBWT)
LG	F12B9QD (F12B9QD.ABWPCIS)	LG	WD-80150S (WD-80150S.AOWPEAK)
LG	F12U1SDN0N	LG	WD-80150SU
LG	F12U1SDN0N (F12U1SDN0N.ABWPRUS)	LG	WD-80150SU (WD-80150SU.*)
LG	F1403TD	LG	WD-80150SUP
LG	F1403TD (F1403TD.ABWPBWT)	LG	WD-80150SUP (WD-80150SUP.*)
LG	F1403TD (F1403TD.ABWPRUS)	LG	WD-80150SUP (WD-80150SUP.AOWP)
LG	F1403TD5	LG	WD-80150SUP (WD-80150SUP.AOWP)
LG	F1403TD5 (F1403TD5.ALSPBWT)	LG	WD-80150SUP (WD-80150SUP.AOWP)
LG	F1403TD5 (F1403TD5.ALSPRUS)	LG	WD-80154N
LG	F1421TD5	LG	WD-80154N (WD-80154N.AOWPBWT)
LG	F1421TD5 (F1421TD5.ALSPBWT)	LG	WD-80154NP
LG	F1480FD9	LG	WD-80154NP (WD-80154NP.AOWPBWT)
LG	F1480FD9 (F1480FD9.ACRQECZ)	LG	WD-80154NP (WD-80154NP.AOWPEAK)

LG	F1480TD	LG	WD-80154NP (WD-80154NP.AOWPTS)
LG	F1480TD (F1480TD.ABWPCOM)	LG	WD-80154S
LG	F1480TD5	LG	WD-80154SP
LG	F1480TD5 (F1480TD5.ALSPCOM)	LG	WD-80154SP (WD-80154SP.AOWPBW)
LG	F1480TD6	LG	WD-80154SP (WD-80154SP.AOWPTS)
LG	F1480TD6 (F1480TD6.ABPQEUK)	LG	WD-80155N
LG	F1481TD5	LG	WD-80155N (WD-80155N.AMSPBWT)
LG	F1481TD5 (F1481TD5.ALSPCIS)	LG	WD-80155N (WD-80155N.AMSPEAK)
LG	F1496TDA3	LG	WD-80155NU
LG	F1496TDA3 (F1496TDA3.ABWPBAL)	LG	WD-80155NU (WD-80155NU.*)
LG	F14A8FD	LG	WD-80155NUP
LG	F14A8FD (F14A8FD.ABWPCOM)	LG	WD-80155NUP (WD-80155NUP.*)
LG	F14A8FD5	LG	WD-80155NUP (WD-80155NUP.AMSP)
LG	F14A8FD5 (F14A8FD5.ALSPCOM)	LG	WD-80155NUP (WD-80155NUP.AMSP)
LG	F14A8JD	LG	WD-80155NUP (WD-80155NUP.AMSP)
LG	F14A8JD (F14A8JD.ABWPCOM)	LG	WD-80155S
LG	F14A8TD	LG	WD-80155S (WD-80155S.AMSPBWT)

LG	F14A8TD (F14A8TD.ABWPCIS)	LG	WD-80155S (WD-80155S.AMSPEAK)
LG	F14A8TD (F14A8TD.ABWPCOM)	LG	WD-80155SU
LG	F14A8TD (F14A8TD.ABWPRUS)	LG	WD-80155SU (WD-80155SU.*)
LG	F14A8TD5	LG	WD-80155SUP
LG	F14A8TD5 (F14A8TD5.ALSPCOM)	LG	WD-80155SUP (WD-80155SUP.*)
LG	F14A8TD5 (F14A8TD5.ALSPRUS)	LG	WD-80155SUP (WD-80155SUP.AMSPEAK)
LG	F14A8TDA6	LG	WD-80155SUP (WD-80155SUP.AMSPEAK)
LG	F14A8TDA6 (F14A8TDA6.ABPQEUK)	LG	WD-80156N
LG	F2H6HS0E	LG	WD-80156N (WD-80156N.AGLPBWT)
LG	F2H6HS0E (F2H6HS0E.ABWPCIS)	LG	WD-80156N (WD-80156N.AGLPEAK)
LG	F2H6HS0W	LG	WD-80156NU
LG	F2H6HS0W (F2H6HS0W.ABWPCIS)	LG	WD-80156NU (WD-80156NU.*)
LG	F2H6HS0W (F2H6HS0W.ABWPRUS)	LG	WD-80156NUP
LG	F2H6HS1L	LG	WD-80156NUP (WD-80156NUP.AGLPBWT)
LG	F2H6HS1L (F2H6HS1L.ALSPCIS)	LG	WD-80156S
LG	F2H6HS1L (F2H6HS1L.ALSPRUS)	LG	WD-80156S (WD-80156S.AGLPBWT)
LG	F2H6HS8S	LG	WD-80156S (WD-80156S.AGLPEAK)

LG	F2H6HS8S (F2H6HS8S.AESPCIS)	LG	WD-80156SU
LG	F2H6WS0W	LG	WD-80156SU (WD-80156SU.*)
LG	F2H6WS0W (F2H6WS0W.ABWPCIS)	LG	WD-80156SUP
LG	F2J5HS3W	LG	WD-80156SUP (WD-80156SUP.AGLPE)
LG	F2J5HS3W (F2J5HS3W.ABWPKIV)	LG	WD-80157N
LG	F2J5HS3W (F2J5HS3W.ABWPRUS)	LG	WD-80157N (WD-80157N.ABUPBWT)
LG	F2J5HS4W	LG	WD-80157N (WD-80157N.ABUPEAK)
LG	F2J5HS4W (F2J5HS4W.ABWPKIV)	LG	WD-80157NU
LG	F2J5HS4W (F2J5HS4W.ABWPRUS)	LG	WD-80157NU (WD-80157NU.*)
LG	F2J5HS6S	LG	WD-80157NUP
LG	F2J5HS6S (F2J5HS6S.AESPCIS)	LG	WD-80157NUP (WD-80157NUP.ABUP)
LG	F2J5HS6W	LG	WD-80157S
LG	F2J5HS6W (F2J5HS6W.ABWPCIS)	LG	WD-80157S (WD-80157S.ABUPBWT)
LG	F2J5NN3W	LG	WD-80157S (WD-80157S.ABUPEAK)
LG	F2J5NN3W (F2J5NN3W.ABWPARA)	LG	WD-80157SU
LG	F2J5NN3W (F2J5NN3W.ABWPARM)	LG	WD-80157SU (WD-80157SU.*)
LG	F2J5NN3W (F2J5NN3W.ABWPCIS)	LG	WD-80157SU (WD-80157SU.ABUPEAK)

LG	F2J5NN3W (F2J5NN3W.ABWPRUS)	LG	WD-80158NP
LG	F2J5NN4L	LG	WD-80158NP (WD-80158NP.AMSPBW)
LG	F2J5NN4L (F2J5NN4L.ALSPRUS)	LG	WD-80158SP
LG	F2J5NN4W	LG	WD-80158SP (WD-80158SP.*)
LG	F2J5NN4W (F2J5NN4W.ABWPCOM)	LG	WD-80160N
LG	F2J5NN4W (F2J5NN4W.ABWPRUS)	LG	WD-80160N (WD-80160N.AOWPBWT)
LG	F2J5NN4W (F2J5NN4W.ABWPTSK)	LG	WD-80160N (WD-80160N.AOWPEAK)
LG	F2J5NN7S	LG	WD-80160NP
LG	F2J5NN7S (F2J5NN7S.AESPARA)	LG	WD-80160NP (WD-80160NP.*)
LG	F2J5NN7S (F2J5NN7S.AESPARM)	LG	WD-80160NU
LG	F2J5NS6W	LG	WD-80160NU (WD-80160NU.*)
LG	F2J5NS6W (F2J5NS6W.ABWPCIS)	LG	WD-80160NU (WD-80160NU.AOWPBW)
LG	F2J5NY4W	LG	WD-80160NUP
LG	F2J5NY4W (F2J5NY4W.ABWQWMR)	LG	WD-80160NUP (WD-80160NUP.AOWP)
LG	F2J5QN3W	LG	WD-80160NUP (WD-80160NUP.AOWP)
LG	F2J5QN3W (F2J5QN3W.ABWPARA)	LG	WD-80160NUP (WD-80160NUP.AOWP)
LG	F2J5QN3W (F2J5QN3W.ABWPARM)	LG	WD-80160NUV

LG	F2J5QN3W (F2J5QN3W.ABWQWMR)	LG	WD-80160NUV (WD-80160NUV.AOWP)
LG	F2J5QN4W	LG	WD-80160S
LG	F2J5QN4W (F2J5QN4W.ABWQWMR)	LG	WD-80160S (WD-80160S.AOWPBWT)
LG	F2J5QN7S	LG	WD-80160S (WD-80160S.AOWPEAK)
LG	F2J5QN7S (F2J5QN7S.AESPARA)	LG	WD-80160SP
LG	F2J5QN7S (F2J5QN7S.AESPARM)	LG	WD-80160SP (WD-80160SP.*)
LG	F2J5TN4W	LG	WD-80160SU
LG	F2J5TN4W (F2J5TN4W.ABWPKIV)	LG	WD-80160SU (WD-80160SU.*)
LG	F2J5TY4W	LG	WD-80160SUP
LG	F2J5TY4W (F2J5TY4W.ABWQWMR)	LG	WD-80160SUP (WD-80160SUP.*)
LG	F2J5WN3W	LG	WD-80160SUP (WD-80160SUP.AOWP)
LG	F2J5WN3W (F2J5WN3W.ABWQWMR)	LG	WD-80160SUV
LG	F2J5WN4W	LG	WD-80160SUV (WD-80160SUV.AOWP)
LG	F2J5WN4W (F2J5WN4W.ABWQWMR)	LG	WD-80163N
LG	F2J5WN7S	LG	WD-80163N (WD-80163N.AOWPBWT)
LG	F2J5WN7S (F2J5WN7S.AESQWMR)	LG	WD-80163N (WD-80163N.AOWPEBY)
LG	F2J5WS3W	LG	WD-80163S

LG	F2J5WS3W (F2J5WS3W.ABWPCIS)	LG	WD-80163S (WD-80163S.AOWPBWT)
LG	F2J5WS4L	LG	WD-80164N
LG	F2J5WS4L (F2J5WS4L.ALSPCIS)	LG	WD-80164N (WD-80164N.AOWPBAL)
LG	F2J5WS6W	LG	WD-80164N (WD-80164N.AOWPBWT)
LG	F2J5WS6W (F2J5WS6W.ABWPCIS)	LG	WD-80164N (WD-80164N.AOWPEUA)
LG	F2J6HS0W	LG	WD-80164NP
LG	F2J6HS0W (F2J6HS0W.ABWPCIS)	LG	WD-80164NP (WD-80164NP.AOWPBW)
LG	F2J6HS0W (F2J6HS0W.ABWPRUS)	LG	WD-80164NP (WD-80164NP.AOWPEA)
LG	F2J6HS1L	LG	WD-80164NP (WD-80164NP.AOWPTS)
LG	F2J6HS1L (F2J6HS1L.ALSPCIS)	LG	WD-80164NV
LG	F2J6HS1L (F2J6HS1L.ALSPRUS)	LG	WD-80164NV (WD-80164NV.AOWPBA)
LG	F2J6HS8S	LG	WD-80164NV (WD-80164NV.AOWPBW)
LG	F2J6HS8S (F2J6HS8S.AESPCIS)	LG	WD-80164NV (WD-80164NV.AOWPEE)
LG	F2J6NN0W	LG	WD-80164NV (WD-80164NV.AOWPEU)
LG	F2J6NN0W (F2J6NN0W.ABWPARA)	LG	WD-80164S
LG	F2J6NN0W (F2J6NN0W.ABWPARM)	LG	WD-80164S (WD-80164S.AOWPBWT)
LG	F2J6NN0W (F2J6NN0W.ABWPCOM)	LG	WD-80164S (WD-80164S.AOWPEBY)

LG	F2J6NN0W (F2J6NN0W.ABWPTSK)	LG	WD-80164S (WD-80164S.AOWPEUA)
LG	F2J6NN8S	LG	WD-80164SP
LG	F2J6NN8S (F2J6NN8S.AESPARA)	LG	WD-80164SP (WD-80164SP.AOWPBW)
LG	F2J6NN8S (F2J6NN8S.AESPARM)	LG	WD-80164SP (WD-80164SP.AOWPEA)
LG	F2J6NN8S (F2J6NN8S.AESPCOM)	LG	WD-80164SV
LG	F2J6NN8S (F2J6NN8S.AESPTSK)	LG	WD-80164SV (WD-80164SV.AOWPEU)
LG	F2J6QY0W	LG	WD-80180N (WD-80180N.AOWPBWT)
LG	F2J6QY0W (F2J6QY0W.ABWQWMR)	LG	WD-80180N (WD-80180N.AOWPEAK)
LG	F2J6QY8S	LG	WD-80180NU
LG	F2J6QY8S (F2J6QY8S.AESQWMR)	LG	WD-80180NU (WD-80180NU.*)
LG	F2J6T0W	LG	WD-80180NU (WD-80180NU.AOWPTS)
LG	F2J6T0W (F2J6T0W.ABWPRUS)	LG	WD-80180NUP
LG	F2J6TN0W	LG	WD-80180NUP (WD-80180NUP.AOWP)
LG	F2J6TN0W (F2J6TN0W.ABWPCIS)	LG	WD-80180S
LG	F2J6TN0W (F2J6TN0W.ABWPCOM)	LG	WD-80180SU
LG	F2J6TN0W (F2J6TN0W.ABWPTSK)	LG	WD-80180SU (WD-80180SU.*)
LG	F2J6TN1L	LG	WD-80180SU (WD-80180SU.AOWPBW)

LG	F2J6TN1L (F2J6TN1L.ALSPCIS)	LG	WD-80180T (WD-80180T.*)
LG	F2J6WN0W	LG	WD-80180T (WD-80180T.AOWPEAK)
LG	F2J6WN0W (F2J6WN0W.ABWPRUS)	LG	WD-80180TU
LG	F2J6WN0W (F2J6WN0W.ABWQRLA)	LG	WD-80180TU (WD-80180TU.*)
LG	F2J6WN0W (F2J6WN0W.ABWQWMR)	LG	WD-80185N
LG	F2J6WN1L	LG	WD-80185N (WD-80185N.AMSPBWT)
LG	F2J6WN1L (F2J6WN1L.ALSPRUS)	LG	WD-80185N (WD-80185N.AMSPEAK)
LG	F2J6WS0W	LG	WD-80185NU
LG	F2J6WS0W (F2J6WS0W.ABWPKIV)	LG	WD-80185NU (WD-80185NU.*)
LG	F2J6WS0W (F2J6WS0W.ABWPRUS)	LG	WD-80185NU (WD-80185NU.AMSPTS)
LG	F2J6WS1L	LG	WD-80185NUP
LG	F2J6WS1L (F2J6WS1L.ALSPCIS)	LG	WD-80185NUP (WD-80185NUP.AMSP)
LG	F2J6WS1L (F2J6WS1L.ALSPRUS)	LG	WD-80185S
LG	F2J6WS1W	LG	WD-80185S (WD-80185S.AMSPBWT)
LG	F2J6WS1W (F2J6WS1W.ABWPCIS)	LG	WD-80185S (WD-80185S.AMSPEAK)
LG	F2J6WY0W	LG	WD-80185SU
LG	F2J6WY0W (F2J6WY0W.ABWQRLA)	LG	WD-80185SU (WD-80185SU.*)

LG	F2J6WY0W (F2J6WY0W.ABWQWMR)	LG	WD-80186N (WD-80186N.AGLPBWT)
LG	F2J6WY1W	LG	WD-80186NU
LG	F2J6WY1W (F2J6WY1W.ABWQWMR)	LG	WD-80186NU (WD-80186NU.*)
LG	F2M5HS6S	LG	WD-80186NU (WD-80186NU.AGLPTS)
LG	F2M5HS6S (F2M5HS6S.AESPCIS)	LG	WD-80186NUP
LG	F2M5HS6W	LG	WD-80186NUP (WD-80186NUP.AGLP)
LG	F2M5HS6W (F2M5HS6W.ABWPCIS)	LG	WD-80186S
LG	F4H6VS0E (F4H6VS0E.ABWPCIS)	LG	WD-80186S (WD-80186S.AGLPBWT)
LG	F4H6VS0W (F4H6VS0W.ABWPRUS)	LG	WD-80186S (WD-80186S.AGLPEAK)
LG	F4J5QN4W	LG	WD-80186SU
LG	F4J5QN4W (F4J5QN4W.ABWQWMR)	LG	WD-80186SU (WD-80186SU.*)
LG	F4J5TN4W	LG	WD-80187N
LG	F4J5TN4W (F4J5TN4W.ABWQWMR)	LG	WD-80187N (WD-80187N.*)
LG	F4J5TN7S	LG	WD-80187N (WD-80187N.ABUPBWT)
LG	F4J5TN7S (F4J5TN7S.AESPARM)	LG	WD-80187N (WD-80187N.ABUPEAK)
LG	F4J5TN7S (F4J5TN7S.AESQWMR)	LG	WD-80187NU
LG	F4J5VY4W	LG	WD-80187NU (WD-80187NU.*)

LG	F4J5VY4W (F4J5VY4W.ABWQWMR)	LG	WD-80187NU (WD-80187NU.ABUPTS)
LG	F4J6EY2W	LG	WD-80187NUP
LG	F4J6EY2W (F4J6EY2W.ABWQWMR)	LG	WD-80187NUP (WD-80187NUP.ABUP)
LG	F4J6TN0W	LG	WD-80187S
LG	F4J6TN0W (F4J6TN0W.ABWPARA)	LG	WD-80187S (WD-80187S.ABUPBWT)
LG	F4J6TN0W (F4J6TN0W.ABWPARM)	LG	WD-80187S (WD-80187S.ABUPEAK)
LG	F4J6TN8S	LG	WD-80187SU
LG	F4J6TN8S (F4J6TN8S.AESPARA)	LG	WD-80187SU (WD-80187SU.*)
LG	F4J6TN8S (F4J6TN8S.AESPARM)	LG	WD-80192N
LG	F4J6TS0W	LG	WD-80192N (WD-80192N.*)
LG	F4J6TS0W (F4J6TS0W.ABWPRUS)	LG	WD-80192N (WD-80192N.AOWPBWT)
LG	F4J6TY0W	LG	WD-80192N (WD-80192N.AOWPEBY)
LG	F4J6TY0W (F4J6TY0W.ABWQWMR)	LG	WD-80192N (WD-80192N.AOWPUKR)
LG	F4J6VN0W	LG	WD-80192NV
LG	F4J6VN0W (F4J6VN0W.ABWPKIV)	LG	WD-80192NV (WD-80192NV.AOWPBW)
LG	F4J6VN0W (F4J6VN0W.ABWPRUS)	LG	WD-80192S
LG	F4J6VN1L	LG	WD-80192S (WD-80192S.AOWPBWT)

LG	F4J6VN1L (F4J6VN1L.ALSPRUS)	LG	WD-80192S (WD-80192S.AOWPUKR)
LG	F4J6VS0W	LG	WD-80192T
LG	F4J6VS0W (F4J6VS0W.ABWPCIS)	LG	WD-80192T (WD-80192T.*)
LG	F4J6VS0W (F4J6VS0W.ABWPRUS)	LG	WD-80230N (WD-80230N.*)
LG	F4J6VS1L	LG	WD-80230NU
LG	F4J6VS1L (F4J6VS1L.ALSPCIS)	LG	WD-80230NU (WD-80230NU.*)
LG	F4J6VY0W	LG	WD-80230T
LG	F4J6VY0W (F4J6VY0W.ABWQWMR)	LG	WD-80230T (WD-80230T.*)
LG	F4J6VY2W	LG	WD-80230TU
LG	F4J6VY2W (F4J6VY2W.ABWQWMR)	LG	WD-80230TU (WD-80230TU.*)
LG	F50B8ND0	LG	WD-80240N
LG	F50B8ND0 (F50B8ND0.ABWQCZK)	LG	WD-80240N (WD-80240N.*)
LG	F50C3LD	LG	WD-80240T
LG	F50C3LD (F50C3LD.ABWQCZK)	LG	WD-80240T (WD-80240T.*)
LG	F51B8ND0 (F51B8ND0.ABWQCSK)	LG	WD-80250N
LG	F6096ND	LG	WD-80250N (WD-80250N.*)
LG	F6096ND (F6096ND.ABWQCZK)	LG	WD-80250N (WD-80250N.AOWPTSK)

LG	F60B8ND	LG	WD-80250NP
LG	F60B8ND (F60B8ND.ABWQCZK)	LG	WD-80250NP (WD-80250NP.*)
LG	F6222ND	LG	WD-80250NU
LG	F6222ND (F6222ND.ABWQCSK)	LG	WD-80250NU (WD-80250NU.*)
LG	F6296ND	LG	WD-80250NU (WD-80250NU.AOWPTS)
LG	F6296ND (F6296ND.ABWQCZK)	LG	WD-80250NUP
LG	F62B8ND	LG	WD-80250NUP (WD-80250NUP.*)
LG	F62B8ND (F62B8ND.ABWQCZK)	LG	WD-80250S
LG	F62G6NDN2	LG	WD-80250S (WD-80250S.*)
LG	F62G6NDN2 (F62G6NDN2.ABWQRCZ)	LG	WD-80250S (WD-80250S.AOWPEAK)
LG	F8020ND1	LG	WD-80250SP
LG	F8020ND1 (F8020ND1.ABWPCIS)	LG	WD-80250SP (WD-80250SP.*)
LG	F8020ND1 (F8020ND1.ABWPRUS)	LG	WD-80250SU
LG	F8056LD	LG	WD-80250SU (WD-80250SU.*)
LG	F8056LD (F8056LD.ABWPEUA)	LG	WD-80250SUP
LG	F8056LDP	LG	WD-80250SUP (WD-80250SUP.*)
LG	F8056LDP (F8056LDP.ABWPCOM)	LG	WD-80250SUP (WD-80250SUP.AOWP)

LG	F8056MD	LG	WD-80250TP
LG	F8056MD (F8056MD.ABWPCIS)	LG	WD-80250TP (WD-80250TP.*)
LG	F8056MD (F8056MD.ABWPEBY)	LG	WD-80250TUP
LG	F8056ND	LG	WD-80250TUP (WD-80250TUP.*)
LG	F8056ND (F8056ND.ABWPEUA)	LG	WD-80260N
LG	F8066LP	LG	WD-80260N (WD-80260N.*)
LG	F8066LP (F8066LP.ABWPBWT)	LG	WD-80260NP
LG	F8068LD	LG	WD-80260NP (WD-80260NP.*)
LG	F8068LD (F8068LD.ABWPCIS)	LG	WD-80260NP (WD-80260NP.AOWPBW)
LG	F8068LD (F8068LD.ABWPCOM)	LG	WD-80260NP (WD-80260NP.AOWPEA)
LG	F8068LD (F8068LD.ABWPEBY)	LG	WD-80260S
LG	F8068LD (F8068LD.ABWPEUA)	LG	WD-80260S (WD-80260S.AOWPEAK)
LG	F8068LD (F8068LD.ABWPRUS)	LG	WD-80260T
LG	F8068LD1	LG	WD-80260T (WD-80260T.*)
LG	F8068LD1 (F8068LD1.ABWPEBY)	LG	WD-80260T (WD-80260T.AOWPEAK)
LG	F8068LD1 (F8068LD1.ABWPRUS)	LG	WD-80264N
LG	F8068LD9	LG	WD-80264N (WD-80264N.*)

LG	F8068LD9 (F8068LD9.ABWPCOM)	LG	WD-80264NP
LG	F8068SD	LG	WD-80264NP (WD-80264NP.*)
LG	F8068SD (F8068SD.ABWPEBY)	LG	WD-80264NP (WD-80264NP.AOWPTS)
LG	F8088LD	LG	WD-80264SP
LG	F8088LD (F8088LD.ABWPCOM)	LG	WD-80264SP (WD-80264SP.*)
LG	F8091LD	LG	WD-80264TP
LG	F8091LD (F8091LD.ABWPCIS)	LG	WD-80264TP (WD-80264TP.*)
LG	F8091LD (F8091LD.ABWPCOM)	LG	WD-80266N
LG	F8091LD (F8091LD.ABWPEBY)	LG	WD-80266N (WD-80266N.AGLPEAK)
LG	F8091LD (F8091LD.ABWPRUS)	LG	WD-80267N
LG	F8091LD1	LG	WD-80267N (WD-80267N.ABUPEAK)
LG	F8091LD1 (F8091LD1.ABWPCIS)	LG	WD-80302NP
LG	F8091LD1 (F8091LD1.ABWPEBY)	LG	WD-80302NP (WD-80302NP.*)
LG	F8092LD	LG	WD-80302NUP
LG	F8092LD (F8092LD.ABWPCIS)	LG	WD-80302NUP (WD-80302NUP.AOWPTS)
LG	F8092MD	LG	WD-80302SP
LG	F8092MD (F8092MD.ABWPCIS)	LG	WD-80302SP (WD-80302SP.*)

LG	F8092MD (F8092MD.ABWPCOM)	LG	WD-80302SUP
LG	F8092MD (F8092MD.ABWPEBY)	LG	WD-80302SUP (WD-80302SUP.*)
LG	F8092MD (F8092MD.ABWPRUS)	LG	WD-80302TP
LG	F8092ND	LG	WD-80302TP (WD-80302TP.*)
LG	F8092ND (F8092ND.ABWPCIS)	LG	WD-80302TUP
LG	F80B8LD0	LG	WD-80302TUP (WD-80302TUP.*)
LG	F80B8LD0 (F80B8LD0.ABWPCIS)	LG	WD-80305NP
LG	F80B8LD0 (F80B8LD0.ABWPRUS)	LG	WD-80305NP (WD-80305NP.*)
LG	F80B8MD	LG	WD-80305NUP
LG	F80B8MD (F80B8MD.ABWPCIS)	LG	WD-80305NUP (WD-80305NUP.*)
LG	F80B8MD (F80B8MD.ABWPCOM)	LG	WD-80305SP
LG	F80B8MD (F80B8MD.ABWPRUS)	LG	WD-80305SP (WD-80305SP.*)
LG	F80B8ND	LG	WD-80305SUP
LG	F80B8ND (F80B8ND.ABWPCIS)	LG	WD-80305SUP (WD-80305SUP.*)
LG	F80B9LD	LG	WD-80306NP
LG	F80B9LD (F80B9LD.ABWPCIS)	LG	WD-80306NP (WD-80306NP.*)
LG	F80B9LD (F80B9LD.ABWPCOM)	LG	WD-80306NUP

LG	F80B9LD (F80B9LD.ABWPKIV)	LG	WD-80306NUP (WD-80306NUP.*)
LG	F80B9LD (F80B9LD.ABWPRUS)	LG	WD-80306SP
LG	F80C3LD	LG	WD-80306SP (WD-80306SP.*)
LG	F80C3LD (F80C3LD.ABWPCIS)	LG	WD-80306SUP
LG	F80C3LD (F80C3LD.ABWPCOM)	LG	WD-80306SUP (WD-80306SUP.*)
LG	F80C3LD (F80C3LD.ABWPKIV)	LG	WD-80307NP
LG	F80C3LD (F80C3LD.ABWPRUS)	LG	WD-80307NP (WD-80307NP.*)
LG	F90C3LD (F90C3LD.ABWPCIS)	LG	WD-80307NUP
LG	FH039NDS2	LG	WD-80307NUP (WD-80307NUP.*)
LG	FH039NDS2 (FH039NDS2.ABWPRUS)	LG	WD-80307SP
LG	FH096ND3	LG	WD-80307SP (WD-80307SP.*)
LG	FH096ND3 (FH096ND3.ABWPEUR)	LG	WD-80307SUP
LG	FH096ND3 (FH096ND3.ABWPKIV)	LG	WD-80307SUP (WD-80307SUP.*)
LG	FH096NDA	LG	WD-80384N
LG	FH096NDA (FH096NDA.ABWQRIS)	LG	WD-80384N (WD-80384N.*)
LG	FH096NDA3	LG	WD-80384N (WD-80384N.AOWPBWT)
LG	FH096NDA3 (FH096NDA3.ABWPBAL)	LG	WD-80384T

LG	FH096NDA3 (FH096NDA3.ABWQWLA)	LG	WD-80384T (WD-80384T.*)
LG	FH096NDW3	LG	WD-8040F
LG	FH096NDW3 (FH096NDW3.ABWPKIV)	LG	WD-8040F (WD-8040F.OWPBWT)
LG	FH096TD3	LG	WD-80480N
LG	FH096TD3 (FH096TD3.ABWPEUR)	LG	WD-80480N (WD-80480N.AOWPBAL)
LG	FH096TD3 (FH096TD3.ABWPKIV)	LG	WD-80480N (WD-80480N.AOWPEAK)
LG	FH096WD3	LG	WD-80480N (WD-80480N.AOWPEBY)
LG	FH096WD3 (FH096WD3.ABWPCOM)	LG	WD-80480N (WD-80480N.AOWPEUA)
LG	FH0B8LD0	LG	WD-80480NP
LG	FH0B8LD0 (FH0B8LD0.ABWPCOM)	LG	WD-80480NP (WD-80480NP.*)
LG	FH0B8LD0 (FH0B8LD0.ABWPKIV)	LG	WD-80480NP (WD-80480NP.AOWPBA)
LG	FH0B8LD6	LG	WD-80480NP (WD-80480NP.AOWPEA)
LG	FH0B8LD6 (FH0B8LD6.ABWPKIV)	LG	WD-80480NV
LG	FH0B8LD6 (FH0B8LD6.ABWPRUS)	LG	WD-80480NV (WD-80480NV.AOWPBV)
LG	FH0B8LD7	LG	WD-80480NV (WD-80480NV.AOWPEA)
LG	FH0B8LD7 (FH0B8LD7.ABWPKIV)	LG	WD-80480NV (WD-80480NV.AOWPEV)
LG	FH0B8LD7 (FH0B8LD7.ABWPRUS)	LG	WD-80480S

LG	FH0B8MD1	LG	WD-80480S (WD-80480S.AOWPBAL)
LG	FH0B8MD1 (FH0B8MD1.ABWPCOM)	LG	WD-80480S (WD-80480S.AOWPBWT)
LG	FH0B8ND	LG	WD-80480S (WD-80480S.AOWPEBY)
LG	FH0B8ND (FH0B8ND.ABWPEUR)	LG	WD-80480S (WD-80480S.AOWPEUA)
LG	FH0B8ND (FH0B8ND.ABWPKIV)	LG	WD-80480SP
LG	FH0B8ND1	LG	WD-80480SP (WD-80480SP.AOWPBAL)
LG	FH0B8ND1 (FH0B8ND1.ABWPCOM)	LG	WD-80480SP (WD-80480SP.AOWPBWT)
LG	FH0B8ND1 (FH0B8ND1.ABWPEUR)	LG	WD-80480SP (WD-80480SP.AOWPTS)
LG	FH0B8ND1 (FH0B8ND1.ABWPKIV)	LG	WD-80480SV
LG	FH0B8ND3	LG	WD-80480SV (WD-80480SV.AOWPEUA)
LG	FH0B8ND3 (FH0B8ND3.ABWPCIS)	LG	WD-80482N
LG	FH0B8ND4	LG	WD-80482N (WD-80482N.AOWPBWT)
LG	FH0B8ND4 (FH0B8ND4.ALSPCIS)	LG	WD-80490N
LG	FH0B8ND5	LG	WD-80490N (WD-80490N.AOWPBAL)
LG	FH0B8ND5 (FH0B8ND5.ALSPEUR)	LG	WD-80490N (WD-80490N.AOWPBWT)
LG	FH0B8ND5 (FH0B8ND5.ALSPKIV)	LG	WD-80490N (WD-80490N.AOWPEAK)
LG	FH0B8ND6	LG	WD-80490N (WD-80490N.AOWPEUA)

LG	FH0B8ND6 (FH0B8ND6.ABWPCIS)	LG	WD-80490NP
LG	FH0B8ND7	LG	WD-80490NP (WD-80490NP.AOWPBA)
LG	FH0B8ND7 (FH0B8ND7.ABWPCIS)	LG	WD-80490NP (WD-80490NP.AOWPBW)
LG	FH0B8NDA	LG	WD-80490NP (WD-80490NP.AOWPEA)
LG	FH0B8NDA (FH0B8NDA.ABWQRIS)	LG	WD-80490NV
LG	FH0B8NDA0	LG	WD-80490NV (WD-80490NV.AOWPBV)
LG	FH0B8NDA0 (FH0B8NDA0.ABWPBAL)	LG	WD-80490NV (WD-80490NV.AOWPEA)
LG	FH0B8NDA0 (FH0B8NDA0.ABWQWLA)	LG	WD-80490NV (WD-80490NV.AOWPEE)
LG	FH0B8QD	LG	WD-80490NV (WD-80490NV.AOWPEU)
LG	FH0B8QD (FH0B8QD.ABWPEUR)	LG	WD-80490SV
LG	FH0B8QD (FH0B8QD.ABWPKIV)	LG	WD-80490SV (WD-80490SV.AOWPBW)
LG	FH0B8SD0	LG	WD-80490SV (WD-80490SV.AOWPEB)
LG	FH0B8SD0 (FH0B8SD0.ABWPKIV)	LG	WD-80490TP
LG	FH0B8WD6	LG	WD-80490TP (WD-80490TP.*)
LG	FH0B8WD6 (FH0B8WD6.ABWPKIV)	LG	WD-80490TP (WD-80490TP.AOWPBA)
LG	FH0B8WD6 (FH0B8WD6.ABWPRUS)	LG	WD-80490TP (WD-80490TP.AOWPTS)
LG	FH0B8WD7	LG	WD-80490TV

LG	FH0B8WD7 (FH0B8WD7.ABWPKIV)	LG	WD-80490TV (WD-80490TV.AOWPBA)
LG	FH0B8WD7 (FH0B8WD7.ABWPRUS)	LG	WD-80499N
LG	FH0C3LD	LG	WD-80499N (WD-80499N.AOWPBWT)
LG	FH0C3LD (FH0C3LD.ABWPBAL)	LG	WD-80499NE
LG	FH0C3LD (FH0C3LD.ABWPCIS)	LG	WD-80499NE (WD-80499NE.AOWPBV)
LG	FH0C3LD (FH0C3LD.ABWPEUR)	LG	WD-80499NEV
LG	FH0C3LD (FH0C3LD.ABWPKIV)	LG	WD-80499NEV (WD-80499NEV.AOWP)
LG	FH0C3LD (FH0C3LD.ABWPRUS)	LG	WD-80499NV
LG	FH0C3LD (FH0C3LD.ABWQCMR)	LG	WD-80499NV (WD-80499NV.AOWPBV)
LG	FH0C3LD (FH0C3LD.ABWQEPL)	LG	WD-8050F
LG	FH0C3LD (FH0C3LD.ABWQRIS)	LG	WD-8050F (WD-8050F.OWPBWT)
LG	FH0C3ND	LG	WD-8050FB
LG	FH0C3ND (FH0C3ND.ABWPCIS)	LG	WD-8050FB (WD-8050FB.SOWPVLA)
LG	FH0C3ND (FH0C3ND.ABWPRUS)	LG	WD-8054FB
LG	FH0C3ND (FH0C3ND.ABWQRIS)	LG	WD-8054FB (WD-8054FB.AOWPBWT)
LG	FH0C3ND (FH0C3ND.ABWQRMR)	LG	WD-80660N
LG	FH0C3ND (FH0C3ND.ABWQRPL)	LG	WD-80660N (WD-80660N.ABWPEBY)

LG	FH0C3ND1	LG	WD-80660N (WD-80660N.ABWPRUS)
LG	FH0C3ND1 (FH0C3ND1.ABWPCIS)	LG	WD-80660T
LG	FH0C3ND1 (FH0C3ND1.ABWPKIV)	LG	WD-80660T (WD-80660T.ABWPRUS)
LG	FH0C3ND1 (FH0C3ND1.ABWPRUS)	LG	WD-8070FB
LG	FH0G6QD1	LG	WD-8070FB (WD-8070FB.AOWPBWT)
LG	FH0G6QD1 (FH0G6QD1.ABWPRUS)	LG	WD-8074FB
LG	FH0G6SD0	LG	WD-8074FB (WD-8074FB.AOWPBWT)
LG	FH0G6SD0 (FH0G6SD0.ABWPRUS)	LG	WD-8090FB
LG	FH0G6SD2	LG	WD-8090FB (WD-8090FB.AOWPBWT)
Samsung	B1015JGW/YLP	Samsung	WF602W2BKWQ/LD
Samsung	B1015JGW/YLW	Samsung	WF602W2BKWQ/LP
Samsung	B1045AGW/YLP	Samsung	WF602W2BKWQ/UA
Samsung	B1045AGW/YLR	Samsung	WF60F1R0E2WDUA
Samsung	B1045AGW/YLW	Samsung	WF60F1R0F2WDLD
Samsung	B1215JGW/YLP	Samsung	WF60F1R0G0WDUA
Samsung	B1215JGW/YLW	Samsung	WF60F1R1F2WDLD
Samsung	B1245AVGW/YLP	Samsung	WF60F1R1G0WDUA

Samsung	B1245AVGW/YLR	Samsung	WF60F1R2E2WDUA
Samsung	B1245AVGW/YLW	Samsung	WF60F1R2F2WDLD
Samsung	B1415JGS/YLP	Samsung	WF60F4E0W0W/LE
Samsung	B1415JGW/YLP	Samsung	WF60F4E0W0W/LP
Samsung	B1415JGW/YLW	Samsung	WF60F4E0W0W/UA
Samsung	B1445AVGW/YLP	Samsung	WF60F4E0W2W/LE
Samsung	B1445AVGW/YLR	Samsung	WF60F4E0W2W/LP
Samsung	B1445AVGW/YLW	Samsung	WF60F4E0W2W/UA
Samsung	B815JGW/YLP	Samsung	WF60F4E1W2W/LP
Samsung	B815JGW/YLW	Samsung	WF60F4E2W2W/LE
Samsung	F1013JGB/YLP	Samsung	WF60F4E2W2W/LP
Samsung	F1013JGB/YLW	Samsung	WF60F4E2W2W/UA
Samsung	F1013JGB1/YLP	Samsung	WF60F4E4W2W/LP
Samsung	F1013JGB1/YLW	Samsung	WF60F4E5W2W/LE
Samsung	F1013JGB1U/YLW	Samsung	WF60F4E5W2W/LP
Samsung	F1013JGBU/YLW	Samsung	WF60F4EFW0W/LE
Samsung	F1013JGE/YLP	Samsung	WF60F4EFW2W/LE

Samsung	F1013JGE/YLW	Samsung	WF6450N7W/YLP
Samsung	F1013JGE1/YLP	Samsung	WF6450N7W/YLR
Samsung	F1013JGE1/YLW	Samsung	WF6450N7W/YLW
Samsung	F1013JGE1U/YLW	Samsung	WF6450S4V/YLP
Samsung	F1013JGEU/YLW	Samsung	WF6450S4V/YLR
Samsung	F1013JGP/YLP	Samsung	WF6450S4V/YLW
Samsung	F1013JGP/YLW	Samsung	WF6450S6V/YLR
Samsung	F1013JGP1/YLP	Samsung	WF6450S6V/YLW
Samsung	F1013JGP1/YLW	Samsung	WF6450S7W/YLP
Samsung	F1013JGP1U/YLW	Samsung	WF6450S7W/YLR
Samsung	F1013JGPU/YLW	Samsung	WF6450S7W/YLW
Samsung	F1013JGS/YLP	Samsung	WF6452S4V/YLP
Samsung	F1013JGS/YLW	Samsung	WF6452S4V/YLW
Samsung	F1013JGS1/YLP	Samsung	WF6452S6V/YLW
Samsung	F1013JGS1/YLW	Samsung	WF6458N4W/YLW
Samsung	F1013JGS1U/YLW	Samsung	WF6458N6W/YLW
Samsung	F1013JGSU/YLW	Samsung	WF6458N7W/YLP

Samsung	F1013JGW/YLP	Samsung	WF6458N7W/YLR
Samsung	F1013JGW/YLW	Samsung	WF6458N7W/YLW
Samsung	F1013JGW1/YLP	Samsung	WF6458S7W/YLP
Samsung	F1013JGW1/YLW	Samsung	WF6458S7W/YLR
Samsung	F1013JGW1U/YLW	Samsung	WF6458S7W/YLW
Samsung	F1013JGWU/YLW	Samsung	WF6520N7W/YLP
Samsung	F1015JGB/YLP	Samsung	WF6520N7W/YLR
Samsung	F1015JGE/YLP	Samsung	WF6520N7W/YLW
Samsung	F1015JGP/YLP	Samsung	WF6520S4V/YLR
Samsung	F1015JGS/YLP	Samsung	WF6520S4V/YLW
Samsung	F1015JGW/YLP	Samsung	WF6520S6V/YLP
Samsung	F1015JGW/YLW	Samsung	WF6520S6V/YLR
Samsung	F1015JGWU/YLW	Samsung	WF6520S6V/YLW
Samsung	F1043GW/YLP	Samsung	WF6520S7W/YLP
Samsung	F1043GW/YLW	Samsung	WF6520S7W/YLR
Samsung	F1043GWU/YLW	Samsung	WF6520S7W/YLW
Samsung	F1045AGW/YLP	Samsung	WF6520S9C/YLP

Samsung	F1045AGW/YLR	Samsung	WF6520S9C/YLW
Samsung	F1045AGW/YLW	Samsung	WF6520S9R/YLP
Samsung	F1045AGWU/YLW	Samsung	WF6520S9R/YLW
Samsung	F1215JGW/YLP	Samsung	WF6522N7W/YLW
Samsung	F1215JGW/YLW	Samsung	WF6522S4V/YLR
Samsung	F1215JGWU/YLW	Samsung	WF6522S4V/YLW
Samsung	F1245AVGW/YLP	Samsung	WF6522S6V/YLP
Samsung	F1245AVGW/YLR	Samsung	WF6522S6V/YLR
Samsung	F1245AVGW/YLW	Samsung	WF6522S6V/YLW
Samsung	F1245AVGWU/YLW	Samsung	WF6522S7W/YLR
Samsung	F611GW/YLP	Samsung	WF6522S7W/YLW
Samsung	F611GW/YLW	Samsung	WF6528N4W/YLW
Samsung	F611GW1/YLP	Samsung	WF6528N6W/YLW
Samsung	F611GW1/YLW	Samsung	WF6528N7W/YLP
Samsung	F611GW1U/YLW	Samsung	WF6528N7W/YLR
Samsung	F611GWU/YLW	Samsung	WF6528N7W/YLW
Samsung	F813JGB/YLP	Samsung	WF6528S7W/YLP

Samsung	F813JGB/YLW	Samsung	WF6600S4V/YLP
Samsung	F813JGB1/YLP	Samsung	WF6700S4V/YLR
Samsung	F813JGE/YLP	Samsung	WF6700S6V/YLW
Samsung	F813JGE/YLW	Samsung	WF6702S4V/YLR
Samsung	F813JGE1/YLP	Samsung	WF6702S6V/YLW
Samsung	F813JGP/YLP	Samsung	WF6CF1R0W2W/UA
Samsung	F813JGP/YLW	Samsung	WF6EF4E0W2W/LP
Samsung	F813JGP1/YLP	Samsung	WF6EF4E0W2W/UA
Samsung	F813JGS/YLP	Samsung	WF6HF1R0W0W/UA
Samsung	F813JGS/YLW	Samsung	WF6MF1R0W0W/UA
Samsung	F813JGS1/YLP	Samsung	WF6MF1R2W2W/LD
Samsung	F813JGS1/YLW	Samsung	WF6MF1R2W2W/UA
Samsung	F813JGW/YLP	Samsung	WF6RF1R0W0W/LD
Samsung	F813JGW/YLW	Samsung	WF6RF1R0W0W/UA
Samsung	F813JGW1/YLP	Samsung	WF6RF4E2W0W/LP
Samsung	F813JGW1/YLW	Samsung	WF6RF4E2W0W/UA
Samsung	F813JGW1U/YLW	Samsung	WF702B2BBWQ/LP

Samsung	F813JGWU/YLW	Samsung	WF702U2BBWQ/LP
Samsung	F843GW/YLP	Samsung	WF702U2BBWQ/UA
Samsung	F843GW/YLW	Samsung	WF702W0BDWQ/LP
Samsung	F843GWU/YLW	Samsung	WF702W0BDWQ/UA
Samsung	H1245AGS/YLP	Samsung	WF702W2BBWQ/LD
Samsung	P1001GW1/YLP	Samsung	WF702W2BBWQ/LP
Samsung	P1001GW1/YLW	Samsung	WF702W2BBWQ/UA
Samsung	P1003JGW1/YLP	Samsung	WF7102SKP/YLP
Samsung	P1003JGW1/YLW	Samsung	WF7102SKS/YLP
Samsung	P1005JGW1/YLP	Samsung	WF7350N7W/YLR
Samsung	P1005JGW1/YLW	Samsung	WF7350N7W/YLW
Samsung	P1043GW/YLP	Samsung	WF7350S7V/YLP
Samsung	P1043GW/YLW	Samsung	WF7350S7V/YLR
Samsung	P1043IW/YLN	Samsung	WF7350S7V/YLW
Samsung	P1053EW/YON	Samsung	WF7358N1W/YLP
Samsung	P1053GW/YLE	Samsung	WF7358N7W/YLR
Samsung	P1201GW1/YLP	Samsung	WF7358N7W/YLW

Samsung	P1201GW1/YLW	Samsung	WF7358S7V/YLP
Samsung	P1203JGW1/YLP	Samsung	WF7358S7V/YLW
Samsung	P1203JGW1/YLW	Samsung	WF7450NAW/YLW
Samsung	P1205JGW1/YLP	Samsung	WF7450NUW/YLP
Samsung	P1205JGW1/YLW	Samsung	WF7450S9C/YLP
Samsung	P1243GW/YLP	Samsung	WF7450S9C/YLW
Samsung	P1253GW/YLE	Samsung	WF7450S9R/YLP
Samsung	P1253GW/YLH	Samsung	WF7450SAV/YLP
Samsung	P1401GW1/YLP	Samsung	WF7450SAV/YLW
Samsung	P1403JGW1/YLP	Samsung	WF7450SUV/YLP
Samsung	P1405JGS1/YLP	Samsung	WF7450SUV/YLR
Samsung	P1405JGW1/YLP	Samsung	WF7452S9C/YLR
Samsung	P1453GW/YLE	Samsung	WF7452S9C/YLW
Samsung	P1453GW/YLH	Samsung	WF7452S9R/YLP
Samsung	P801GW1/YLP	Samsung	WF7452S9R/YLR
Samsung	P801GW1/YLW	Samsung	WF7452S9R/YLW
Samsung	P803JGW1/YLP	Samsung	WF7452SUV/YLP

Samsung	P803JGW1/YLW	Samsung	WF7452SUV/YLR
Samsung	P805JGW1/YLP	Samsung	WF7458NUW/YLP
Samsung	P805JGW1/YLW	Samsung	WF7458SUV/YLP
Samsung	P843GW/YLP	Samsung	WF7520NUW/YLP
Samsung	P843GW/YLW	Samsung	WF7520NUW/YLW
Samsung	Q1044GW/XET	Samsung	WF7520S8C/YLP
Samsung	R1013JGW/YLR	Samsung	WF7520S8C/YLW
Samsung	R1013JGW/YLW	Samsung	WF7520S9C/YLP
Samsung	R1013JGWU/YLW	Samsung	WF7520S9C/YLW
Samsung	R1015JGW/YLR	Samsung	WF7520S9R/YLP
Samsung	R1015JGW/YLW	Samsung	WF7520S9R/YLW
Samsung	R1015JGWU/YLW	Samsung	WF7520SAV/YLP
Samsung	R1031GWS/YLR	Samsung	WF7520SUV/YLP
Samsung	R1031GWS/YLW	Samsung	WF7520SUV/YLW
Samsung	R1031GWS1/YLR	Samsung	WF7522S6S/YLP
Samsung	R1031GWS1/YLW	Samsung	WF7522S8C/YLP
Samsung	R1031GWS1U/YLW	Samsung	WF7522S8C/YLW

Samsung	R1033GWC/YLP	Samsung	WF7522S8R/YLP
Samsung	R1033GWC/YLW	Samsung	WF7522S8R/YLR
Samsung	R1033GWC1/YLP	Samsung	WF7522S8R/YLW
Samsung	R1033GWC1/YLW	Samsung	WF7522S9C/YLR
Samsung	R1033GWC1U/YLW	Samsung	WF7522S9C/YLW
Samsung	R1043GW/YLP	Samsung	WF7522S9R/YLP
Samsung	R1043GW/YLW	Samsung	WF7522S9R/YLR
Samsung	R1043GWU/YLW	Samsung	WF7522S9R/YLW
Samsung	R1045AGW/YLP	Samsung	WF7522SUV/YLP
Samsung	R1045AGW/YLR	Samsung	WF7522SUV/YLR
Samsung	R1045AGW/YLW	Samsung	WF7522SUV/YLW
Samsung	R1045AGWU/YLW	Samsung	WF7528NUW/YLP
Samsung	R1052GWS/YLP	Samsung	WF7600NAW/YLW
Samsung	R1052GWS/YLR	Samsung	WF7600S4S/YLP
Samsung	R1052GWS/YLW	Samsung	WF7600S9C/YLP
Samsung	R1052GWSU/YLW	Samsung	WF7600S9R/YLP
Samsung	R1213JGW/YLR	Samsung	WF7600SAV/YLP

Samsung	R1213JGW/YLW	Samsung	WF7600SUV/YLP
Samsung	R1213JGWU/YLW	Samsung	WF7602S8C/YLP
Samsung	R1215JGW/YLR	Samsung	WF7602S8R/YLP
Samsung	R1215JGW/YLW	Samsung	WF7602SAV/YLP
Samsung	R1215JGWU/YLW	Samsung	WF7602SAV/YLW
Samsung	R1233GWC/YLP	Samsung	WF80F5E0W2W/LE
Samsung	R1233GWC/YLW	Samsung	WF80F5E2U2W/UA
Samsung	R1245AVGW/YLP	Samsung	WF80F5E2W4W/LP
Samsung	R1245AVGW/YLR	Samsung	WF80F5E5U4W/LE
Samsung	R1245AVGW/YLW	Samsung	WF80F5E5U4W/LP
Samsung	R1245AVGWU/YLW	Samsung	WF80F5E5U4W/UA
Samsung	R631GWS/YLW	Samsung	WF8450S9Q/YLP
Samsung	R813JGW/YLR	Samsung	WF8452S9P/YLP
Samsung	R813JGW/YLW	Samsung	WF8500NGC/YLP
Samsung	R813JGWU/YLW	Samsung	WF8500NGW/YLP
Samsung	R815JGW/YLR	Samsung	WF8500NGY/YLP
Samsung	R815JGW/YLW	Samsung	WF8500NHW/YLP

Samsung	R815JGWU/YLW	Samsung	WF8500NMW/YLP
Samsung	R831GWS/YLR	Samsung	WF8500NMW9/YLP
Samsung	R831GWS/YLW	Samsung	WF8508NGW/YLP
Samsung	R831GWS1/YLW	Samsung	WF8508NHW/YLP
Samsung	R831GWS1U/YLW	Samsung	WF8508NMW8/YLE
Samsung	R833GW/YLP	Samsung	WF8508NMW9/YLP
Samsung	R833GW/YLW	Samsung	WF8508NMWU/XTL
Samsung	R833GW1/YLP	Samsung	WF8520S9Q/YLP
Samsung	R833GW1/YLW	Samsung	WF8520S9Q/YLW
Samsung	R833GW1U/YLW	Samsung	WF8522S9P/YLP
Samsung	R843GW/YLP	Samsung	WF8522S9P/YLW
Samsung	R843GW/YLW	Samsung	WF8590FEA/YLP
Samsung	R843GWU/YLW	Samsung	WF8590FFV/YLP
Samsung	R852GWS/YLP	Samsung	WF8590FFW/YLP
Samsung	R852GWS/YLR	Samsung	WF8590NFJ/YLP
Samsung	R852GWS/YLW	Samsung	WF8590NFW/YLP
Samsung	R852GWSU/YLW	Samsung	WF8590NFW9/YLP

Samsung	S1001GW2/YLW	Samsung	WF8590NGC/YLP
Samsung	S1001GW3/YLW	Samsung	WF8590NGW/YLP
Samsung	S1001GW3U/YLW	Samsung	WF8590NGY/YLP
Samsung	S1003JGW2/YLW	Samsung	WF8590NHW/YLP
Samsung	S1003JGW2U/YLW	Samsung	WF8590NLW8DYLD
Samsung	S1003JGW3/YLW	Samsung	WF8590NMS/YLP
Samsung	S1003JGW3U/YLW	Samsung	WF8590NMW8/YLP
Samsung	S1005JGW2/YLP	Samsung	WF8590NMW9/LD
Samsung	S1005JGW2/YLW	Samsung	WF8590NMW9/YLP
Samsung	S1005JGW2U/YLW	Samsung	WF8590NMW9UYLP
Samsung	S1013JGW/YLR	Samsung	WF8592FEA/YLP
Samsung	S1013JGW/YLW	Samsung	WF8592FER/YLP
Samsung	S1013JGWU/YLW	Samsung	WF8592FFS/YLP
Samsung	S1015JGW/YLP	Samsung	WF8598NGW/YLP
Samsung	S1015JGW/YLR	Samsung	WF8598NHW/YLP
Samsung	S1015JGW/YLW	Samsung	WF8598NMW9/YLP
Samsung	S1015JGWU/YLW	Samsung	WF8598NMW9UYLP

Samsung	S1043	Samsung	WF8690FEA/YLP
Samsung	S1043GW/YLP	Samsung	WF8690FFV/YLP
Samsung	S1043GW/YLW	Samsung	WF8692FEA/YLP
Samsung	S1043GWU/YLW	Samsung	WF8692NFU/XSG
Samsung	S1093GW/YLP	Samsung	WF8802JPH/YLP
Samsung	S601GW2/YLP	Samsung	WF8802LPH/XEF
Samsung	S601GW2/YLW	Samsung	WF8802LPH1/XEF
Samsung	S601GW2U/YLW	Samsung	WF8802LSW1/YLV
Samsung	S601GW3/YLP	Samsung	WF906P4SAGD/LP
Samsung	S601GW3/YLW	Samsung	WF906P4SAWQ/LP
Samsung	S601GW3U/YLW	Samsung	WF9590NFJ/YLP
Samsung	S6093GW/YLP	Samsung	WF9590NRW/YLP
Samsung	S801GB2/YLW	Samsung	WF9592GQB/YLP
Samsung	S801GB2U/YLW	Samsung	WF9592GQQ/YLP
Samsung	S801GB3/YLW	Samsung	WF9592GQR/YLP
Samsung	S801GB3U/YLW	Samsung	WF9592SQR/YLP
Samsung	S801GE2/YLW	Samsung	WF9592SRK/YLP

Samsung	S801GE2U/YLW	Samsung	WF9690NRW/YLP
Samsung	S801GE3/YLW	Samsung	WF9692GQR/YLP
Samsung	S801GE3U/YLW	Samsung	WF9692SQR/YLP
Samsung	S801GP2/YLW	Samsung	WF9802LWV/XEF
Samsung	S801GP2U/YLW	Samsung	WF-B1061/YLR
Samsung	S801GP3/YLW	Samsung	WF-B1061/YLW
Samsung	S801GP3U/YLW	Samsung	WF-B1061W/YLP
Samsung	S801GS2/YLW	Samsung	WF-B1062/YLP
Samsung	S801GS2U/YLW	Samsung	WF-B1062/YLR
Samsung	S801GS3/YLW	Samsung	WF-B1062/YLW
Samsung	S801GS3U/YLW	Samsung	WF-B125AV/YLP
Samsung	S801GW2/YLW	Samsung	WF-B861/YLP
Samsung	S801GW2U/YLW	Samsung	WF-B862/YLP
Samsung	S801GW3/YLW	Samsung	WF-C600WRW/YLP
Samsung	S801GW3U/YLW	Samsung	WF-C602WRK/YLP
Samsung	S803JGB2/YLP	Samsung	WF-E509NZW/YLP
Samsung	S803JGB2/YLW	Samsung	WF-E592NMW/LD

Samsung	S803JGB2U/YLW	Samsung	WF-E592NMW/YLP
Samsung	S803JGB3/YLP	Samsung	WF-F1054/YLP
Samsung	S803JGB3/YLW	Samsung	WF-F1054/YLR
Samsung	S803JGB3U/YLW	Samsung	WF-F1054/YLW
Samsung	S803JGE2/YLP	Samsung	WF-F1054S/YLP
Samsung	S803JGE2/YLW	Samsung	WF-F1054S/YLR
Samsung	S803JGE2U/YLW	Samsung	WF-F1054S/YLW
Samsung	S803JGE3/YLP	Samsung	WF-F1056/YLP
Samsung	S803JGE3/YLW	Samsung	WF-F1056/YLW
Samsung	S803JGE3U/YLW	Samsung	WF-F105AV/YLP
Samsung	S803JGP2/YLP	Samsung	WF-F105AV/YLW
Samsung	S803JGP2/YLW	Samsung	WF-F105NV/YLP
Samsung	S803JGP2U/YLW	Samsung	WF-F105NV/YLW
Samsung	S803JGP3/YLP	Samsung	WF-F1061/YLP
Samsung	S803JGP3/YLW	Samsung	WF-F1061/YLR
Samsung	S803JGP3U/YLW	Samsung	WF-F1061/YLW
Samsung	S803JGS2/YLP	Samsung	WF-F1062/YLP

Samsung	S803JGS2/YLW	Samsung	WF-F1062/YLR
Samsung	S803JGS2U/YLW	Samsung	WF-F1062/YLW
Samsung	S803JGS3/YLP	Samsung	WF-F1254/YLR
Samsung	S803JGS3/YLW	Samsung	WF-F1254/YLW
Samsung	S803JGS3U/YLW	Samsung	WF-F1256/YLP
Samsung	S803JGW2/YLP	Samsung	WF-F1256/YLW
Samsung	S803JGW2/YLW	Samsung	WF-F125AC/YLP
Samsung	S803JGW2U/YLW	Samsung	WF-F125AC/YLW
Samsung	S803JGW3/YLP	Samsung	WF-F125AV/YLP
Samsung	S803JGW3/YLW	Samsung	WF-F125NC/YLP
Samsung	S803JGW3U/YLW	Samsung	WF-F125NC/YLW
Samsung	S8093GW/YLP	Samsung	WF-F854/YLP
Samsung	S813JGE/YLR	Samsung	WF-F854/YLR
Samsung	S813JGE/YLW	Samsung	WF-F854/YLW
Samsung	S813JGEU/YLW	Samsung	WF-F854S/YLP
Samsung	S813JGS/YLR	Samsung	WF-F854S/YLR
Samsung	S813JGS/YLW	Samsung	WF-F854S/YLW

Samsung	S813JGSU/YLW	Samsung	WF-F856/YLP
Samsung	S813JGW/YLR	Samsung	WF-F856/YLW
Samsung	S813JGW/YLW	Samsung	WF-F861/YLP
Samsung	S813JGWU/YLW	Samsung	WF-F861/YLR
Samsung	S815JGB/YLP	Samsung	WF-F861/YLW
Samsung	S815JGB/YLR	Samsung	WF-F862/YLP
Samsung	S815JGB/YLW	Samsung	WF-F862/YLR
Samsung	S815JGBU/YLW	Samsung	WF-F862/YLW
Samsung	S815JGE/YLP	Samsung	WF-H600WCW/UA
Samsung	S815JGE/YLR	Samsung	WF-H600WCW/YLP
Samsung	S815JGE/YLW	Samsung	WF-J1054/YLP
Samsung	S815JGEU/YLW	Samsung	WF-J1054/YLR
Samsung	S815JGS/YLP	Samsung	WF-J1054/YLW
Samsung	S815JGS/YLR	Samsung	WF-J1056/YLW
Samsung	S815JGS/YLW	Samsung	WF-J105AV/YLR
Samsung	S815JGSU/YLW	Samsung	WF-J105AV/YLW
Samsung	S815JGW/YLP	Samsung	WF-J105NV/YLW

Samsung	S815JGW/YLR	Samsung	WF-J1254C/YLP
Samsung	S815JGW/YLW	Samsung	WF-J125AC/YLW
Samsung	S815JGWU/YLW	Samsung	WF-J125NC/YLW
Samsung	S843GW/YLP	Samsung	WF-J145AC/YLW
Samsung	S843GW/YLW	Samsung	WF-J145NC/YLW
Samsung	S843GWU/YLW	Samsung	WF-M124ZAU/YLP
Samsung	WF0400N1NE/UA	Samsung	WF-M509NZW/YLP
Samsung	WF0400N1NE/YLP	Samsung	WF-M592NMH/YLP
Samsung	WF0400N2N/UA	Samsung	WF-M602WCC/UA
Samsung	WF0400N2N/YLP	Samsung	WF-M602WCC/YLP
Samsung	WF0400S1V/YLP	Samsung	WF-R1054/YLP
Samsung	WF0408N1NE/YLP	Samsung	WF-R1054/YLR
Samsung	WF0408N2N/UA	Samsung	WF-R1054/YLW
Samsung	WF0408N2N/YLP	Samsung	WF-R1056/YLP
Samsung	WF0408S1V/YLP	Samsung	WF-R1056/YLW
Samsung	WF0500NYW/YLP	Samsung	WF-R105AV/YLP
Samsung	WF0500NZW/YLP	Samsung	WF-R105AV/YLW

Samsung	WF0500SYV/YLP	Samsung	WF-R105NV/YLR
Samsung	WF0508NYW/YLP	Samsung	WF-R105NV/YLW
Samsung	WF0508NZW/YLP	Samsung	WF-R1061/YLP
Samsung	WF0508SYV/YLP	Samsung	WF-R1061/YLR
Samsung	WF0590NRW/YLP	Samsung	WF-R1061/YLW
Samsung	WF0592SRK/YLP	Samsung	WF-R1062/YLP
Samsung	WF0600NBX/YLP	Samsung	WF-R1062/YLR
Samsung	WF0600NCW/XEP	Samsung	WF-R1062/YLW
Samsung	WF0602WJW/YLP	Samsung	WF-R1254/YLR
Samsung	WF0602WKE/YLP	Samsung	WF-R1254/YLW
Samsung	WF0690NRW/YLP	Samsung	WF-R1256/YLP
Samsung	WF0692NRY/YLP	Samsung	WF-R1256/YLW
Samsung	WF0700NBE/YLV	Samsung	WF-R125AC/YLP
Samsung	WF0700NBX/YLP	Samsung	WF-R125AC/YLR
Samsung	WF0700NCW/XEP	Samsung	WF-R125AC/YLW
Samsung	WF0700NCW/YLP	Samsung	WF-R125AV/YLP
Samsung	WF0702NBE/XEF	Samsung	WF-R125NC/YLR

Samsung	WF0702NBE/XEU	Samsung	WF-R125NC/YLW
Samsung	WF0702NBS/XEF	Samsung	WF-R854/YLP
Samsung	WF0702WJV/XEO	Samsung	WF-R854/YLR
Samsung	WF0702WJW/YLP	Samsung	WF-R854/YLW
Samsung	WF0702WKE/XEU	Samsung	WF-R856/YLP
Samsung	WF0702WKE/XSH	Samsung	WF-R856/YLW
Samsung	WF0702WKE/YLP	Samsung	WF-R861/YLP
Samsung	WF0790NCX/YLO	Samsung	WF-R861/YLR
Samsung	WF0802LWW/XET	Samsung	WF-R861/YLW
Samsung	WF0802NCE/XEC	Samsung	WF-R862/YLP
Samsung	WF0804W8E1/XSP	Samsung	WF-R862/YLR
Samsung	WF0804W8N/XFA	Samsung	WF-R862/YLW
Samsung	WF0804Y8E/XEC	Samsung	WF-S1054/YLP
Samsung	WF0804Y8E/XEF	Samsung	WF-S1054/YLR
Samsung	WF0804Y8E/XEN	Samsung	WF-S1054/YLW
Samsung	WF0804Y8E/YLP	Samsung	WF-S1061/YLP
Samsung	WF0804Y8E1/XEC	Samsung	WF-S1061/YLR

Samsung	WF0804Y8E1/XEF	Samsung	WF-S1061/YLW
Samsung	WF0804Y8E1/YLP	Samsung	WF-S1062/YLP
Samsung	WF0804Y8N/YLP	Samsung	WF-S1062/YLR
Samsung	WF0804Y8N1/YLP	Samsung	WF-S1062/YLW
Samsung	WF0902LWE/XET	Samsung	WF-S854/YLP
Samsung	WF0902LWE1/XET	Samsung	WF-S854/YLR
Samsung	WF1124ZAC/YLP	Samsung	WF-S854/YLW
Samsung	WF1600W5W/UA	Samsung	WF-S854S/YLP
Samsung	WF1600W5W/YLP	Samsung	WF-S854S/YLR
Samsung	WF1600WCV/YLP	Samsung	WF-S854S/YLW
Samsung	WF1600WCW/UA	Samsung	WF-S861/YLP
Samsung	WF1600WCW/YLP	Samsung	WF-S861/YLR
Samsung	WF1600WRW/YLP	Samsung	WF-S861/YLW
Samsung	WF1602NHW/XET	Samsung	WF-S862/YLP
Samsung	WF1602W5K/UA	Samsung	WF-S862/YLR
Samsung	WF1602W5K/YLP	Samsung	WF-S862/YLW
Samsung	WF1602WCC/UA	Samsung	WW60H2210EW/UA

Samsung	WF1602WCC/YLP	Samsung	WW60H5200EW/UA
Samsung	WF1602WRK/YLP	Samsung	WW60H5240EW/UA
Samsung	WF1602XQR/UA	Samsung	WW60J3063LW/UA
Samsung	WF1602XQR/YLP	Samsung	WW60J3063LWDL
Samsung	WF1602YQB/YLP	Samsung	WW60J3063LWDL
Samsung	WF1602YQC/YLP	Samsung	WW60J3067LW/UA
Samsung	WF1602YQQ/YLP	Samsung	WW60J3067LWDL
Samsung	WF1602YQR/YLP	Samsung	WW60J3083LW/LE
Samsung	WF1602YQY/YLP	Samsung	WW60J3263LW/UA
Samsung	WF1700W5W/UA	Samsung	WW60J3263LWDL
Samsung	WF1700W5W/YLP	Samsung	WW60J3267LW/UA
Samsung	WF1700WCW/UA	Samsung	WW60J3267LWDL
Samsung	WF1700WCW/YLP	Samsung	WW60J3283LW/LE
Samsung	WF1700WRW/YLP	Samsung	WW60J4060HW/UA
Samsung	WF1702WCC/YLP	Samsung	WW60J4063JW/UA
Samsung	WF1702WRK/YLP	Samsung	WW60J4063JWDL
Samsung	WF1702XQR/UA	Samsung	WW60J4063LW/UA

Samsung	WF1702XQR/YLP	Samsung	WW60J4063LWDL D
Samsung	WF1702YQB/YLP	Samsung	WW60J4063LW DUA
Samsung	WF1702YQC/YLP	Samsung	WW60J4210HW/UA
Samsung	WF1702YQQ/YLP	Samsung	WW60J4210HWDUA
Samsung	WF1702YQR/YLP	Samsung	WW60J4210JWDLD
Samsung	WF1802NFWS/YLP	Samsung	WW60J4213JW/UA
Samsung	WF1802WECS/YLP	Samsung	WW60J4213JWDUA
Samsung	WF1802WFVS/YLP	Samsung	WW60J4260HS/UA
Samsung	WF1802WPC/YLP	Samsung	WW60J4263JW/UA
Samsung	WF1802XEC/UA	Samsung	WW60J4263JWDLD
Samsung	WF1802XEC/YLP	Samsung	WW60J4263JWDUA
Samsung	WF1802XEK/UA	Samsung	WW60J4263LW/UA
Samsung	WF1802XEK/YLP	Samsung	WW60J5210JWDLD
Samsung	WF1802XEY/UA	Samsung	WW60J5213JW/UA
Samsung	WF1802XEY/YLP	Samsung	WW60J5217JW/UA
Samsung	WF1802XFV/UA	Samsung	WW60J5217JWDUA
Samsung	WF1802XFV/YLP	Samsung	WW60J6210DS/UA

Samsung	WF1804WPC/YLP	Samsung	WW60J6210DW/UA
Samsung	WF1804WPY/YLP	Samsung	WW60K42106WDDUA
Samsung	WF600W0BCWQ/LD	Samsung	WW60K42109SDUA
Samsung	WF600W0BCWQ/LP	Samsung	WW60K42109WDDUA
Samsung	WF600W0BCWQ/UA	Samsung	WW70J4210GW/UA
Samsung	WF602B0BCWQ/LP	Samsung	WW70J4213IW/UA
Samsung	WF602B0BCWQ/UA	Samsung	WW70J5210GW/UA
Samsung	WF602B2BKWQ/LP	Samsung	WW70J5217IW/UA
Samsung	WF602U2BKWQ/LD	Samsung	WW70K42101WDDUA
Samsung	WF602U2BKWQ/LP	Samsung	WW80H7410EW/UA
Samsung	WF602U2BKWQ/UA	Samsung	WW80K5410UW/UA
Samsung	WF602W0BCSD/LP	Samsung	WW80K5410WW/UA
Samsung	WF602W0BCWQ/LD	Samsung	WW80K6210RW/UA
Samsung	WF602W0BCWQ/LP	Samsung	WW80K6210TW/UA
Samsung	WF602W0BCWQ/UA	Samsung	WW90H7410EW/UA