



Service manual for PA(U)R series

Picture 1 : drawing for PA(U)R internal parts

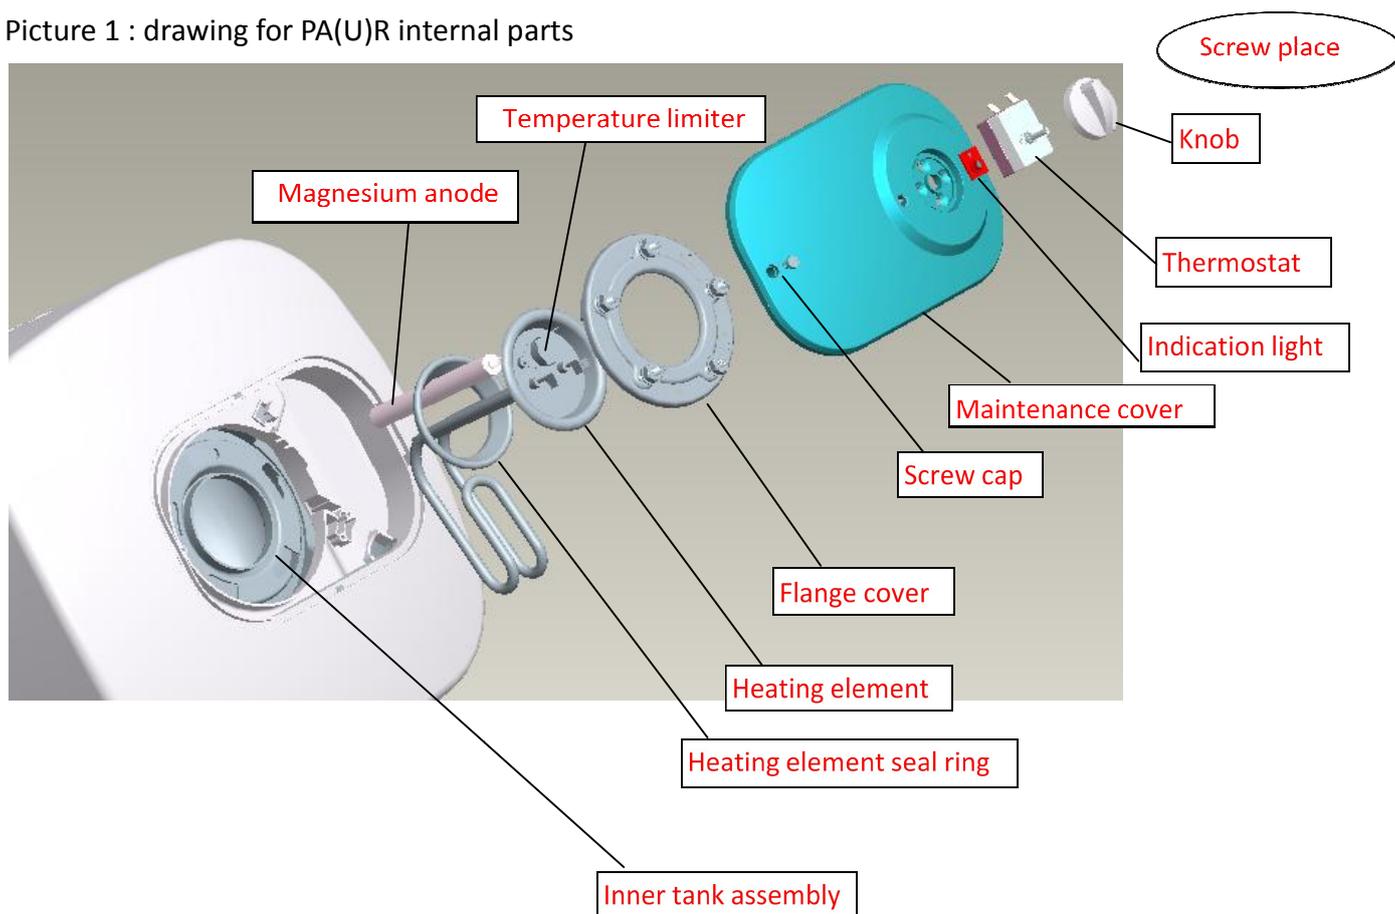


Picture 2 :

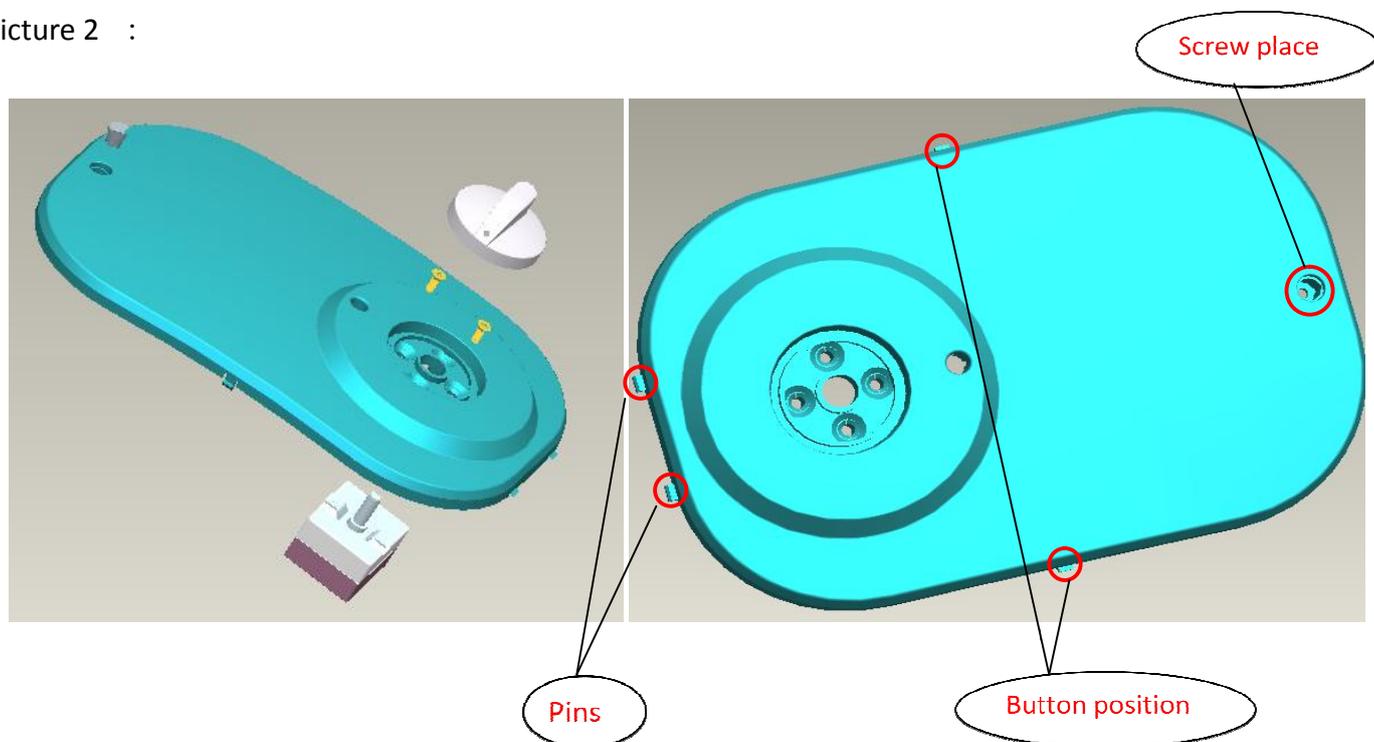


- Disassembly of maintenance cover (picture 2)**---- Maintenance cover is assembled through 2 pins, 2 buttons and 1 tapping screw with top cover. When disassemble it, firstly to use an awl to open the screw cap. Then using the air screw or screwdriver to unscrew the cross round head tapping screw. After that, the maintenance cover can be detached.

Picture 3 :

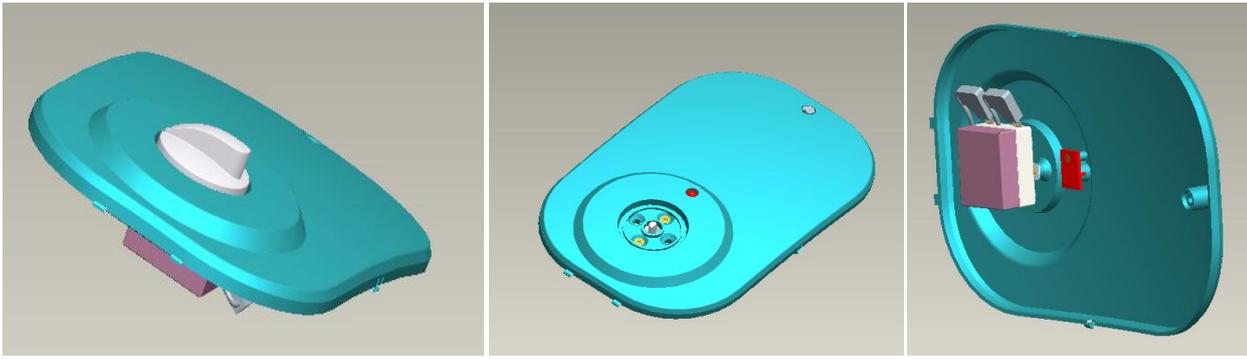

2. **Disassembly of thermostat (picture 3)**----- After removing the maintenance cover, detach the knob with pliers; using air screw or screwdriver to remove screw (M4X10) and pulling out the inner wire assembly terminal, then pull out the sensing temperature probe from the heating pipe of heating element.

Picture 4 :

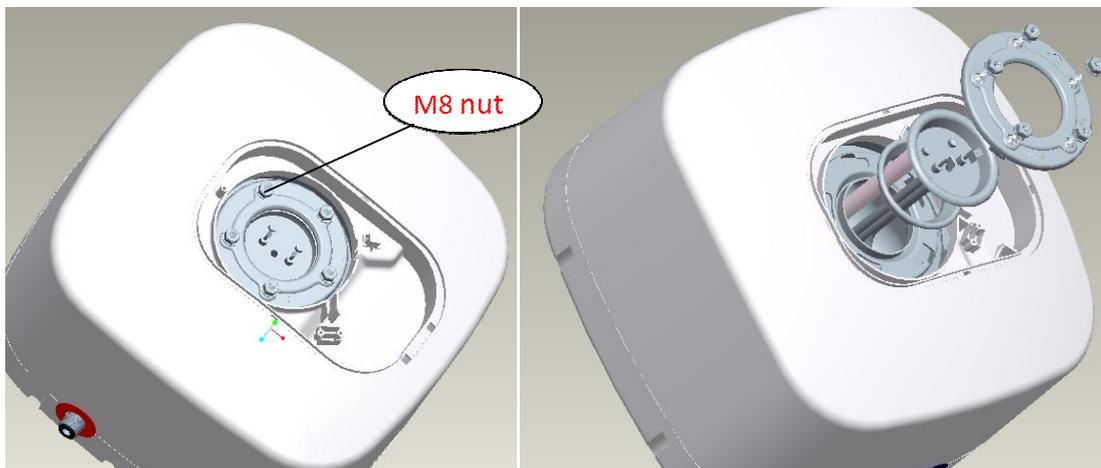

3. **Disassembly of heating element (picture 4)**----using air screw or screwdriver to remove 2 screws which lock the temperature limiter and remove it; then remove the nut that lock heating element, pulling out the inner wire assembly terminal from heating element , then heating element can be taken out directly.
4. **Replacement and installation of power cord (picture 5)**----pulling out power cord connecting terminal, with air screw or screwdriver to remove screw which lock the clincher of power cable, then take out of the power cord directly. Below pictures for the power cord installation.

Picture 5 :



Threading the power cord through the hole of bottom cover.

Threading the power cable through the hole of top cover, and taking the appropriate length then fixing the power cord with clincher.