


			alarm occurs, trip directly and stop.
--	--	--	---------------------------------------

Typical diagram

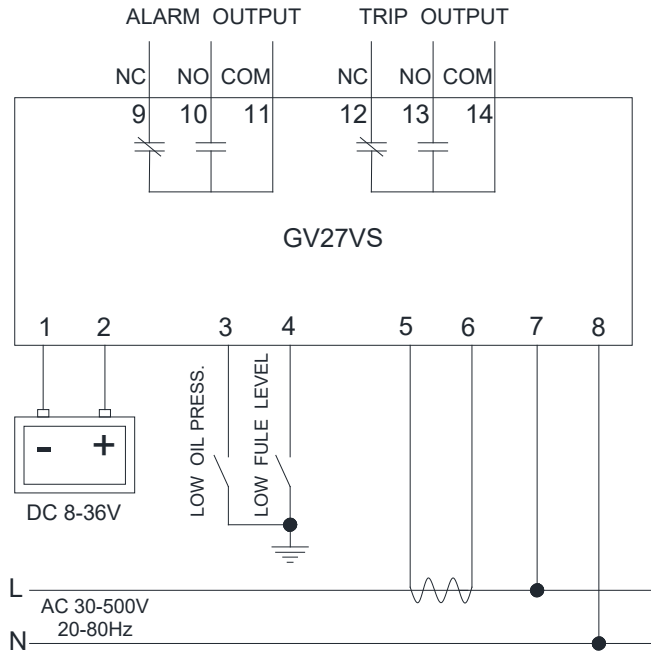

Warning: Please don't move battery during running status or it may cause the meter broken.

Notes

- 1.If the system checked the frequency is over " Freq. for start success "(P12),the meter is connected with main power, then it will regard the genset as cranked successfully. which means the alarm will occur after the safety delay when the fault is checked.
- 2.The alarms should be cleared after press "PROG".
- 3.All rights reserved. No part of this duplication may be reproduced in any material form(including photocopying or storing in any medium by electronic means or others) without the written permission of the copyright holder.
4. MEBAY Technology reserves the rights to change the contents of this document without prior notice.