 


USER MANUAL

4.3" video door phone

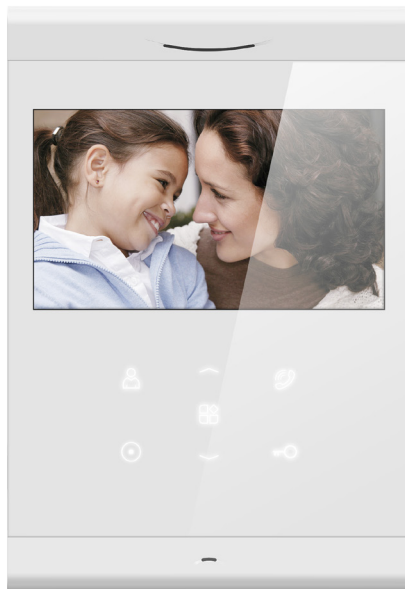







The introductory information in this document may be changed for product improvement without prior notice. We reserve the right of final explanation and revision.





Table of Contents

1. Features And Functions	2
2. Packing Contents	2
3. Name And Functions Of Each Part	3
3.1 Front And Rear Part	3
4. Connection Diagram	4
4.1. Wiring Diagram	4
5. Installation.....	5
6. Operation Description.....	5
6.1 Visitor Call.....	5
6.2 Monitor Function	6
6.3 Intercom Function	6
6.4 Setting Page.....	7
7. Specifications	8

WARNING AND CAUTION

Please make sure to follow the instructions to prevent any danger or property losses.

	Warning: Death or serious injury are expected
	Do not disassemble, install, or repair this product on your own accord
	Do not place the product near a hot or humid place
	Do not forcibly bend the cord or put a heavy object on the product
	Do not use water, thinner or a detergent used to wash oil products when you wash the exterior
	Do not connect to other products while in use
	Make sure to clean it by using a dry cloth to prevent any breakdown or electric shock
	If the product emits a peculiar noise, odor or smoke, immediately cut off the power, and then contact the service center
	Do not put the plug in the socket with a wet hand


	Caution: An injury or property losses are expected
	Make sure that dust or foreign substances are not gathered on the product
	Make sure to prevent foreign substances from entering the product
	Avoid direct rays of the sun or heating devices at a time of installation
	Install the product in a flat and stable place
	Pull the plug if the product is not used for a long time
	Do not unplug the micro SD card when recording, this generally will cause loss of data

1. Features And Functions


※ Indoor monitor

- 4.3" touch button monitor
- Up to 2 door stations, 1 master monitor + 3 slave monitors
- Point-to-point intercom and broadcast
- Ringtone volume & talking volume adjustable
- Brightness, color and contrast adjustable
- 6 melodies for each door station
- Do not disturb function
- DC power input
- Hands-free

 
2. Packing Contents

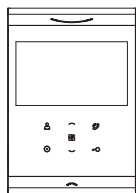


Indoor monitor

 


Wall bracket

 

KA M4*35mm
Mounting screw

 

M4*35mm
Plastic expansion pipe

 


User manual



Warranty card



 
3*4 pin wiring cable



DC adapter

3. Name And Functions Of Each Part

 3.1 Front And Rear Part

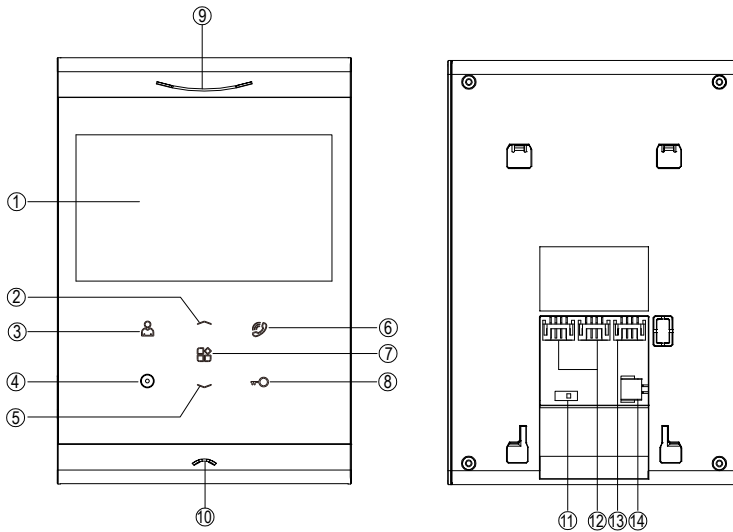


NO.	Part Name	Description
1	Screen	4.3" digital TFT LCD
2	Up Button	Touch button for entering setting page
3	Monitor Button	Touch button for monitoring
4	Intercom Button	Touch button for intercom
5	Down Button	Touch button for entering setting page
6	Talk Button	Touch button for talking with visitor
7	Menu Button	Touch button for entering setting page
8	Door Release Button	Touch button for releasing door lock
9	Speaker	
10	Microphone	Receive voice from the user
11	Switcher	Impedance matching for video signal
12	Video Input	Interface for door station 1/door station 2
13	Intercom	Interface for extension monitors
14	DC Power	Interface for DC adapter


4. Connection Diagram

4.1. Wiring Diagram

 
» Intercom wiring diagram with one monitor

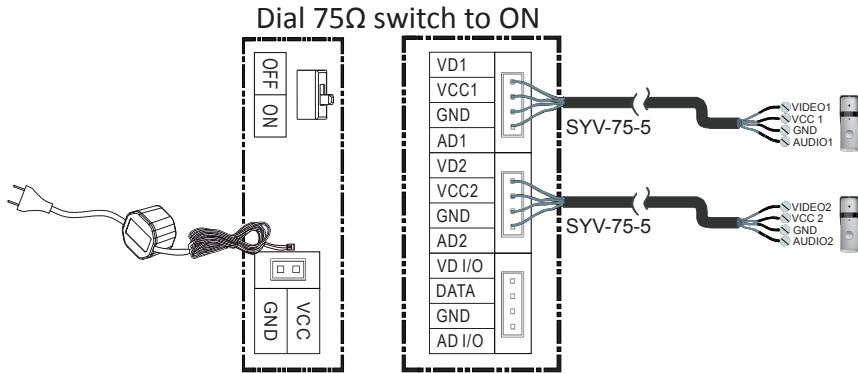

 » Intercom wiring diagram with master monitor and extensions (please pay attention to the impedance matching switch)

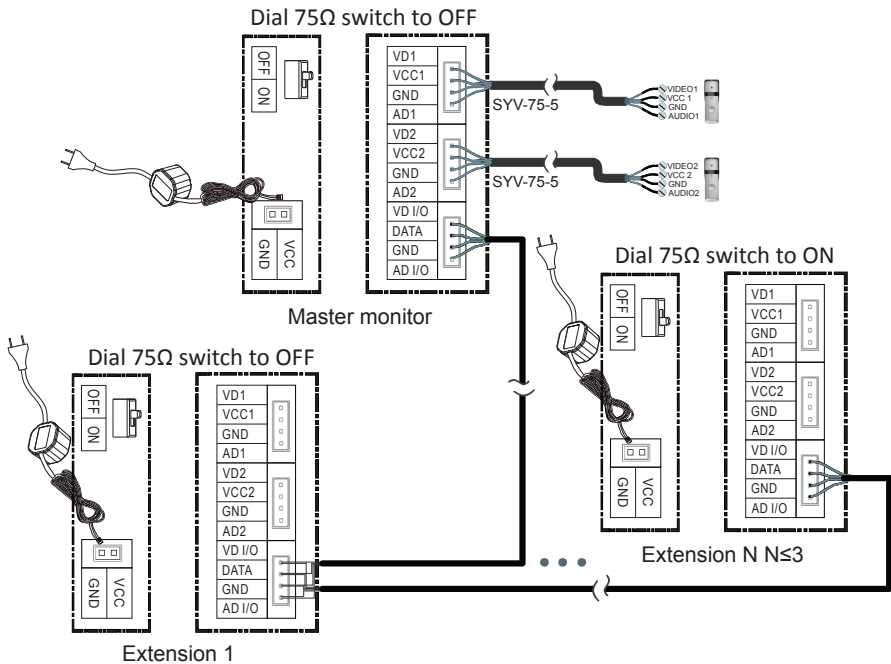

 5. Installation

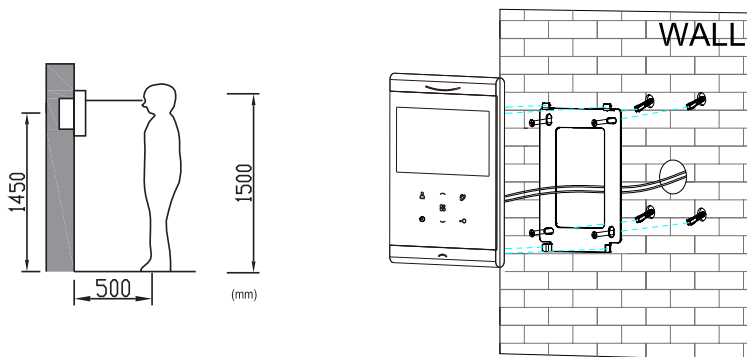

» Monitor installation location



Standard monitor installation height is about 1,500mm where screen center is at eye level; in this case, wall-hanging metal center is 1,450mm above ground level.

» Wiring and installation of indoor monitor




- 1) Remove mounting bracket behind monitor and fix it on the wall with screw;
- 2) Pull the cable out and connect the system according to 4.1 wiring diagram;
- 3) Hang the monitor on the mounting bracket;
- 4) Plug DC adapter's power plug into power socket.

6. Operation Description






6.1 Visitor Call

When door station calls in, the visitor's image will be shown on the monitor screen and you can press  to talk with the visitor and press  again to terminate.

When door station calls in, you can press  to release door lock.

When door station calls in, you can press  to select setting item(brightness/color/contrast/ringtone volume)and then press  or  to increase or decrease the value.






During the talk:

- » You can press  and then press  or  to adjust the brightness/color/contrast/ talking volume.
- » You can press  to switch to other door station and the current talk will be terminated.
- » You can press  to transfer the current call to other extension monitors.

Remark:


» If the ringtone volume is 0, the monitor will enter [Do not Disturb] mode; when door station calls in, the monitor will be mute.

6.2 Monitor Function





When you press  and then the monitor will enter monitor mode, then it will show image from the corresponding door station. Press  once, the screen will display “ 1 ”; press twice, the screen will display “ 2 ”; press  three times, the screen will be turned off.

 
Remark:



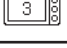
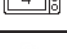
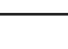
» If monitoring fails, the screen will show a triangle with an exclamation point. The definition of icon is as below:

 1	Monitoring failed(The monitor isn't set up as "Master" /Net busy)
---	---

6.3 Intercom Function

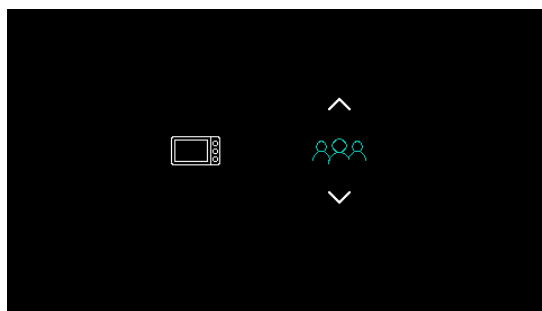

In standby mode, press  to enter the intercom address selecting page and press  or  to select the monitor you want to call, and then press  to start the call, then you can talk with the monitor if the called monitor answers the call.

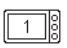









 1	Master
 2	Ext1
 3	Ext2
 4	Ext3
	Broadcast


Remark:

» If intercom fails, the screen will show a triangle with an exclamation point. The definition of icon are as below:






	Net busy/No response
	Local address

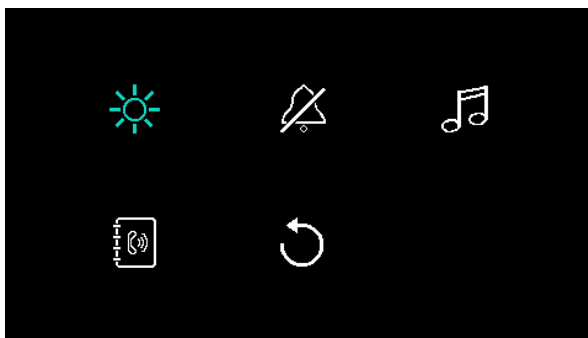 6.4 Setting Page

In standby mode, press  to enter the main setting page and then press  or  to switch and select between different setting items and then press  to enter the selected setting page. In the selected setting page, you can press  to switch between different setting items and press  or  to adjust the value, and then press  to confirm the settings and return to main setting page.



※ Icon Definition

	Adjust the brightness/color/contrast of the indoor monitor		Enable/disable [do not disturb] function
	Set the camera melody/intercom melody/ring volume and ring time of the indoor monitor		Set the intercom address of the indoor monitor
	Restore system to factory settings		

7. Specifications

※ Indoor monitor

Category	Specification
Input power	DC: 14.5V
TFT LCD	4.3 inch digital TFT LCD
LCD Resolution	480(RGB) x 272
Connection with door station	Support two 4-wire door station
Connection with extension monitor	Support three extension monitors
Dimensions (mm)	160(W) x 110.5(H) x 10.4(D)(without wall bracket) 160(W) x 110.5(H) x 15(D)(with wall bracket)

※ DC adapter

Category	Specification
Input power	AC:150V~240V,0.35A,50Hz/60Hz
Output power	DC:14.5V,0.8A
Dimensions(mm)	45 (W) * 45 (H) * 30 (D)