









- When charging, remove the USB cover on the bottom of the instrument and insert the USB charging cable (voltage DC5V, current not greater than 2A) to recharge.
- When charging the indicator light is red, the indicator light is green, when the charging is finish.

## **7. Video output**

- When in use, remove the cover of the video interface at the bottom of the instrument and insert the configured video cable, which can be connected to the display or other long-distance transmission.

## **8. Matters needing attention**

- Because uncooled infrared telescopes use very sensitive thermal sensors, the lens must not be directly pointed at a strong source of radiation (such as the sun, laser beam or reflection, etc.) under any circumstances (turn on or off), or it will cause permanent damage to uncooled infrared telescopes!
- After laser pointer function is opened, do not irradiate the human eye, so as not to cause injury!
- When the instrument has been the automatic sleep state, it can be awakened by any key.
- Check the power when the instrument is first used. If necessary, charge it for three hours and then use it. When USB charges, please place the instrument at 40 C.
- Please do not depart the device housing or refit it without authorization. Maintenance matters can only be operated by the company's authorized personnel.

Zhejiang Dali Technology Inc

[www.dali-tech.com](http://www.dali-tech.com)