


TESY

It's impressive

QUICK START 2-23


- EN** Instructions for using the built-in wireless communication module (Wi-Fi) for electrical convector 24-26
- BG** Инструкция за използване на вграден безжичен комуникационен модул (Wi-Fi) за електрически конвектор 27-29
- RO** Instrucțiune de utilizare. De modul de comunicare wireless incorporat (Wi-Fi) pentru convecteur electric 30-32
- RU** Инструкция по использованию встроенного коммуникационного модуля беспроводной связи (Wi-Fi) для электрического конвектора 33-35
- UA** Інструкція для використання вбудованого бездротового комунікаційного модуля (Wi-Fi) для електричного конвектора 36-38
- HR** Uputa za korištenje ugrađenog bežičnog komunikacijskog modula (Wi-Fi) za električni konvektor 39-41
- RS** Упутство за употребу уграђеног бежичног комуникационог модула (Wi-Fi) за електрични конвектор 42-44
- SK** Návod na použitie integrovaného bezdrôtového komunikačného modulu (Wi-Fi) pre elektrický konvektor 45-47
- PL** Instrukcja korzystania z bezprzewodowego modułu komunikacyjnego (Wi-Fi) do konwektora elektrycznego 48-50
- HU** Elektromos konvektor beépített kommunikációs Wi-Fi egységének használati utasítása 51-53
- GR** Οδηγίες χρήσης ενσωματωμένης ασύρματης μονάδας επικοινωνίας (Wi-Fi) για ηλεκτρικό θερμοπομπό 54-56
- ES** Instrucciones de uso de un módulo de comunicación inalámbrico incorporado (Wi-Fi) para un convector eléctrico 57-59
- DE** Bedienungsanleitung eines eingebauten drahtlosen Kommunikationsmoduls (Wi-Fi-Modul) für elektrischen Konvektor 60-62
- DK** Vejledning til brug af indbygget trådløst kommunikationsmodul (Wi-Fi) til elektrisk konvektor 63-65
- LT** Elektrinio konvektoriaus įdiegto bevielio modulio (Wi-Fi) naudojimo instrukcija 66-68
- LV** Lietošanas instrukcija elektriskajam konvektoram ar iebūvēto naudojimo komunikācijas moduli (Wi-Fi) 69-71
- NL** Handleiding voor gebruik van geïntegreerde draadloze communicatiemodule (Wi-Fi) voor elektrische convector 72-74
- SE** Instruktioner för användning av den inbyggda trådlösa kommunikationsmodulen (Wi-Fi) för elektrisk konvektor 75-77
- NO** Instruksjoner for bruk av den innebygde trådløse kommunikasjonsmodulen (Wi-Fi) for elektrisk konvektor 78-80
- MK** Упатство за користење на вграден безжичен комуникациски модул (Wi-Fi) за електричен конвектор 81-83
- SL** Navodila za uporabo vgrajenega brezžičnega komunikacijskega modula (Wi-Fi) za električni konvektor 84-86
- AR** تعليمات استعمال وحدة اتصال لاسلكية مدمجة (واي فاي) عبر الإنترنت لمسخن كهربائي 87-89
- HE** הוראות לשימוש במודול תקשורת אלחוטי מובנה (Wi-Fi) עבור קונווקטור חשמלי 90-92
- AM** Էլեկտրոսական տաքացուցիչի համար տեղադրված բաղձրնահաճախական անլար լուրջ ցանցի (Wi-Fi) օգտագործման ձեռնարկ 93-95

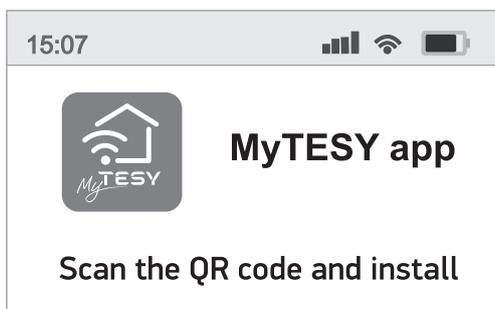


A

MyTESY


1

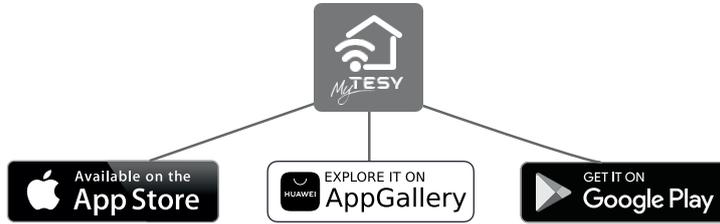


2

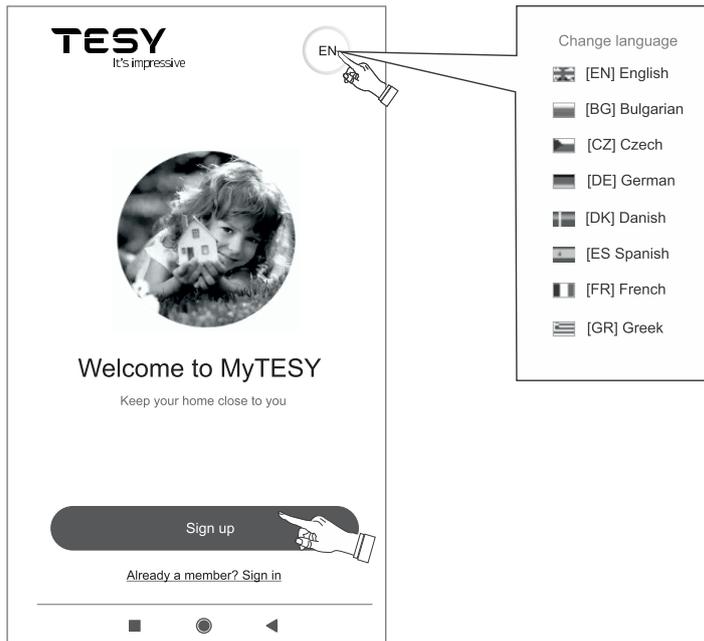

3

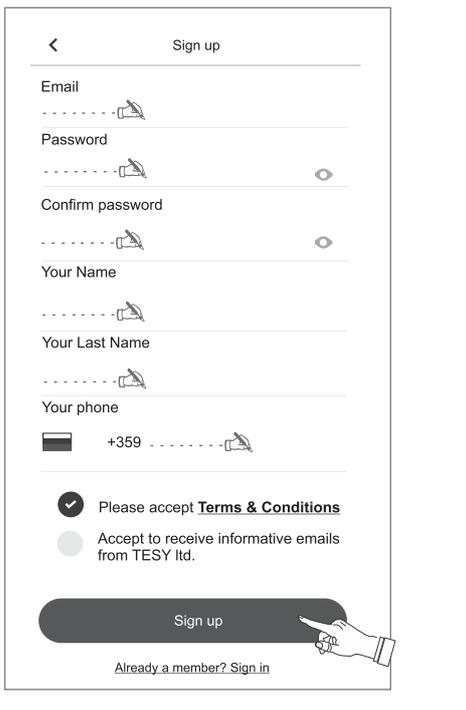

4

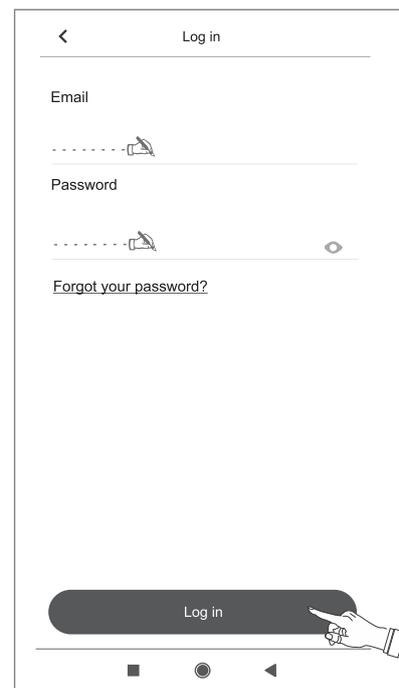




A

MyTESY

5






6

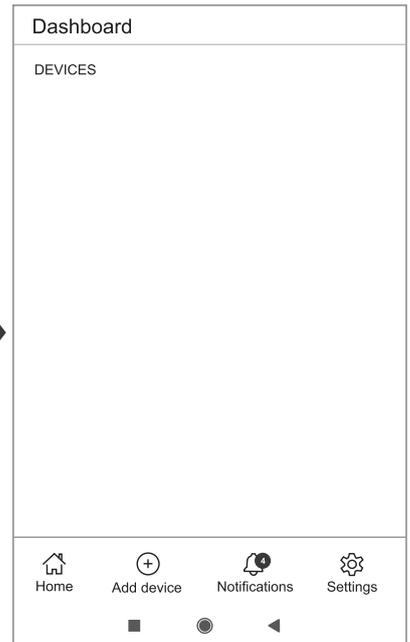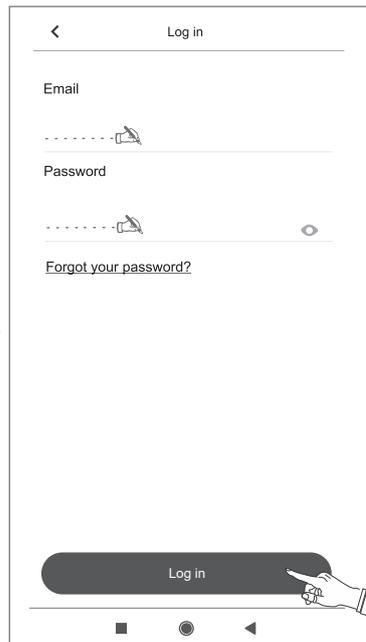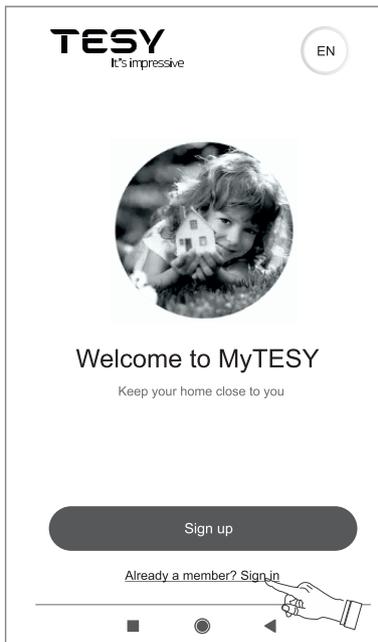

B

Add Cloud Device

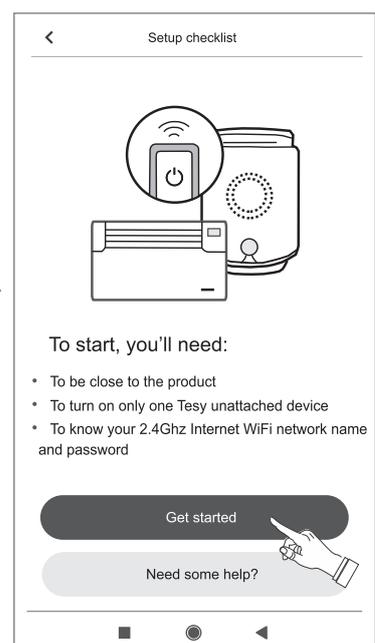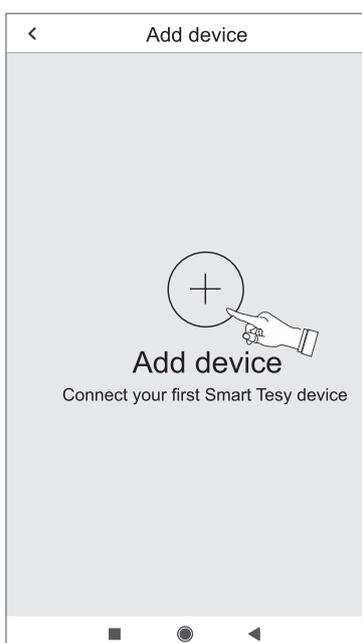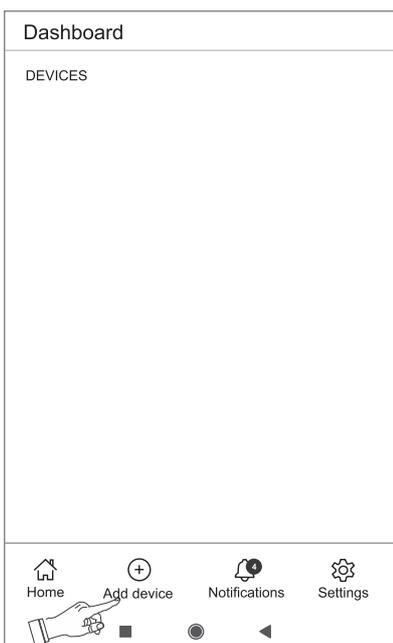

B

Add Cloud Device

1

Location Services Permission

Enable Location Services so that your device can identify and connect to your Wi-Fi network.

If you don't allow Location Services the device couldn't be attached to the Tesy cloud and the app

Allow Location Services

Allow **Tesy.me** to access this device's location?

DENY ALLOW

To continue, turn on device location, which uses Google's location service

NO THANKS OK

2

Choose device

Please click Continue to start searching for the Tesy compatible device.

If you don't find your device?

- Please be sure that your device is on and in close range
- Try again clicking on the Continue button
- Check from the device's panel if its Wi-Fi is on from the panel menu
- Try to reset the device from its panel
- Close all VPN connections from your mobile device

Continue

Connect to Wi-Fi

Is this the network you want your device to connect to?

tesystand Change

Continue

Don't want to use Wi-Fi

Wi-Fi password

Enter Wi-Fi password for:

tesystand

Password

My network doesn't have a password


Continue

Advanced network settings


B






Add Cloud Device





3

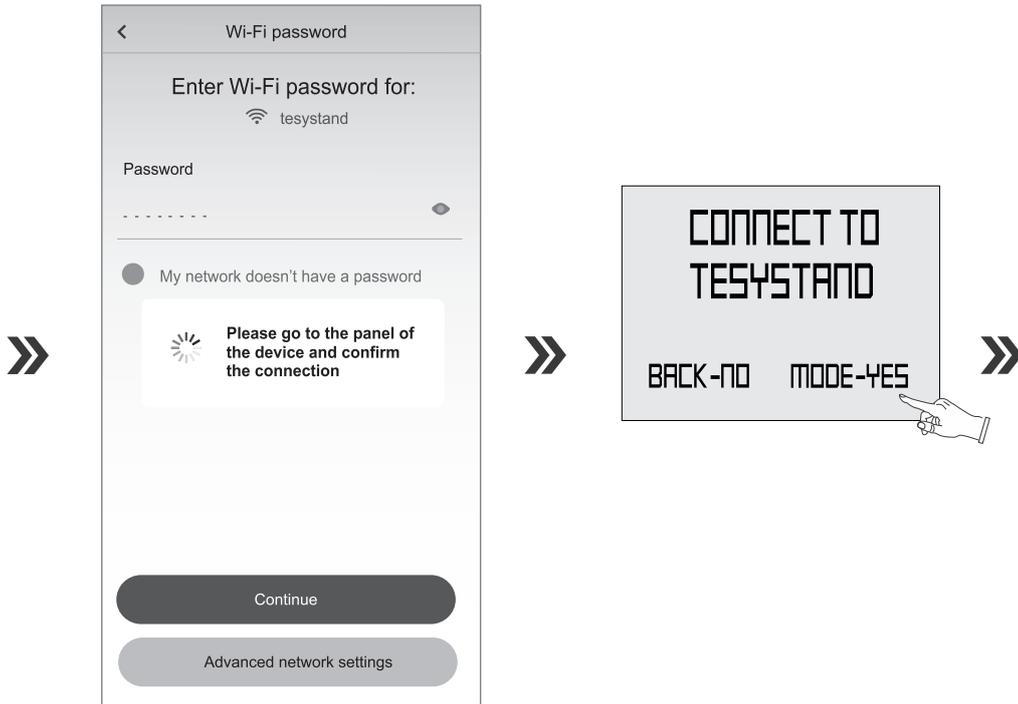

4

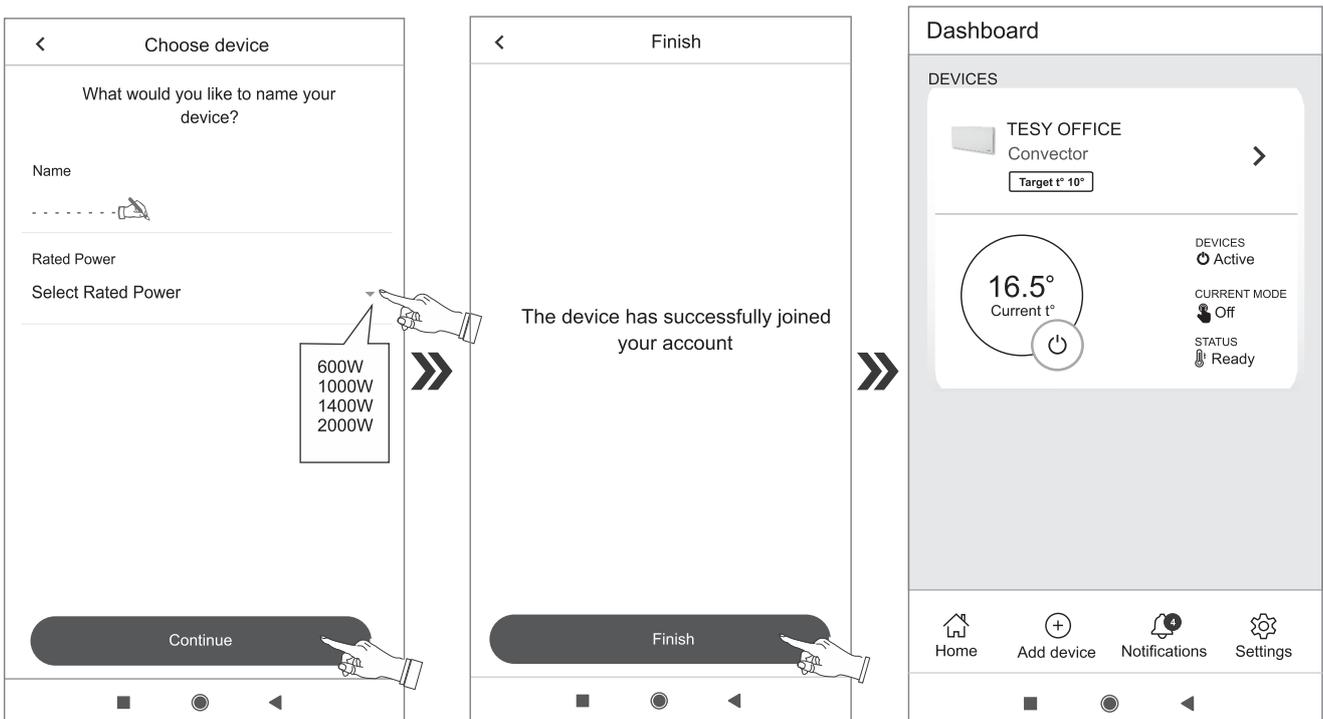

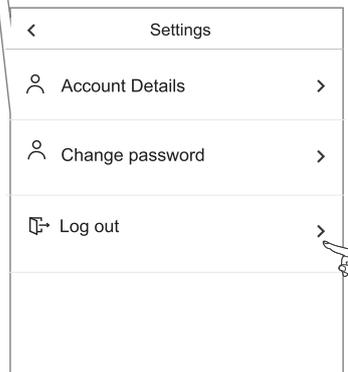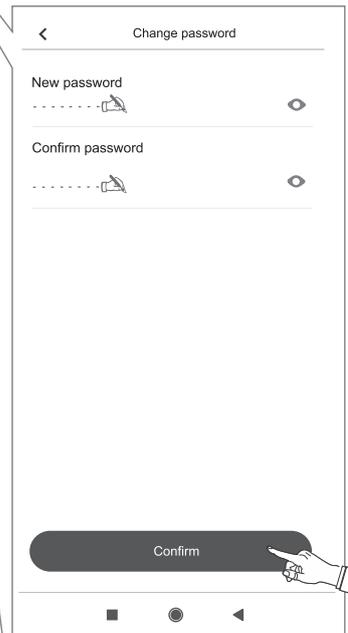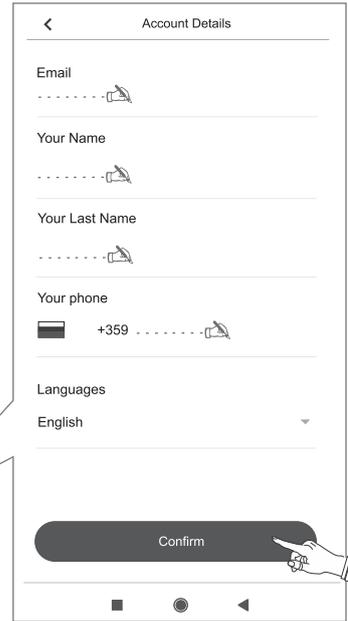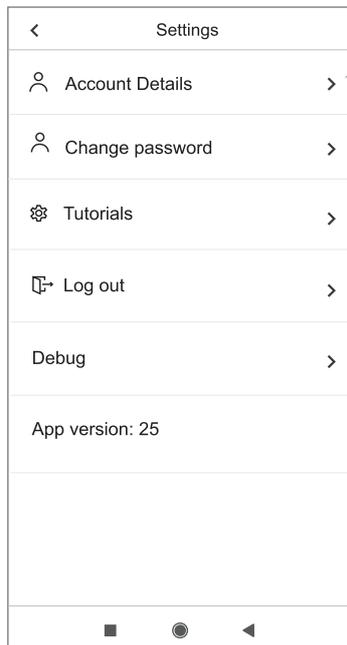
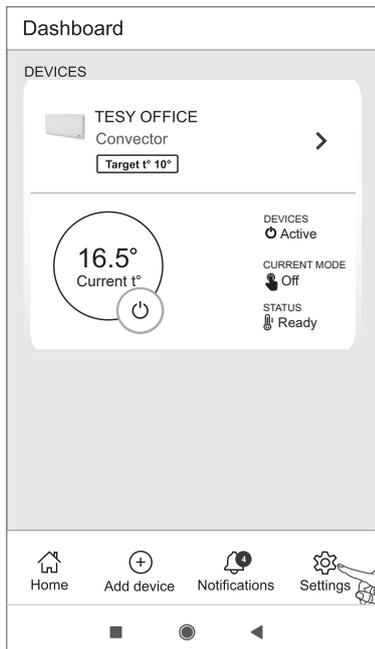


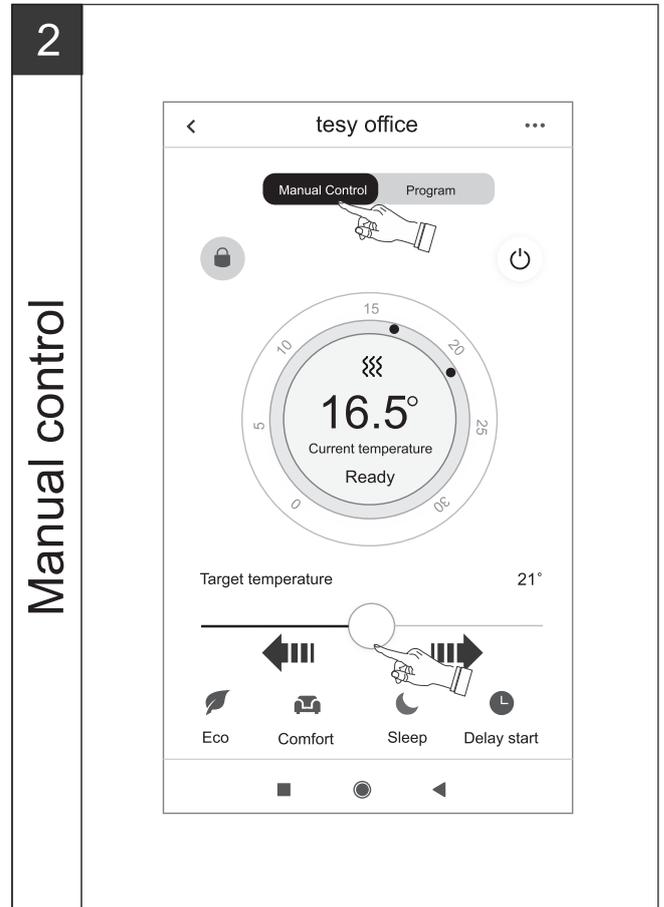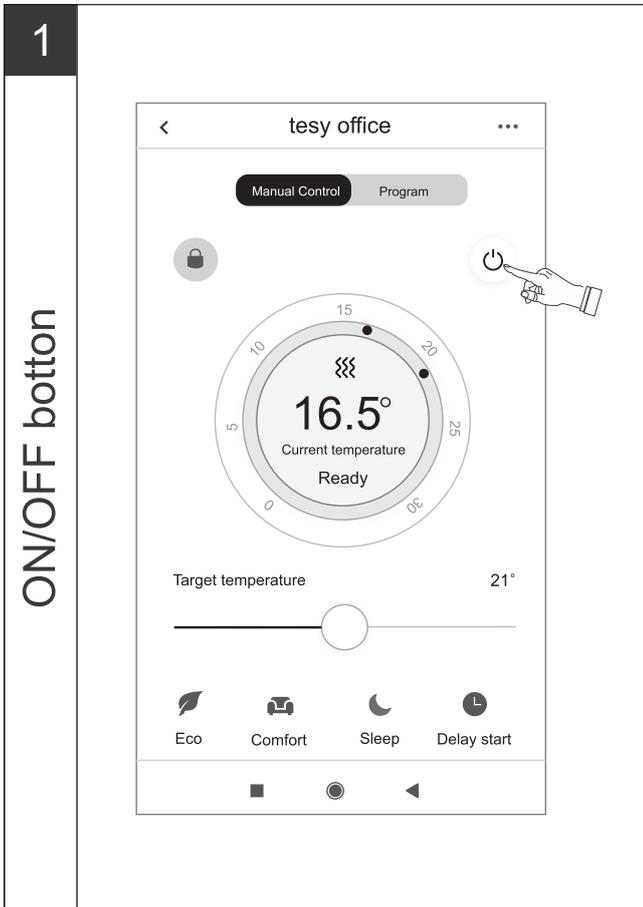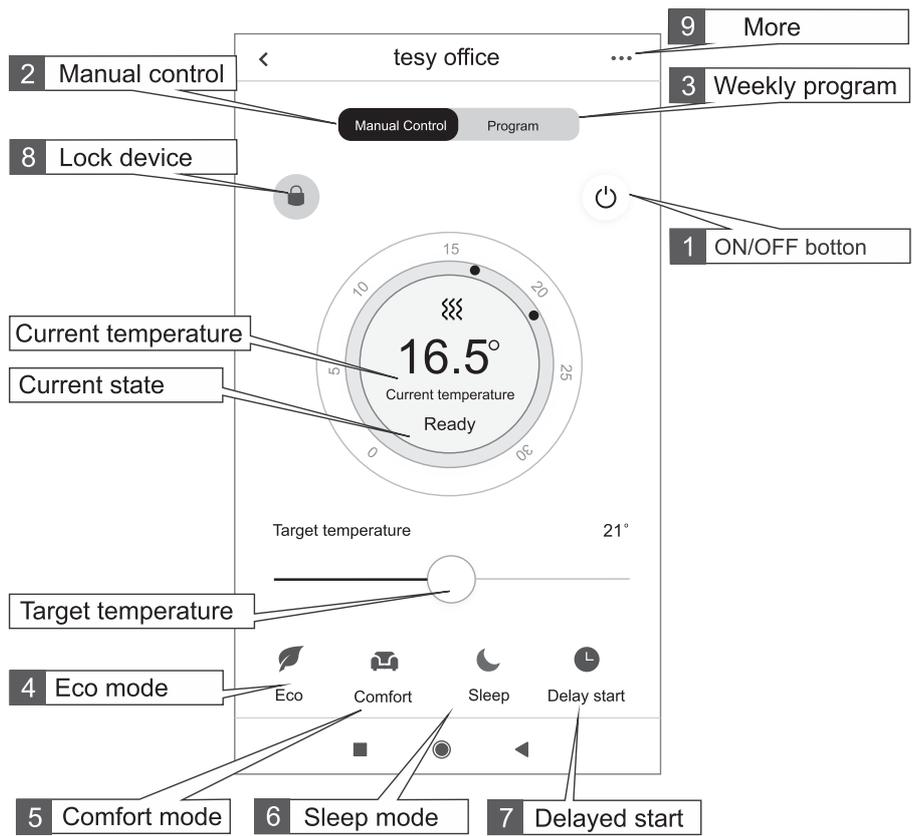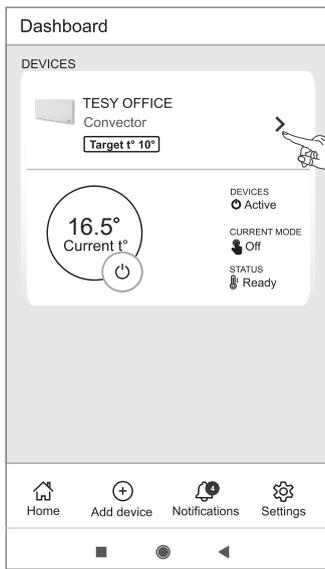

3

3.1



Activate program



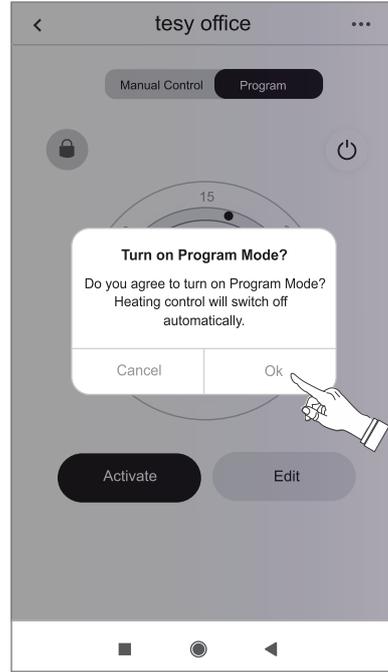
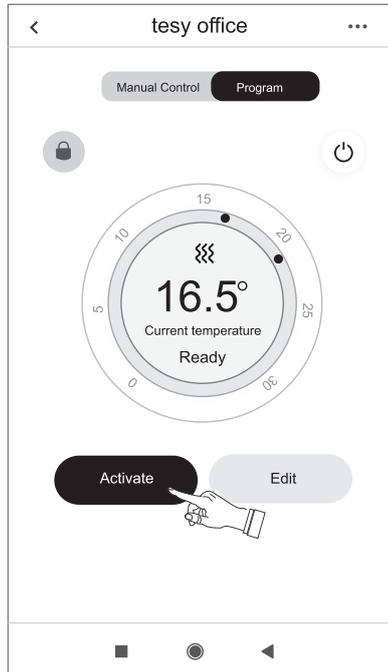






3





3.2




Create/edit program



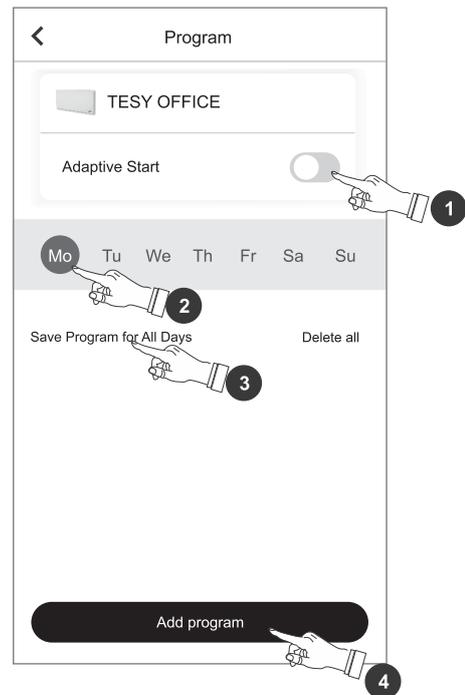
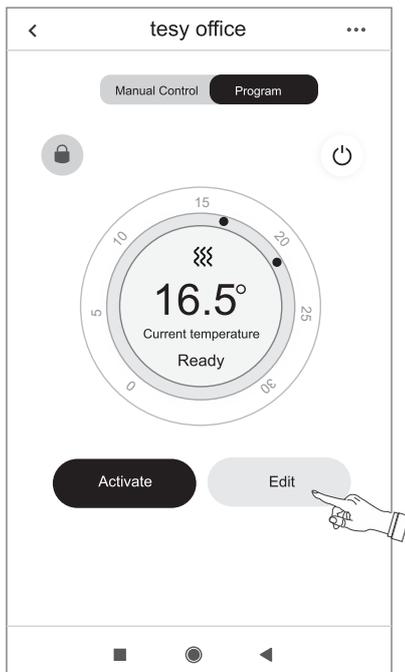


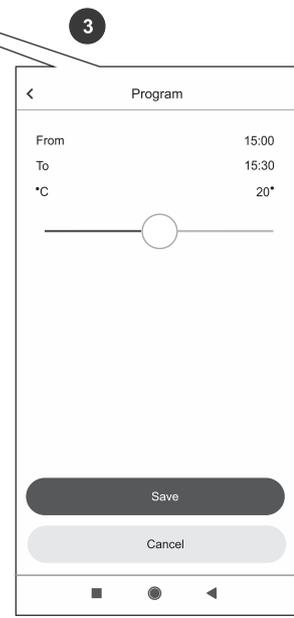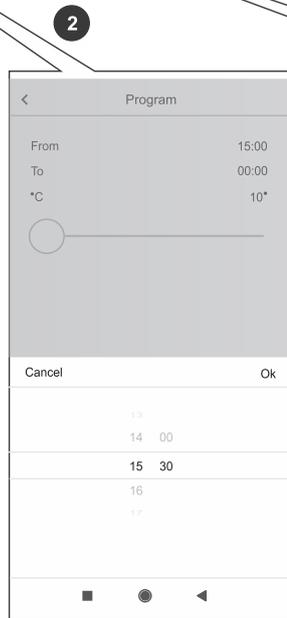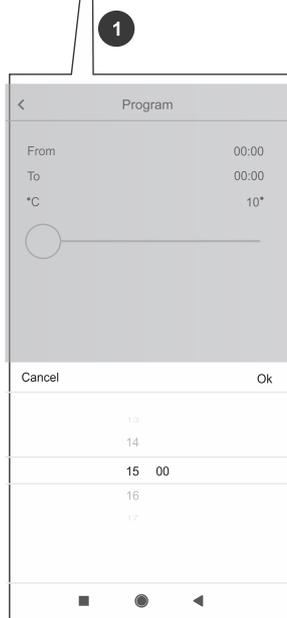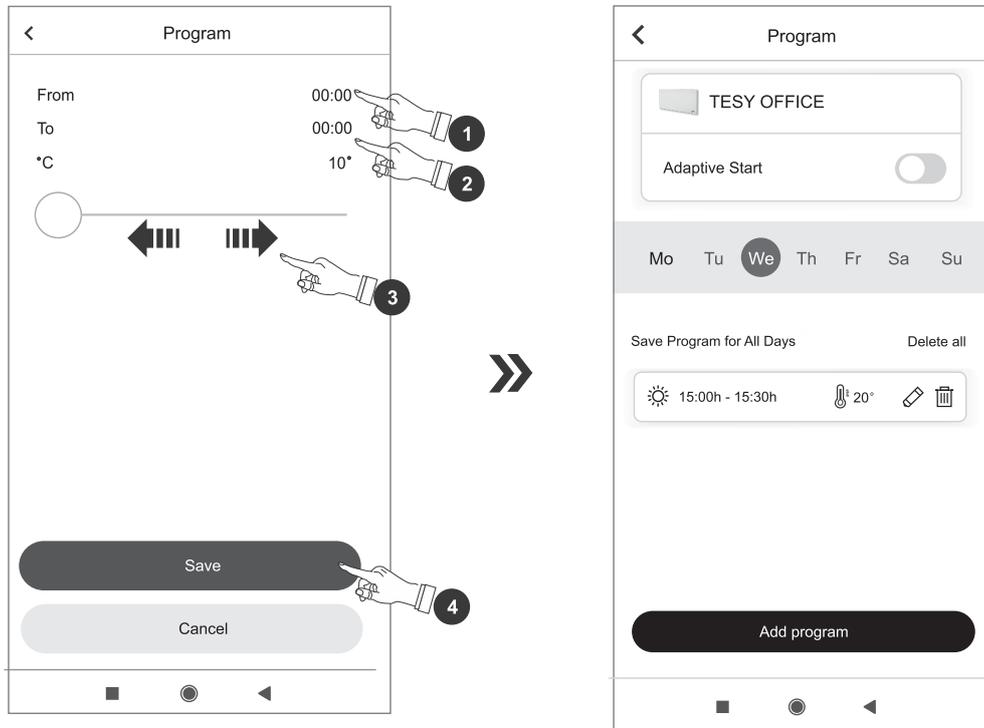

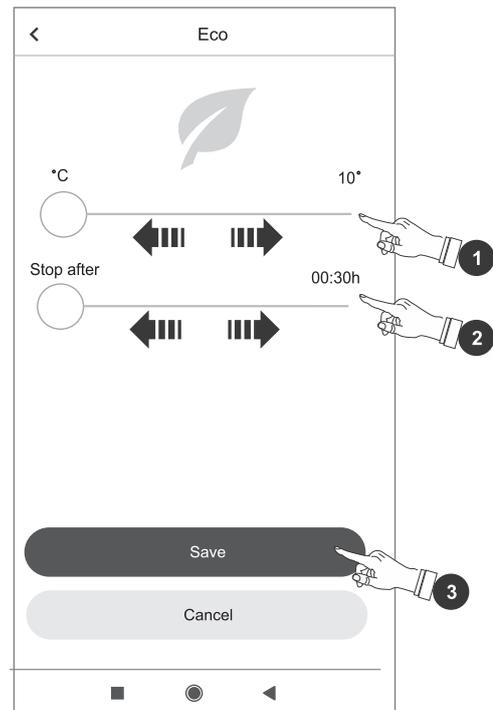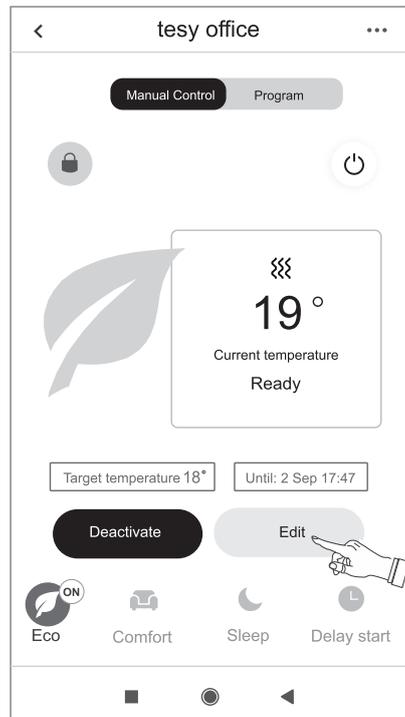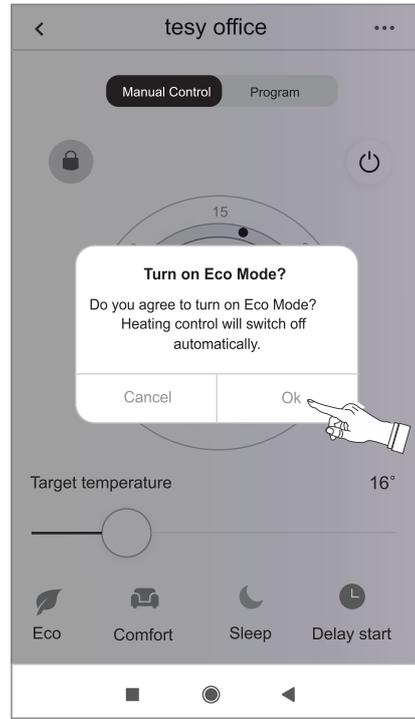
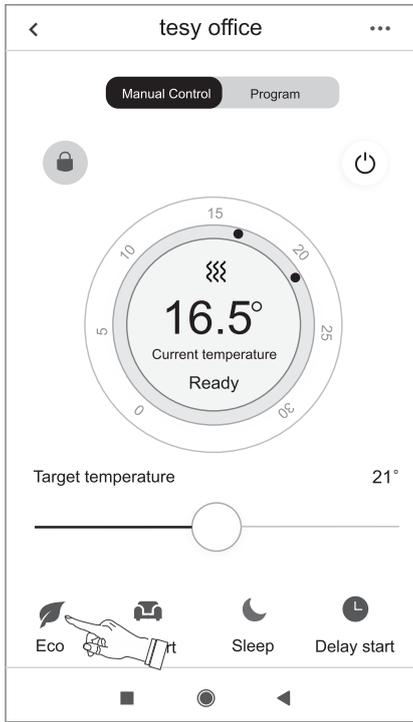


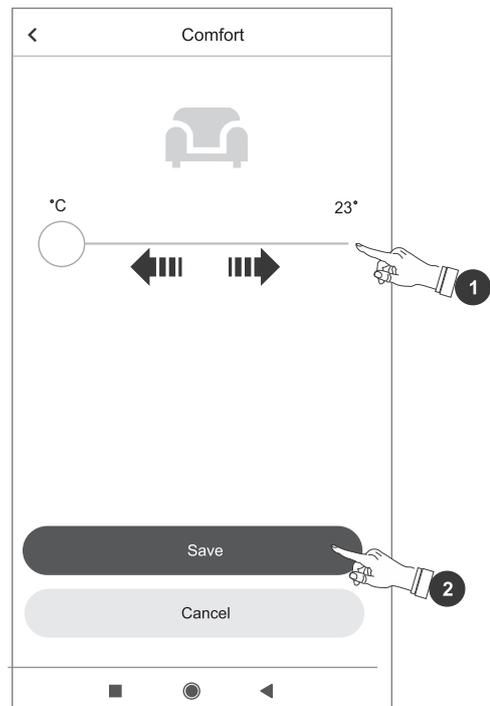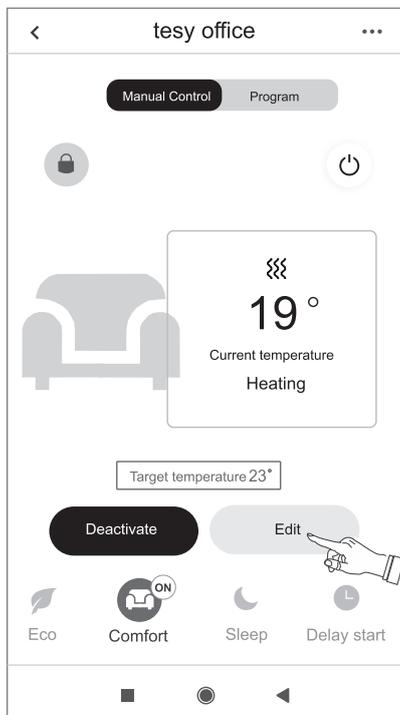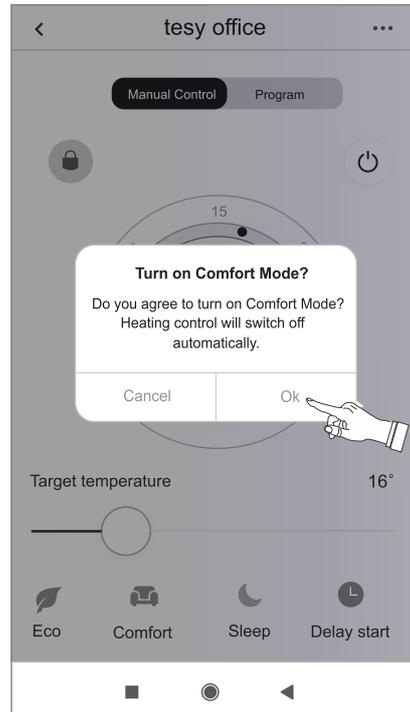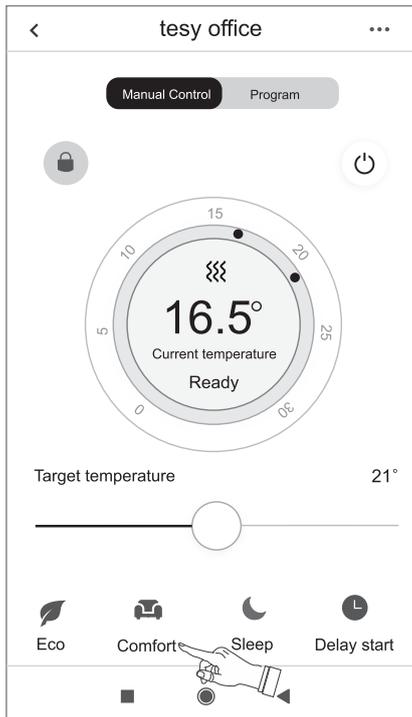

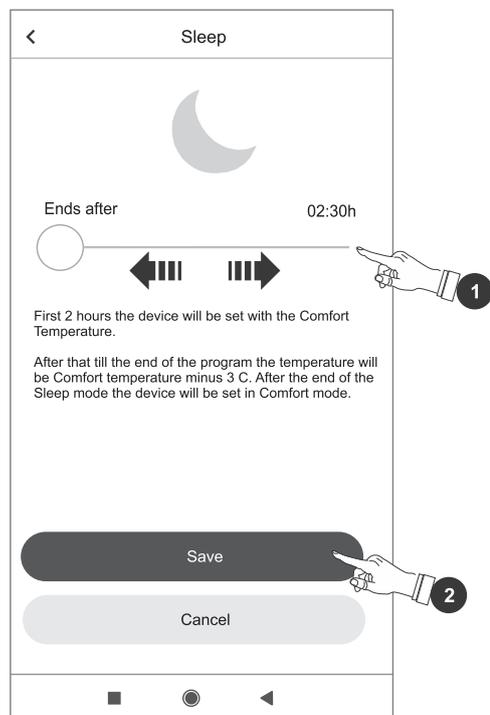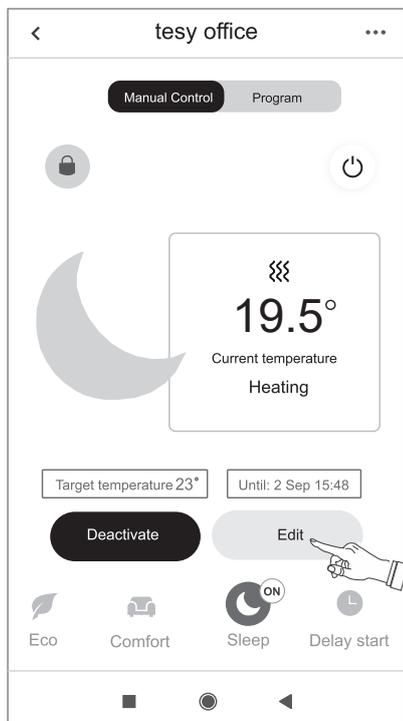
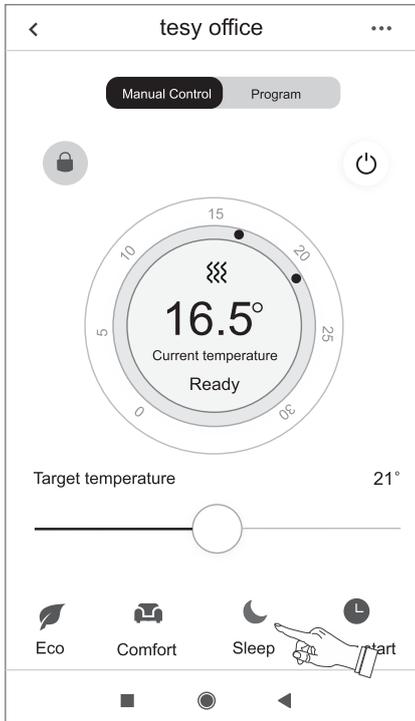


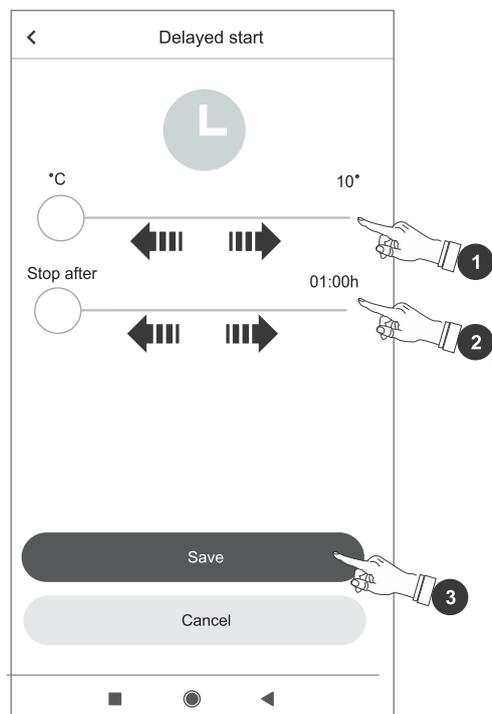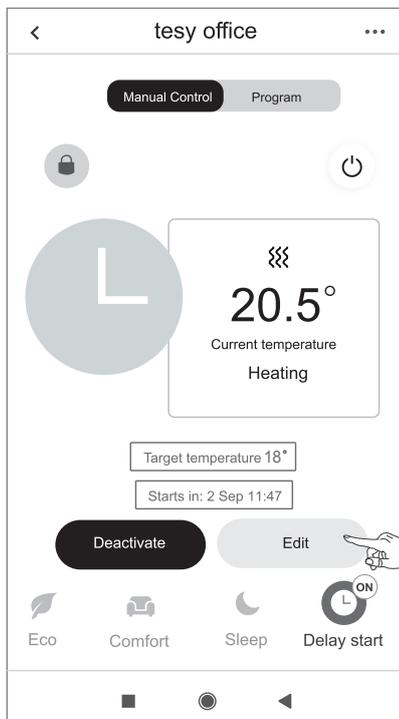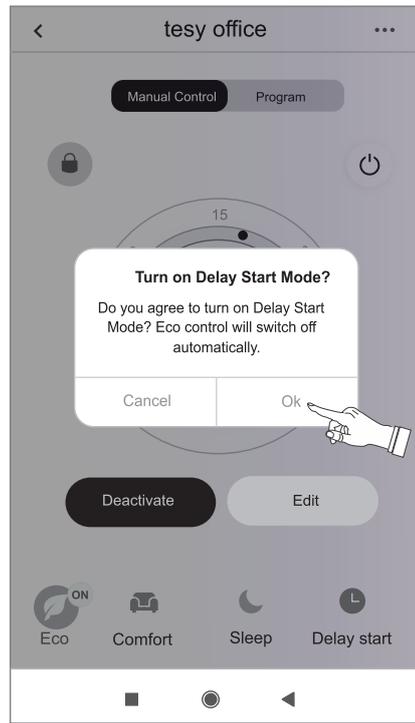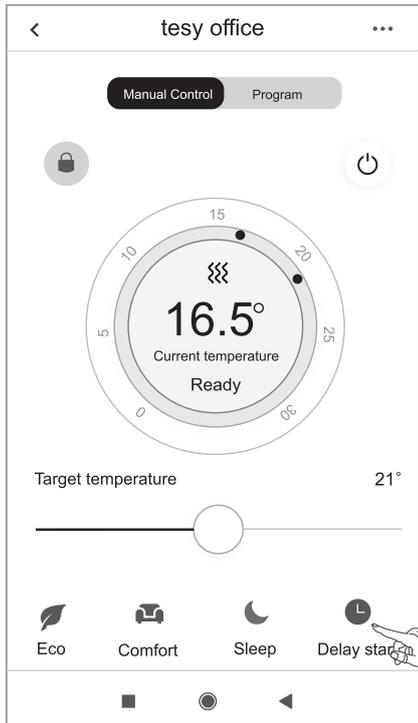



Lock device

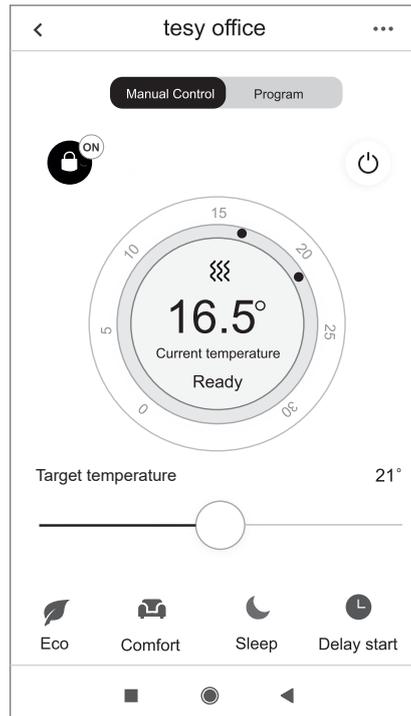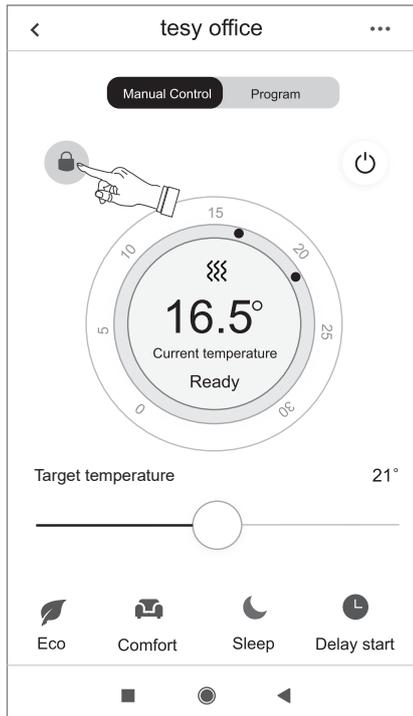



More settings

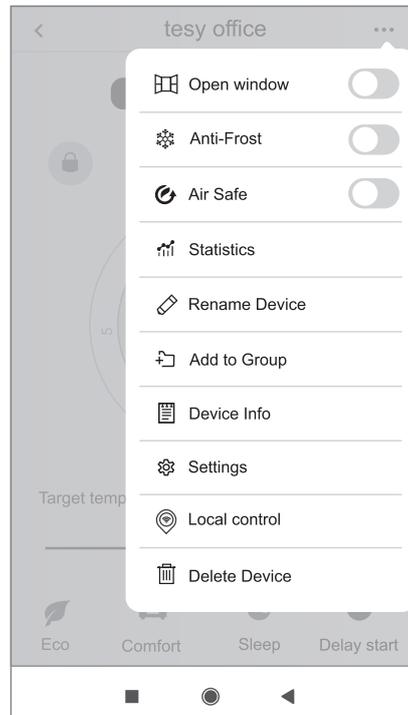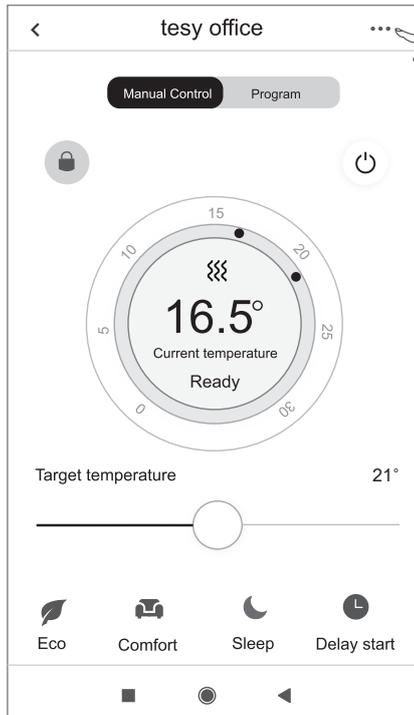



Open window

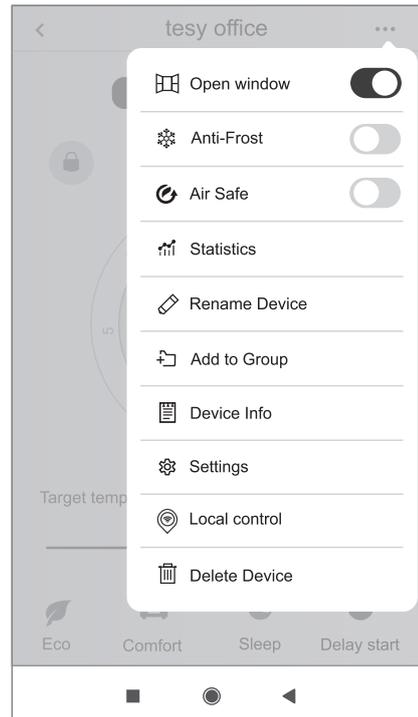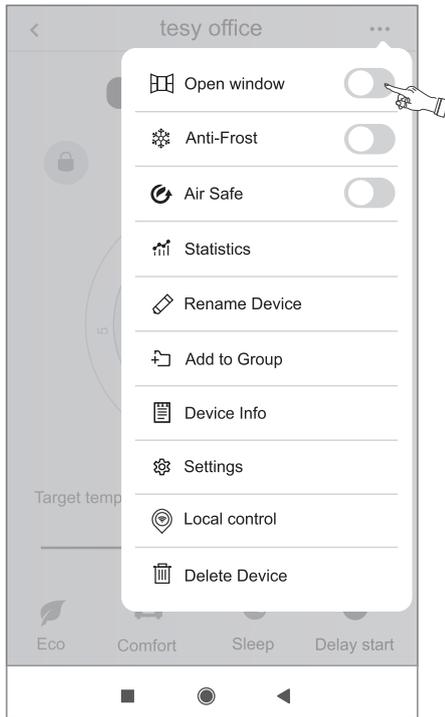



Anti-Frost

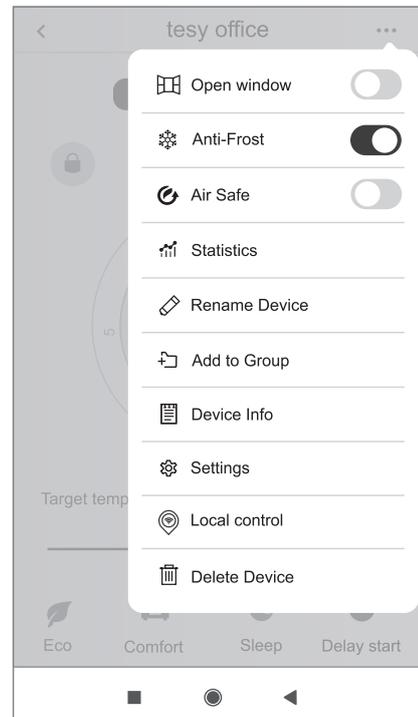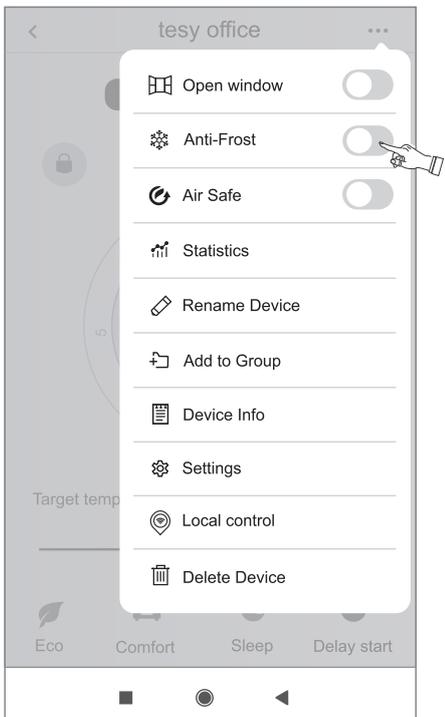



Air Safe

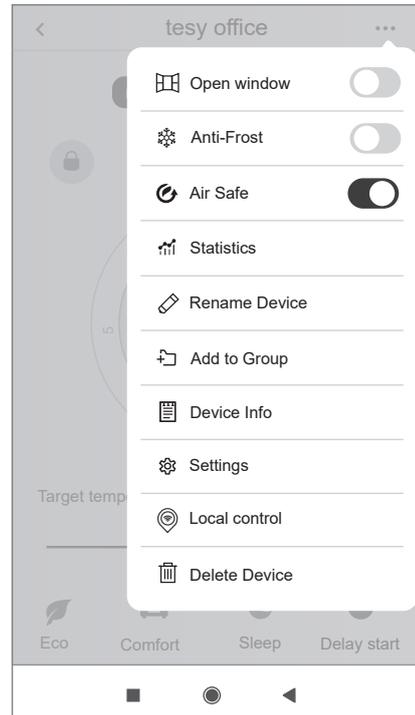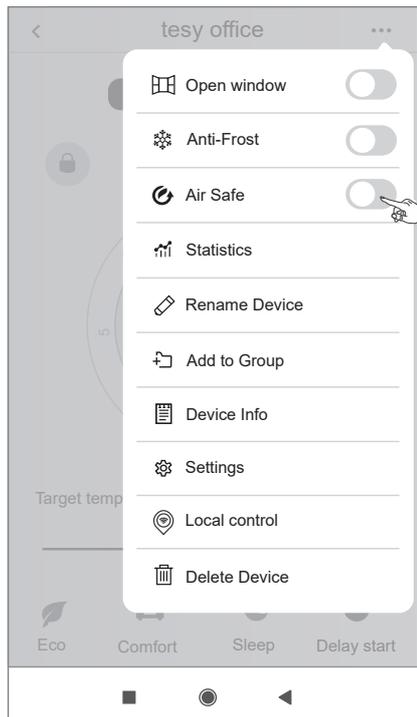



Statistics

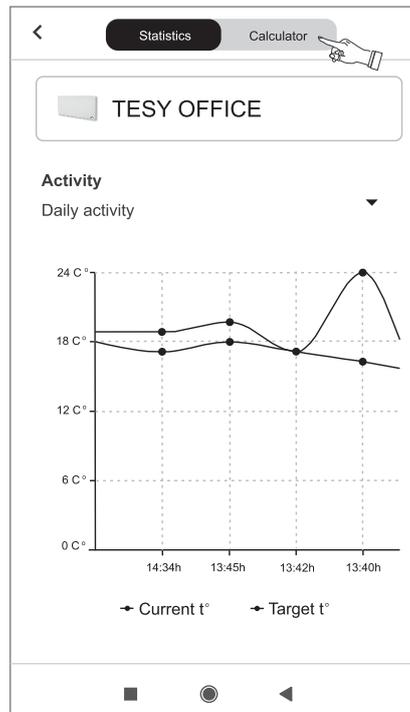
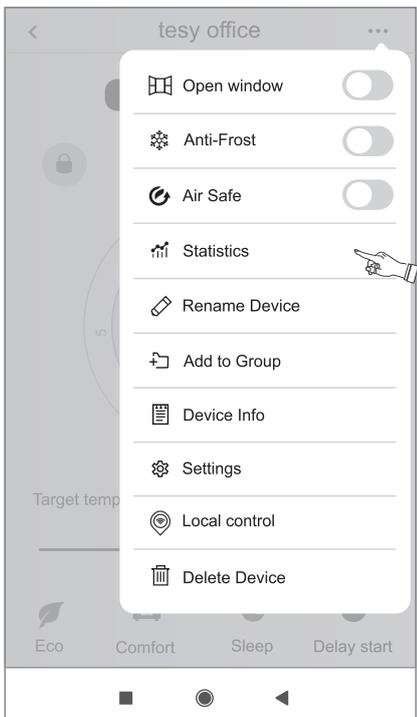


Statistics






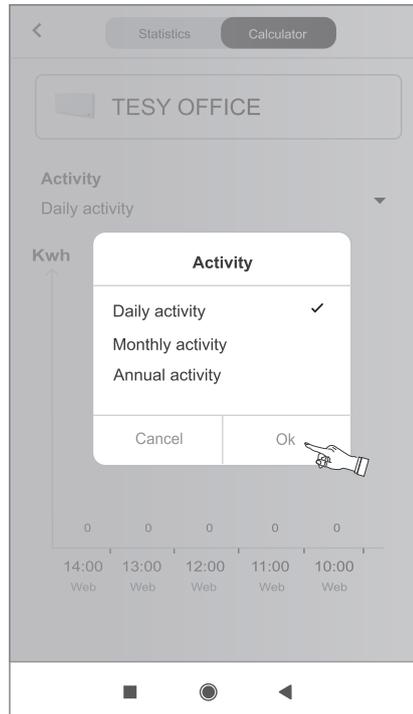
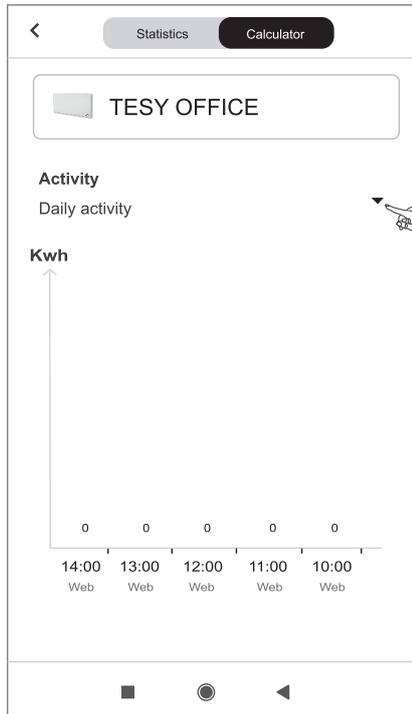



Rename Device

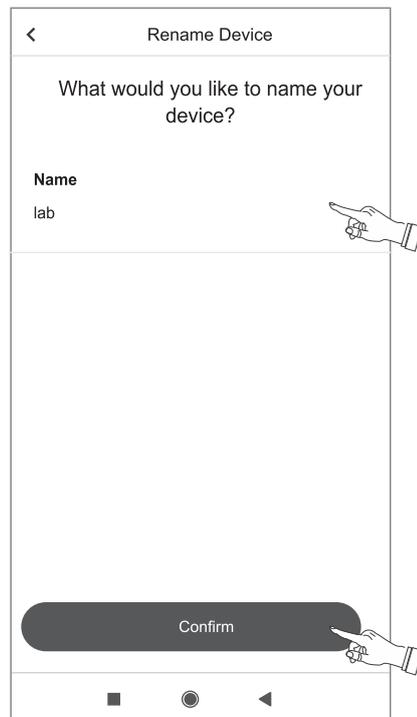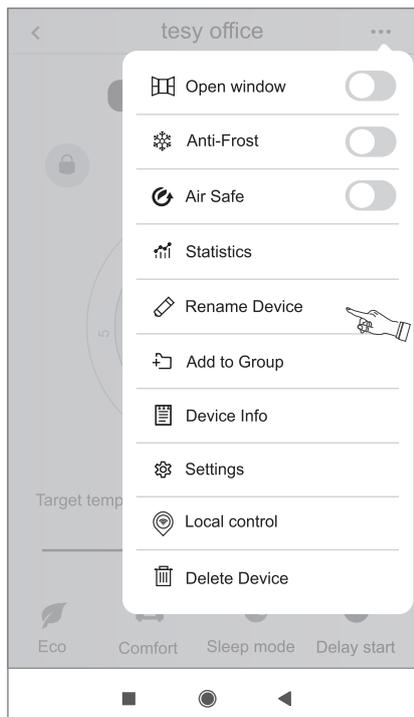

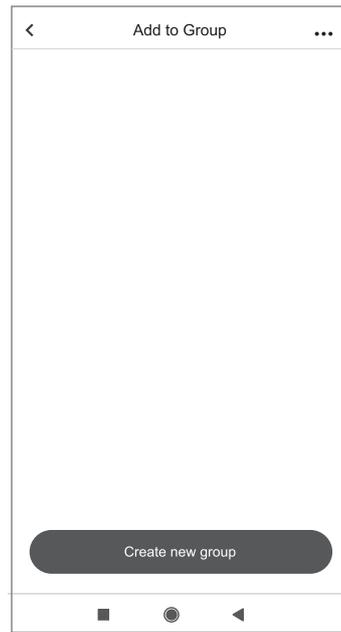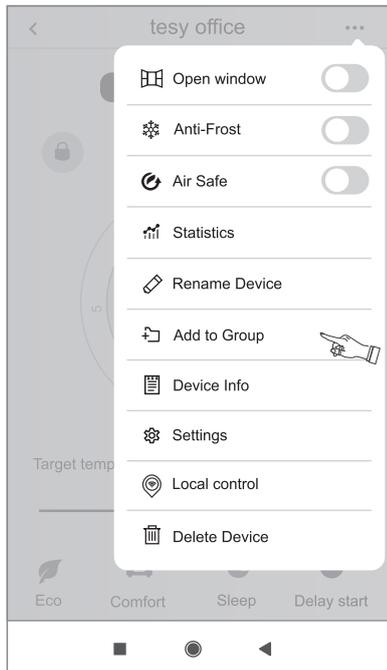


Add to Group

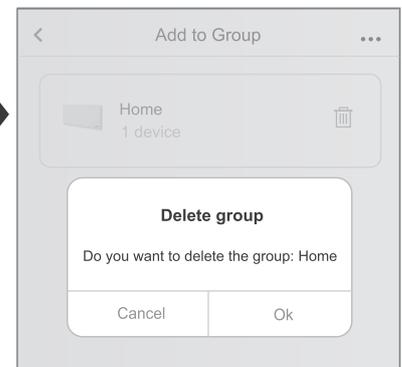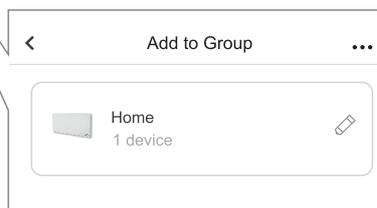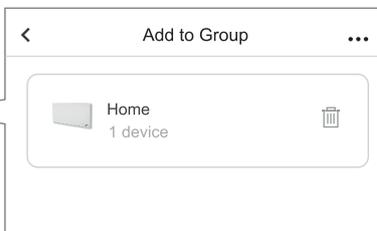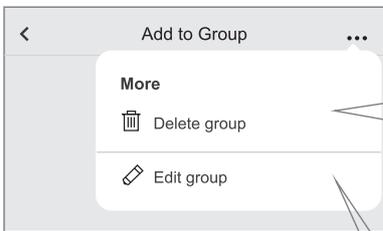
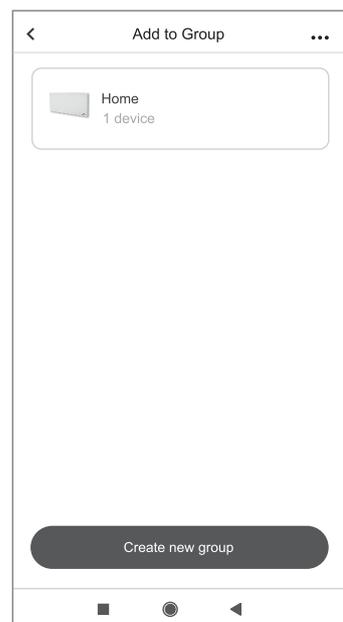
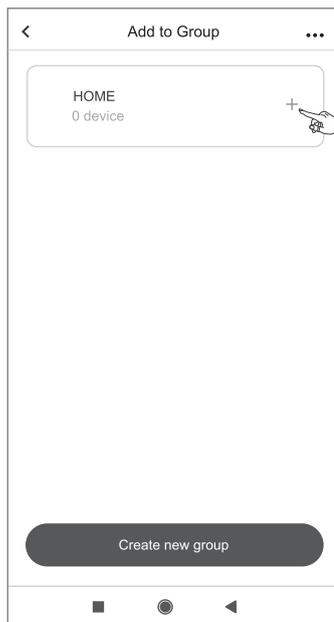
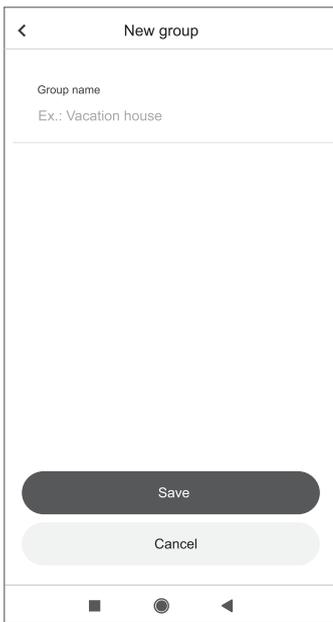







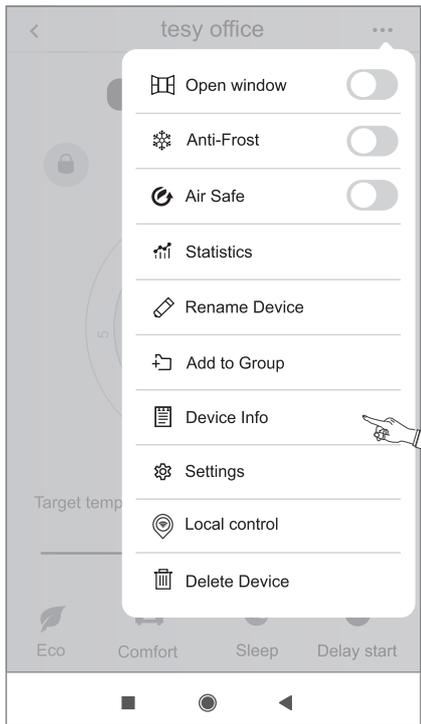





Device info	
App version	16
Mac address	3C:71:BF:B5:AE:74
Firmware version	4.37

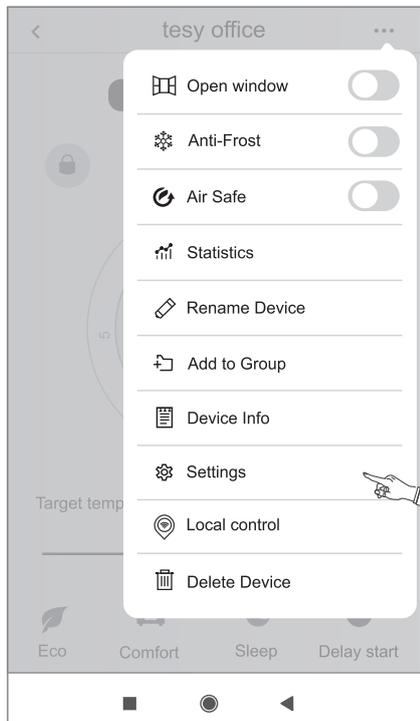

Settings	
Eco	>
Comfort	>
Sleep	>
Change Wi-Fi network	>
T°C Correction	>
World Clock	>

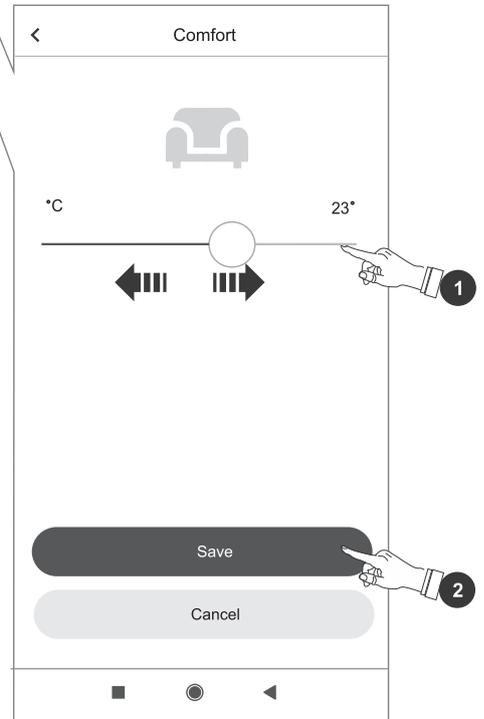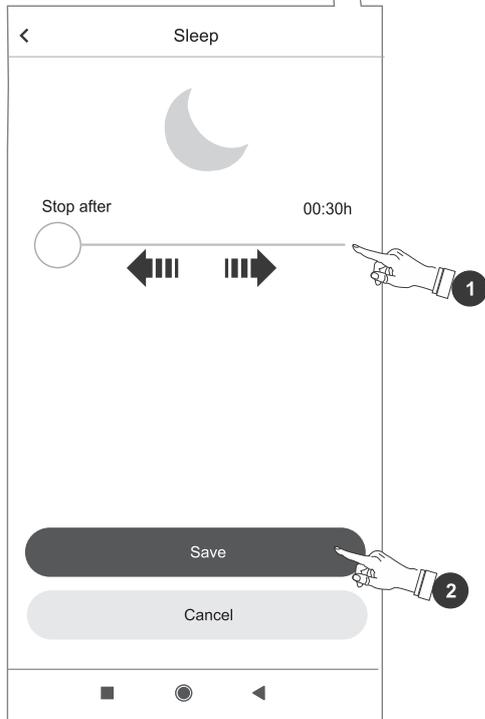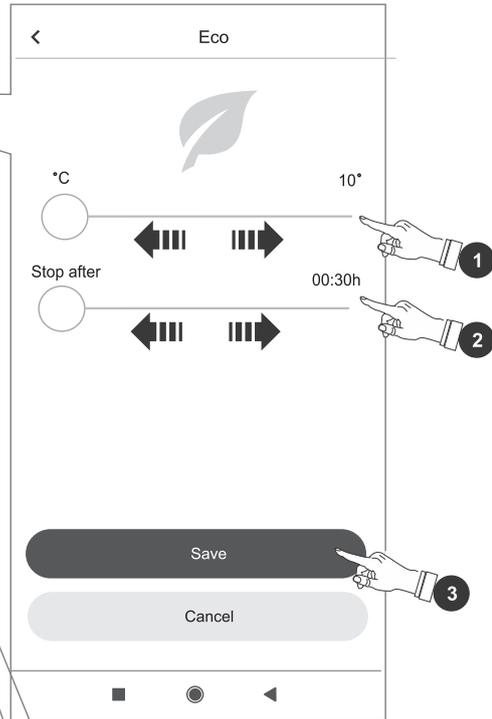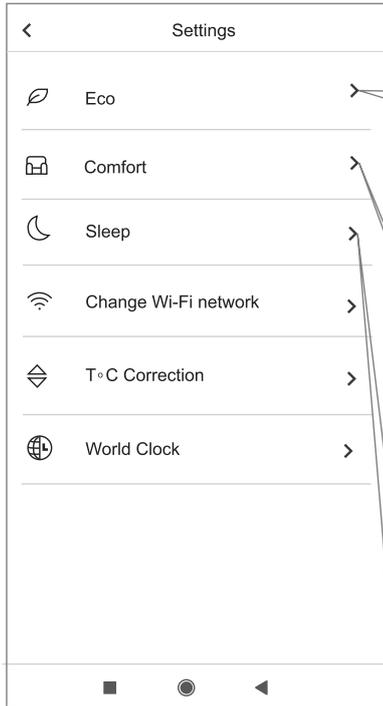

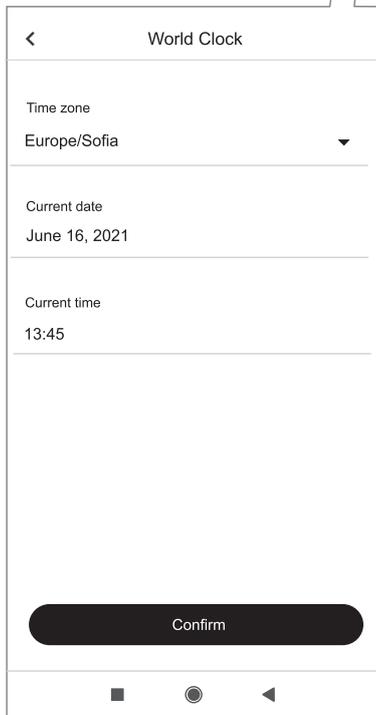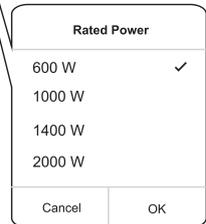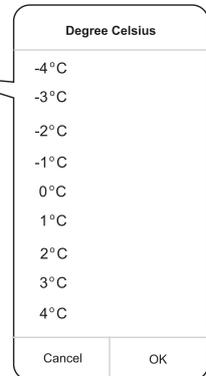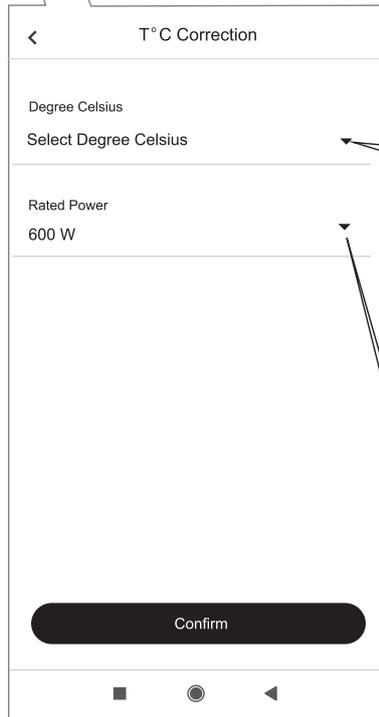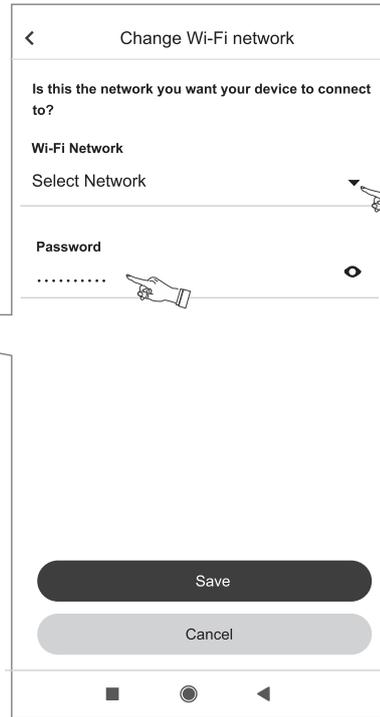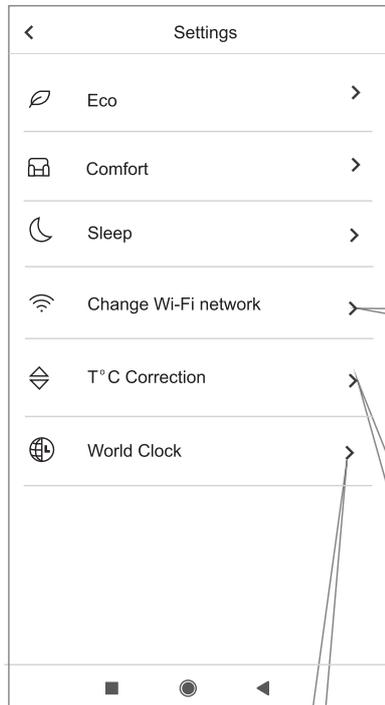

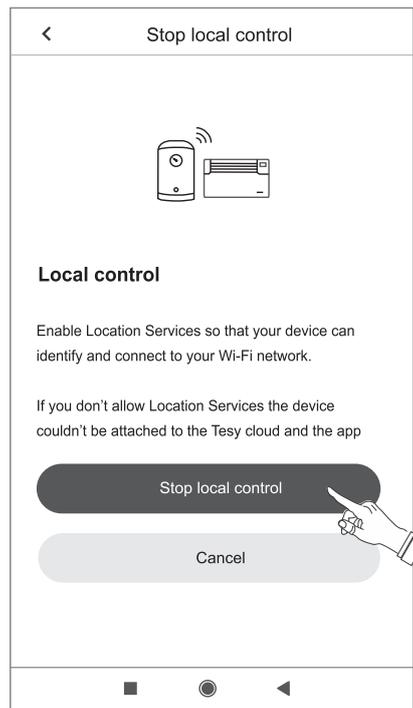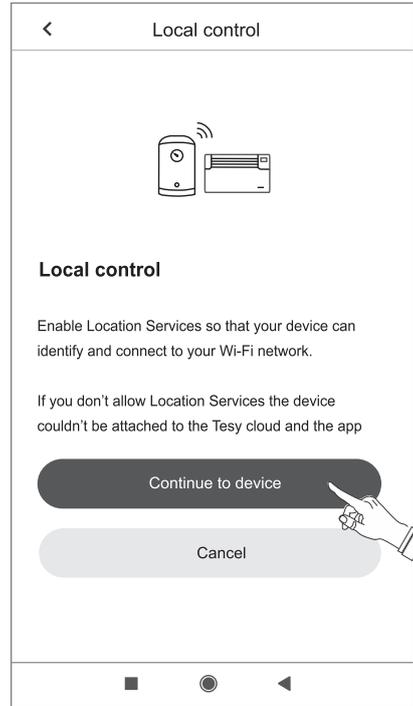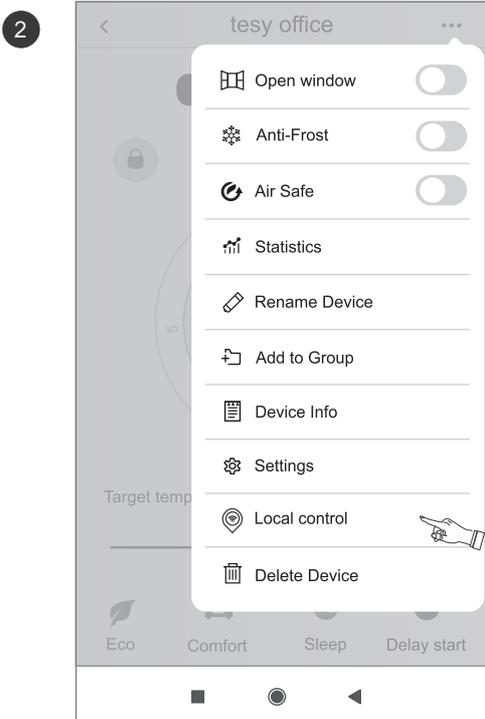

Delete Device

