1800W Portable Power Station

Ideal portable emergency power for outdoor camping and home use.











220~240V

User Manual

Content

1. Disc	laimer1
2. Prod	luct List 1
3. Fund	ction Instructions2-5
3.1 Func	tion Description2-4
3.2 LCD	Screen Description 5
4. Dire	ction of Use 5-11
4.1 Thre	e Different Recharge ways 6-8
4.1.1. \	Wall Socket with Standard Adapter 6-7
4.1.2.	Car Charger 7
4.1.3.	Solar Panel Charger8
4.2 Dis	scharge Output Instructions 9-10
Main Pov	wer Switch Instructions9
4.2.1 A	C Output Instructions 10
4.2.2 D	C port Output Instructions10


4.3 LED Light Instructions 10-11
5. Appliances Run Time Instructions 12
6. Frequency switching operation13
7. Storage & Maintenance 14
8. Main Technical Specification15-16
9. Fault Code and Trouble Shooting 17

1. Disclaimer

- 1. The Company is not responsible for any damage caused by force majeure (e.g. fire, typhoon, flood, earthquake or customer's negligence, abuse or use in other unusual circumstances).
- 2. The Company is not responsible for the loss caused by the use of non-standard connectors.
- 3. The Company is not responsible for any damage caused by the wrong operation which didn't follow the instructions of user manual.


2. Product List


No.	Items	Qty.
1	Portable Power Station	1
2	AC Adapter	1
3	7909 connected wire for Vehicle's 12V Output	1
4	User Manual	1
5	Warranty Card	1

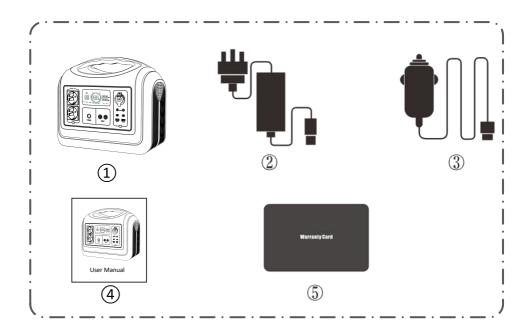

3. Function Instructions

3.1 Function Description

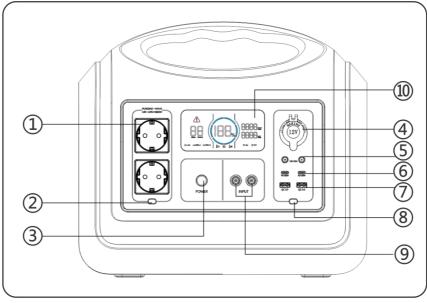


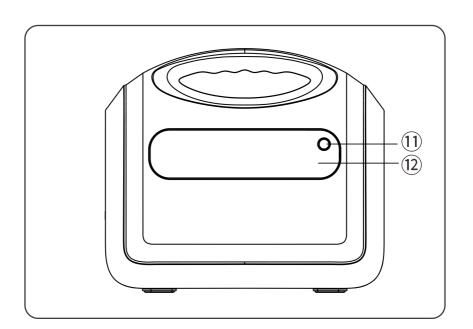

1.AC Output Port 2.AC Output Power On/Off Switch 3.Main Power On/Off Switch 4.12V Car Charger Output Port 5.12V DC5521 Output Port 6.USB-A Output Port*2 7.USB-A Output Port*2 8.DC Output Power On/Off Switch 9.7909 Recharging Input Port 10.LCD Screen 11.LED Light Power On/Off Switch

12. LED Light

3.2 LCD Screen Description

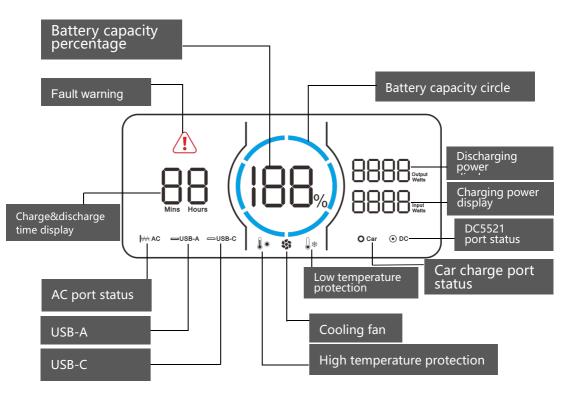

4. Direction of Use

The LCD Battery Capacity Ring indicates the left capacity. The ring has been divided into 6 equal segments, accounting for about 17%~35%~51%~68%~85%~100%. When discharging, the blue segments of the ring will disappear according to the real-time left capacity. When recharging, the blue ring will be

flashed clockwise along the trajectory, and the digital number will show you the real-time input charging power. After full charge, the whole blue ring will light up and remain stable. After charging, please unplug the adapter.

CAUTION


- There will be efficiency loss of the input power which displays on the LCD screen.
- Please charge the Product at the ambient temperature of 0-40℃.
- Must make sure that the connection is in good contact, and adapter work normally, otherwise, it may cause potential safety hazards.
- In order to reduce the power consumption and prolong the battery lifetime of the Product, please turn off all the switches when it is not in use.

4.1 5 Different Recharging Ways

4.1.1 Standard AC Adapter


Please connect the 7909 input charge port of the Product and wall outlet with our standard 200W AC Adapter, it takes approximately

4 hours to charge with a double-adapter.

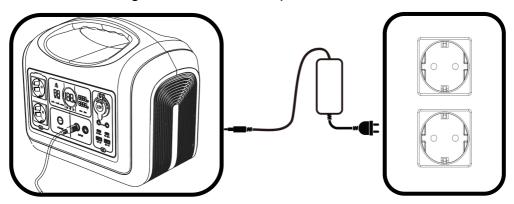


4.1.2 Car Charger

Please connect the input 7909 charging port and the vehicle's 12V cigarette output port with our standard 7909 transfer cables. It will take at least 15 hours to full charge.

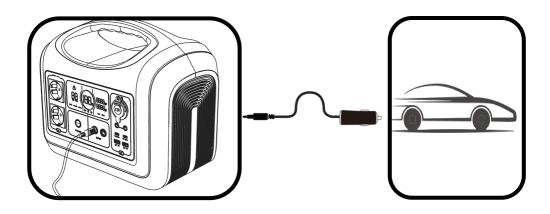

4.1.3 Solar Panels

Using the product accessory 1-2 7909 teleconcut, 4 100W solar panels are connected to the product 7909 input port, and the screen blue energy bar is scrolled, and the input power is displayed, and the product has begun to charge. The product can be entered solar charge power is related to the light intensity, the stronger the light, the larger the input power, and the maximum support is 480W.

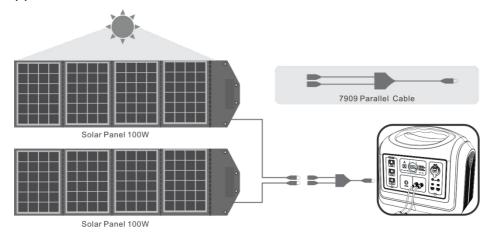

CAUTION


In order to get maximum solar conversion efficiency, please keep the solar panels at a vertical angle to the sun's rays.

4.2 AC Output Instructions

Main Power Switch

POWER ON: Long press the main power button for 3 seconds, the background light around the button will lit up, and the LCD screen will light up too, the blue battery ring and battery percentage will display.

POWER OFF: Long press the main power button for 3 seconds, the background light and LCD screen will be off at the same time.

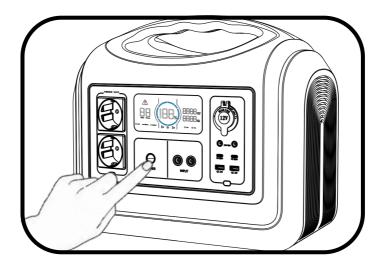

4.2.1 AC Output Instructions


When the main power button is turned on, gently press the AC Output button ②, the icon in the LCD screen will lit up. It means the function of this area can be used normally. Press this button again, the icon will disappear, and the function of this area will stop working.

4.2.2 DC5521& Car Charger Output Instructions

When the main power button is on, press the power button DC, all the function in the DC output zone will be activated, and the corresponding icons OC, OCar, OUSB-C and OUSB-A on the LCD screen will lit up, the car charge and DC ports in the area can work normally; Press the power button again, the corresponding icons OC, OCar, OUSB-C and OUSB-A on the LCD screen will go out, and the functions in the area stop working.

4.3 LED Light Instructions

LED light is under the control of main power button. The power on/off button is on the other side. Press once, 50% brightness, press again, 100% brightness, then press again, it will change to SOS flashing mode, and press once more to power off.

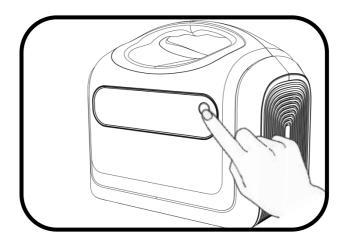


5. Appliances Run Time Instructions

Icons	Appliances	Run time
	3110mAh phone	131 times
	30Wh Tablet PC	43.6 times
	60Wh Laptop	22 times
<u> </u>	10W Light	131 hours
	16Wh Camera	82 times
	60Wh Drone	22 times
	50W Mini Cooler	26 hours
	30W Fanner	43.6 hours
	30Wh Electric Tool	43.6 times
	10W WIFI	131 hours
32′	110W TV	12 hours
	40W Ventilator	33 hours

6. Frequency switching operation

- 1. In the power-on state, turn off the AC output, and press the main power button & the DC button(USB output) at the same time to enter the switching frequency menu;
- 2. Press the AC outuput button to switch the frequency, the setting the frequency will be flashing;
- 3. Long press the main power button to set the frequency,
 SUC will be displayed if the setting is successful, and then
 long press the main power button to exit the setting menu.

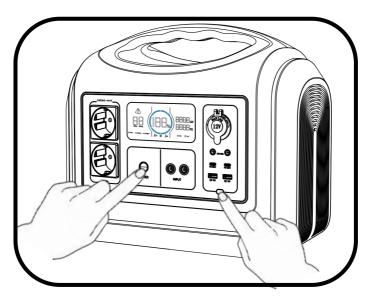

7. Storage and Maintenance

- When the device is not in use, please turn off all switches to reduce product power consumption and prolong the product battery lifetime;
- Please keep the surface of the product clean, ensure that the product does not contact gasoline, volatile oil, thinner, kerosene, etc., to avoid corrosion of the product shell;
- Please store the product in a dry, ventilated and dustless environment. Storage temperature range in 0~40℃, avoid direct sunlight;
- Please fully charged the battery before storage, and charge it at least once every 6 months, to avoid dormancy of the battery, which will affect normal use;
- If the product needs to be transported long distance, please keep the battery power between 40%~60%, otherwise there will be potential safety risks.

8.Main Technical Specification

Output Technical Parameters				
	Rated Voltage	220-240Vac		
AC Output	Rated Power	1800W		
AC Output	Peak Power	4000W		
	Frequency	60Hz		
DC 12V & Car	Rated Voltage	12V		
lighter Output	Rated Power	10A		
USB-A Output	5V/3A; 9V/2A; 12V/1.5A (18W Max)			
USB-C Output	5V/3A; 9V/3A; 12V/3A; 15V/3A; 20V/3A 【PD60W(left)/PD18W(right)】			
LED Light	Press once, 50% brightness, press again, 100% brightness, then press again, it will change to SOS flashing mode, and press once more to power off.			
Input				
Input Voltage		12V~30V		
AC7909 Input Power	2*200W Max			
Battery				

Rated Capacity	1488 Wh		
Rated Voltage	32 Vac		
Battery Type	LiFePO ₄		
Common Information			
IP Grade	IP21		
Working Temperature	0~40°C		
Dimensions	15.15 x 9.56 x 13.38in (385*243*340mm)		
Net Weight	33lb (15.0kg)		

9.Fault Code and Trouble Shooting

Code	Description	Performance	Trouble Shooting
E00	AC Short Circuit Pr otection	flashing, no output	Press the AC Output Power on/off button for recovery.
E01	Over Load Protection	flashing, no output	Flashing icons indicates which circuit overload. Press corresponding button for recovery.
E02	Battery Low Voltage Protection	Related function icons flashing, Corresponding terminals no output	Press corresponding button for recovery.
E03	AC&DC Output run simultaneously, system overload	AC no output	AC&DC Output run at the same time, the total load power is over 1200W. Shut down the AC output, or lower down the load of AC output,priority support the DC output.
E04	Inverter fault	flashing, no output	Inverter output voltage too high/low; Inverter over temperature; DC main line voltage too high/low; Loaded current abnormal.
E05	BMS fault	flashing, other function icons Can't lit up, no output	Charge over voltage protection; Discharge under voltage protection; High Temperature Protection; Low Temperature Protection; Short Circuit Protection.