

Quick guide for the SCANGRIP APP

Table of contents

1.	Set	tings	2
2.	Sca	nning and connecting	3
3.	Gro	up function	4
3	3.1.	Units screen	4
Э	3.2.	Groups screen	5
Э	3.3.	Group control screen – Work lights	6
Э	3.4.	Group control screen – UV lamps	7
4.	NO	VA 12K	8
5.	NO	VA SPS series	9
6.	MU	LTIMATCH Series1	0
7.	ARE	EA 10 SPS	1
8.	NO	VA CAS / CONNECT series	2
9.	ARE	EA 10 CAS / CONNECT	3
10	SITE	E LIGHT Series	4
11.	UV-	EXTREME Series 1	5
1	1.1.	Safety screen1	6



1. Settings

Settings Enable or disable notification of low battery or adjust the time in which		
the app scans for new lamps.		SCANGRIP
Consent Review and change your consent to gathering of	Settings	
analytical and crash data.	Consent	0
Web Site	Web Site	• #
Press to access our <u>Web site</u> .	Privacy Policy	0
Privacy policy Press to read the privacy policy.	Help	0
	AREA 10 SPS	0
Help Press to access the Scangrip App Quick Guide.		0
		0
)



2. Scanning and connecting

Lamp status

Is shown when an active connection is made. Displays power status and if the lamp has PIN lock enabled.

Select up to 4 lamps Select a lamp by pressing their name or

the yellow selection dot.

Control > Lamp

Press "Control" and select a lamp to control one of the connected lights.

Refresh/Scan

Press the update icon or swipe down to update the list of lamps.

(SCANGRIP Units NOVA 12K NOVA 12K AREA 10 SPS 0 AREA 10 SPS 0 AREA 10 SPS 0 AREA 10 SPS NOVA 12K 0 NOVA 12K \cap Control Groups

Groups

Press "Groups" to access Groups screen. Can also be accessed by swiping to the left.

NOTE:

If the lamp or no lamps can be found on Android, check that location data (GPS) is enabled and the app has permission to access location.



3. Group function

3.1.Units screen

Select up to 4 lamps Select a lamp by pressing name or the yellow selection dot. NOVA 10K, NOVA SPS and NOVA CAS lamps can be grouped. So can AREA 10 SPS and AREA 10 CAS. Other models can only be grouped with lamps from the same series.		(SCANGRIP
Control -> Create group Press "Control" and select "Create group" to create a group with the connected lights. Groups Press "Groups" to access Groups screen. Can also be accessed by swiping to the left.	Units NOVA 12K NOVA 12K NOVA 10SPS MULTIMATCH 8 NOVA 12K NOVA 12K	 ♥ ♥ 0 ♥ 0 ♥ ♥ ♥ ♥ O V O O




3.2.Groups screen

Control Press to control or delete the selected group.

Group selection Select a group by pressing name or the yellow selection dot.		(SCANG RIP
Units screen Press to access Units screen.	Groups 10k/SPS mix Area 10 Group Match 8 Group NOVA 10K Group SPS 10 Group SPS 4 Group	
	Units	Control 🗸



3.3.Group control screen - Work lights

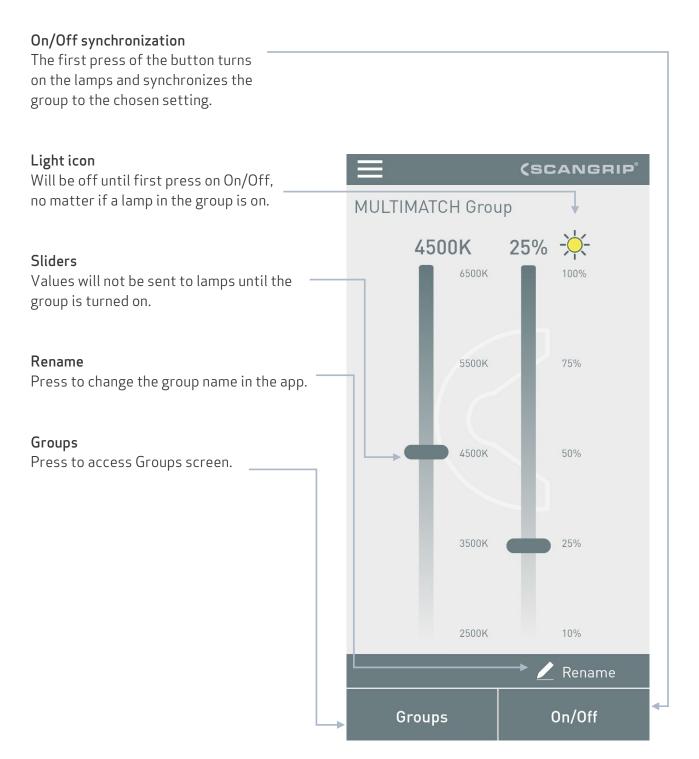

0.00000




3.4.Group control screen – UV lamps

On/Off synchronization

Pressing turns off all lamps if any is on.

Otherwise, pressing will enter the warning screen for the user to confirm before turning on all connected lamps with the set curing time.

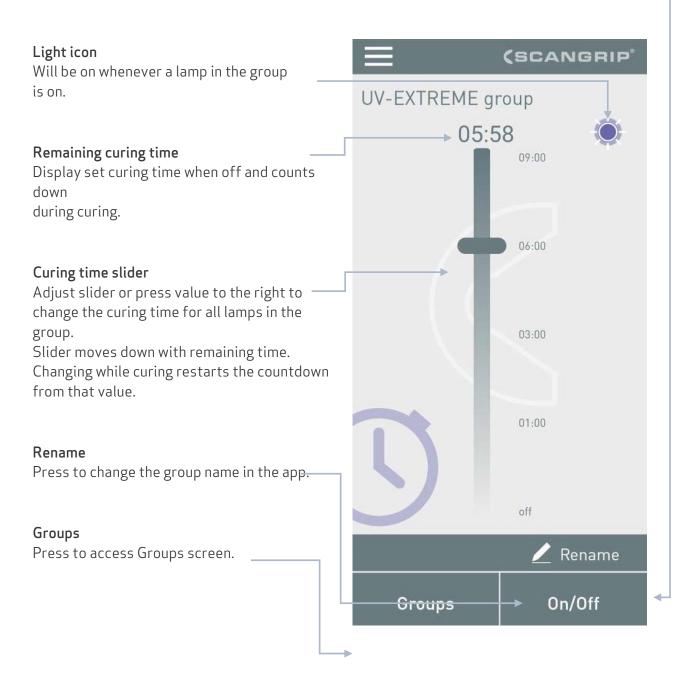



4. NOVA 12K



changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider


Adjust slider or press value to the right to change the brightness.

Rename

Press to change the name of the lamp in the – app.

Units

Press 'Units' button to return to the Units screen.

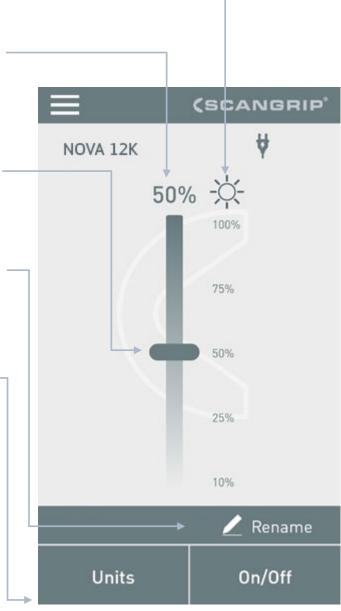




5. NOVA SPS series

Power status

Shows operation time left and battery level as well as when in back-up mode and connected to mains power. Time left is updated every time a command is sent.

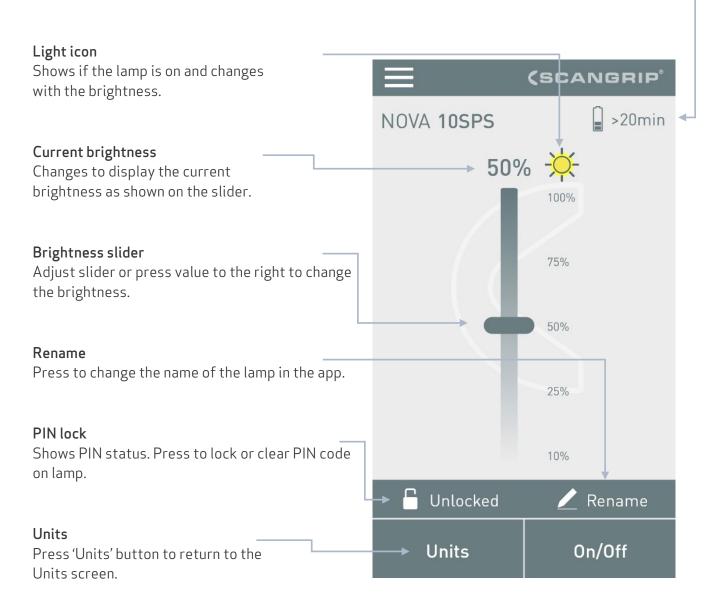




6. MULTIMATCH Series

Power status

Shows operation time left and battery level depending on whether it is connected to power supply or is in back-up mode. Time left is updated every time a command is sent.

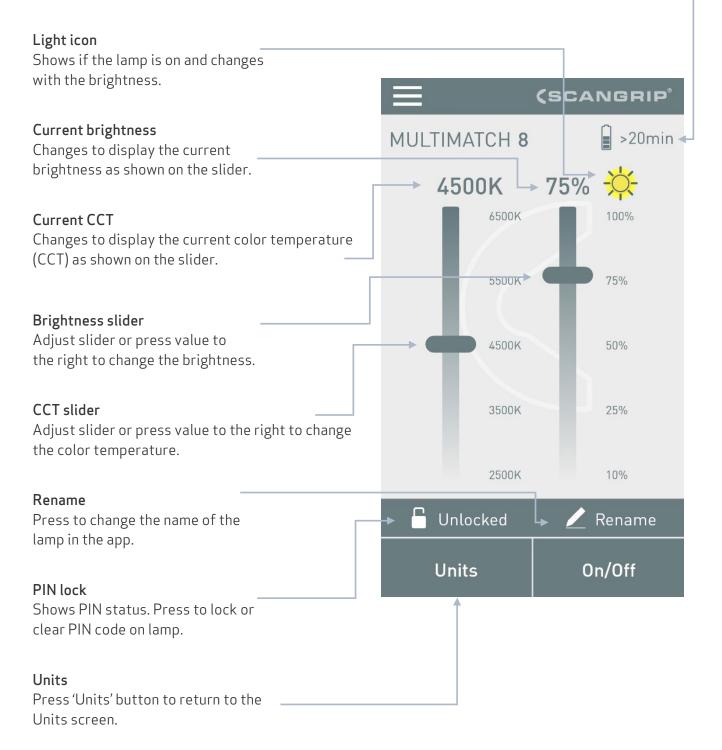




7. AREA 10 SPS

Power status

Shows operation time left and battery level as well as when in back-up mode and connected to mains power. Time left is updated every time a command is sent.

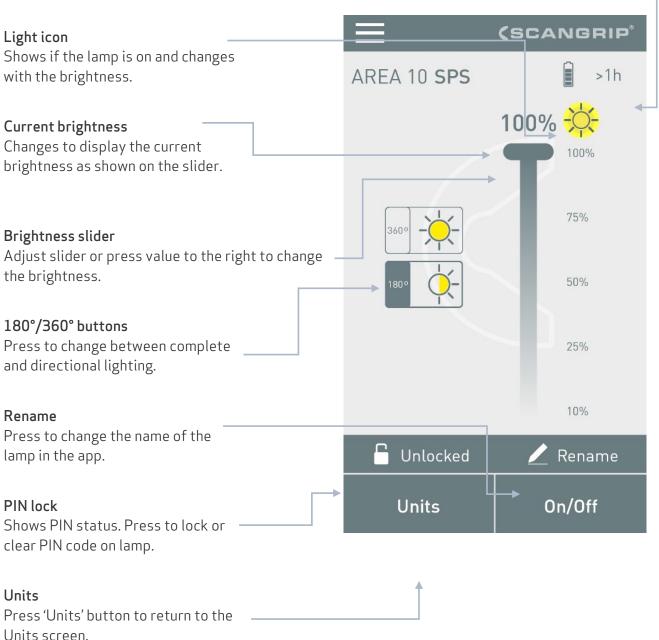




8. NOVA CAS / CONNECT series

Power status

Shows remaining battery in % and battery level depending on whether it is connected to power supply or is in back-up mode. Battery level is updated every time a command is sent.

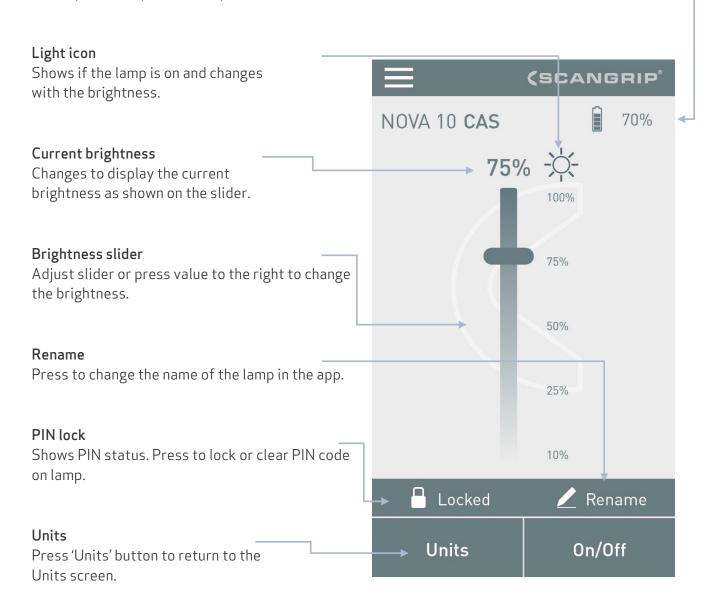




9. AREA 10 CAS / CONNECT

Power status

Shows remaining battery in % and battery level depending on whether it is connected to power supply or is in back-up mode. Battery level is updated every time a command is sent.

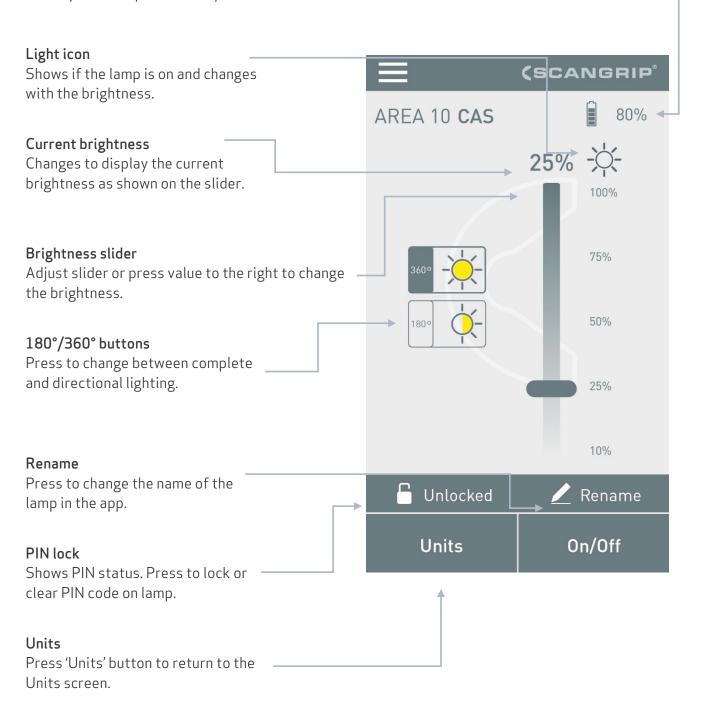



10. SITE LIGHT Series

Power status

Only mains powered. A loading spinner appear until the command has been received.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units


Press "Units" button to return to the Units screen.

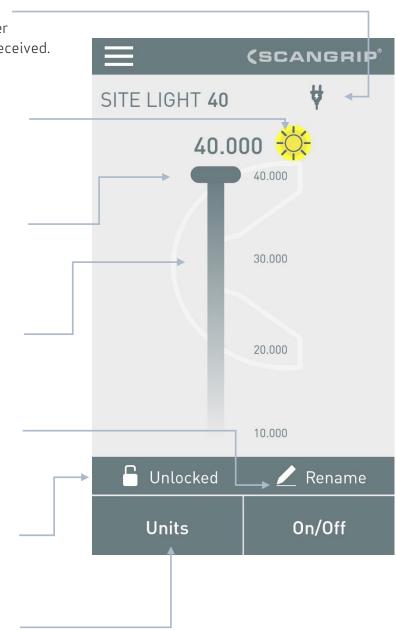

030720-2



11. UV-EXTREME Series

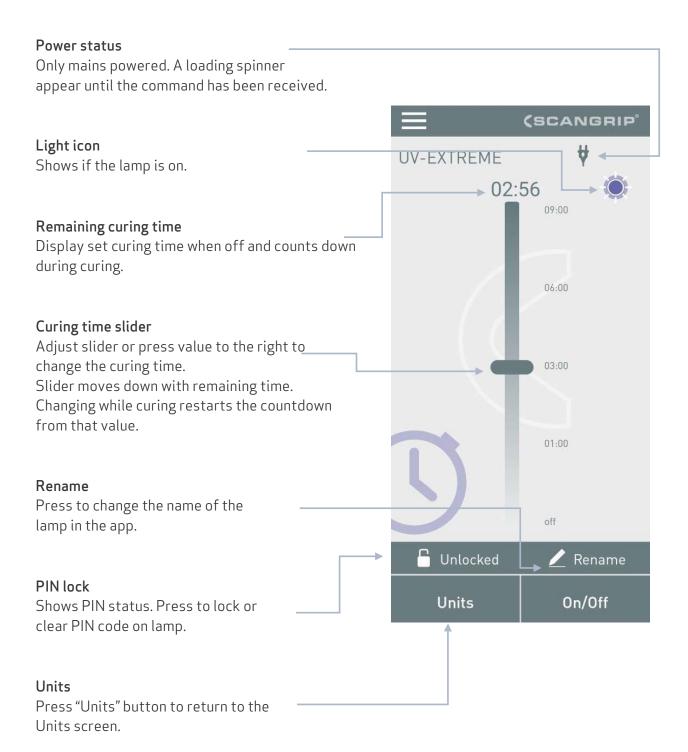

30720-2



11.1. Safety screen

