

the manual of your mobile phone or electronic product while reading this manual.

Is vital to the battery performance of the XO-PSA-300. Please connect the XO-PSA-300

 Please read the manual carefully before using the product Please keep the manual properly for future reference

Please fully understand the contents of the manual to use the product correctly

2.About Charger

- the manual carefully before using the product 1.About storage
- Do not expose the product to an extreme cold or hot environment (below 0°C or above 40°C) for storage;
- Do not place the product near the vent of a heating device; • Please avoid putting the product in a rainy or wet environment; Please keep it away from flammable liquids, gases or explosive materials;
- Please keep it away from dust or a dusty environment; • Do not store the product with coins, jewelry, keys and other metal objects; otherwise, it will damage the product, reduce the charging capacity, shorten the service life, or even explode. The product should be stored in a
- cool and dry environment. • Do not use a defective charger or a charger of mismatched output voltage; overheat and cause fire. Please use the original charger, as incompatible or unqualified chargers
- may cause danger or damage the product; Do not use chargers without safety certification to charge the product. 3.About storage of leaving unused
- Please make sure to charge it at least once every 6 months to extend the life of the product (battery cells). When taking out the product after long-term storage, please fully charge it before use. When the product charger is not in use, the power must be disconnected at both ends.
- 4. About disposal of defective \old battery and charger Please dispose of scrapped products in accordance with regulations, and do not dispose the built-in batteries as domestic garbage to avoid explosion
- 5.Do not squeeze or pierce the product, and do not subject the product to high external pressure, otherwise it may cause internal short-circuit, overheating, burning or explosion. 6.Do not place this product in the reach of people with low physiology,

perception, and mentality (including children)and people without

experience and related knowledge. Avoid the above people from using

Warranty card

Please store the warranty card well and fulfill your information and

Thank you for your trust and support to our products. The warranty card is attached with each product. Please keep it properly as a product warranty certificate. If it is lost, it will not be replaced.

Phone Number: .....

Thank you.

this product to avoid misuse.


send back together with the product.

Address&Postal Codes: ....

Cause of Malfunction:

 Failure or damage caused by force majeure likeearthquake, fire disaster, tsunami Product packaging box and accessories are not within the scope of warranty If your product has expired the warranty period, we offer compensated

• 12. Name and content of toxic and hazardous substances or elements in the product

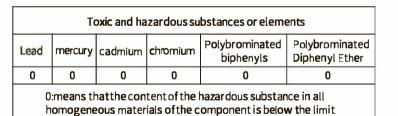

requirement specified in the 2002/95/EC (ROHS) standard





 AC Input prohibited! Do not disassemble, soak in water or leave in fire!

- To protect you and others from harm and the product from damage, please read
  - the equipment parts and affect normal use. 9. About the environment temperature for charging. • Do not store the product in hot or cold places, please use the product in an

environment of 15~35°C;

- The temperature inside a closed car in summer can be as high as 80°C (putting the product in a car may put you or your car in danger.)
- Do not expose the product to direct sunlight for a long time. When the product heat dissipation is not started, and the temperature of the battery cells rises sharply. When charging the product, the operating temperature
- should be between 15°C and 35°C; • Do not store the product near or inside water heaters, microwave ovens, hot cooking products, or high and low pressure parts. The product may
- 10.About product cleaning Use a dry towel or eraser to wipe the product or charger. Do not use corrosive chemicals or cleaner.

in order to extend the cycle life of the battery cells.

11. Please do not disassemble, repair or modify the product, otherwise warranty will be invalid.

- 7. The product cannot be used as a substitute for the mains AC power supply • 2. Operation Cautions
- 8.Do not paint or paste paper on this product. Paint and stickers may block
- it will be back to normal. 2. When using this product, please do not cover it with towels, clothing, etc.,
- and make sure to keep more than 10cm of heat dissipation space around 3. Please keep the product and electrical products dry to prevent moisture
- and liquid from entering the product, otherwise it may damage the internal parts or circuits of the device. Do not turn on the product when it is wet, if the product is already turned
- on, please turn it off immediately.(If the product cannot be shut down, let it be and contact the after-sales service center immediately.) 4. Do not use the product in an environment where dust or dusty substances are concentrated, which may cause product failure, fire or explosion.
- as gasoline, gas, chemical agents, mines, etc., otherwise it may endanger safety Always operate in accordance with regulations, instructions and
- cause damage to the product. 7. Do not use the product during thunderstorms. The product may
- malfunction and increase the risk of lightning strikes.
- 9. About recharging the product Please use XOb and original charger to charge the product.

Do not exceed the charging time of this product. Please unplug the charger

- someone is present for easy inspection. Due to energy conversion during charging, this product may heat up. This is a normal phenomenon. Please be careful when handling.
- 10.About the discharge of the product After discharging the product, when the remaining power is the last one or the indicator flashes, stop using it immediately and fully charge it before

1. When using this product for the first time, due to low-power transportation, the actual power level may not match with the power indicator, please charge and discharge the product for 2-3 recycles and

question.

• 3. Package contents

XO-PSA-300 Manual

5. Do not use the product in flammable and explosive environments such

signs in potentially explosive environments. 6. Do not use the product in a corrosive environment, otherwise it will

8. Please place the product on a flat surface to prevent the product from falling, otherwise it may damage the product or cause parts failure.


when fully charged. It is recommended to charge during the day or when

using it, which can extend the battery life.

## The contents will be different according to the needs of different

regions. Please contact with XO service center if you have any

Packaging List Type

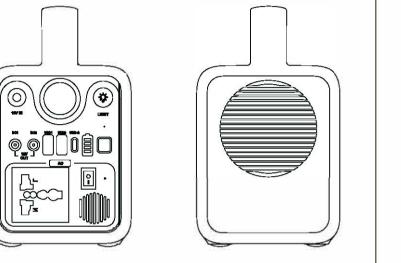

T**o**taloutput Dimension

## 4. Product Introduction


and camping, nouse
mobile office, medic
repair, communicati
with most of digital a
rate under 300W.
42
• 5 Specification


# 230Wh (TYP) 72000mAh (Lithium iron phosphate cell) AC Output: 200V-240V-50Hz 300W (Pure Sine Wave) 12V~24V==1A-5A (Max 60W) 12V==6A (DC 1+DC 2) DC 5V--3A/9V--3A/12V--3A/15V--3A/20V--3.25A DC 5V==3A/9V==3A/12V==3A/15V==3A/20V==3.25A DC 5V==3A/9V==2A/12V==1.5A DC 5V==3A/9V==2A/12V==1.5A 268x110x185mm (about)

DC input USB-A1 USB-A2 DC 12V output -

Dissipation grid (air out) ——

XO-PSA-300 is a multi-functional emergency energy storage power supply. It adopts UL authorized automobile power cell and efficient SPWM inverter conversion technology. It is more durable and has longer cycle life than ordinary battery cell. It enjoys the reputation of "outdoor mobile power station". It is widely used in outdoor party and camping, household emergency, outdoor live broadcasting, ical rescue, emergency rescue, power equipment ion emergency and other fields. It is compatible appliances and household appliance of power

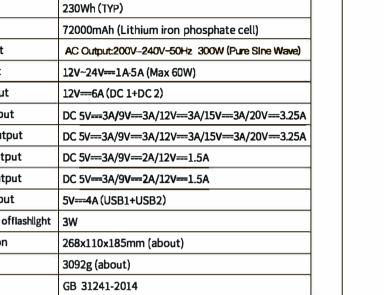

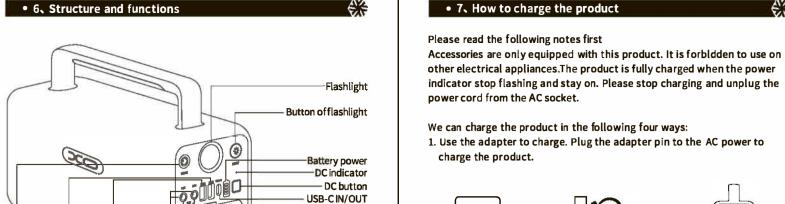


-----AC indicator

———AC button

-Dissipatìon grid (air in)

2. Charging with solar panel. Connect one end of the cable to the solar panel (solar panel needs to be purchased separately), and insert the other end into the DC input "12V IN" interface of the product to charge the product (it is recommended to buy solar panels specially designed for this product).

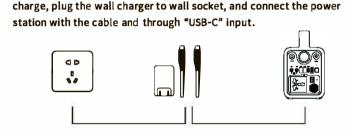

3. Charge with a cable with car charger plug

4. Chargewith a PD/QC car charger

5. Charge with PD wall charger

to DC input "12V IN" interface of the power station.

charge when the car is in a non-starting state.

To prevent loss of the car battery, please do not use the car charger to

Plug a PD/QC car charger (need to purchase separately) into cigarette

Prepare a PD wall charger and a Type-C cable that support PD quick

other end of cable to "USB-C" port of the power station.

lighter port of a car, connect a cable to the car charger and insert the

## Connect the car charger plug to the cigarette lighter and the other end

8. How to use the AC output

Steps of using the AC output

can be seen on LED screen.

**Step 4:** Connect the appliance to the AC output.

please choose XO portable power supply with higher power.

protection of this product and turning off the power supply.

Step 2: Check whether the input voltage and frequency is compatible with

**Step 3:** Make sure the power rate is under the rated power rate of tinis product.

• The instantaneous power of some electrical equipment is greater than its

rated power. For example, the starting power of inductive load equipment

is generally 3-8 times of a certain rated power, and the starting power of

energy-saving lamp is dozens of times of its rated power. The above

Step 1: Turn iton with the AC button and the indictor will be on. Remaining power

situation does not rule out the possibility of activating the overload

- Please read following cautions before use: Please ensure that the input voltage and frequency of electrical equipment are consistent with the parameters of this product.
- Please ensure that the rated power of electrical equipment is less than 300W, preferably within 80% power range.
- If the rated power of electrical equipment is higher than 300W, the overload
- Since different countries have different plug type and voltage standards, to avoid danger, please carefully check if the appliance is compatible with the protection may be activated. • If the power of electrical equipment is higher than the rated power of 300W,

### • 9. How to use the DC output

When using DC output (include USB-A output, DC5.5output, Type-C PD65W output), please ensure that the digital device support the current of the corresponding output port, so as to prevent the interface from overheating and causing damage to the device.

2 ways to use USB output:

USB-A QC3.0: theorange USB-A can provide QC3.0 quickcharge, it will need a cable

1. Use USB ports to charge digital devices


supporting QC3.0 protocol to connect power station and the digital devices, long press the DC button and the powerstation will charge the digital devices quickly. USB-C: USB-Coutput interface, also known as Type-C, can provide PD fast charging

and the output power is 65W. It will need a cable supporting PD protocol to connect power station and the digital devices, long press the DC button and

the power station will charge the digital devices quickly. 2. Use DC5.5 output to power appliances Long press DC button, the DC indicator light will be on and two DC5.5 ports start


to provide power at voltage 12V and total current 6A. Connect to the DC5.5 output to power appliances. Long press the DC button again, the DC indicator will be off and the power will be cut. This DC5.5 output can provide power to DC fan and LED • Failure caused by incorrect installation, packaging and usewhich is notin

When you are not using DC output, please turn it offwith the DC button, otherwise the remaining power will be consumed by itself.

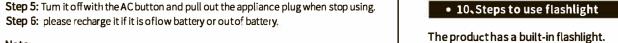

Long press the "Light" button for 2 seconds to turn on the flashlight, and To avoid power loss, please turn it off with the AC button when you are not

then press it to switch mode: normal constant mode →strong constant mode → SOS mode (internationally recognized Morse code rescue signal),

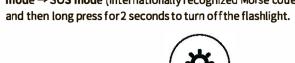

• Please don't use the flashlight directly point to eyes to avoid the damage from strong light.

11. After-sales services

### To ensure your legal right, please pay attention to: 1. The warranty card must be sealed by the seller before it can take effect.

- 2. The warranty card shall be properly kept by the user. If it is lost or altered,
- 3. In case of any failure caused by non-human reasons, you can take the warranty card to the designated repair centerfor free repair within the
- 4. Free maintenance service will be unavailable under the following circumstances even within the warranty period:

• You will no longer enjoy the warranty if you disassemble, refit or repair the product

- without permission: • Damage of surface coating and appearance is not within the scope of warranty;
- accordance with the requirements of the user manual; • Failure or damage caused by accidental, man-made reasons or environment and
- other factors (wrong operation, collision, unreasonable voltage, damp, etc.);

