

# Product manual



## DESCRIPTION

- 1) Power button
- 2) WiFi open key (invalid without WiFi product function)
- 3) Night vision light on button
- 4) Mark hole
- 5) Back clip
- 6) TF card slot
- 7) Night vision lamp
- 8) Lens
- 9) Video recording button
- 10) Camera button
- 11) Recording button
- 12) Reset hole
- 13) USB interface
- 14) Fixed nut

- 2: When turned on, insert the TF card, briefly press the recording button, the blue light starts to flash, enter recording mode, press and hold again, turn off recording and save, and the blue light goes out
- 3: When turned on, insert the TF card, briefly press the photo button, the blue light flashes once, and the photo content is automatically saved once
- 4: When turned on, insert the TF card, briefly press the recording button, the blue light flashes, and enter the recording mode. Short press again to turn off the recording and save, while the blue light goes out
- 5: Short press the night vision light on button, the blue light will stay on, the night vision light will turn on, short press again, the night vision light will turn off, and the blue light will turn off
- 6: Short press the WiFi key, the blue light will stay on, and WiFi will open. You can first scan the QR code to download the app, find the WiFi name starting with L13,,,,, and click to connect. The initial password is 12345678. Note (WiFi is optional) After connecting, you can view the contents of the memory card on the phone and download it to the phone (optional). After using it, short press the WiFi key again, and the blue light will turn off for 3 seconds before WiFi can completely exit. After not completely exiting, Immediate use of other functions can easily cause a crash. It is necessary to use a pinhole like object to align with the reset button and briefly

## Introduction to buttons and functions

- 1: Power button:  
Press and hold to turn on the device, then press and hold to turn off the device again (while the icon displays lights on and off)
- 2: WiFi on button:  
Long press to turn on WiFi, then long press to turn off WiFi again (with the icon displaying both on and off)
- 3: Night vision light:  
Long press to turn on the night vision light, then long press again to turn it off. (At the same time, the icon light remains on/off for a long time)
- 4: Mark hole:  
It is a radio hole for recording single tones
- 5: Back clip:  
Convenient to secure the chest
- 6: TF card slot:  
TF cards can support up to 128G
- 7: Night vision lights:
- 8: Lens:  
Rotate 90° up and down, rotate 180° back and forth
- 9: Recording:  
Long press and hold the recording button, the blue light flashes to enter recording mode, short press to stop and save the recording, and the blue light will turn off at the same time

poke it to restart (WiFi is an optional component, and the WiFi product function is invalid)

- 7: To modify the time, first insert the TF memory card into the local card slot and connect it to the computer using a data cable. The computer will display "Removable Disk" and click to open it. The time document will appear below. Double click on "time, txt" and a set of time format numbers will appear in the meeting. (Remember that modifying the time format cannot be changed, only numbers can be changed)
  - 1: As shown in the format 2022-01-01  
01:01:01N (N represents no time watermark display)
  - 2: Change the format to display 2022-01-01  
01:01:01Y (Y means no time stamp display).

The system defaults to no time stamp display. If you need a time stamp display, change the N at the end of the format to Y, and then change the number, year, month, day, hour, minute, and second. Click on the "File" option in the upper left corner of the document, select "Save", and the computer will pop up. The time setting is complete.

- 10: Take a photo:  
Press and hold the take a photo button once, the blue light flashes once, and take a photo to save one
- 11: Record button:  
Long press and hold the record button, the blue light flashes, entering the recording mode. Short press to stop and save the recording, while the blue light will turn off
- 12: Reset hole:  
When the machine crashes abnormally, use a needle hole like object to briefly poke and restart it
- 13: USB interface:
  - 1: Type-c is used to connect an external power source to charge the battery or provide working power
  - 2: Used to connect PC for memory/PC camera/video mode
- 14: Fixed nut:  
If equipped with a bracket, used to secure bicycles, electric vehicles, motorcycles for outdoor photography

## Basic operating instructions

- 1: Long press and hold the power button, the blue light will stay on and be in the power on state. Press and hold again, it will turn off and turn off the light. When charging, the blue and red light will stay on and turn off when fully charged

## Intelligent HD recorder

## Product certificate



GoPlus CamPro  
(matching)

WiFi name: L13 switch  
Initial password: 12345678