

ESC adapter for manual torches


TOPICS:

ESC Adaptor

ESC Adaptor (Manual Torches WF 15i,25i,30i)

EURO Connector side

FSC Connector side

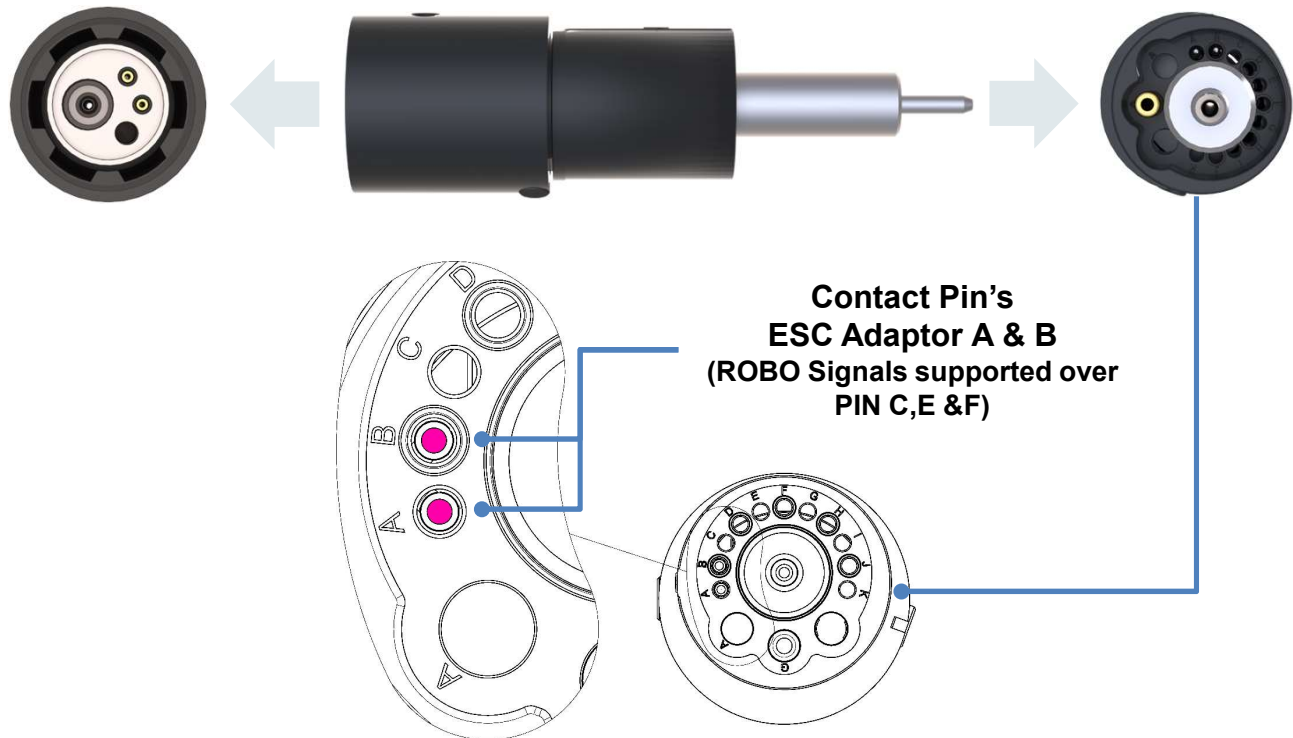

Please Note:

The wiring of the manual wire feeder WF15i,25i and 30i are different compared to the ROBO Type wire feeder types WF 15iR, 25iR and 30iR.

To use a BINZEL ROBO Euro connector cable assembly with the ESC Adaptor and ROBO type wire feeder WF XXi R is not generally possible.


Please consider with shock sensor based cable assembly it is not possible to use the shock sensor function. The air blast function is also not supported for all cables over the internal air blast support of the WF XXi R feeders.

CONNECTION



1.
Attach the pullout safeguard to the wire feeder.

2.
Fix the pullout safeguard with the screw.

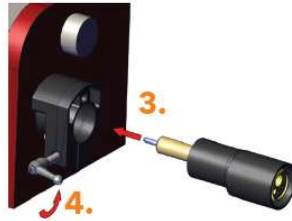

3.
Insert the adapter into the pullout safeguard.

4.
Secure the inserted adapter by pressing the clamp lever upwards.



5.
Insert the cable assembly into the adapter.

6.
Secure the cable assembly by a right turn.



7.
Attached cable assembly.