 

C313X Quick Guide

Unpacking


Please make sure the package contains the following items:



Product Overview Front Panel

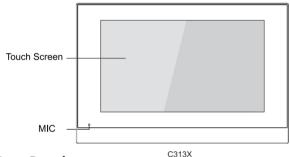

Rear Panel

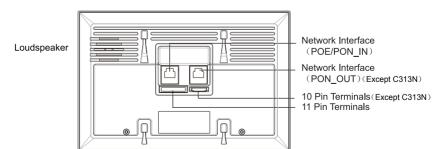

*NOTE:C313N does not have PON_OUT Interface.



 
Installation

Without 86 embedded box in the wall




Mark two fixation holes through wall bracket on the wall the distance between which is 60mm. Make sure the all cables can be passed from the middle of wall bracket.

Take down the bracket, then using a 5mm hand drill to make the two fixation holes on the wall you marked before.




 Use two ST4X20 screws to fix the wall bracket on the wall



Once the fixation holes are made, insert the two screw fixing seats provided.

 With 86 embedded box in the wall




Make sure all cables in the 86 embedded box. Fix the wall bracket on the 86 embedded

box with two M4X30 screws

C313X Quick Guide

Device Mounting

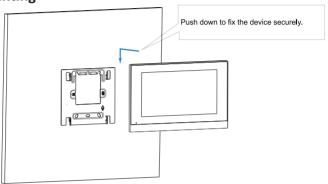

Configuration

- 1.After setting up network and power, press Status icon to check IP address (DHCP by default).
- 2.Launch web browser and type in the IP address to access web interface, login with username and password.(admin by default).
- 3. Register the device with your SIP account. (please refer to user manual for more information).

Operation

Make a call

Press Intercom key , enter the callee's number or room address , then choose Audio or Video mode to call out.

Receive a call

When receiving a video call, users can choose Audio or Video mode to answer. However, if there is an audio call, users can only press Audio mode to pick up.

Unlock

During the talk, press the Open Door key **Open Door** in talking interface to unlock the door.

Monitor

Press Monitor key to receive the video from indoor IPC or community IPC any time.


SOS

Press SOS key SOS in case of an emergency.



C313X Quick Guide

Device Wiring

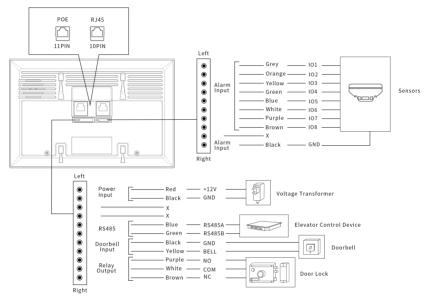

Notice Information

Akuvox C313X firmware contains third-party open source software under the terms of the GNU General Public License(GPL). Akuvox is committed to meeting the requirements of the GNU General Public License (GPL) and will make all required source code available.

The source code of software under the terms of GNU GPL can be downloaded online: http://www.akuvox.com/gpl.

Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox's website: http://www.akuvox.com © Copyright 2019 Akuvox Ltd. All rights reserved.



AKUVOX (XIAMEN) NETWORKS CO., LTD.

ADD: 10/F, NO.56 GUANRI ROAD, SOFTWARE PARK II, XIAMEN 361009, CHINA www.akuvox.com

