

EASYFIT

EASYFIT allows to create a “T” fitting on a a rigid pipe without threads or welding.

WARNINGS

- Use only stainless steel or plastic rigid pipe.
- Check the size and tolerance of the pipe before to proceed.

Ø Tubo Pipe Ø Ø Tubo	Tolleranza Tolerance Tolerancia <i>mm</i>	 MAX	
		<i>bar</i>	<i>PSI</i>
20 mm	ø20mm ± 0.15	20	290
1/2"	ø21.3mm ±0.15	20	290
22 mm	ø22mm ±0.15	20	290
25 mm	ø25mm ±0.18	15	220
3/4"	ø26.9mm ±0.18	15	220
1"	ø33.7mm ±0.25	10	145


-The pipe has to be free of processing batches and possibly with a proper chamfer.

- The pipe has to be clean and without any lubricant



ASSEMBLING

-Insert the Easyfit assembled on the pipe.



Be sure you reach the end position, measuring the amount of pipe (minimum 45 mm) inserted on the fitting.

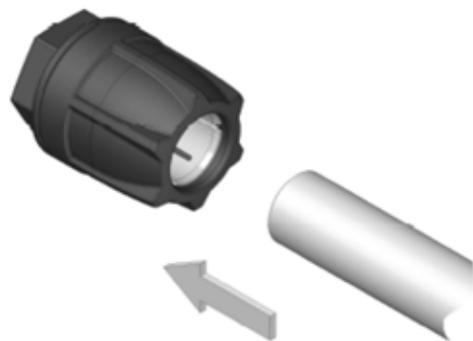


PROPER
ASSEMBLY

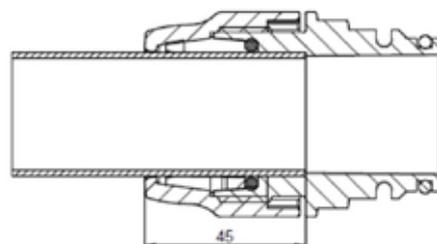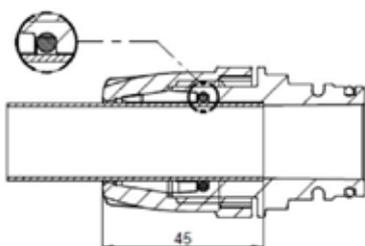

INCORRECT
ASSEMBLY

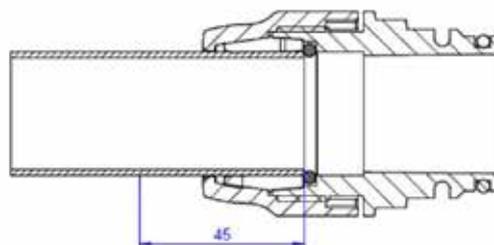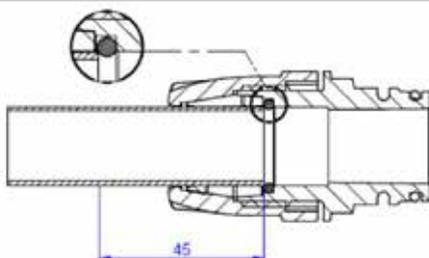

-Tight with a proper open-end adapter
toque wrench at 20 Nm.

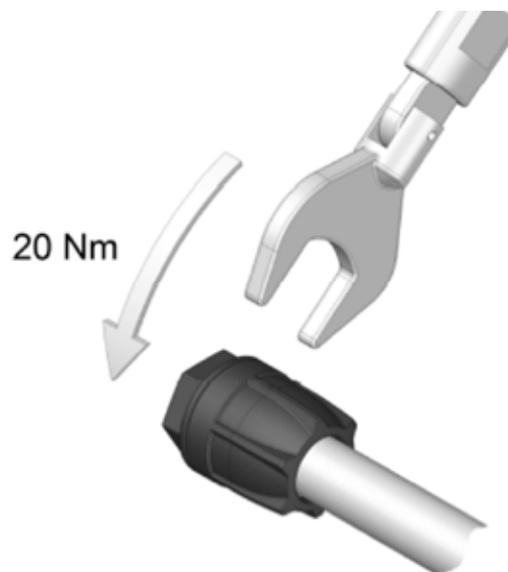

Only use genuine ARAG accessories or spare parts to make sure manufacturer guaranteed safety conditions are maintained in time. Always refer to the internet address www.aragnet.com.

ARAG[®]
A Nordson Company

42048 RUBIERA (Reggio Emilia) - ITALY
Via Palladio, 5/A

Tel. +39 0522 622011
Fax +39 0522 628944

<http://www.aragnet.com>
info@aragnet.com