



1:18 RC VEHICLE INSTRUCTIONS

Driving Tips & transmitter

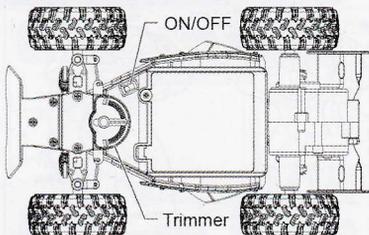

Driving Tips:


- Make sure the power switch is turned to ON position for driving, the vehicle will have no functions when turned OFF
- If the vehicle drifts to the left, turn the trimmer to the right until it runs straight.
- If the vehicle drifts to the right, turn the trimmer to the left until it runs straight.

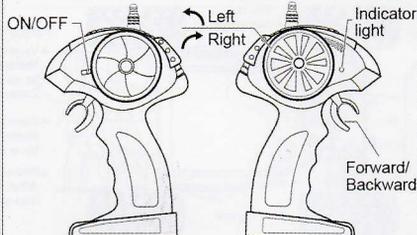

Battery Installation


1. Open the vehicle's battery cover. A: install the battery pack and connect to the vehicle.
B: install 4X1.5V"AA" batteries with correct polarity as shown inside the battery compartment (NOT INCLUDED)
2. Open the transmitter's battery cover, install 2X1.5V"AA" batteries with correct polarity as shown inside the battery compartment (NOT INCLUDED)
3. Replace the battery cover and tighten screw with a screwdriver.

A Battery Installation for vehicle

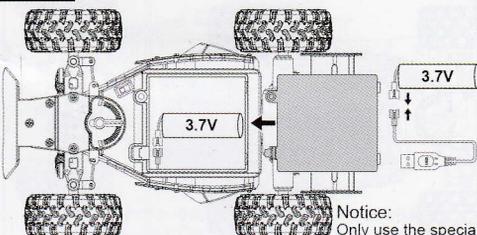


Notice:
Only use the special charger for battery charging.

B Battery Installation for vehicle

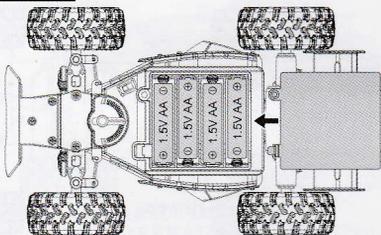



1. Do not mix new and old dry-cell battery together in use.
2. Do not mix rechargeable battery and dry-cell battery together in use.

 Battery Installation for transmitter

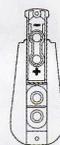

2X1.5V"AA" batteries (NOT INCLUDED)

Operation manual of remote control

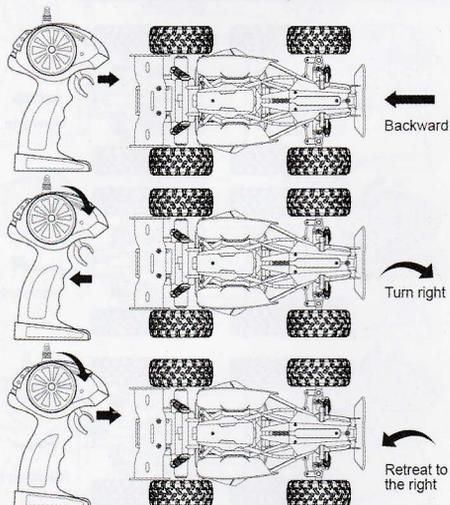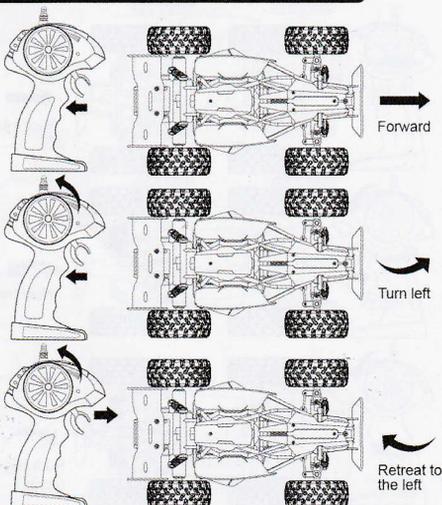

bind the transmitter to the receiver:

First turn on the switch of the car, and then turn on the remote control switch, the remote control indicator light flashes, start the frequency alignment, When the light stops flickering, complete the frequency alignment. It can be manipulated.

Switch the power OFF on the transmitter and vehicle after use, prevent power consumption.