

**MUST**[®]**100% PURE SINE WAVE HOME INVERTER**

USER'S MANUAL HYBRID SOLAR INVERTER

8-12KW

The software supports Installation on Windows systems.
Scan the QR code for download or visit the website for
downloading: <https://sw.mustpower.com>



Scan QR code for manual



Appliances



PC



TV

Air-
conditioning

Fridge

Washing
machine

4200-010058-0000

Table of Contents

ABOUT THIS MANUAL	1
Notice.....	1
Purpose	1
Scope	1
SAFETY INSTRUCTIONS	1
INTRODUCTION	2
Features.....	2
Basic System Architecture.....	2
Product Overview.....	3
INSTALLATION	4
Unpacking and Inspection.....	4
Preparation.....	4
Mounting the Unit.....	4
Battery Connection.....	5
AC Input/ Output Connection.....	6
PV Connection	7
PV Module Selection.....	8
Conditions for DC Connection.....	9
Final Assembly.....	10
Communication Connection.....	10
Dry Contact Signal.....	10
OPERATION	11
Power ON/OFF.....	11
Operation and Display Panel.....	11
LCD Display Icons.....	12
LCD Setting.....	14
Fault Reference Code.....	20
Warning Indicator.....	21
Operating Mode Description.....	22
Display Setting.....	23
SPECIFICATIONS	23
Table 1 Line Mode Specifications.....	23
Table 2 Inverter Mode Specifications.....	24
Table 3 Charge Mode Specifications.....	25
Table 4 General Specifications.....	26
TROUBLE SHOOTING	27

ABOUT THIS MANUAL

Notice

The purchased products, services and features are stipulated by the contract made between supplier and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope.

Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied. The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

The following cases are not within the scope of warranty

1. Out of warranty.
2. Series number was changed or lost.
3. Battery capacity was declined or external damaged.
4. Inverter was damaged caused of transport shift, remissness, ect external factor
5. Inverter was damaged caused of irresistible natural disasters.
6. Not in accordance with the electrical power supply conditions or operate environment caused damage.

SAFETY INSTRUCTIONS



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit the batteries and all appropriate sections of this manual.
2. **CAUTION** --To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION** --Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
10. Fuse(1 piece of 200A/63VDC for 8KW model,2 pieces of 150A/63VDC parallel for 10-12KW model) is provided as over-current protection for the battery supply.
11. GROUNDING INSTRUCTIONS- This inverter/charger should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
12. NEVER cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

INTRODUCTION

This is a multi-function inverter/charger, combining functions of inverter, solar charger and battery charger to offer uninterrupted power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

Features

- Pure sine wave inverter
- Configurable input voltage range for home appliances and personal computers via LCD setting
- Configurable battery charging current based on applications via LCD setting
- Configurable AC/Solar Charger priority via LCD setting
- Compatible to mains voltage or generator power
- Auto restart while AC is recovering
- Overload/ Over temperature/ short circuit protection
- Smart battery charger design for optimized battery performance
- Cold start function

Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:

- Generator or Utility.
- PV modules (option)

Consult with your system integrator for other possible system architectures depending on your requirements.

This inverter can power all kinds of appliances in home or office environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.



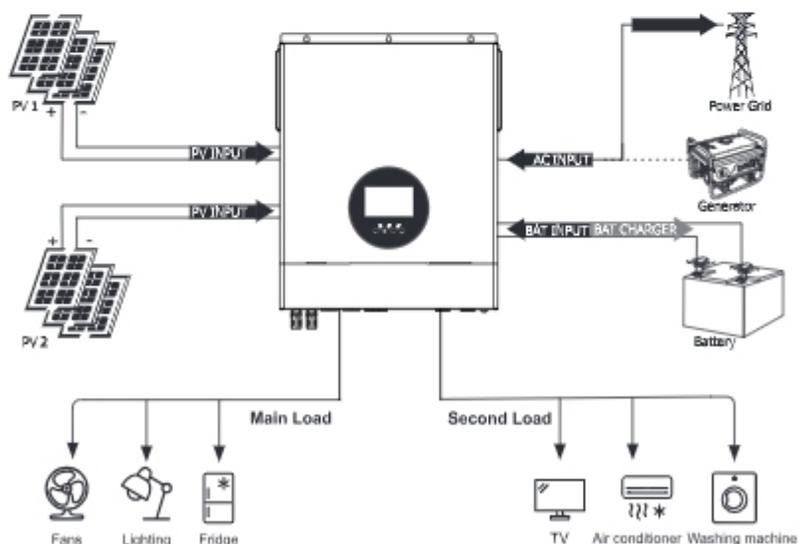


Figure 1 Hybrid Power System

Product Overview

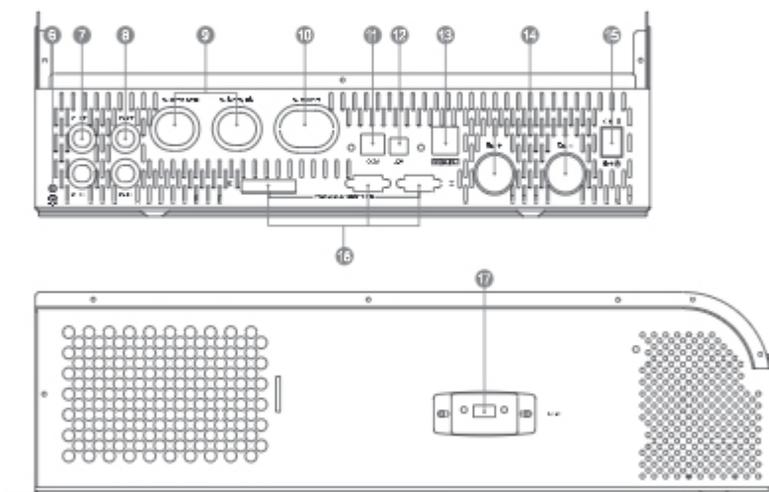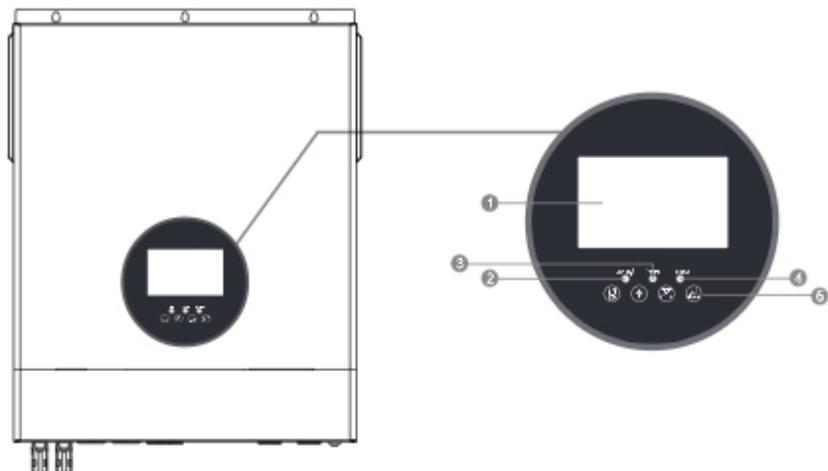

- | | |
|-----------------------|---|
| 1. LCD display | 10. AC output |
| 2. Status indicator | 11. RS-485/CAN communication port |
| 3. Charging indicator | 12. USB port |
| 4. Fault indicator | 13. Dry contact |
| 5. Function buttons | 14. Battery Input |
| 6. Ground | 15. Power ON/OFF Switch |
| 7. PV1 | 16. Parallel communication port (only for parallel model) |
| 8. PV2 | 17. Wifi port |
| 9. AC input | |

INSTALLATION


Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- The unit x 1
- User manual x 1
- USB cable x 1

Preparation


Before connecting all wirings, please take off bottom cover by removing screws as shown below.

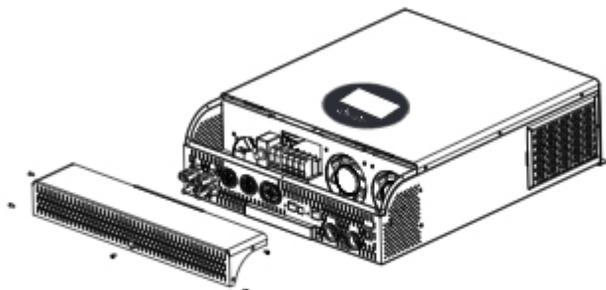

Mounting the Unit


Consider the following points before selecting where to install:

- Do not mount the inverter on flammable construction materials.
- Mount on a solid surface.
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- For proper air circulation to dissipate heat, allow a clearance of approx. 200 mm to the side and approx. 300 mm above and below the unit.
- The ambient temperature should be between 0°C and 55°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires

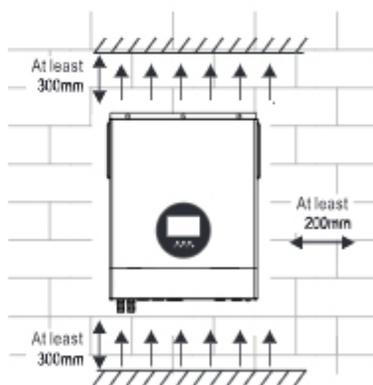

SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.

Install the unit by screwing three screws

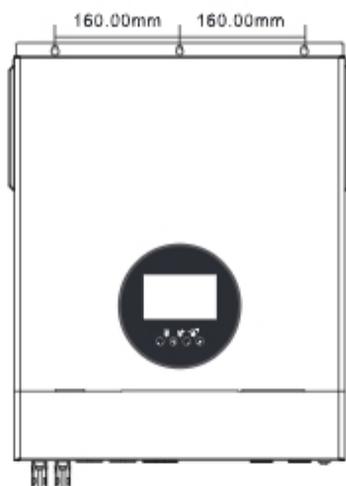

Battery Connection

CAUTION: For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

Ring terminal:




Recommended battery cable and terminal size:


Model	Typical Amperage	Battery Capacity	Wire Size	Cable mm ² (each)	Ring Terminal Dimensions		Torque Value
					D(mm)	L(mm)	
8KW DC48V	167A	200AH	1*1/0AWG	53	8.4	43.2	5 Nm
10KW DC48V	208A	200AH	1*3/0AWG	85	8.4	50.2	5 Nm
12KW DC48V	230A	250AH	1*3/0AWG	85	8.4	50.2	5 Nm

Please follow below steps to implement battery connection:

1. Assemble battery ring terminal based on recommended battery cable and terminal size.
2. Connect all battery packs as units requires. It's suggested to connect at least 200Ah capacity battery for 8KW-10KW model; at least 250Ah capacity battery for 12KW.

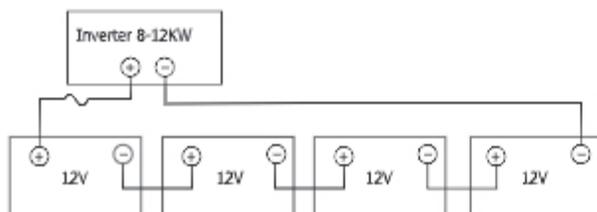

3. Insert the ring terminal of battery cable flatly into battery connector of inverter and make sure the bolts are tightened with torque of 5 Nm. Make sure polarity at both the battery and the inverter/charge is correctly connected and ring terminals are tightly screwed to the battery terminals.

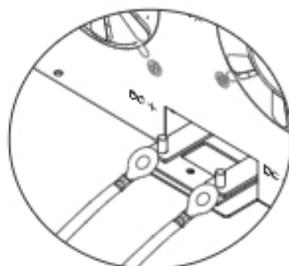

WARNING: Shock Hazard

Installation must be performed with care due to high battery voltage in series.



CAUTION!! Do not place anything between the flat part of the inverter terminal and the ring terminal. Otherwise, overheating may occur.

CAUTION!! Do not apply anti-oxidant substance on the terminals before terminals are connected tightly.

CAUTION!!! Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).

AC Input/Output Connection

CAUTION!! Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 70A for 8-12KW.

CAUTION!! There are two terminal blocks with "IN" and "OUT" markings. Please do NOT-misconnect input and output connectors.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

Suggested cable requirement for AC wires

Model	Gauge	Torque Value
8-12KW DC48V	8 AWG	1.4~ 1.6Nm


Please follow below steps to implement AC input/output connection:

1. Before making AC input/output connection, be sure to open DC protector or disconnecter first.
2. Remove insulation sleeve 10mm for twelve conductors. And shorten phase L and neutral conductor N 3mm.
3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws.
Be sure to connect PE protective conductor (⊕) first.

⊕ → Ground (yellow-green)

L1 → LINE (brown or black)

N1 → Neutral (blue)

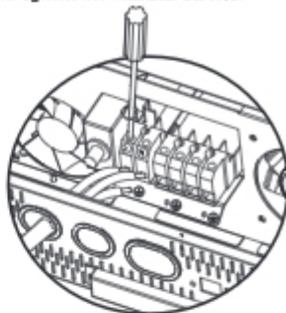

WARNING:

Be sure to that AC power source is disconnected before attempting to hardwire it to the unit.

5. Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws.
Be sure to connect PE protective conductor (⊕) first.
This inverter is equipped with dual-output. There are four terminals (L1/N1, L2/N2) available on output port. It is to set up through LCD program or monitoring software to turn on and off the second output.
Refer to "LCD setting" section for the details.


⊕ → Ground (yellow-green)

L1 → LINE (brown or black)

N1 → Neutral (blue)

L2 → LINE (brown or black)

N2 → Neutral (blue)

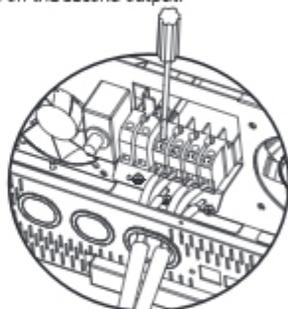

6. Make sure the wires are securely connected.

CAUTION: Important

Be sure to connect AC wires with correct polarity. If L and N wires are connected reversely, it may cause utility short-circuited when these inverters are worked in parallel operation.

CAUTION: Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

PV Connection

CAUTION: Before connecting to PV modules, please install separately a DC circuit breaker between inverter and PV modules.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Model	Typical Amperage	Cable Size	Torque Value
8KW DC48V	18A/18A	10AV/G	1.4 ~ 1.6 Nm
10-12KW DC48V	27A/27A	10AV/G	1.4 ~ 1.6 Nm

PV Module Selection:

When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than the start-up voltage.
3. Max. Power Voltage (Vmpp) of PV modules should be close to best Vmp of inverter or within Vmp range to get best performance. If one PV module can not meet this requirement, it's necessary to have several PV modules in series connection. Refer to below table.

Notes:* Vmp: panel max power point voltage.

The PV charging efficiency is maximized while PV system voltage is close to Best Vmp.

Maximum PV module numbers in Series: Vmpp of PV module*X pcs = Best Vmp or Vmp range of inverter.

PV module numbers in Parallel: Max. charging current of inverter/Impp

Total PV module numbers=maximum PV module numbers in series*PV module numbers in parallel

Solar Charging Mode	
INVERTER MODEL	8-12KW DC48V
Max. PV Array Open Circuit Voltage	500Vdc max(single model)/450Vdc max(parallel model)
PV Array MPPT Voltage Range	90~450Vdc max(single model)/90~430Vdc max(parallel model)
MPPT Number	2
Start-up Voltage(VOC)	80Vdc

Recommended PV module configuration(per independent MPPT)


PV Module Spec(reference)	Total input power	Solar Input1 + Solar input2	Qty of modules
Maximum power(Pmax):330W Max.Power Voltage(Vmpp):38.70V Max.Power Current(Impp):8.54A Open Circuit Voltage(Voc):46.1V Short Circuit Current(Isc):9.17A	1320W	4 pieces in series + open open + 4 pieces in series	4pcs
	1980W	6 pieces in series + open open + 6 pieces in series	6pcs
		8 pieces in series +open open + 8 pieces in series	
	2640W	4 pieces in series + 4 pieces in series	8pcs
		6 pieces in series,2 strings in parallel+open open + 6 pieces in series,2 strings in parallel	
		6 pieces in series + 6 pieces in series	
	3960W	8 pieces in series,2 strings in parallel+open open + 8 pieces in series,2 strings in parallel	12pcs
		8 pieces in series + 8 pieces in series	
		9 pieces in series,2 strings in parallel + open open + 9 pieces in series,2 strings in parallel	
	5280W	9 pieces in series + 9 pieces in series	16pcs
		5 pieces in series,2 strings in parallel + 5 pieces in series,2 strings in parallel	
		6 pieces in series,2 strings in parallel + 6 pieces in series,2 strings in parallel	
	5940W	7 pieces in series,2 strings in parallel + 7 pieces in series,2 strings in parallel	18pcs
7 pieces in series,2 strings in parallel + 7 pieces in series,2 strings in parallel			
8 pieces in series,2 strings in parallel + 8 pieces in series,2 strings in parallel			
6600W	8 pieces in series,2 strings in parallel + 8 pieces in series,2 strings in parallel	20pcs	
	8 pieces in series,2 strings in parallel + 8 pieces in series,2 strings in parallel		
	9 pieces in series,2 strings in parallel + 9 pieces in series,2 strings in parallel		
7920W	9 pieces in series,2 strings in parallel + 9 pieces in series,2 strings in parallel	24pcs	
	9 pieces in series,2 strings in parallel + 9 pieces in series,2 strings in parallel		
	10 pieces in series,2 strings in parallel + 10 pieces in series,2 strings in parallel		
9240W	10 pieces in series,2 strings in parallel + 10 pieces in series,2 strings in parallel	28pcs	
	10 pieces in series,2 strings in parallel + 10 pieces in series,2 strings in parallel		
	11 pieces in series,2 strings in parallel + 11 pieces in series,2 strings in parallel		
10560W	11 pieces in series,2 strings in parallel + 11 pieces in series,2 strings in parallel	32pcs	
	11 pieces in series,2 strings in parallel + 11 pieces in series,2 strings in parallel		
	12 pieces in series,2 strings in parallel + 12 pieces in series,2 strings in parallel		
11880W	12 pieces in series,2 strings in parallel + 12 pieces in series,2 strings in parallel	36pcs	
	12 pieces in series,2 strings in parallel + 12 pieces in series,2 strings in parallel		
	13 pieces in series,2 strings in parallel + 13 pieces in series,2 strings in parallel		

Please follow below steps to implement PV module connection:

Connecting DC Input Power Cables


Step1 Remove cable glands from the positive and negative connectors.

Step2 Take out metal terminals from accessory package ,Wiring as illustrated in image.

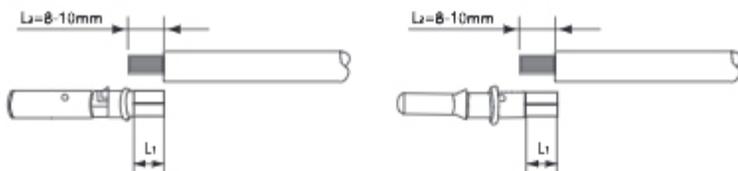


Step3 Insert the positive and negative power cables into corresponding cable glands.

Step4 Insert the stripped positive and negative power cables into the positive and negative metal terminals respectively and crimp them using a crimping tool. Ensure that the cables are crimped until they cannot be pulled out by force less than 400 N, as shown in image.

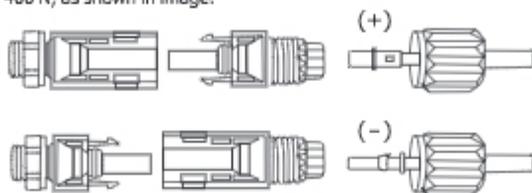


Step 5 Insert the positive and negative connectors into corresponding DC input terminals of the Inverter until you hear a "click" sound.

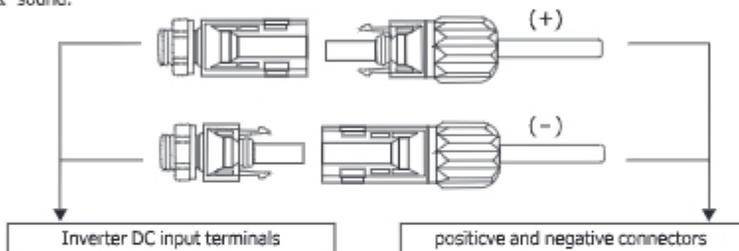


Conditions for DC Connection

The Inverter single-phase inverter has 2 independent input : input A & input B

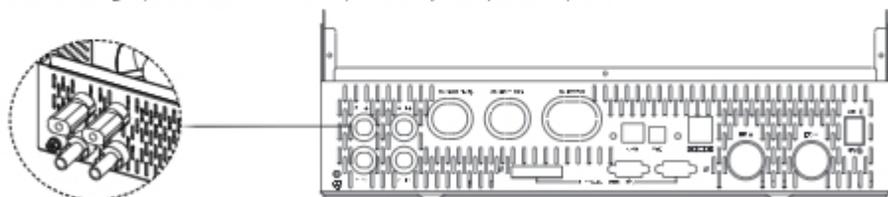

The diagram drawing of DC side is shown as below, notice that the connectors are in paired (male and female connectors). The connectors for PV arrays and inverters are H4 (yunfan) connectors;

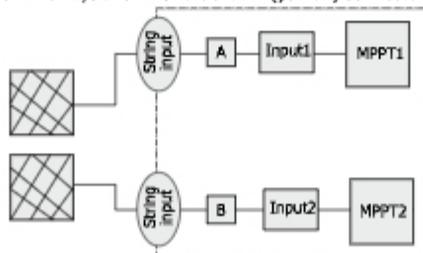


Suggestions for the PV modules of the connected strings:

► Same type

► Same quantity of PV modules connected in series

Final Assembly

After connecting all wirings, please put bottom cover back by screwing screws as shown below.

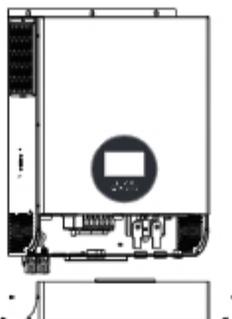

Communication Connection

Please use supplied communication cable to connect inverter and PC. Download the software by link on the first page of this manual into computer and follow on screen instruction to install the monitoring software.


For the detailed software operation, please consult the seller if you have any questions.

WARNING: It's forbidden to use network cable as the communication cable to directly communicate with the PC port. Otherwise, the internal components of the controller will be damaged.

WARNING: RJ45 Interface is only suitable for the use of the company's supporting products or professional operation.

Below chart show RJ45 Pins definition

Pin	Definition
1	RS-485-B
2	RS-485-A
3	GND
4	CANH
5	CANL
6	
7	
8	

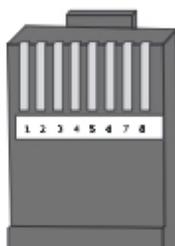

Dry Contact Signal

There is one dry contact (3A/250VAC) available on the rear panel. It could be used to deliver signal to external device when battery voltage reaches warning level.

Unit status	Condition		Dry contact port: 		
			NC&C	NO&C	
Power Off	Unit is off and no output is powered.		Close	Open	
Power On	output is powered from Utility		Close	Open	
	Output is powered from Battery or Solar.	Program 01 set as utility	Battery voltage < Low DC warning voltage	Open	Close
			Battery voltage > Setting value in Program 21 or battery charging reaches floating stage	Close	Open
	Program 01 is set as SBU, SUB, solar first		Battery voltage < Setting value in Program 20	Open	Close
		Battery voltage > Setting value in Program 21 or battery charging reaches floating stage	Close	Open	

LCD Display Icons



Icon	Function description														
Input Source Information and Output Information															
	Indicates the AC information														
	Indicates the DC information														
	Indicate input voltage, input frequency, PV voltage, battery voltage and charger current. Indicate output voltage, output frequency, load in VA, load in Watt and discharging current.														
Configuration Program and Fault Information															
	Indicates the setting programs														
	Indicates the warning and fault codes. Warning: flashing with warning code. Fault: lighting with fault code.														
Battery Information															
	Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100% in battery mode and charging status in line mode.														
In AC mode, it will present battery charging status.															
<table border="1"> <thead> <tr> <th>Status</th> <th>Battery voltage</th> <th>LCD Display</th> </tr> </thead> <tbody> <tr> <td rowspan="4">Constant Current mode/Constant Voltage mode</td> <td><2V/cell</td> <td>4 bars will flash in turns</td> </tr> <tr> <td>2V/cell~2.083v/cell</td> <td>Bottom bar will be on and the other three bars will flash in turns.</td> </tr> <tr> <td>2.083V/cell~2.167V/cell</td> <td>Bottom two bars will be on and the other two bars will flash in turns.</td> </tr> <tr> <td>>2.167V/cell</td> <td>Bottom three bars will be on and the top bar will flash.</td> </tr> <tr> <td colspan="2">Batteries are fully charged.</td> <td>4 bars will be on.</td> </tr> </tbody> </table>	Status	Battery voltage	LCD Display	Constant Current mode/Constant Voltage mode	<2V/cell	4 bars will flash in turns	2V/cell~2.083v/cell	Bottom bar will be on and the other three bars will flash in turns.	2.083V/cell~2.167V/cell	Bottom two bars will be on and the other two bars will flash in turns.	>2.167V/cell	Bottom three bars will be on and the top bar will flash.	Batteries are fully charged.		4 bars will be on.
Status	Battery voltage	LCD Display													
Constant Current mode/Constant Voltage mode	<2V/cell	4 bars will flash in turns													
	2V/cell~2.083v/cell	Bottom bar will be on and the other three bars will flash in turns.													
	2.083V/cell~2.167V/cell	Bottom two bars will be on and the other two bars will flash in turns.													
	>2.167V/cell	Bottom three bars will be on and the top bar will flash.													
Batteries are fully charged.		4 bars will be on.													

In battery mode, it will present battery capacity.

Load Percentage	Battery Voltage	LCD Display
Load >50%	<1.717V/cell	
	1.717V/cell~1.8V/cell	
	1.8V/cell~1.883V/cell	
	>1.883 V/cell	
50%> Load>20%	<1.817V/cell	
	1.817V/cell~1.9V/cell	
	1.9 V/cell ~1.983V/cell	
	>1.983 V/cell	
Load<20%	<1.867V/cell	
	1.867V/cell~1.95V/cell	
	1.95V/cell~2.033V/cell	
	>2.033 V/cell	

Load Information

	Indicates overload.			
	Indicates the load level by 0~24%, 25~49%, 50~74% and 75~100%.			
	0%~24%	25%~49%	50%~74%	75%~100%

Mode Operation Information

	Indicates unit connects to the mains.
	Indicates unit connects to the PV panel.
	Indicates load is supplied by utility power.
	Indicates the solar charger circuit is working.
	Indicates the DC/AC inverter circuit is working.


Mute Operation

	Indicates unit alarm is disabled.
--	-----------------------------------

LCD Setting


After pressing and holding "ENTER" button for 2 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" or "MENU" button to confirm the selection and exit.

 Setting Programs:

Program	Description	Selectable option
00	Exit setting mode	Escape 
01	Output source priority selection	(default)  Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, Utility energy will supply power to the loads at the same time. The battery energy will supply power to the load only in the condition of the utility is unavailable. If the solar is unavailable, the utility will charge the battery until the battery voltage reaches the setting point in program 21. If the solar is available, but the battery voltage is lower than the setting point in program 20, the utility will charge the battery until the battery voltage reaches the setting point in program 20 to protect the battery from damage.
		 Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 20 or solar and battery is not sufficient. The battery energy will supply power to the load in the condition of the utility is unavailable or the battery voltage is higher than the setting point in program 21 (when BLU is selected) or program 20 (when LBU is selected). If the solar is available, but the battery voltage is lower than the setting point in program 20, the utility will charge the battery until the battery voltage reaches the setting point in program 20 to protect the battery from damage.
		 Solar energy provides power to the loads as first priority. If battery voltage has been higher than the setting point in program 21 for 5 minutes, and the solar energy has been available for 5 minutes too, the inverter will turn to battery mode, solar and battery will provide power to the loads at the same time. When the battery voltage drops to the setting point in program 20, the inverter will turn to bypass mode, utility provides power to the load only, and the solar will charge the battery at the same time.

		[0] UT	Utility will provide power to the loads as first priority. Solar and battery energy will provide power to the loads only when utility power is not available.
02	AC input voltage range	Appliances (default) [02] APL	If selected, acceptable AC input voltage range will be within 90-280VAC.
		UPS [02] UPS	If selected, acceptable AC input voltage range will be within 170-280VAC.
		GEN [02] GEN	When the user uses the device to connect the generator, select the generator mode.
		VDE [02] VDE	If selected, acceptable AC input voltage range will conform to VDE4105 (184VAC-253VAC)
03	Output voltage	[03] 230	Set the output voltage (220VAC-240VAC)
04	Output frequency	50Hz(default) [04] 50.0 Hz	60Hz [04] 60.0 Hz
05	Solar supply priority	(default) [05] BLU	Solar energy provides power to charge battery as first priority. When the utility is available, if the battery voltage is lower than the setting point in program 21, the solar energy will never supply to the load or feed into the grid, only charge the battery. If the battery voltage is higher than the setting point in program 21, the solar energy will supply to the load or feed into the grid or recharge the battery.
		[05] LBU	Solar energy provides power to the loads as first priority. If the battery voltage is lower than the setting point in program 20, the solar energy will never supply to the load or feed into the grid, only charge the battery. If the battery voltage is higher than the setting point in program 20, the solar energy will supply to the load or feed into the grid or recharge the battery.
06	Overload bypass: When enabled, the unit will transfer to line mode if overload occurs in battery mode.	Bypass disable [06] BYD	Bypass enable(default) [06] BYE
07	Auto restart when overload occurs	Restart disable(default) [07] LTD	Restart enable [07] LTE

08	Auto restart when over temperature occurs	Restart disable(default) [08] t t d	Restart enable [08] t t E
09	Solar or battery energy feed to grid configuration	(default) [09] G t d	Solar or battery energy feed to grid disable.
		[09] G t E	Solar or battery energy feed to grid enable. In SUB mode, if the solar energy power is higher than the load and the battery voltage is higher than the setting point in program 21(when BLU is selected) or program 20(when LBU is selected), the solar energy will be allowed to feed into the grid. In the SBU mode, if the battery voltage is higher than the setting point in program 21(when BLU is selected) or program 20(when LBU is selected), the solar and battery energy will be allowed to feed into the grid.
10	Charger source priority: To configure charger source priority	If this inverter/charger is working in Line, Standby or Fault mode, charger source can be programmed as below:	
		Solar first [10] C S 0	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Solar and Utility(default) [10] S n U	Solar energy and utility will charge battery at the same time.
		Only Solar [10] 0 S 0	Solar energy will be the only charger source no matter utility is available or not
		If this inverter/charger is working in Battery mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient.	
11	Maximum charging current: To configure total charging current for solar and utility chargers.(Max. charging current =utility charging current + solar charging current)	90A (default) [11] 80 A	Setting range is from 1A to 120A for 8KW model and from 1A to 150A for 10-12KW model.Increment of each click is 1A.
13	Maximum utility charging current	30A (default) [13] 30 A	Setting range is from 1A to 120A for 8KW model and from 1A to 150A for 10-12KW model.Increment of each click is 1A.
14	Battery type	AGM (default) [14] R G n	Flooded [14] F L d
		GEL [14] G E L	LEAD [14] L E A
		Lithium Ion [14] L	User-Defined [14] U S E

 		<p>If "User-Defined" or "LI" is selected, When the lithium battery and the inverter do not communicate properly, the battery icon  will flash.</p> <p>If "LI" is selected and the battery icon does not flash, program of 11,17,18 will be set automatically, program of 19,37 will be set to SOC percentage method and program of 11,17,18,37 can not be changed by user.</p> <p>If "User-Defined" is selected and the battery icon does not flash, battery charge voltage, charge current and BMS control method can be set up in program 11,17,18,19,37.</p>	
17	Bulk charging voltage (C.V voltage)	<p>48V model default setting: 56.4V</p> <p></p> <p>Setting range is from 48.0V to 58.4V for 48Vdc model. Increment of each click is 0.1V.</p>	
18	Floating charging voltage	<p>48V model default setting: 54.0V</p> <p></p> <p>Setting range is from 48.0V to 58.4V for 48Vdc model. Increment of each click is 0.1V.</p>	
19	Low DC cut-off voltage or SOC percentage	<p>48V model default setting: 42V</p> <p></p> <p>If "User-Defined" or "LI" is selected in program 14, this program can be set up. Setting range is from 42.0V to 54.0V for 48Vdc model. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.</p>	
		<p>SOC 10% (default)</p> <p></p>	
		<p>If "User-Defined" or "LI" is selected in program 14, and the SOC percentage method is selected in program 37, the low DC cut-off SOC percentage will be able to be set. Low DC cut-off SOC percentage will be fixed to setting value no matter what percentage of load is connected. Setting range is from 0%-90%. Increment of each click is 1%.</p>	
20	Battery stop discharging voltage when grid is available	<p>Available options for 48V models:</p> <p>48.0V (default)</p> <p></p> <p>Setting range is from 44.0V to 58.0V. Increment of each click is 0.1V.</p>	
		<p>Available options for 48V models:</p> <p>54.0V (default)</p> <p></p> <p>Setting range is from 44.0V to 58.0V. Increment of each click is 0.1V.</p>	
22	Auto turn page	<p>(default)</p> <p></p>	If selected, the display screen will auto turn the display page.
		<p></p>	If selected, the display screen will stay at latest screen user finally switches.
23	Backlight control	Backlight on	Backlight off (default)
			
24	Alarm control	Alarm on (default)	Alarm off
			

25	Beeps while primary source is interrupted	Alarm on [25] AON	Alarm off (default) [25] AOF
27	Record Fault code	Record enable(default) [27] FON	Record disable [27] FOF
29	Power saving mode enable/disable	Saving mode disable (default) [29] SdS	If disable, no matter connected load is low or high, the on/off status of inverter output will not be effected.
		Saving mode enable [29] SEN	If enable, the output of inverter will be off when connected load is pretty low or not detected.
30	Battery equalization	Battery equalization [30] EEN	Battery equalization disable(default) [30] EdS
31	Battery equalization voltage	Available options for 48V models:57.6V [31] E ^v 57.6 ^v	
		Setting range is from 48.0V to 58.4V.Increment of each click is 0.1V.	
33	Battery equalization time	60min(default) [33] 60	Setting range is from 5 min to 900 min. Increment of each click is 5 min.
34	Battery equalization timeout	120min(default) [34] 120	Setting range is from 5 min to 900 min. Increment of each click is 5 min.
35	Equalization interval	30days(default) [35] 30d	Setting range is from 0 to 90 days. Increment of each click is 1 day.
36	Equalization activated immediately	Enable [36] AEN	Disable(default) [36] AdS
		If equalization function is enabled in program 30, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will shows "E ^v ". If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 35 setting. At this time, "E ^v " will be shown in LCD main page too.	
37	BMS control method	Voltage method(default) [37] VOL	SOC Percentage method [37] SOC
38	Battery stop discharging percent When SOC is available	20%(default) [38] 20%	Setting range is from 5%-95% Increment of each click is 1% .
39	Battery stop charging percent When SOC is available	95%(default) [39] 95%	Setting range is from 10%-100% Increment of each click is 1%.
40	BMS communication	(default) [40] ,dP	when the communication between BMS and converter is faulted ,the converter still charge or discharge from the battery .
		[40] Un,	when the communication between BMS and converter is faulted ,the converter stop charging or discharging from the battery.

41	Lithium battery protocol	SEL[41] 0	Setting range is from 0 to 31 Increment of each click is 1
		If "L1" is selected in program 14, program 41 can be set. After the program 41 is set, please restart the inverter to take effect. For example, if you set the program 41 to 0, the inverter can communicate with the most lithium battery.	
42	Parallel address Setting (After the program is set, please restart the inverter to take effect. Before confirming that the settings are in effect, please disconnect the connection between the machine outputs)	Single: This inverter is used in single phase application	Parallel: This inverter is operated in parallel system (you can set the first machine to 1P1, the second machine to 1P2, the third machine to 1P3, and so on)
		,d [42] 0	,d [42] 1P1
		When the inverter is operated in 3-phase application, set up inverter to be operated in specific phase	
		A phase: (you can set the first machine in phase A to 3A1)	B phase: (you can set the first machine in phase B to 3B1)
		,d [42] 3A1	,d [42] 3B1
		C phase: (you can set the first machine in phase C to 3C1)	
		,d [42] 3C1	
60	Setting cut-off voltage point or SOC percentage on the second output (L2) if "0" is selected in program 42 (Program 37 setting VOL or SOC)	44.0V (default) COV [60] 44 V	Setting range is from 44.0V to 58.0V. Increment of each click is 0.1V.
		25% (default) SOC [60] 25 %	Setting range is from 20% - 95%. Increment of each click is 1%.
61	Setting discharge time on the second output (L2) if "0" is selected in program 42	Disable (default) t,n [61] ddS	Setting range is disable and then from 0 min to 990 min. Increment of each click is 1 min.
62	Setting start time for turn on the second output (L2) if "0" is selected in program 42	0 (default) t,n [62] 0	Setting range is from 00 to 23. Increment of each click is 1 hour. If setting range is from 00 to 08, the second output will be turned on until 09:00, during this period, it will be turned off if any setting value in program 60 or 61 is reached.
63	Setting end time for turn on the second output (L2) if "0" is selected in program 42	23 (default) t,n [63] 23	
95	Time setting - Minute	n,n [95] 00	For minute setting, the range is from 0 to 59.
96	Time setting - Hour	HOu [96] 00	For hour setting, the range is from 0 to 23.
97	Time setting - Day	DAY [97] 01	For day setting, the range is from 1 to 31.
98	Time setting - Month	nON [98] 01	For month setting, the range is from 1 to 12.
99	Time setting - Year	YEA [99] 01	For year setting, the range is from 1 to 98.

After pressing and holding "MENU" button for 6 seconds, the unit will enter reset model. Press "UP" and "DOWN" button to select programs. And then, press "ENTER" button to exit.

SEL	(default) [dt] n t t	Reset setting disable
	[dt] t S t	Reset setting enable

Fault Reference Code

Fault Code	Fault Cause	LCD Indication
01	Fan is locked when Inverter is off	[01] 
02	Inverter transformer over temperature	[02] 
03	Battery voltage is too high	[03] 
04	Battery voltage is too low	[04] 
05	Output short circuited	[05] 
06	Inverter output voltage is high	[06] 
07	Overload time out	[07] 
08	Inverter bus voltage is too high	[08] 
09	Bus soft start failed	[09] 
11	Main relay failed	[11] 
21	Inverter output voltage sensor error	[21] 
22	Inverter grid voltage sensor error	[22] 
23	Inverter output current sensor error	[23] 
24	Inverter grid current sensor error	[24] 
25	Inverter load current sensor error	[25] 
26	Inverter grid over current error	[26] 
27	Inverter radiator over temperature	[27] 
31	Solar charger battery voltage class error	[31] 
32	Solar charger current sensor error	[32] 
33	Solar charger current is uncontrollable	[33] 
41	Inverter grid voltage is low	[41] 
42	Inverter grid voltage is high	[42] 

43	Inverter grid under frequency	[43] 
44	Inverter grid over frequency	[44] 
51	Inverter over current protection error	[51] 
52	Inverter bus voltage is too low	[52] 
53	Inverter soft start failed	[53] 
55	Over DC voltage in AC output	[55] 
56	Battery connection is open	[56] 
57	Inverter control current sensor error	[57] 
58	Inverter output voltage is too low	[58] 

Warning Indicator

Warning Code	Warning Event	Icon flashing
61	Fan 1 is locked when inverter is on.	[61] 
62	Fan 2 is locked when inverter is on.	[62] 
63	Battery is over-charged.	[63] 
64	Low battery	[64] 
67	Overload	[67]   
70	Output power derating	[70] 
72	Solar charger stops due to low battery	[72] 
73	Solar charger stops due to high PV voltage	[73] 
74	Solar charger stops due to over load	[74] 
75	Solar charger over temperature	[75] 
76	PV charger communication error	[76] 
77	Parameter error	[77] 
90	Lithium battery full (single model)	[90] 

Operating State Description

Operating State	Description	LCD display
Sell state Note: *Sell mode: The system generates electricity when the sun shines, supplying power to your home and sending any excess power back to the grid.	PV energy is sold back to grid.	PV energy power is larger than inverter power
		PV energy power is smaller than inverter power
Match load state Note: DC power produced from your solar array is converted by the inverter into AC power, which is then sent to your main electrical panel to be used by your household appliances. Any excess power generated is not sold back to the grid, but stored in battery.	PV energy is charger into the battery or converted by the inverter to the AC load	PV energy power is larger than inverter power
		PV energy power is smaller than inverter power
		PV is off
Charge state	PV energy and grid can charge batteries.	
Bypass state	Error are caused by inside circuit error or external reasons such as over temperature, output short circuited and so on.	
Off-Grid state	The inverter will provide output power from battery and PV power.	Inverter power loads from PV energy.
		Inverter power loads from battery and PV energy.
		Inverter power loads from battery only.
Stop mode	The inverter stop working if you turn off the inverter by the soft key or error has occurred in the condition of no grid.	

Display Setting

The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: battery voltage, battery current, inverter voltage, inverter current, grid voltage, grid current, load in Watt, load in VA, grid frequency, inverter frequency, PV voltage, PV charging current, PV charging output voltage, PV charging power .

Selectable information	LCD display	
Battery voltage/DC discharging current	^{BATT} 480 V	480 A
Inverter output voltage/Inverter output current	229 V	^{INV} 130 A
Grid voltage/Grid current	229 V	^{GRID} 80 A
Load in Watt/VA	100 ^W	^{LOAD} 120 ^{VA}
Grid frequency/Inverter frequency	^{INPUT} 500 _{Hz}	^{INV} 500 _{Hz}
PV1 voltage and current	^{INPUT PV1} 360 V	806 A
PV2 voltage and current	^{INPUT PV2} 360 V	806 A
PV charger output voltage and PV charging power	^{PV1 PV2} 430 V	^{OUTPUT} 320 ^W

SPECIFICATIONS

Table 1 Line Mode Specifications

INVERTER MODEL	8-12KW DC48V
Input Voltage Waveform	Sinusoidal (utility or generator)
Nominal Input Voltage	230Vac
Low Loss Voltage	90Vac±7V(APL,GEN);170Vac±7V(UPS); 186Vac±7V(VDE)
Low Loss Return Voltage	100Vac±7V(APL,GEN);180Vac±7V(UPS); 196Vac±7V(VDE)
High Loss Voltage	280Vac±7V(UPS,APL,GEN); 253Vac±7V(VDE)
High Loss Return Voltage	270Vac±7V(UPS,APL,GEN); 250Vac±7V(VDE)
Max AC Input Voltage	300Vac
Nominal Input Frequency	50HZ/60HZ(Auto detection)
Low Loss Frequency	40HZ±1HZ(UPS,APL,GEN); 47.5HZ±0.05HZ(VDE)
Low Loss Return Frequency	42HZ±1HZ(UPS,APL,GEN); 47.5HZ±0.05HZ(VDE)
High Loss Frequency	65HZ±1HZ(UPS,APL,GEN); 51.5HZ±0.05HZ(VDE)
High Loss Return Frequency	63HZ±1HZ(APL,GEN,UPS); 50.05HZ±0.05HZ(VDE)

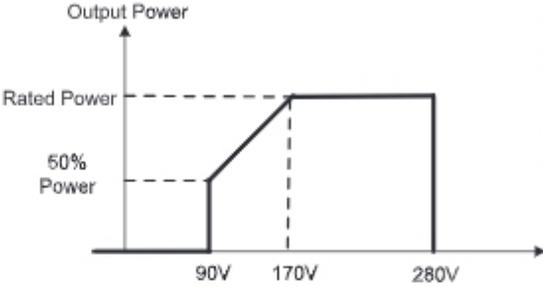
Output Short Circuit Protection	Line mode: Circuit Breaker Battery mode: Electronic Circuits
Efficiency (Line Mode)	>95%(Rated R load, battery full charged)
Transfer Time	10ms typical(UPS,VDE) 20ms typical(APL) 50ms typical(For parallel operation)
Output power derating: When AC input voltage drops to 95V or 170V depending on models, the output power will be derated.	230Vac model: 

Table 2 Inverter Mode Specifications

INVERTER MODEL	8KW DC48V	10KW DC48V	12kW DC48V
Rated Output Power	8000W	10000W	12000W
Output Voltage Waveform	Pure Sine Wave		
Output Voltage Regulation	230Vac±5%		
Output Frequency	60Hz or 50Hz		
Peak Efficiency	92%		
Overload Protection	5s@≥110% load; 10s@105%~110% load		
Nominal DC Input Voltage	48Vdc		
Cold Start Voltage	46.0Vdc		
Low DC Warning Voltage			
@ load < 50%	46.0Vdc		
@ load ≥ 50%	44.0Vdc		
Low DC Warning Return Voltage			
@ load < 50%	47.0Vdc		
@ load ≥ 50%	46.0Vdc		
Low DC Cut-off Voltage			
@ load < 50%	43.0Vdc		
@ load ≥ 50%	42.0Vdc		
High DC Recovery Voltage	58Vdc		
High DC Cut-off Voltage	60Vdc		

Table 3 Charge Mode Specifications

Utility Charging Mode			
INVERTER MODEL		8KW DC48V	10-12KW DC48V
Charging Current @ Nominal Input Voltage		120A MAX	150A MAX
Floating charging voltage	AGM / Gel/LEAD Battery	54.8Vdc	
	Flooded battery	54.8Vdc	
Bulk charging voltage (C.V voltage)	AGM / Gel/LEAD Battery	57.6Vdc	
	Flooded battery	56.8Vdc	
Charging Algorithm		3-Step(Flooded Battery, AGM/Gel/LEAD Battery), 4-Step(LI)	
Solar Charging Mode			
INVERTER MODEL		8KW DC48V	10KW DC48V 12KW DC48V
Rated Power		4000W X 2	5000W X 2 6000W X 2
Maximum PV Input Current		18A X 2	27A X 2(Max 40A)
MPPT charger			
solar charging current		120Amax	150Amax
Max.PV Array Open Circuit Voltage		500Vdc max (single model) /450Vdc max (parallel model)	
PV Array MPPT Voltage Range		90~450Vdc (single model) /90~430Vdc (parallel model)	
Min battery voltage for PV charge		34Vdc	
Battery Voltage Accuracy		+/-0.3%	
PV Voltage Accuracy		+/-2V	
Charging Algorithm		3-Step(Flooded Battery, AGM/Gel/LEAD Battery), 4-Step(LI)	

<p>Charging algorithm for lead acid battery</p>			
<p>Charging algorithm for Lithium battery</p>			
<p>Joint Utility and Solar Charging</p>			
<p>INVERTER MODEL</p>	<p>8KW DC48V</p>	<p>10KW/ DC48V</p>	<p>12KW DC48V</p>
<p>Max Charging Current</p>	<p>120A</p>	<p>150A</p>	
<p>Default Charging Current</p>	<p>80A</p>		

Table 4 General Specifications

INVERTER MODEL	8KW DC48V	10KW DC48V	12KW DC48V
Safety Certification	CE		
Operating Temperature Range	0°C to 50°C		
Storage temperature	-15°C~ 60°C		
Dimension (D*W*H), mm	425*527*145		
Net Weight, kg	17.4	17.6	

TROUBLE SHOOTING

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (< 1.91V/Cell)	1. Re-charge battery. 2. Replace battery.
No response after power on.	No indication.	1. The battery voltage is far too low. (<1.4V/Cell) 2. Battery polarity is connected reversed. Input protector is tripped	1. Check if batteries the wiring are connected and well. 2. Re-charge battery. 3. Replace battery.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	Green LED is flashing.	Insufficient quality of AC power (Shore or Generator)	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied) is working well or if input voltage range setting is correct. (Appliance=> wide)
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.
Buzzer beeps continuously and red LED is on.	Fault code 07	Overload error. The inverter is overload 110% and time is up.	Reduce the connected load by switching off some equipment.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
	Fault code 02	Internal temperature of inverter component is over 90°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 03	Battery is over-charged.	Return to repair center.
		The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
	Fault code 01	Fan fault	Replace the fan.
	Fault code 06/58	Output abnormal (Inverter voltage below than 202Vac or is higher than 253Vac)	1. Reduce the connected load. 2. Return to repair center
	Fault code 08/09/53/57	Internal components filed.	Return to repair center
	Fault code 51	Over current or surge	Restart the unit, if the error happens again, please return to repair center.
	Fault code 52	Bus voltage is too low	
Fault code 55	Output voltage is unbalanced		
Fault code 56	Battery is not connected well or fuse is burnt.	If the battery is connected well, please return to repair center.	

MUST®

GUARANTEECERTIFICATE

Serial No.: _____

Customer's Name			Contact Person		
Address			Telephone No.		
Product/Model:		Post Code		Fax No.	
Date of purchase			Expire Date		
Dealer Signature			Customer Signature		

**MUST®**

GUARANTEECERTIFICATE

Serial No.: _____

Customer's Name			Contact Person		
Address			Telephone No.		
Product/Model:		Post Code		Fax No.	
Date of purchase			Expire Date		
Dealer Signature			Customer Signature		