


WiFi Router Booster Instruction Manual

- 1.Support Standards: IEEE 802.11b/g/n
- 2.Frequency: 2400~2500MHz
- 3.Working Pattern: TDD
- 4.RF Output Power: 43dBm[20W]
- 5.Input Trigger Power: Min:3dBm Max:23dBm
- 6.Transmit Gain: 20 dB+1
- 7.Receiver Gain: 18 dB+1
- 8.TX/RX Switch Time Delay: < 1us
- 9.Noise Figure: <2.5dB(typical)
- 10.OperatingTemp: -30°C~+70°C
- 11.Working Voltage: 12-18V DC
- 12.Operating Humidity: up to 95% rel humidity

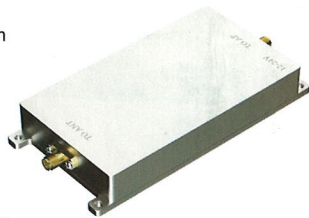

Installation Steps

- Step1: Remove the Antenna from the wireless Router (Access Point).
- Step2: Use cable to connect the Booster and AP.
- Step3: Connect the Antenna to the other end of Booster.
- Step4: Plug in the Power Adapter.

