


STUNT DOUBLE SIDED CAR INSTRUCTION MANUAL


Please read the manual completely before use and save this manual for future reference

AGES 6 +

REMOTE CONTROL PART NAME

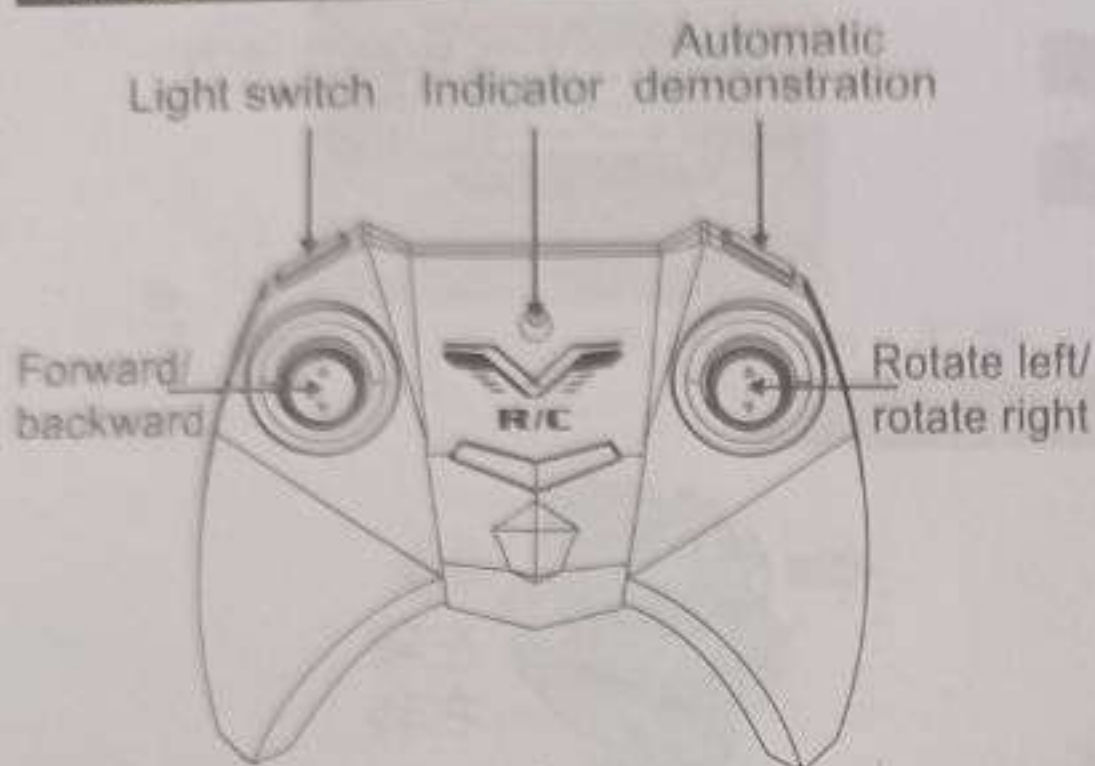


REMOTE CONTROL BATTERY INSTALLATION:

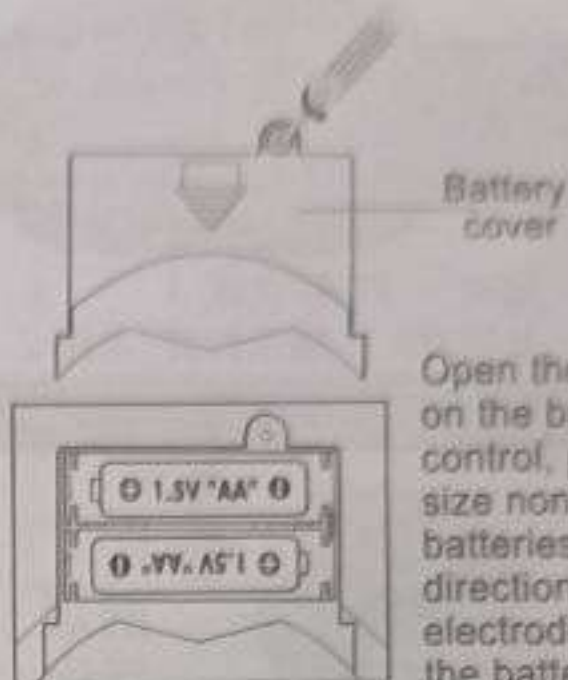

Open the battery cover on the back of the remote control, put in 2x1.5V AA size non-rechargeable batteries in the correct direction according to the electrode instructions in the battery box, and then install the battery cover.


2 x 1.5V "AA" batteries (not included)

OPERATION AND CONTROL OF REMOTE CONTROL CARS

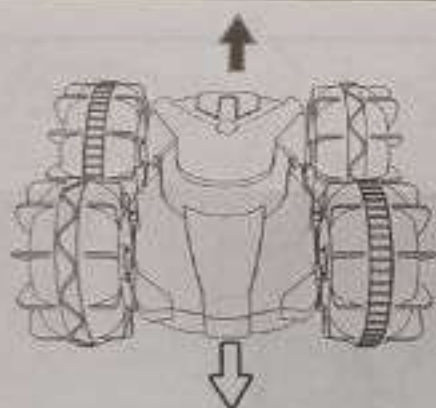


1. Push the left operating lever upward and the car starts to move forward, Push the left operating lever down and the car starts to move backwards


Rotate left/rotate right

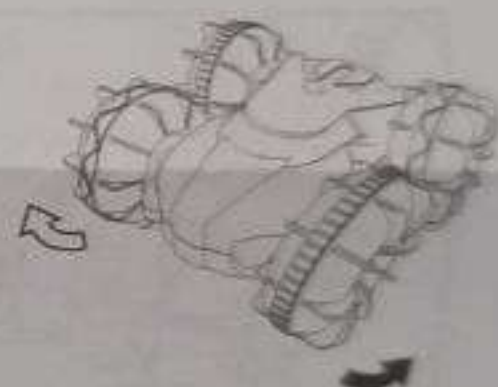

2. Push the right operating lever upward to turn the car left, Push the right operating lever downward to turn the car to the right

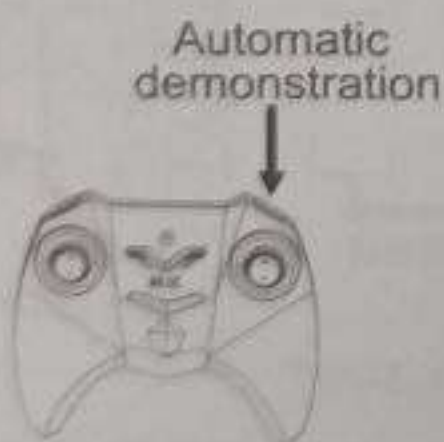

3. Press the demonstration button and the car starts to demonstrate automatically operate various functions

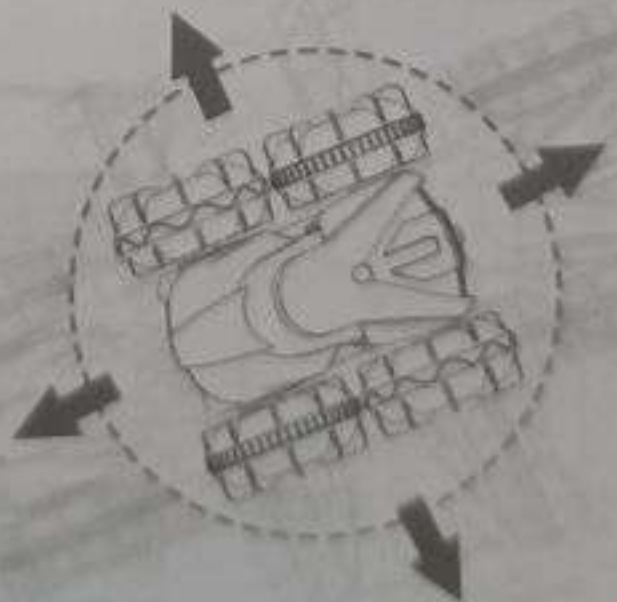

When you connect the remote control and want to switch to watch remote control operation:

1. Turn off the power of the car and remote control.
2. Turn on the car power again, turn on the watch remote control power and connect it to the car.

When you connect the watch to the remote control and want to switch to remote control operation:

1. Turn off the power of the car and watch remote control.
2. Turn the car power back on, turn on the remote control and connect it to the car.