

Английский голосовой помощник

Команды для унитаза	Команды для унитаза
Hello toilet	Reduce the seat temperature
Open the cover	Increase the air temperature
Close the cover	Reduce the air temperature
Open the seat	Increase the water temperature
Close the seat	Reduce the water temperature
Turn on the night light	Increase the water pressure
Turn off the night light	Reduce the water pressure
Enable energy saving mode	Water position forward
Disable energy saving mode	Water position backward
Turn on rear cleaning	Bubble
Turn on front cleaning	Turn on voice announcement
Flush please	Switch off voice announcements
Stop working	Increase the volume
Start drying	Reduce the volume
Turn on kid cleaning	Примітка: автоматичне завершення режиму через 15 секунд (без голосового сповіщення).