



VRX 3.3G


User Manual

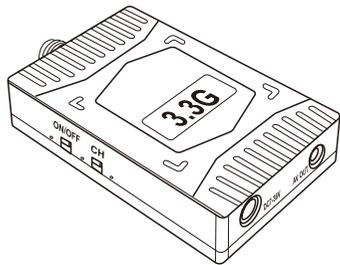

I . Product size

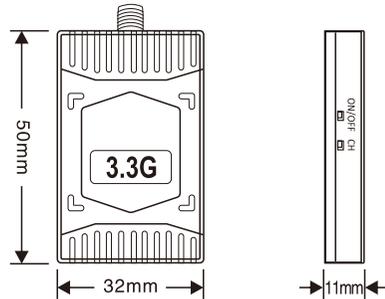


II . Buttons and LED indicator lights

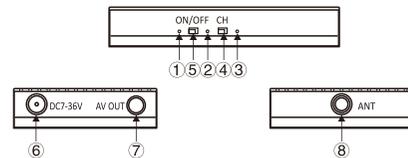

- ① Power ON/OFF indicator: Green light LED
- ② Channel no. indicator: Blue light LED (band B)
- ③ Channel no. indicator: Red light LED (band A)
- ④ Frequency channel & band selection key
- ⑤ Power ON/OFF key
- ⑥ DC jack
- ⑦ Phone jack
- ⑧ Antenna connector

III. Accessory

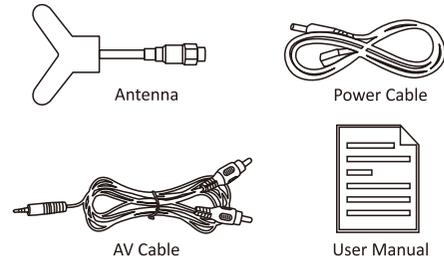

IV. Key control and LED indicators definition:

1. Key ④ is the frequency channel & band selection key. Press key ④ for a short period of time will switch to the next frequency channel. Depends on the frequency plan or band we are using, the corresponding red LED ③ (band A) or blue LED ② (band B) will flash 1, 2, 3, 4, 5, 6, 7 or 8 times for channel no. indication. Press key ④ for a period longer than 3S will switch to another channel frequency plan or band. For example, if now we are in channel no. 3 of band A, the red LED ③ will flash 3 times. If we press key ④ for more than 3S and release, the red LED ③ will be turned off and blue LED ② will flash 3 times which means we are now in channel no. 3 of band B. Frequency channel or band selections cyclic. Please refer to the following table for details:

Channel	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Red LED (Band A)	Flash once	Flash twice	Flash for 3 times	Flash for 4 times	Flash for 5 times	Flash for 6 times	Flash for 7 times	Flash for 8 times
Blue LED (Band B)	Flash once	Flash twice	Flash for 3 times	Flash for 4 times	Flash for 5 times	Flash for 6 times	Flash for 7 times	Flash for 8 times

2. Key ⑤ is the DC Power ON/OFF control key. When DC power is applied to DC jack, the green LED ① will be turned on. Press Key ⑤ for more than 2 seconds, the DC power and all LEDs will be turned off. Press Key ⑤ again for more than 2 seconds, the DC power will be turned on, and corresponding channel indicator will flash according to the channel no.

V. Table of Corresponding Channel Frequency Parameters

Channel Frequency Table (in MHz)								
Channel	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Band A	3320	3345	3370	3395	3420	3445	3470	3495
Band B	3310	3330	3355	3380	3405	3430	3455	3480

展开尺寸100x280mm,折后尺寸: 70x100mm