


## MINI HEATER- Installation Diagram for Separate Control

**NOTE:**  
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

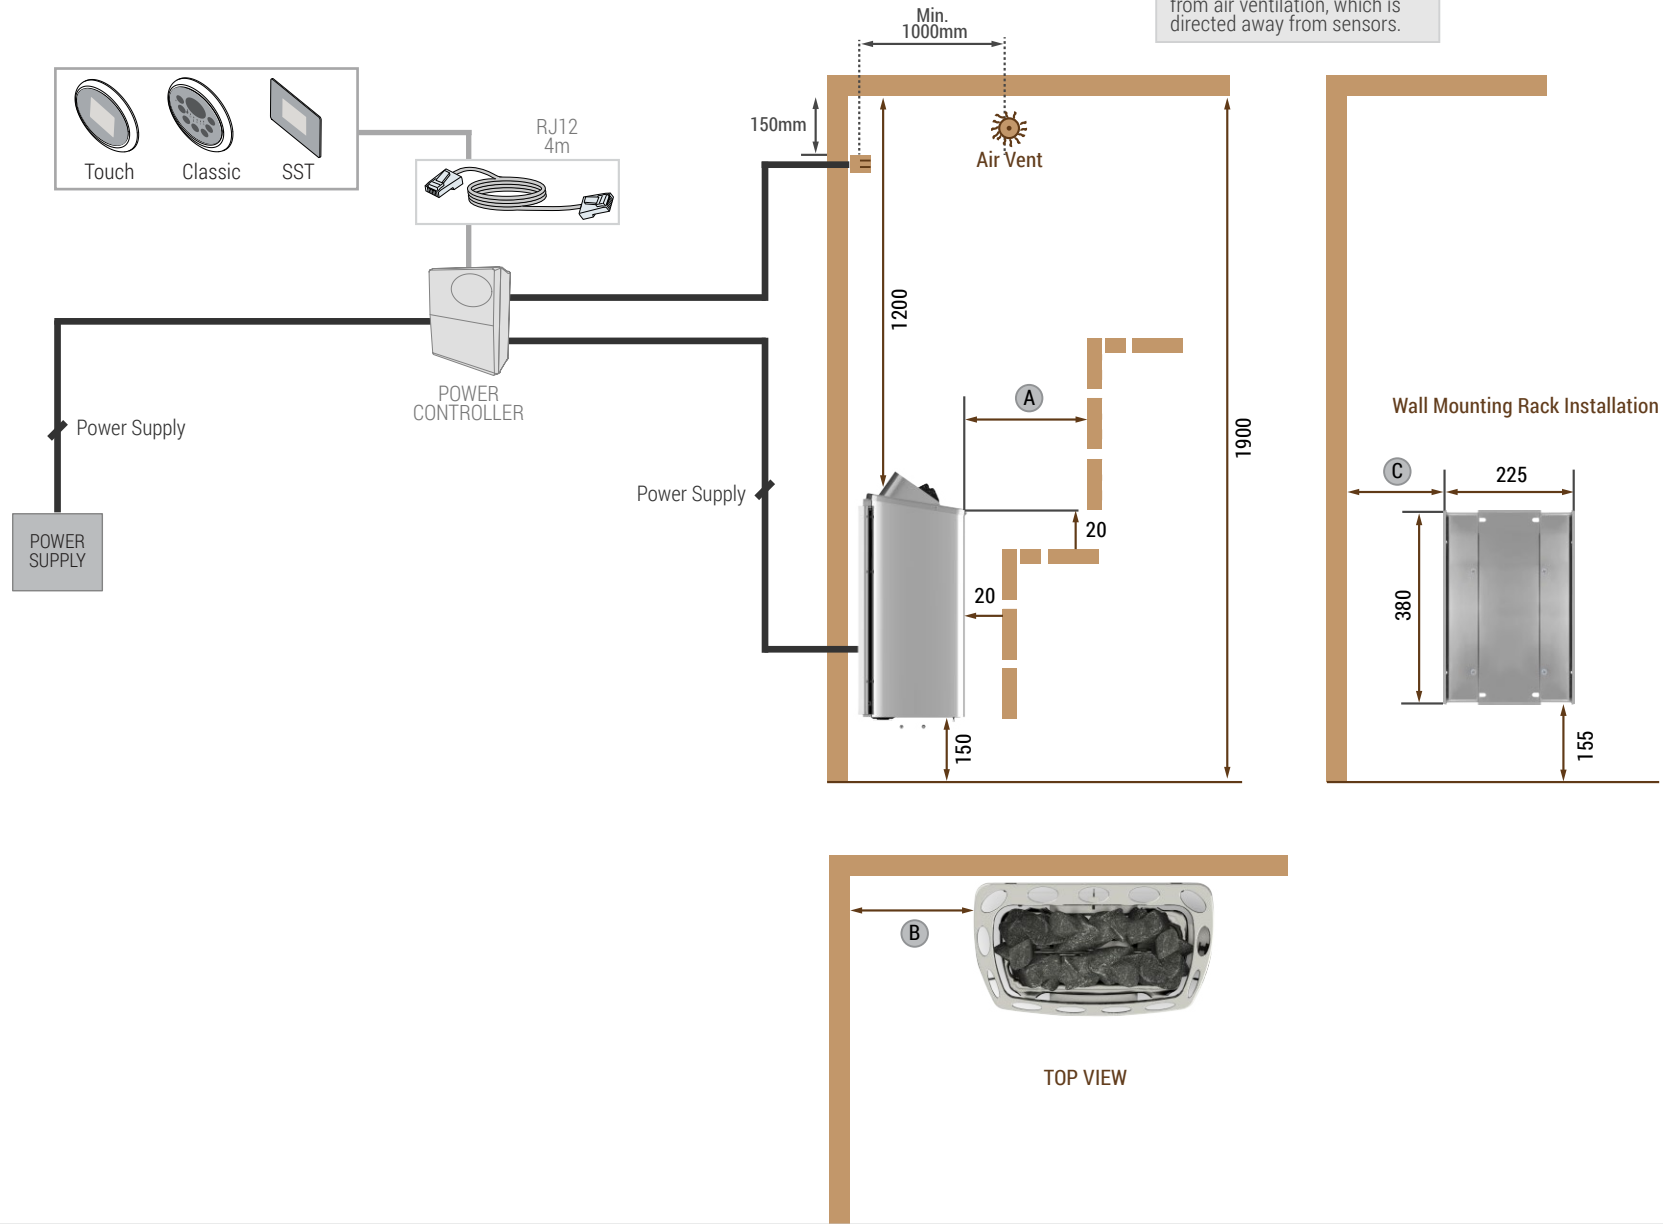

**Minimum Safety Distances**

	A	B	C
MN-23NS	60	50	90
MN-30NS	60	50	90
MN-36NS	60	50	90

## MINI HEATER- Installation Diagram for Built-in Control

Minimum Safety Distances

	A	B	C
MN-23NB	100	100	140
MN-30NB	100	100	140
MN-36NB	100	100	140

