

# USER GUIDE

LiFePO4 Battery System for Households



LiFePO4 Battery System for Households

# Contents

|   |   |
|---|---|
| <b>1 ABOUT THIS MANUAL</b> .....            | 1 |
| 1.1 Purpose .....                           | 1 |
| 1.2 Scope .....                             | 1 |
| 1.3 Safety Instructions .....               | 1 |
| <b>2 INTRODUCTION</b> .....                 | 2 |
| 2.1 Features.....                           | 2 |
| 2.2 Product Overview .....                  | 2 |
| 2.3 Specifications .....                    | 4 |
| 2.4 Recommended Settings .....              | 4 |
| <b>3. INSTALLATION</b> .....                | 5 |
| 3.1 Unpacking and Inspection .....          | 5 |
| 3.2 Mounting the Unit .....                 | 5 |
| 3.3 Connection for Parallel Mode .....      | 5 |
| <b>4. OPERATION</b> .....                   | 7 |
| 4.1 Switch On/Off.....                      | 7 |
| 4.2 Description for LED .....               | 7 |
| 4.3 ON / OFF or SOC Led (Mode or SOC) ..... | 8 |
| 4.4 DIP switch SW1-SW4 Description .....    | 8 |
| <b>5. EMERGENCY SITUATIONS</b> .....        | 9 |
| 5.1 Fire .....                              | 9 |
| 5.2 Leaking Batteries .....                 | 9 |
| 5.3 Wet Batteries .....                     | 9 |
| 5.4 Warranty .....                          | 9 |

## 1 ABOUT THIS MANUAL

### 1.1 Purpose

This manual describes the introduction, installation, operation and emergency situations of the battery bank. Please read this manual carefully before installations and operations. Keep this manual for future reference.

### 1.2 Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

### 1.3 Safety Instructions



**WARNING:** This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. CAUTION --- To reduce risk of injury, damage, even burst, please use it following using manual. In case of causing personal
3. Do not disassemble the battery. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. CAUTION – Only qualified personnel can install this device with inverter.
6. For optimum operation of this battery, please follow required spec to select appropriate cable size.
7. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion or fire.
8. Please strictly follow installation procedure.
9. To support full output load, at least 2 sets of LPBF48V for inverter larger than 6KVA in parallel connection.
10. **GROUNDING INSTRUCTIONS** - This System should be connected to a permanent grounded wiring system. Be sure to comply with local requirements.
11. NEVER cause AC output and DC input short circuited. Do not connect to the mains when DC input short circuits.
12. Warning!! Only qualified service persons are able to service this device.
13. Battery should be installed indoor and kept away from water, high temperature mechanical force and flames.
14. Do not install the battery in any environment of temperature below 0°C or over 55°C, and humidity over 80%.
15. Do not put any heavy objects on the battery.

### 1.4 Can be connected in parallel

1. The batteries can be connected in parallel. Series connection is not allowed. Use in upright position only.
2. The batteries are not allowed to connected with PWM controller for charging.

**Special Attention:** Due to the built-in protection board of the lithium battery pack is with over-discharge protection function, it is strongly recommended to stop using the load when the battery pack is over-discharged. The battery pack cannot be repeatedly activated for discharge. Or the battery may be failed to be activated by the AC or PV activation cable ( It requires a special charging activation method), so cannot be charged. Therefore, when the battery pack is low power, please charge the battery as soon as possible when main power or solar energy is available.


## 2. INTRODUCTION


The battery system main using Solar power system for Family house. It also have a with to controller the battery easily and protect our Household application timely.

### 2.1 Features

- Iron phosphate-lithium power battery
- Long warranty period:5 years
- Higher energy density, smaller volumn for household.
- Support connected in parallel mode for expansion
- Photovoltaic system: This battery pack is designed for household photovoltaic systems.
- Battery management system (BMS): The battery packs built-in BMS monitors its operation and prevents the battery from operating outside design limitations.
- Expandability: This battery pack can be easily expanded by adding expansion battery packs in parallel connection.

### 2.2 Product Over View

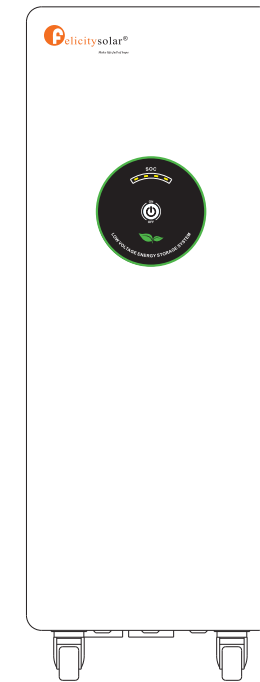

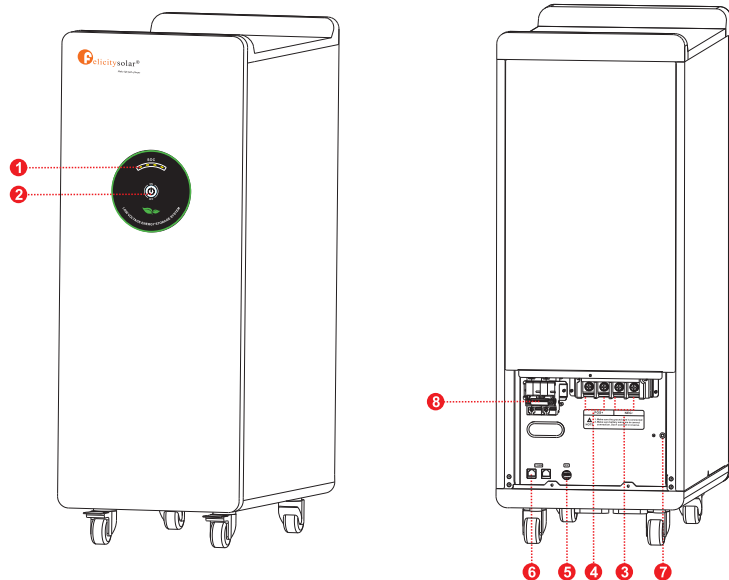

- 1. LED display
- 2. Power On/Charging indicator
- 3. Battery Negative -
- 4. Battery Positive +
- 5. Switch
- 6. Communication port
- 7. Earth wire
- 8. Breaker

### 2.3 Specifications

| Model                                | LPBF48250                                      | LPBF48300 |
|--------------------------------------|--|-----------|
| Usable Capacity                      | 12.5KWH  | 15KWH     |
| Nominal Voltage                      | 51.2   | 51.2      |
| Voltage Range                        | 48-57.6  | 48-57.6   |
| MAX. Charge & Discharge Current      | 200A@15S                                       |           |
| Recommend Charge & Discharge Current | ≤120A  |           |
| MAX. Output Power                    | 10000W   |           |
| Recommend Output Power               | 6000W  |           |
| DOD                                  | ≥95%   |           |
| Modules Connection                   | 1~6in parallel                                 |           |
| Communication                        | CAN&RS485                                      |           |
| Ingress Protection                   | IP21   |           |
| Cycle Life                           | ≥6000@25°C, 80%DOD                             |           |
| Working Temperature Range            | Discharge:-20°C to +65°C, Charge:+0°C to +55°C |           |
| Net Weight(KG)                       | 154KG  |           |
| Gross Weight(KG)                     | 177KG  |           |
| Product Dimension(MM)                | 615x350x955MM                                  |           |
| Package Dimension(MM)                | 715x450x1115MM                                 |           |

### 2.4 Recommended Settings

Lithium battery pack is not same as lead-acid battery, so for the devices which you connect with the battery pack for charging or discharging, such as inverters, MPPT charger controllers or UPS, please implement pre-settings as recommended settings as below before you launched them.

| Setting                   | LPBF48250 | LPBF48300 |
|---------------------------|-----------|-----------|
| Max. Charging Voltage     | 57.6V     |           |
| Floating charging Voltage | 57.6V     |           |
| Max. Charging Current     | 120A*N    |           |
| Cut-off voltage           | 48V       |           |

Notes: "N" means the number of battery packs connected in parallel.

### 3. INSTALLATION

#### 3.1 Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package.

| NO | NAME                 | SPECIFICATION   | PICTURE |
|----|----------------------|---|---------|
| 1  | Communication line 1 | Grid activation communication wire (used with 6)          |         |
| 2  | Communication line 2 | Used for Communication among batteries                    |         |
| 3  | Communication line 3 | Used for communication between battery and host computer  |         |
| 4  | Cables               | Used for battery parallel connection                      |         |
| 5  | Adapter              | Used for activating the pack when grid power recover      |         |
| 6  | PV Wake up line      | Used for auto restart when PV comeback in off-grid system |         |
| 7  | User manual          | User manual   |         |
| 8  | Guarantee card       | Guarantee card  |         |

#### 3.2 Mounting the Unit

Consider the following points before selecting where to install:

- Do not mount the battery on flammable construction materials.
- The ambient temperature should be between 0°C and 45°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the right diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.


Please follow below steps to implement battery connection:

1. Assemble battery ring terminal based on recommended battery cable and terminal size.
2. Connect all battery packs as units requires. It's suggested to connect at least 2 sets of LPBF48V for inverter larger than 6KVA in parallel connection.

**Note:** if you need the battery wake-up when the grid back, connect the battery with grid use power adapter and communication line 1 shown in the package list.

#### 3.3 Connection for Parallel Mode


The LPBF series battery support to be connected in parallel for expansion. If you need one more battery bank work in parallel mode, connect the battery as shown in PIC 1.

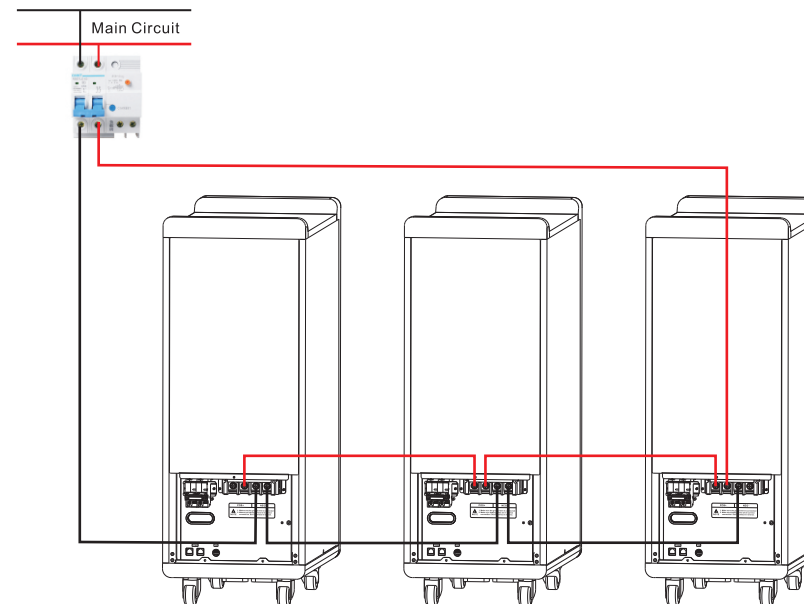

**Step 1:** The schematic diagram of the parallel connection of three battery packs is shown in Figure 1.


**Note:**After completing the above steps, arbitrarily select the positive and negative poles of one of the battery packs to output. After confirming the correct connection of the inverter, controller and battery, you can turn on any of the switches and use the battery group happily.

For pure off grid system ,the PV awake wire need to be connected with MPPT charge controller if the battery pack is charged by solar panels only . The connection diagram as below :

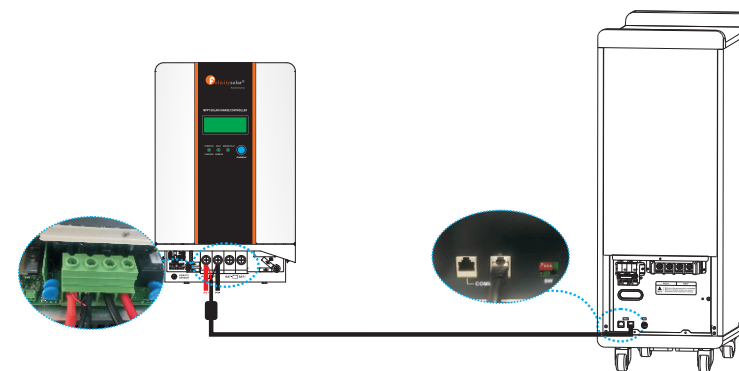

## 4. OPERATION

Once the batteries are connected well, close the breaker to the ON block, press On/Off button to enable the output of the battery pack.

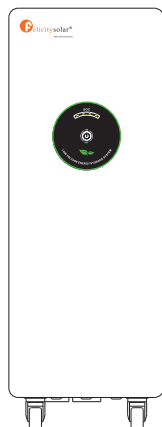

### 4.1 Switch On / Off

1. Switch on: press On/Off button to switch on the battery, then the battery will do self-inspection before enable output. The LED will show the SOC.
2. Switch off: press and hold On/Off button for 3 seconds, the battery will shut down directly.

Description for Communication port

| Picture | PIN | Description |
|---------|-----|-------------|
|         | 1   | Trigger-GND |
|         | 2   | Trigger-VCC |
|         | 3   | NC          |
|         | 4   | COMM-GND    |
|         | 5   | RS485-B     |
|         | 6   | RS485-A     |
|         | 7   | CANL        |
|         | 8   | CANH        |

| DIP SWITCH |     |                       |
|------------|-----|-----------------------|
|            | 1-4 | Communication Address |
|            | 5   | Termination Resister  |

### 4.2 Description for LED

The SOC of the battery is shown by the LED

|      |     |     |     |                    |
|------|-----|-----|-----|--------------------|
|      |     |     |     |                    |
| 100% | 75% | 50% | 25% | Flashing SOC < 10% |

Note: The battery need to be fully charged for at least once in one month to ensure the accurate SOC calculation.

### 4.3 ON / OFF or SOC Led (Mode or SOC)

| BATTERY MODE | ON/OFF    |         | SOC         |      |      |      | REMARK                         |
|--------------|-----------|---------|-------------|------|------|------|--------------------------------|
|              | GREEN LED | RED LED | LED1        | LED2 | LED3 | LED4 |                                |
| POWER OFF    | OFF       | OFF     | OFF         | OFF  | OFF  | OFF  |                                |
| POWER ON     | OFF       | ON      | ON          | ON   | ON   | ON   |                                |
| STANDBY      | OFF       | OFF     | SOC         |      |      |      | SOC < 10%(DEFAULT): LED1 FLASH |
| NORMAL       | ON        | OFF     | RUNNING/SOC |      |      |      | SOC < 10%(DEFAULT): LED1 FLASH |
| DISCHARGE    | ON        | OFF     | SOC         |      |      |      | SOC < 10%(DEFAULT): LED1 FLASH |
| CHARGE       | FLASH     | OFF     | RUNNING     |      |      |      |                                |
| LOW POWER    | FLASH     | OFF     | OFF         |      |      |      |                                |
| FAULT        | OFF       | ON      | ON          | OFF  | OFF  | OFF  | BATTERY VOLTAGE HIGH           |
|              |           |         | OFF         | ON   | OFF  | OFF  | BATTERY VOLTAGE LOW            |
|              |           |         | ON          | ON   | OFF  | OFF  | CELL VOLTAGE HIGH              |
|              |           |         | OFF         | OFF  | ON   | OFF  | CELL VOLTAGE LOW               |
|              |           |         | ON          | OFF  | ON   | OFF  | CHARGING CURRENT HIGH          |
|              |           |         | OFF         | ON   | ON   | OFF  | DISCHARGING CURRENT HIGH       |
|              |           |         | ON          | ON   | ON   | OFF  | BMS TEMPERATURE HIGH           |
|              |           |         | OFF         | OFF  | OFF  | ON   | BMS TEMPERATURE LOW            |
|              |           |         | ON          | OFF  | OFF  | ON   | CELL TEMPERATURE HIGH          |
|              |           |         | OFF         | ON   | OFF  | ON   | CELL TEMPERATURE LOW           |
|              |           |         | ON          | ON   | OFF  | ON   | CURRENT SENSOR ABNORMAL        |

### 4.4 DIP switch SW1-SW4 Description

| DIP switch SW1-SW4 Description ① |     |     |     |  | DIP switch SW5 Description② |                                |
|----------------------------------|-----|-----|-----|--|-----------------------------|--------------------------------|
| Sw1                              | SW2 | SW3 | SW4 | Remarks  | SW5                         | Remarks                        |
| 0                                | 0   | 0   | 0   | means ID=0,communication address is 0x00/0x10③ | 1                           | means connect 120Ω resistor    |
| 1                                | 0   | 0   | 0   | means ID=1,communication address is 0x01④      |                             |                                |
| 0                                | 1   | 0   | 0   | means ID=2,communication address is 0x02       | 0                           | means disconnect 120Ω resistor |
| 1                                | 1   | 0   | 0   | means ID=3,communication address is 0x03       |                             |                                |
| 0                                | 0   | 1   | 0   | means ID=4,communication address is 0x04       |                             |                                |
| 1                                | 0   | 1   | 0   | means ID=5,communication address is 0x05       |                             |                                |
| 0                                | 1   | 1   | 0   | means ID=6,communication address is 0x06       |                             |                                |
| 1                                | 1   | 1   | 0   | means ID=7,communication address is 0x07       |                             |                                |
| 0                                | 0   | 0   | 1   | means ID=8,communication address is 0x08       |                             |                                |
| 1                                | 0   | 0   | 1   | means ID=9,communication address is 0x09       |                             |                                |
| 0                                | 1   | 0   | 1   | means ID=10,communication address is 0x0A      |                             |                                |
| 1                                | 1   | 0   | 1   | means ID=11,communication address is 0x0B      |                             |                                |
| 0                                | 0   | 1   | 1   | means ID=12,communication address is 0x0C      |                             |                                |
| 1                                | 0   | 1   | 1   | means ID=13,communication address is 0x0D      |                             |                                |
| 0                                | 1   | 1   | 1   | means ID=14,communication address is 0x0E      |                             |                                |
| 1                                | 1   | 1   | 1   | means ID=15,communication address is 0x0F      |                             |                                |

Remark①: 1 in SW1-SW5 indicates ON status, and 0 indicates OFF status.

Remark②: When multiple battery packs communicate, the last battery pack SW5 needs to be in the ON status, otherwise the communication may have interference.

Remark③: When the battery pack ID is set to 0, it means stand-alone operation, and it is not necessary to detect whether the parallel condition is satisfied ⑤

Remark④: When the battery pack ID is set to 1-15, it means that the parallel operation is required, and it is necessary to detect whether the parallel condition is satisfied ⑤

Remark⑤: The parallel condition is that the difference between the battery voltage of the local battery and all the battery pack voltages is <3V, otherwise wait until the condition is satisfied

## 5. EMERGENCY SITUATIONS

Felicity cannot guarantee eStrong battery absolute safety.

### 5.1 Fire

In case of fires, make sure that the following equipment is available near the system.

- SCBA (self-contained breathing apparatus) and protective gear in compliance with the Directive on Personal Protective Equipment 89/686/EEC.
- NOVEC 1230, FM-200, or dioxide extinguisher

Batteries may explode when heated above 150°C. KEEP FAR AWAY from the battery if it catches fire.

### 5.2 Leaking Batteries

If the battery pack leaks electrolyte, avoid contact with the leaking liquid or gas. If one is exposed the leaked substance, immediately perform the actions described below.

- Inhalation: Evacuate the contaminated area, and seek medical attention.
- Contact with eyes: Rinse eyes with running water for 5 minutes, and seek medical attention.
- Contact with skin: Wash the affected area thoroughly with soap and water, and seek medical attention.
- Ingestion: Induce vomiting, and seek medical attention.

### 5.3 Wet Batteries

If the battery pack is wet or submerged in water, do not let people access it, and contact your supplier for help.

#### Damaged Batteries

Damaged batteries are not fit for use and are dangerous and must be handled with the utmost care. It may leak electrolyte or produce flammable gas. If the battery pack seems to be damaged, pack it in its original container, and then return it to your supplier.

### 5.4 Warranty

Products that are operated strictly in accordance with the user manual are covered by the warranty. Any violation of this manual may void the warranty.

#### Limitation of Liability

Any product damage or property loss caused by the following conditions, Felicity does not assume any direct or indirect liability.

- Product modified, design changed or parts replaced.
- Changed, or attempted repairs and erasing of series number or seals;
- System design and installation are not in compliance with standards and regulations;
- The product has been improperly stored in end user's premises;
- Transport damage (including painting scratch caused by movement inside packaging during shipping). A claim should be made directly to shipping or insurance company.