



25.6V 100Ah

(100A BMS)

PRODUCT MANUAL

Lithium Iron Phosphate (LiFePO₄) Battery

www.litime.com





UNITED STATES

← Register Warranty

🌐 www.litime.com

✉ service@litime.com

PRODUCT OVERVIEW

25.6V 100AH BATTERY


Operating Voltage: 25.6V

Charging Voltage: $28.8 \pm 0.4V$

Recommended Charge Current: 20A (0.2C)

Max. Continuous Discharge Current: 100A

Max. Continuous Output Power: 2560W

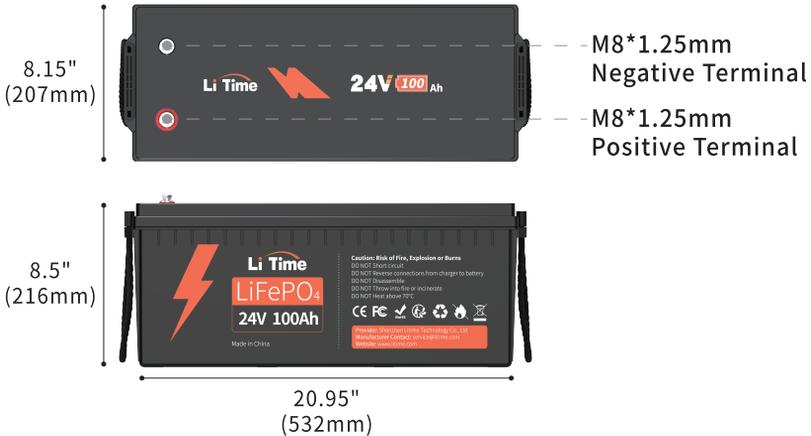


ADDITIONAL COMPONENTS

M8- 5/8" (16MM) TERMINAL BOLTS

Recommended terminal torque: 106.2 to 123.9 inch · lbs / 12 to 14N · m

The terminal bolts are used to secure multiple cable lugs to a single battery terminal. The bolts can be replaced with **M8** bolts of other lengths based on actual needs.

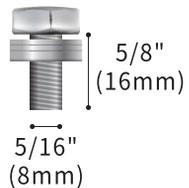

INSULATING CAPS FOR BOLTS

Cover the battery with the insulating caps after tightening the bolts. If the cap melts, stop using the battery and reach out to service@litime.com for further analysis.

IMPORTANT SAFETY INSTRUCTION

■ Please keep the battery away from heat sources, sparks, flames, and hazardous chemicals.

■ Maintain Adequate Ventilation and Heat Dissipation

Place the battery in a well-ventilated area with sufficient heat dissipation to prevent overheating and damage.

■ Size the Battery Cables and Connectors Appropriately

Use high-stranded copper connectors and heavy gauge cables to handle possible battery loads. Make sure to keep identical cable lengths. Avoid accidents caused by unsuitable connectors or cables that make the connection a heat source during battery operation.

■ Please tighten all cable connections, as loose cable connections can cause terminal meltdown or fire.

■ DO NOT puncture, drop, crush, burn, penetrate, shake, or strike the battery.

The battery should be securely fastened during handling to prevent impact or dropping.

It should be safely secured to a solid plane and the cables safely tied to a suitable location to avoid arcing and sparking due to friction.

DO NOT press it by placing heavy stuff on top of it for long periods, which may damage it due to an internal short circuit.

■ DO NOT immerse the battery in water whether the battery is in use or on standby.

■ DO NOT open, dismantle, or modify the battery.

■ DO NOT touch the exposed electrolyte or powder if the battery casing is damaged.

■ Uncovered electrolyte or powder that has contacted the skin or eyes MUST be flushed out with plenty of clean water immediately. Seek medical attention afterward.

■ Avoid Short Circuit

Please use circuit breakers, fuses, or disconnects that have been properly sized by certified electricians, licensed installers, or regional code authorities to protect all the electrical equipment in your system. The battery has a built-in battery management system (BMS) that protects the battery cells from over-charge, over-discharge, and over-current, however this alone will not protect your system from severe electrical conditions.

■ **Trained and certified technicians are required for safe and reliable installation. This product manual can only serve as a guideline as it cannot cover all possible scenarios.**

■ **Verify Correct Polarity**

Please verify the polarity before connecting the wiring. Reverse polarity can and will destroy the battery and other electrical equipment. Use a multimeter to determine proper polarity.

■ **Avoid Exposed Metal Terminals or Connectors**

The terminals of this battery are always live. Avoid exposed metal terminals or connectors; DO NOT place tools on the terminals or touch them with bare hands; DO NOT short circuit or use outside of specified electrical ratings.

■ **DO NOT dispose of the battery as household waste. Please use recycling channels in accordance with local, state, and federal regulations.**

WARNING

■ Batteries are potentially dangerous and proper precautions must be taken during operation and maintenance.

■ Improper use of the battery can lead to battery failure or other potential damage.

■ Improper configuration, installation, or use of related equipment in the battery system may damage the battery and other related equipment.

■ Please wear proper personal protective equipment when working on the battery.

■ Battery installation and maintenance must be performed by trained and certified technicians.

■ Failure to follow the warnings above can result in potential damage.

If you have any questions or need any help, please feel free to contact us (and leave your contact phone number) at service@litime.com, we will offer phone or email support in 12hrs.



CONTENTS

BATTERY PARAMETERS	page	
	01	
THINGS TO KNOW BEFORE USING	page	
	03	
CHARGING METHODS	page	
	04	
Method I	SOLAR PANEL(S) & CONTROLLER	04
	Solar Panel	
	Controller	
	Controller Settings	
Method II	BATTERY CHARGER	05
Method III	ALTERNATOR / GENERATOR	05
HOW TO ESTIMATE THE BATTERY CAPACITY	page	
	06	
STATE OF CHARGE (SOC)		06

RECOMMENDED CABLE SIZING page
07

SERIES / PARALLEL CONNECTION page
08

THE PREMISE OF CONNECTION 08

LIMITATION FOR SERIES/PARALLEL CONNECTION 08

HOW TO CONNECT BATTERIES 09

- Step 1 Wear Insulating Gloves
- Step 2 Voltage Balancing Before Connection
- Step 3 Battery-to-Battery Connection
- Step 4 Total Input & Output Connection
- Step 5 Rebalancing Every Six Months
- Wiring Diagram Reference

WHAT TO DO
WHEN THE BATTERY STOPS WORKING? page
15

BATTERY PARAMETERS

Cell Type	LiFePO ₄
Nominal Voltage	25.6V
Rated Capacity	100Ah
Energy	2560Wh
Internal Resistance	≤40mΩ
Cycle Life	≥4000 times
Battery Management System (BMS) Board	100A
Charge Method	CC/CV
Charge Voltage	28.8±0.4V
Recommended Charge Current	20A (0.2C)
Max. Continuous Charge Current	100A
Max. Continuous Discharge Current	100A
Surge Discharge Current	400A@1 second
Max. Continuous Output Power	2560W

Dimension	L 20.95*W 8.15*H 8.5 inch
	L 532*W 207*H 216 mm
Housing Material	ABS
Protection Class	IP65
Recommended Terminal Torque	106.2 to 123.9 inch·lbs/12 to 14 N·m
Temperature Range	Charge: 0°C to 50°C / 32°F to 122°F
	Discharge: -20°C to 60°C / -4°F to 140°F
	Storage: -10°C to 50°C / 14°F to 122°F

THINGS TO KNOW BEFORE USING

When using the battery, please be careful to **avoid metal or conductive objects touching the positive and negative poles of the battery at the same time**, otherwise it may cause a short circuit.

Install the battery upright with the post bolt facing up, and it could not be mounted upside down. If you need to mount the battery at its side, please contact service@litime.com to confirm the direction.

Tightly screw in the post bolts. Having loose battery terminals will cause the terminals to build up heat resulting in damage to the battery.

This battery is not intended to be used to start any devices, please **DO NOT use it as a starting battery**.


Suggestions for **Long-term Storage**:

○ Temperature

The battery can be operated at a temperature of -20°C to 60°C / -4°F to 140°F , and a temperature between 10°C to 35°C / 50°F to 95°F is ideal for long-term storage. Store in a fireproof container and away from children.

○ Capacity

For a longer-lasting product, it is best to store your battery **at a 50% charge level** and recharge every three months if it is not going to be used for a long time.

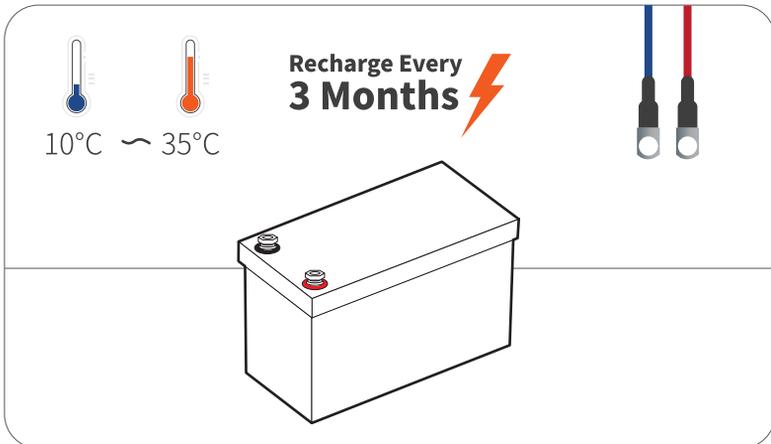

CHARGING METHODS

SOLAR PANEL(S) & CONTROLLER

Solar Panel

☆ Recommended Power: $\geq 800W$

- The battery can be fully charged in one day (with effective sunshine 4.5hrs/day) by 800W solar panels.
- It may take more than one day to fully charge the battery by $\geq 800W$ solar panels since the duration and intensity of light would be a great factor for their charging efficiency.

Controller

☆ Recommended Charging Current:

20A (0.2C)	The battery will be fully charged in around 5hrs.
50A (0.5C)	The battery will be fully charged in around 2hrs.

☆ Recommended Charging Mode: **24V (29.2V) LI (LiFePO₄)**

Controller Settings

Refer to the below parameters if you need to manually set up your controller. As different types of batteries have different charging modes, it is recommended to set only the following parameters for LiFePO₄ batteries. The settings for other types of batteries do not apply to LiFePO₄ batteries except for the following settings

CHARGING	Charge /Bulk /Boost Voltage	28.8 \pm 0.4V
	Absorption Voltage	28.8 \pm 0.4V
	Over Voltage Disconnect	30V
	Over Voltage Reconnect	28.4V
	Tail Current	2A (0.02C)
DIS-CHARGING	Under Voltage Warning	23.2V
	Under Voltage Warning Recover	24.8V
	Low Voltage Disconnect	21.6V
	Low Voltage Reconnect	24V

BATTERY CHARGER

Use 29.2V lithium iron phosphate (LiFePO₄) battery charger to maximize the capacity.

☆ Recommended Charging Voltage: Between 28.4V to 29.2V

☆ Recommended Charging Current:

20A (0.2C)	The battery will be fully charged in around 5hrs.
50A (0.5C)	The battery will be fully charged in around 2hrs.

Tips

- ① It's recommended to disconnect the charger from the battery after fully charging.
- ② It is not recommended to use alligator clips to connect the charger or load to the battery as the contact area is too small and can cause the terminals to melt and damage the battery.

ALTERNATOR / GENERATOR


LiTime battery can be charged by an alternator or generator.

If the alternator/generator **supports DC output**, a **DC-to-DC charger** needs to be added between the battery and the generator; if the alternator/generator **supports AC output**, please refer to the recommendations in "Battery Charger" above to add **a suitable battery charger** between the battery and the generator.

☆ Recommended Charging Voltage: Between 28.4V to 29.2V

☆ Recommended Charging Current:

20A (0.2C)	The battery will be fully charged in around 5hrs.
50A (0.5C)	The battery will be fully charged in around 2hrs.

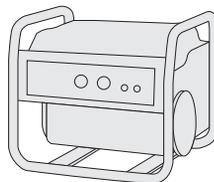


HOW TO ESTIMATE THE BATTERY CAPACITY

STATE OF CHARGE (SOC)

The battery capacity could be roughly estimated by its resting voltage (not charging/discharging voltage)^①.

Since the voltage of each battery is slightly different, and the voltage measurement is affected by the measuring instrument, ambient temperature, etc., the following parameters are for reference only. The actual SOC of the battery is based on the discharge capacity under load.

Resting Voltage:The voltage is measured after the battery has been disconnected from the charger and loads with zero current, and left alone for 3 hours.

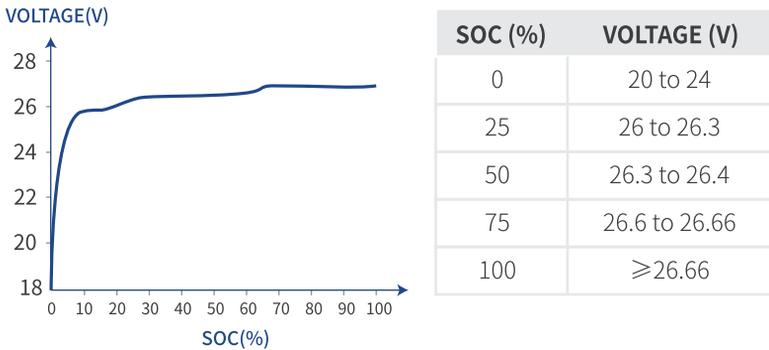

- ① Based on the characteristics of LiFePO₄ batteries, the voltage measured by all LiFePO₄ batteries during charging/discharging is not the real voltage of the battery. Therefore, after charging/discharging and disconnecting the battery from the power source, the voltage of the battery will gradually drop/increase to its real voltage.

RECOMMENDED CABLE SIZING

Battery cables should be properly sized to handle the expected load. Refer to the table below for amperage ratings for different sizes of copper cables.

PVC COPPER CABLE SIZE (AWG/mm ²)	AMPACITY (A)
14 (2.08)	20
12 (3.31)	25
10 (5.25)	35
8 (8.36)	50
6 (13.3)	65
4 (21.1)	85
2 (33.6)	115
1 (42.4)	130
1/0 (53.5)	150
2/0 (67.4)	175
4/0 (107)	230

The above values are from NEC Table 310.15(B)16 for copper cables rated at 167°F (75°C) operating at an ambient temperature not exceeding 86°F (30°C). Cables longer than 6 feet (1829 mm) or ambient temperature higher than 86°F (30°C) may require heavier gauges to avoid excessive voltage drops with undersized ones.

SERIES / PARALLEL CONNECTION

THE PREMISE OF CONNECTION

To connect in series or /and parallel, batteries should meet the below conditions:


- identical batteries with the same battery capacity (Ah) and BMS (A);
- from the same brand (as lithium battery from different brands has their special BMS);
- purchased in near time (within one month).

LIMITATION FOR SERIES/PARALLEL CONNECTION

Support connecting up to 8 identical batteries for up to:

2 in series as 48V (51.2V) battery system /


4 in parallel as 400Ah battery system.

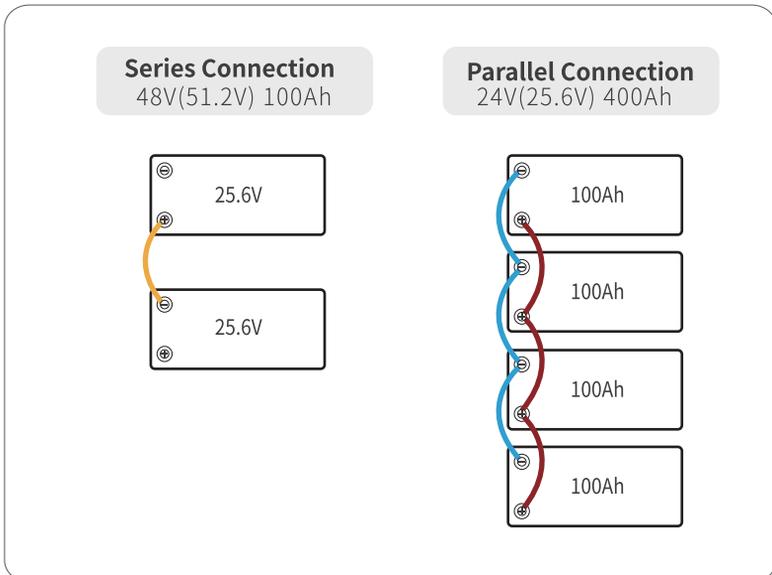

HOW TO CONNECT BATTERIES

Step 1 Wear Insulating Gloves

Wear insulating gloves for protection before connecting. Please pay attention to operation safety in the process of connection.

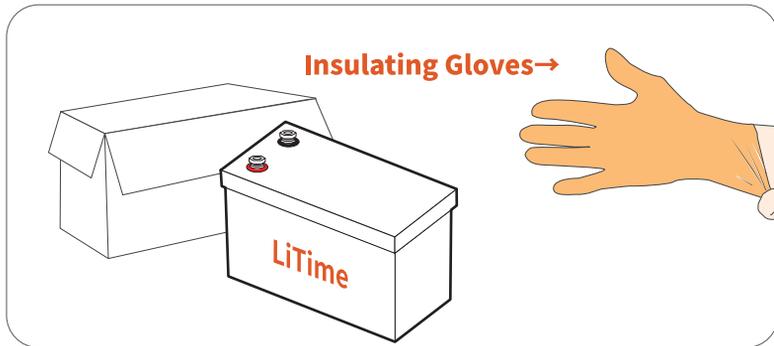


Step 2 Voltage Balancing Before Connection

Below two steps are necessary to reduce the voltage difference between batteries and let the battery system perform the best of it in series or/ and in parallel.

Step 1 Fully charge the batteries separately.
(voltage at rest: $\geq 26.66V$)


Step 2 Connect all of the batteries in parallel, and leave them together for 12~24hrs.

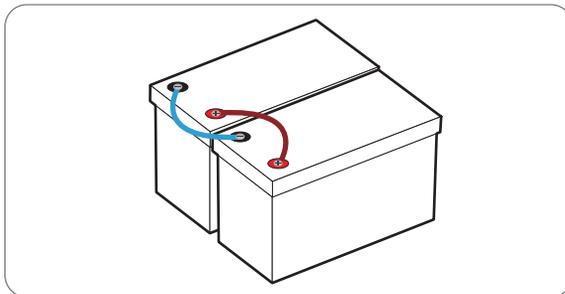

Step 3 They're now ready for the connection.

Step 3 Battery-to-Battery Connection

- #1 Connect Batteries in Series **+** to **-**

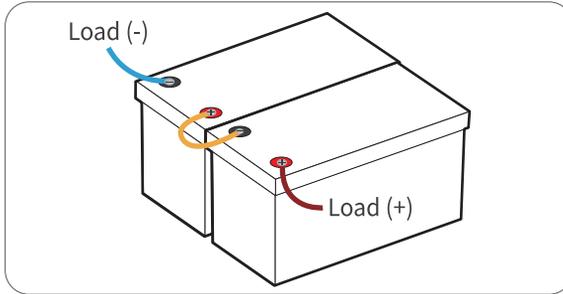


After series connection, the voltage of the battery system will be doubled according to the number of batteries you connect.

E.g. If two 24V 100Ah batteries are connected in series, the battery system will be 48V (51.2V) 100Ah.

- #2 Connect Batteries in Parallel **+** to **+** **-** to **-**

Refer to Page 12 for total input & output connection.

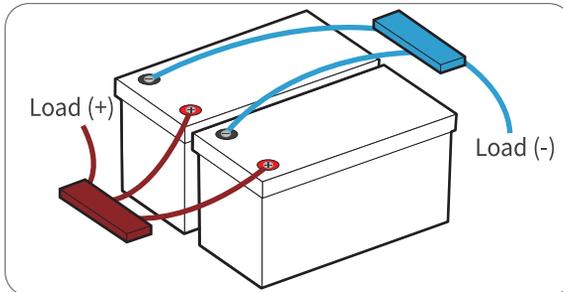

After parallel connection, the capacity of the battery system will be doubled according to the number of batteries you connect.


E.g. If two 24V 100Ah batteries are connected in parallel, the battery system will be 24V (25.6V) 200Ah.

○ #3 Connect Batteries Both in Series & Parallel

Connect in parallel first, then series.


Step
1

Connect the batteries in parallel.

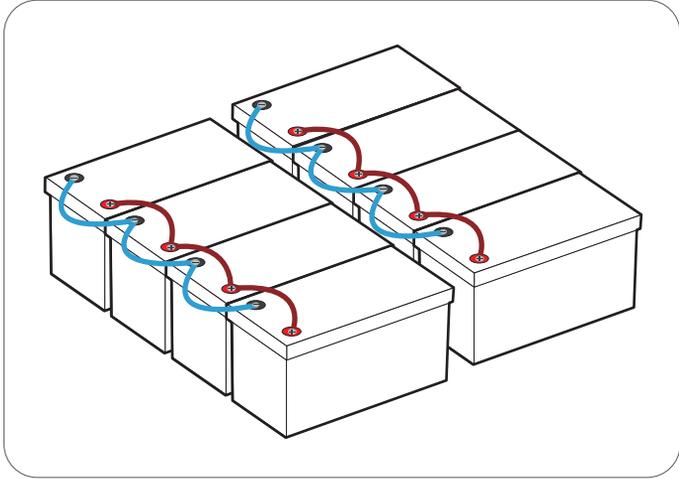

Step
2


Connect the paralleled battery systems in series.

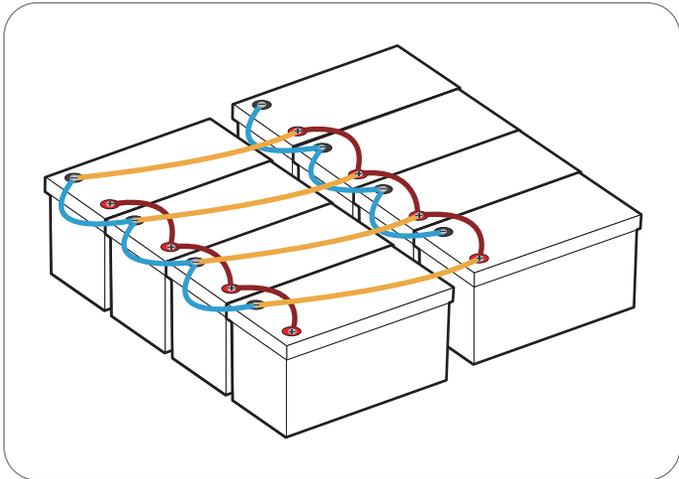

Step 4 Total Input & Output Connection

Use two bus bars (instead of battery terminals) to connect all the positive and negative output/input cables, ensuring that the input & output currents of each battery are balanced. (Not required when connecting batteries only in series.)

It is not recommended to use one terminal as the total positive or negative output/input of the battery system as the connected terminals may heat up or even melt if the total output/input current of the battery system is too high.

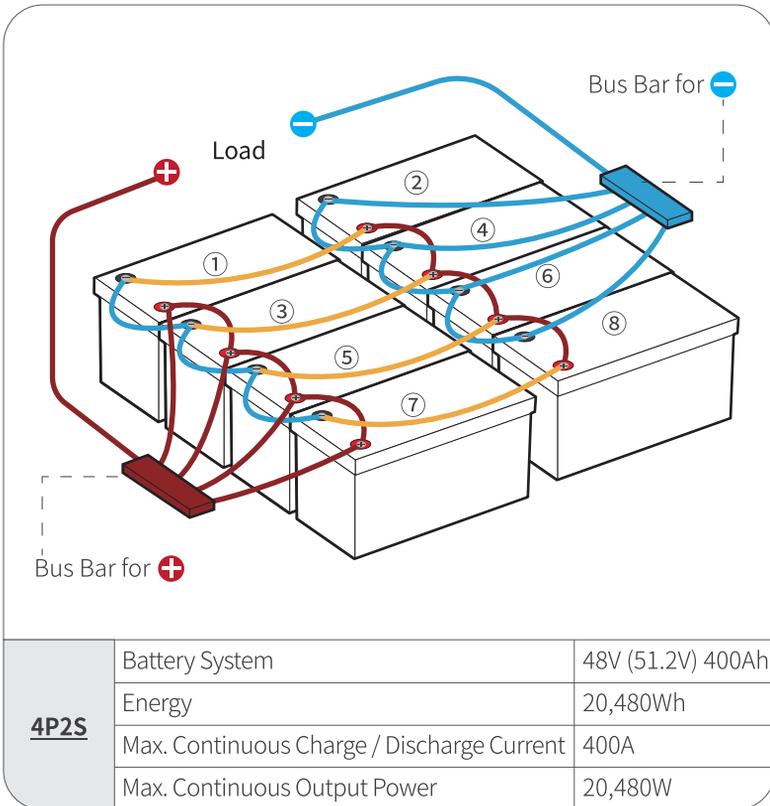


① As \ominus of ① / ③ / ⑤ / ⑦ is connected in series with \oplus of ② / ④ / ⑥ / ⑧, please do not connect \ominus of ① / ③ / ⑤ / ⑦ with \ominus of load or \oplus of ② / ④ / ⑥ / ⑧ with \oplus of load, otherwise the battery system will fail to connect in series.

② Please do not connect in reverse order, which may affect the use of the batteries.


Step 5 Rebalancing Every 6 Months

It is recommended to rebalance the battery voltage every six months following Step 2 on Page 9 if you're connecting multiple batteries as a battery system, as there might be voltage differences after six months of the battery system running.

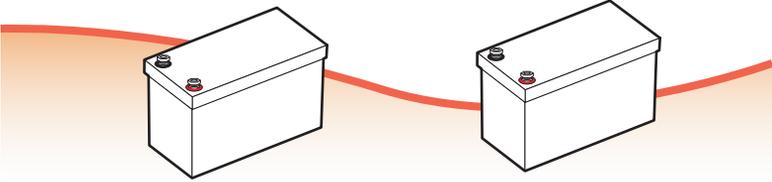


Wiring Diagram Reference

2P2S	Battery System	48V (51.2V) 200Ah
	Energy	10,240Wh
	Max. Continuous Charge / Discharge Current	200A
	Max. Continuous Output Power	10,240W

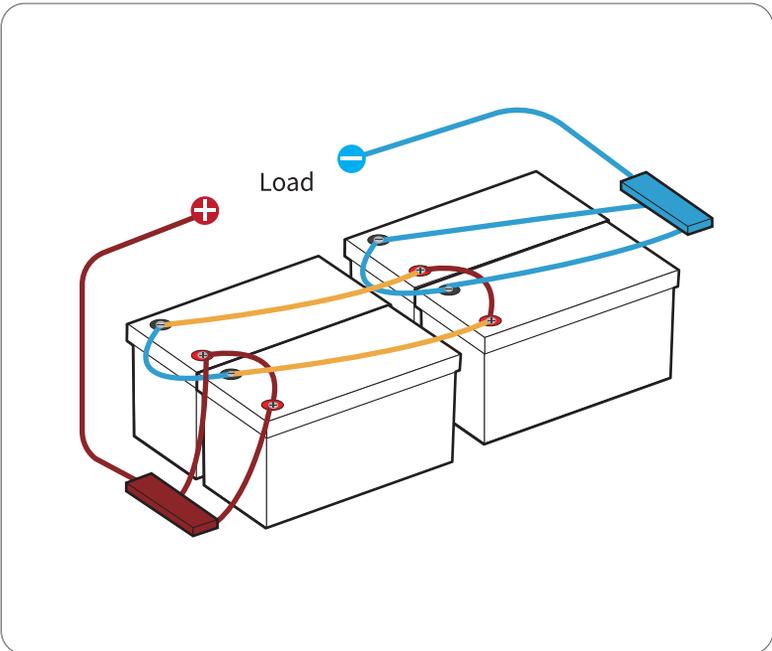


3P2S	Battery System	48V (51.2V) 300Ah
	Energy	15,360Wh
	Max. Continuous Charge / Discharge Current	300A
	Max. Continuous Output Power	15,360W

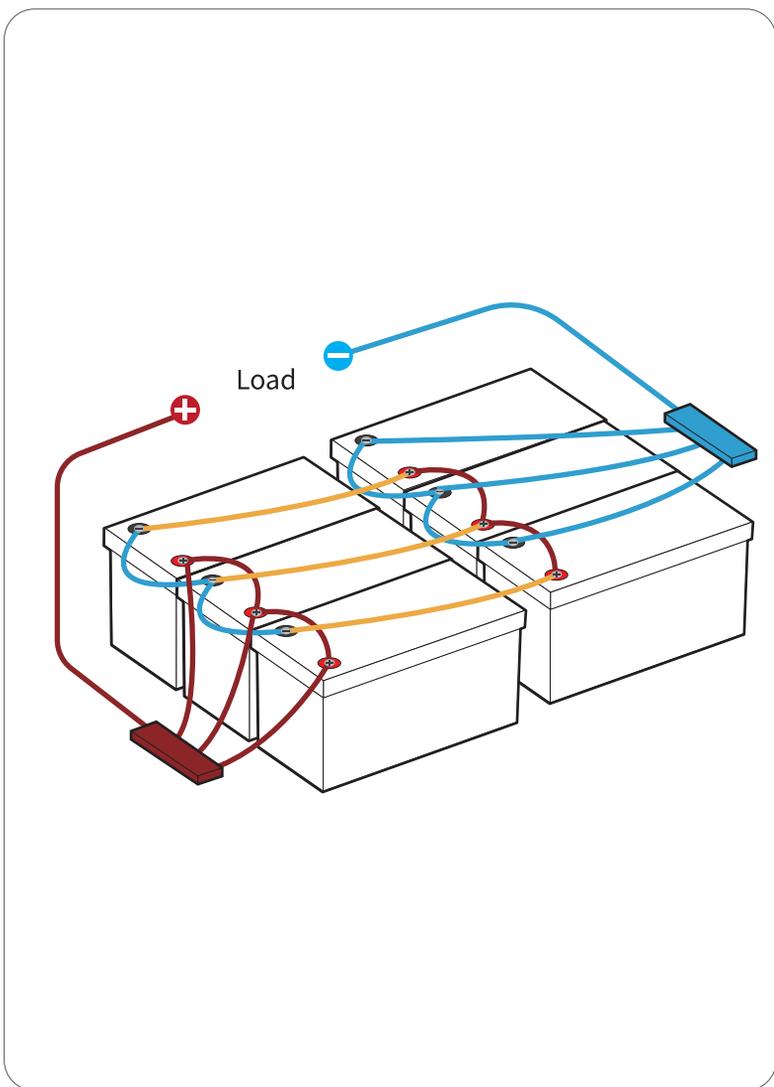

WHAT TO DO WHEN THE BATTERY STOPS WORKING?

When the battery




It has 85% chances that BMS has shut it off for protection, and you could try one of below ways to activate the battery.

GENERAL STEPS

If the BMS has cut off the battery for protection, follow the below steps to activate it.

Step
1


Cut off all the connections from the battery.

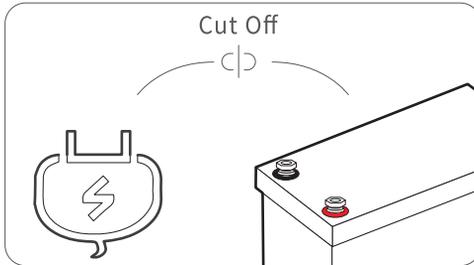

Step
2

Leave the battery aside for 30mins.

Then the battery will automatically recover itself to normal voltage (>20V) and can be used after fully charged.

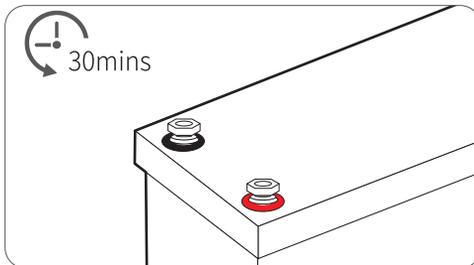


If the battery is unable to recover itself after the above steps, please try activating by **ONE OF THE BELOW TWO METHODS.**

After activated (voltage >20V) and fully charged by the normal charging method, it can be used normally.


Method ①

Use a [charger with lithium battery activation function](#) to fully charge the battery.

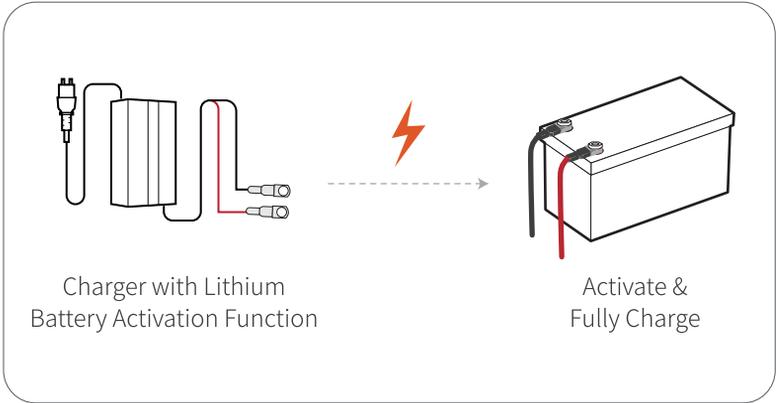

Method ②

Connect a [controller](#) that supports 24V LiFePO₄ battery charging to charge the battery for 3~10s in sunny daytime.

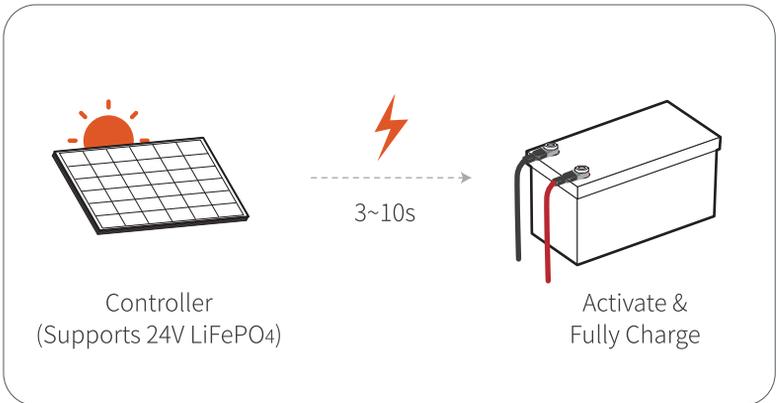

Li Time

www.litime.com



Shenzhen Litime Technology Co., Ltd