



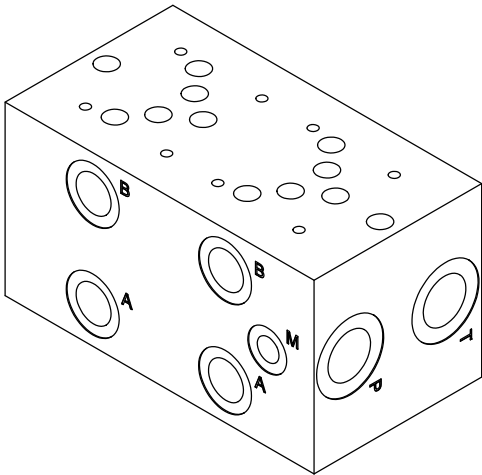

Schema idraulico
Hydraulic diagram



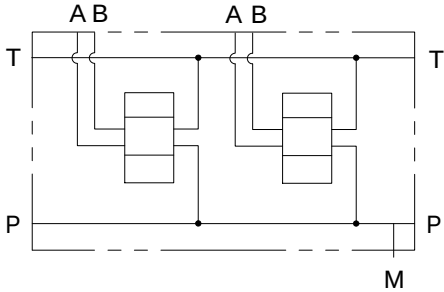


n°2 BSP 3/4G

INTERFACCIA AUSILIARE SU ELEMENTI
AGGIUNTIVI (USARE OR2137)
INTERFACE FOR ADDITIONAL AUXILIARY
ELEMENTS (USE OR2137)


BSP 1/4G

BSP 1/2G

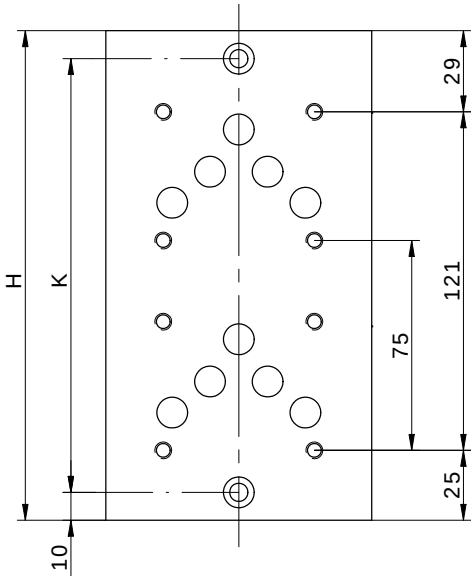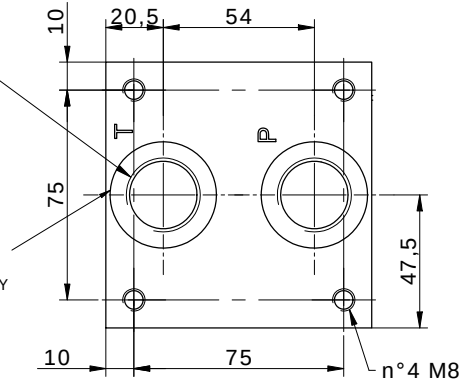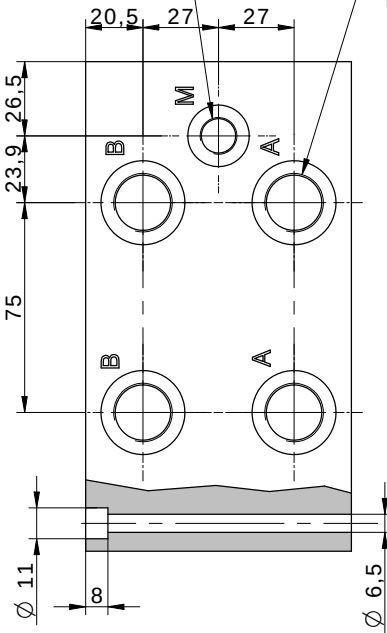

E_ 10 - 06 - 12 - __ - 0

n°2 BSP 3/4G



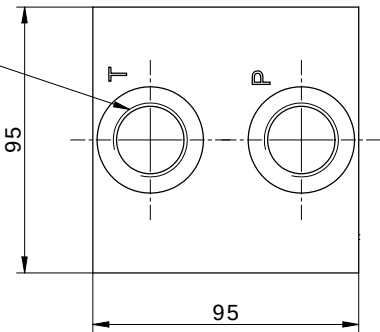


POS.	01	02	03	04	05	06
H	100	175	250	325	400	475
K	84	159	234	309	384	459


Via Nicolò Copernico 12/c-d
29027 Casoni Di Gariga - Podenzano (PC) Italy

www.oleodinamica2mp.it
Tel +39 0523 523231
Fax +39 0523 524509



2^{OLEODINAMICA}mp

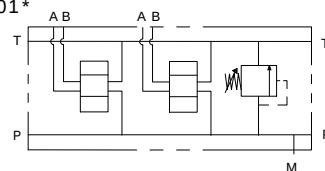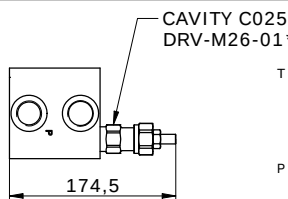



A diagram showing a rectangular plate with a circular hole. A diagonal line passes through the hole, and an arrow points to the hole from the text 'Circular hole'.

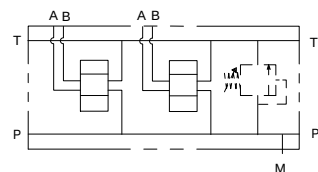


A 3D perspective view of a rectangular printed part. On the front face, there are two circular ports. On the top face, there are several small circular holes and two larger circular features. A cable is connected to a port on the right side of the part.

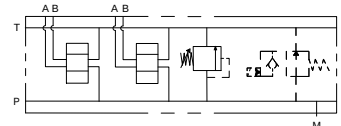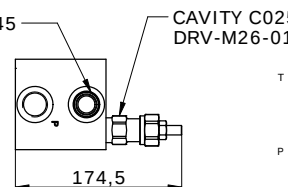

A perspective view of a rectangular solenoid valve. The top surface features several circular ports. The front-left side has a complex assembly with a circular component and a handle. The front-right side has a threaded port with a nut and a plug.

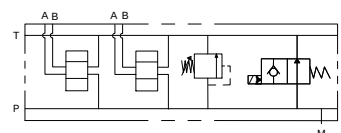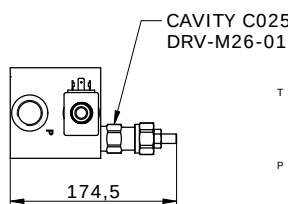

A diagram showing a hand correctly placed on a door handle. The hand is positioned with the fingers wrapped around the handle, and the thumb is extended downwards. A line points from the text 'Hand on handle' to the hand.

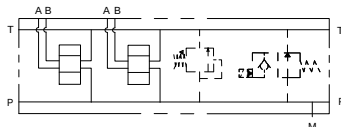

S = STEEL
A = ALUMINIUM

MOUNTING POSITIONS: 01÷06

0 = WITHOUT RELIEF VALVE
1 = WITH RELIEF VALVE
2 = RELIEF VALVE READY
4 = WITH R.V. AND V.V. READY
5 = WITH R.V. AND V.V.
6 = V.V. READY AND R.V. READY

0 = WITHOUT RELIEF VALVE
1 = 5-55 bar
2 = 25-110 bar
3 = 75-250 bar

0 = WITHOUT RELIEF VALVE
H = HEX. HEAD SCREW

H = HEX. HEAD SCREW

K = KNOB

C = COVER CAP

I = NOT ADJUSTABLE



SEALS

N = BUNA
V = VITON

VENTING VALVE

000 = WITHOUT V.V.
TS2 = NORMALLY OPEN

VENTING VALVE

0 = NO MANUAL OVERRIDE
2 = PUSH AND TWIST
4 = PUSH BUTTON

CONNECTOR TYPE

0 = WITHOUT COIL
C = CAVI / LEADS
D = DIN 43650
G = DEUTSCH DT04
A = AMP JUNIOR

TENSIONE / VOLTAGE

000 = WITHOUT COIL
D12 = 12 VDC
D24 = 24 VDC
D26 = 26 VDC

*see *CARTRIDGE VALVES* datasheets

www.oleodinamica2mp.it
Tel +39 0523 523231
Fax +39 0523 524509