Seal and O-ring Locations

Caution: Always wear safety glasses and gloves. Disconnect all power to the trolling motor before beginning any work or maintenance. Johnson Outdoors Inc. is not responsible for any damage due to improper rigging or installation. If you do not have the skills, experience and tools to perform the following maintenance and repairs, we recommend you seek the help of a Minn Kota Authorized Service Center. A list of Authorized Service Centers can be found at www.minnkotamotors.com/service/asclocator.aspx. Or contact our Technical Service Department by email at service@minnkotamotors.com or, by dialing 800-227-6433.

2883460 Seal and O-ring Kit

for 3 1/4" diameter motor lower units

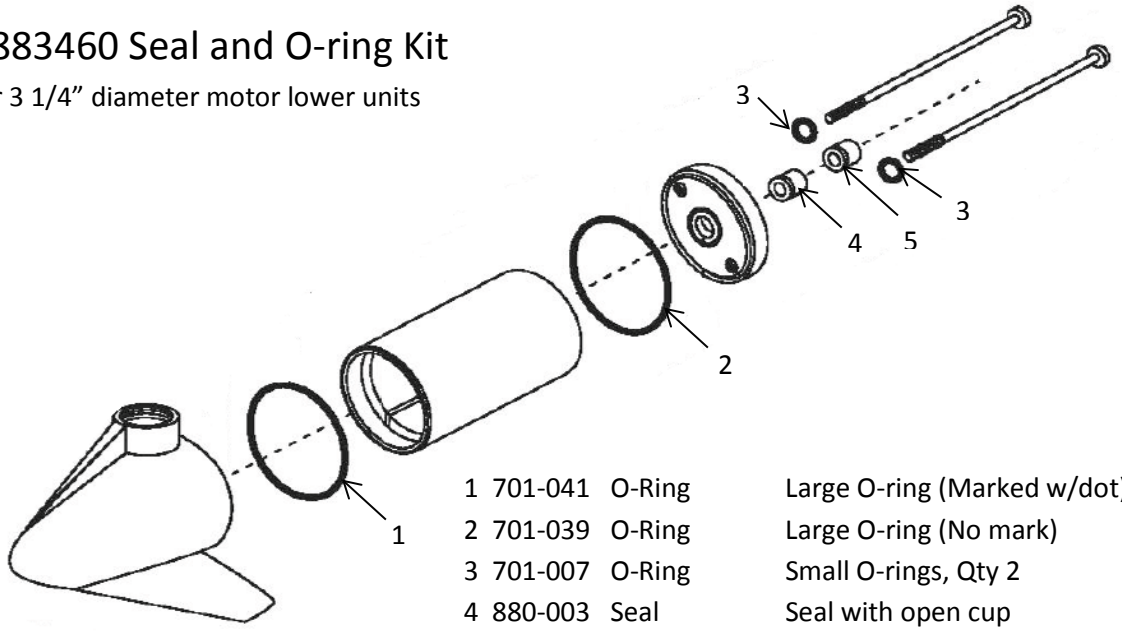

1	701-041	O-Ring	Large O-ring (Marked w/dot)
2	701-039	O-Ring	Large O-ring (No mark)
3	701-007	O-Ring	Small O-rings, Qty 2
4	880-003	Seal	Seal with open cup
5	880-006	Seal w/shield	Seal with stainless insert

Notes: Applying a small amount of grease to each O-ring will help prevent bunching or tearing during installation. Seals install cup/shield facing out

2888460 Seal and O-ring Kit

for 3 5/8" diameter motor lower units

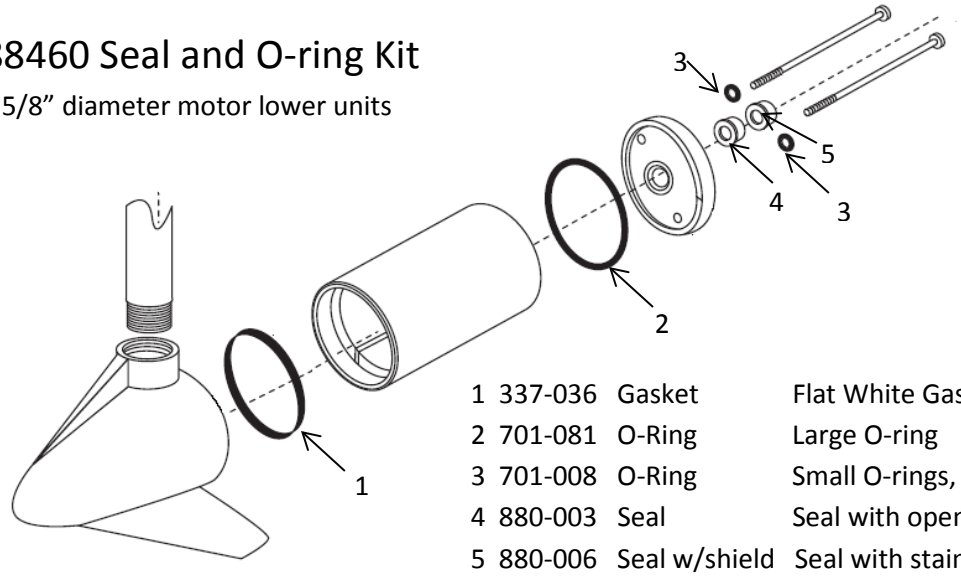

1	337-036	Gasket	Flat White Gasket
2	701-081	O-Ring	Large O-ring
3	701-008	O-Ring	Small O-rings, Qty 2
4	880-003	Seal	Seal with open cup
5	880-006	Seal w/shield	Seal with stainless insert

Notes: Applying a small amount of grease to each O-ring/Gasket will help prevent bunching or tearing during installation. Seals install cup/shield facing out

Seal and O-ring Locations

2889460 Seal and O-ring Kit

for 4” diameter motor lower units

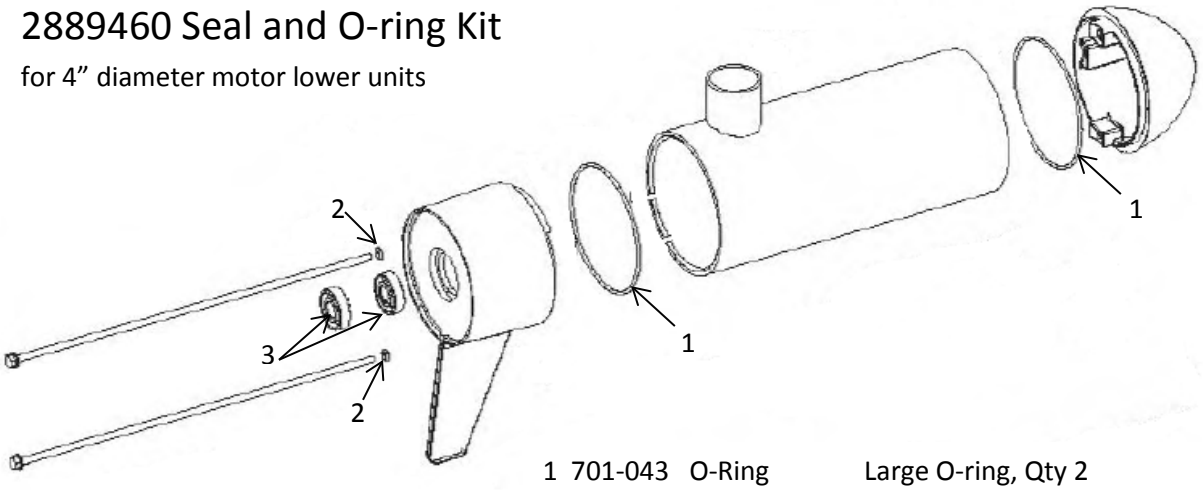

1	701-043	O-Ring	Large O-ring, Qty 2
2	701-009	O-Ring	Small O-ring, Qty 2
3	880-025	Seal	Seals, Qty 2

Notes: Applying a small amount of grease to each O-ring will help prevent bunching or tearing during installation. Seals install with cup facing out;

2881450 Seal and O-ring Kit

for 4 1/2” diameter motor lower units

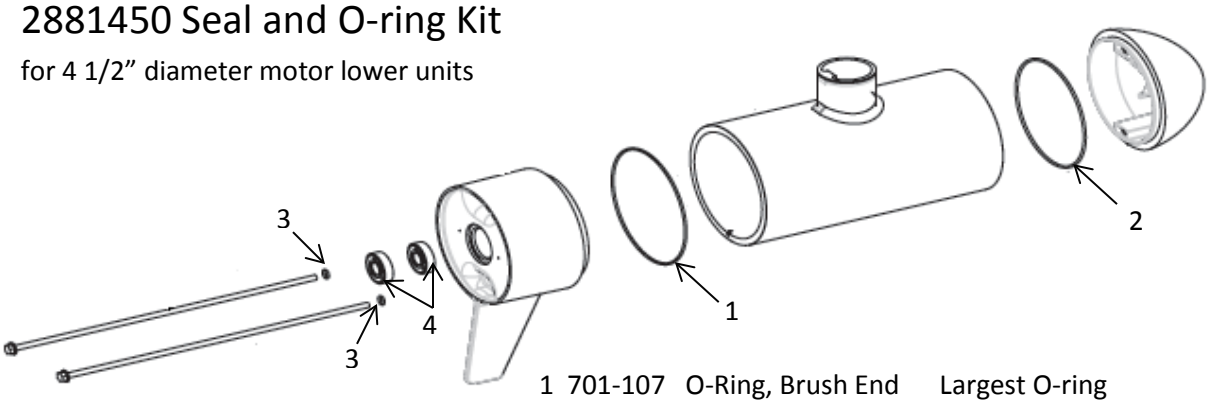

1	701-107	O-Ring, Brush End	Largest O-ring
2	701-098	O-Ring, Plain End	Large O-ring
3	701-009	O-Ring	Small O-ring, Qty 2
4	880-025	Seal	Seals, Qty 2

Notes: Applying a small amount of grease to each O-ring will help prevent bunching or tearing during installation. Seals install with cup facing out