Sonos Amp

Огляд

Створений для професіоналів, Amp Multi дає інтеграторам можливість створювати індивідуальні розподілені аудіодосвіди для клієнтів.

- Живить до 4 зон, використовуючи 8 виходів по 125 Вт кожен.
- Використовує технологію GaN для підвищення ефективності та зворотний зв'язок після фільтрації (PFFB) для чудової якості звуку.
- Забезпечує надійне безвентиляторне охолодження та спрощує налаштування завдяки інноваційному дизайну та спеціальному кріпленню до стійки 2U.
- Підтримує точне налаштування кожного виходу за допомогою ProTune.
- Працює з Sonos S2 (для Android та iOS).

Вогні

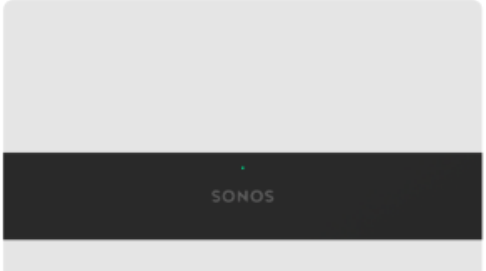

Передній індикатор стану	Відображає підключення продукту до Wi-Fi, вказує на вимкнений звук та сигналізує про помилки. **Дізнатися більше**

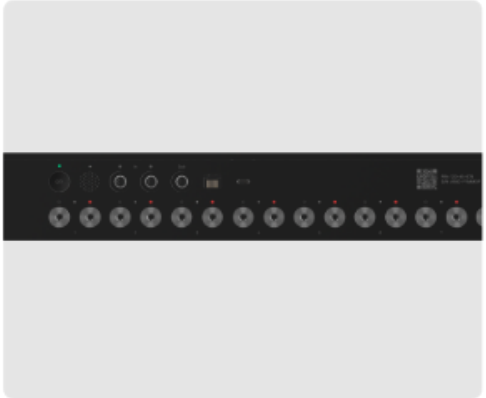

Задній індикатор стану

Надає таку ж інформацію, як і передній індикатор стану.

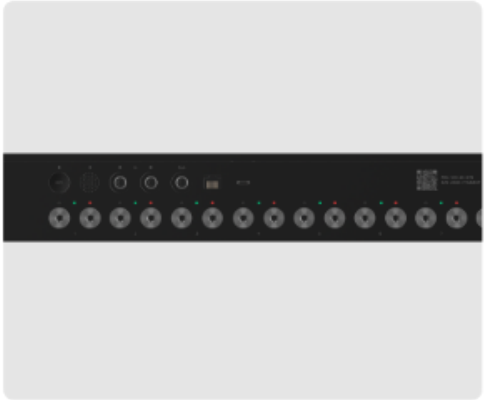

Індикатор стану виходу

8 індикаторів, по 1 над кожним виходом, вказують на вибір виходів під час налаштування. Після налаштування вони сигналізують про стан підключення, стан вимкнення звуку та помилки.

Панель роз'ємів

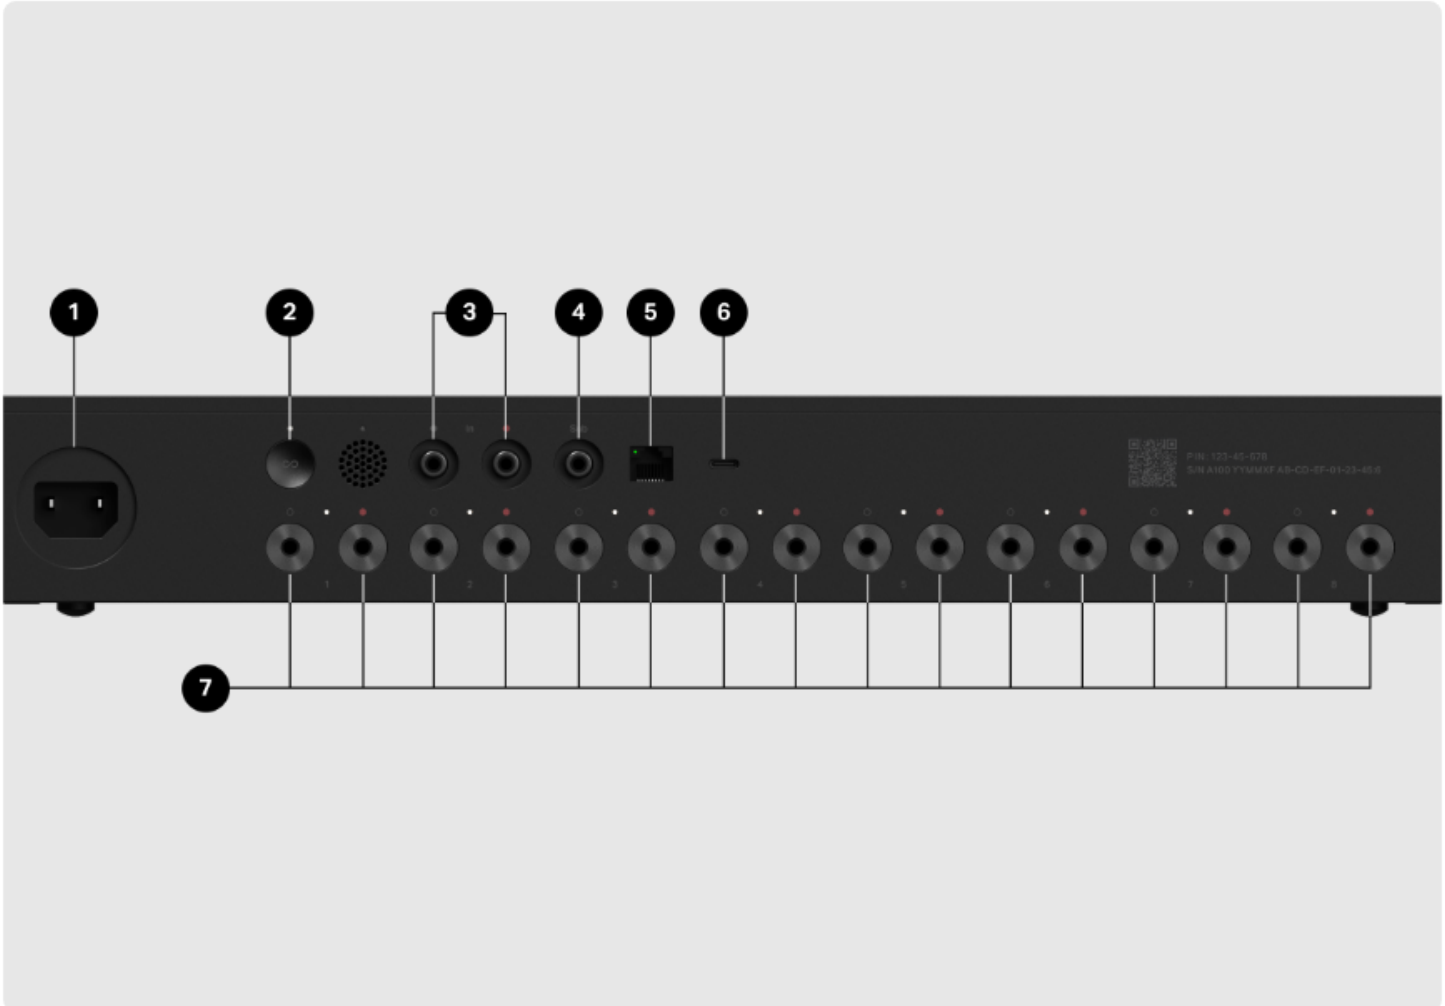

1	**Порт живлення змінного струму**	Використовуйте лише шнур живлення, що додається (використання шнура живлення стороннього виробника призведе до анулювання гарантії). **Примітка:** Щільно вставте шнур живлення.
2	**Кнопка приєднатися**	Натисніть для підключення під час налаштування.
3	**Аналоговий аудіовхід**	Використовуйте стандартний аудіокабель RCA (не входить до комплекту), щоб підключити аналогові аудіовходи Amp Multi до виходів іншого пристрою, такого як програвач програвача з попереднім підсилювачем або портативний музичний плеєр.
4	**Вихід для сабвуфера**	Підключіть активний сабвуфер до цього виходу за допомогою стандартного кабелю RCA (не входить до комплекту). Система виявить підключення кабелю до виходу сабвуфера. **Примітка:** Якщо ви від'єднуєте сабвуфер, обов'язково від'єднайте також кабель сабвуфера від виходу Amp Multi.
5	**Порт Ethernet (RJ45)**	**(Додатково)** Використовуйте кабель Ethernet, якщо хочете підключити Amp Multi до мережевого комутатора замість використання Wi-Fi. Ethernet також рекомендується, якщо ви монтуєте Amp Multi в стійку.
6	**Роз'єм USB-C**	Використовуйте **адаптер Sonos Line-In** (купується окремо) та кабель 3,5 мм для підключення додаткового аналогового аудіовходу, такого як програвач програвача з попереднім підсилювачем або портативний музичний плеєр. Ви не можете використовувати його для підключення до мережі.
7	**Вихідні підключення динаміків**	Використовуйте високоякісний акустичний провід для підключення пасивних динаміків до Amp Multi. Для найкращого звуку та найнадійнішої роботи ми рекомендуємо використовувати штекери типу «банан». Amp Multi постачається зі спеціальними штекерами типу «банан». Він також може використовуватися для прямого підключення проводів перерізом від 10 до 18 AWG.

Розміщення

Ви можете встановити Amp Multi в стійці для електроніки або розмістити його в будь-якому місці будинку з достатньою циркуляцією повітря.

Встановлений у стійці

- Amp Multi can mount perfectly in any standard-size electronics rack with the Amp Multi Rack Mount (sold separately).
- Amp Multi is 1.5U height without the Amp Multi rack mount, 2U height with the rack mount, and full rack width.
- We recommend adding 1U of active cooling for every 3 Amp Multis in a rack. You can generally mount 2 Amp Multi in a rack on top of each other without the need for active cooling. Closely examine the rack, space, and ventilation, as you may want to add active cooling regardless. For more information on heat dissipation, review the **spec sheet**.

Outside of a rack

- Place horizontally on a stable, level surface.
- Leave at least 4 inches (101 mm) of space on all sides, including above Amp Multi, and ensure there's adequate airflow to the area.
- Don’t place anything on top of the Amp Multi, including but not limited to books, decorations, speakers, and other amps.

Connect speakers and cables

---

1. Make sure your speakers are compatible with Amp Multi:
    - Your speakers’ power rating should be at least 125W for 8 ohm speaker loads and at least 200W for 4 ohm speaker loads. If you’re using Sonos Architectural speakers you can connect speaker loads as low as 2.67 ohms.
    - Wiring your speakers in series may result in poor sound quality.

---

2. Unscrew the cap from the banana plug to reveal the connection hole.

---

3. Insert the stripped end of the speaker wire into the hole, then put the cap back on the banana plug to secure the connection.

    Note: Connect the red (+) and black (-) terminals from each speaker to the corresponding banana plugs and terminals on Amp Multi. Mismatching of polarities will result in weak central sound and a distorted sense of sound direction.

---

4. Insert the banana plug into the proper speaker terminal on the back of Amp Multi.

5. Repeat to install the other speaker wires.
6. Connect the power cord and plug in Amp Multi.
7. If you're using the Amp Multi Rack Mount, we recommend connecting wired Ethernet for optimal network performance.

Setup

Use the Sonos app to configure Amp Multi.

- Put all 8 outputs from an Amp Multi in a single zone, or distribute them however you want across up to 4 zones.
- A system can contain a maximum 32 zones or products. If a system only contains Amp Multis, you could add 8 Amp Multis with 4 zones each, 32 Amp Multis with 1 zone each, or a variation in between.
- When selecting outputs for a zone, selecting 2 outputs will automatically create a stereo pair. You can change that to Mono in Settings after you've completed setup.

You can set up zones with Amp Multi and additional products.

- Create large zones of passive speakers by combining outputs from up to 16 different Amp Multis.
- Add other eligible Sonos products to a zone after you've set up the Amp Multi by going to zone settings and editing the zone. Other products must also be set up on the system before they can be added to a zone.
- Connect a Sonos Sub 3, Sub 4, Sub Mini, or third-party sub by going to the zone settings and selecting Connect Sub. You can add a maximum of 1 sub per zone, and the zone can only contain outputs from a single Amp Multi.

To review the setup for an Amp Multi, go to the settings for a zone that contains at least 1 of its outputs, then select it from the list of products (Settings > Zone > Amp Multi). On the Amp Multi settings page, you can see how each output has been configured and enable or disable WiFi for the Amp Multi; WiFi is enabled by default.

Unused outputs

You don't have to set up every output on Amp Multi right away. You can even hide them from Settings temporarily so they aren't distracting or confusing.

To find hidden unused outputs, go to a zone that contains an output from that Amp Multi, then select it from the list of products (Settings > Zone > Amp Multi). You'll see available outputs (i.e. unused outputs) at the bottom of the Amp Multi page, and can even add them to a new zone right there.

If you want to add unused outputs to an existing zone, go to System Settings, select the zone you want to add them to, and then select Edit Zone.

Install the ferrite clamp

A ferrite clamp is included in the box. If you're connecting Ethernet, install it on the Ethernet cable before using Amp Multi to ensure compliance with EMC regulations.

1. Open the ferrite clamp and remove the foam insert.
2. If the clamp seems too large for the Ethernet cable you're using, wrap the foam around the cable by

removing the backing and placing the sticky side against the cord, as close to the Ethernet port on Amp Multi as possible.

3. Place the clamp around the foam or Ethernet cable, as close to the Ethernet port on Amp Multi as possible.
4. Close the clamp until it clicks.

Zones

Setting up zones helps you fill large spaces with sound. A zone is a new semi-permanent configuration for multiple speakers throughout a system. Zones can be a single room, half of a room, or even multiple rooms in a home or building. Currently, these products can be added to a zone in the Sonos app: Amp Multi, Era 100, Era 100 Pro, Era 100 SL, Five, One, and One SL. You can also add a sub to a zone that only contains a single Amp Multi.

Once a zone is created, all products added to it are controlled together as though they are a single item. This makes playing content to all the speakers in the same space easier, compared to giving them each a common name (e.g. Kitchen, Kitchen 2, Kitchen 3, etc.) and grouping them.

You can add a maximum of 16 products to a zone. Any number of outputs from a single amp counts as 1 product. A system can contain a maximum of 32 products or zones.

To ensure the best experience while using zones, we recommend setting up wired internet connections into each Sonos product. If using wireless connections (WiFi) instead, we recommend adding a maximum of 6 products per zone.

Use the output selector to temporarily group various zones and speakers together. When you ungroup, your zones will stay intact.

Set up a zone

Zones can be a single room, half of a room, or even multiple rooms.

1. Go to **Settings** ⚙.
2. Choose a compatible room, portable, or headphone (see the above list of compatible products).
3. Select **Products**, and then select **+ Set Up Zone** to get started.

Speakers remain in a zone until you **Edit Zone** or **Separate Zone** in **Settings** ⚙.

Manage, edit, and separate your zones

After a zone is created, you can change the speakers in a zone or remove a zone altogether.

1. Go to **Settings** ⚙ and select a zone.
2. Under **Products**, select either **Edit Zone** to add or remove speakers in the zone or **Separate Zone** to disconnect all speakers in the zone.

Identify speakers in a zone

If you lose track of which speakers are in your zone, you can check them by going to System Settings, selecting the zone, and reviewing the product list. In the app, speakers in a zone have a speaker icon next to them within Settings. You can press that icon to have it play a short sound and flash its LEDs so you can identify its physical location.

Zone settings

Optimize Sonos speakers	Allows Amp Multi to recognize Sonos Architectural speakers, then applies custom tuning and DSP to provide more robust sound with a more even frequency response, optimizing system performance and ensuring stable operation.
Gain trim	Adjust the relative volume of each speaker in a zone to balance the sound.
EQ	Change the bass, treble, and loudness of all the speakers in the zone to suit your personal preferences.
Sub audio	When you add a Sonos or third-party sub to a zone with Amp Multi, use sub audio to adjust the sound as needed. • The sub toggle allows you to temporarily turn on/off the sound. • Use sub level to increase or decrease volume to match the other speakers in the zone. • Set phase control to 0° or 180° depending on your setup; flip it if you don't hear enough bass in your usual listening position. • Set the sub crossover when using third-party products to define the handoff point between the speakers and the subwoofer.
Stereo/mono	When only 2 outputs are added to a zone, the speakers connected to Amp Multi will play audio in stereo by default. You can change this sound setting to play in mono instead. When more than 2 outputs are added to a zone, the speakers connected to Amp Multi will play in mono.
Volume limit	Set the highest volume the products in this zone can reach. The volume slider in Now Playing will adjust to match it. For example, if you set the limit to 50%, the products won’t play louder than 50%, even at maximum volume.
Line-in	You can connect an audio device, like a CD player or turntable (with a built-in phono preamp) to any Sonos product that has a line-in port. • Source name: Choose a name for the line-in device. • Source level: Adjust the line-in source level if you find the default volume setting is too quiet or distorted. • Audio Delay: Add a delay between the line-in source and Sonos to reduce the chance of audio issues occurring when you're playing line-in audio on grouped speakers. • Autoplay: Choose a room if you want line-in audio to start playing automatically when Sonos detects a signal on the line-in port.

Front status light	Turn off this setting to turn off the light on the front of Amp Multi and all the lights of other products in the zone. If an Amp Multi has outputs in multiple zones, this setting will impact all of the zones that include the Amp Multi and the other products in those zones. For example, let's say you have 2 zones with outputs from an Amp Multi — Kitchen and Living Room. Then, you add 2 Era 100s to the Living Room zone. Now, you turn off the Front Status Light setting for Kitchen. Since the Amp Multi is also in Living Room, it will also turn off Front Status Light setting in the Living Room zone, which means the Era 100s status lights will also be turned off.
Back status light	Turn off this setting to turn off all the lights on the back of Amp Multi.
Touch controls	There are no touch controls on Amp Multi. You will only see this setting in your zone if it also contains another product that does have touch controls, such as an Era 100.

ProTune

For advanced tuning needs, installers can use ProTune to optimize the sound for the placement and room acoustics of any low-impedance passive speakers connected to Amp Multi. It offers a comprehensive set of manual controls, including a 10-band parametric EQ and adjustable gain and delay offsets.

ProTune is an advanced tuning tool and should only be used by trained professionals. Sign in to **protune.sonos.com** with the account information for the system you want to modify.

Note: If you're using Sonos Architectural speakers, you should complete the Optimize Sonos Speakers flow using the Sonos app before tuning with ProTune.

Amp Multi tuning

Gain trim	Adjust the relative volume of each speaker in a zone to balance the sound. The gain trim range for Amp Multi outputs is -15–5 dB. If gain trim is adjusted in ProTune and the Sonos app, the results are cumulative. For example, if gain trim is set to +1 dB in ProTune and -1 dB in the Sonos app, the net result is a gain trim of 0.
Delay	Ensures sound from multiple speakers reach listeners at the same time, creating clear sound across larger spaces. The delay range for Amp Multi outputs is 0–50 ms.
	Filter to prevent damage from speakers producing frequencies below their specification at higher volume

High pass	levels. The high pass filter range for Amp Multi outputs is 15–100Hz. The high pass filter should be set before adjusting parametric EQ.
Parametric EQ	Use the 10-band parametric EQ for precise tuning with ±15dB gain, Q, and frequency control. Option for high-shelf, low-shelf, and bell filter types. If EQ is adjusted in ProTune and the Sonos app, the results are cumulative. This enables installers to finely correct sound based on the acoustics of the space, while also allowing owners to make additional adjustments that suit their tastes.

Additional speaker tuning

Gain trim	Adjust the relative volume of each speaker in a zone to balance the sound. The gain trim range for subs is -15–3 dB. If gain trim is adjusted in ProTune and the Sonos app, the results are cumulative. For example, if gain trim is set to +1 dB in ProTune and -1 dB in the Sonos app, the net result is a gain trim of 0.
Delay	Ensures sound from multiple speakers reach listeners at the same time, creating clear sound across larger spaces. The delay range for Sonos speakers is 0–50 ms.

Specifications

Audio

Amplifier	Class-D digital amplifier with GaN and PFFB
FTC power output rating	8 output channels, 125 watt each @ 8Ω (all channels driven)
Speaker connections	Banana plugs (8)
Minimum impedance	2.67Ω with Sonos Architectural speakers
Line-in sources supported	Analog line-level signal via built-in RCA inputs and optional USB-C to 3.5mm adapter

Analog audio input	2 x RCA inputs -10dB (into any zone)
USB-C analog audio input	44.1 kHz / 16 bit (stereo into any zone) Requires Sonos Line-In Adapter
Subwoofer connections	1 RCA output -10dB, configurable to output from one zone, and 1 Sonos Sub per zone
Damping factor	>400 (ref. 8 ohms, 20 Hz–1 kHz)
Total harmonic distortion	0.005% at 2.83Vrms-15Vrms
Frequency response	±0.5 dB, 15 Hz - 20 kHz
Channel separation (Crosstalk)	-100dB at 1 kHz 2.83Vrms -80dB at 10 kHz 2.83Vrms
Signal-to-noise ratio	114dB ref 125W into 8-Ohm
Integrated content streaming	Amazon Music, Apple Music, Cloud Cover Music, Mood Media, Sonos Radio, Soundtrack Your Brand, Spotify, and many more. For a complete list, please visit: **support.sonos.com/services**

Details & Dimensions

Product dimensions (W x H x D)	17.2 x 2.52 x 10.44 in (436.8 x 64.5 x 265.2 mm)
Net weight	11.17 lb (5.06 kg)
Shipping weight	16.56 lb (7.51 kg)
Colors	Black
Finish	Matte
LEDs	Front: Device status Rear: Device status, output status (x8), RJ45 status light
Operating temperature	32° to 95° F (0 to 35° C)
Storage temperature	-4° to 122° F (-20° to 50° C)
Humidity range	Operates in non-condensing humidity 10–85%

Power & Connectivity

Power supply	Auto-switching 100-240V 50/60 Hz 10A AC universal input
Power consumption	5.4 W (idle) 180 W (all channels driven at 1/8 output power, 8Ω)
Wired Networking Interface	100BaseTX, Ethernet RJ45
Wireless Networking Interface	Compatible with WiFi 6. Connect to WiFi with any 802.11a/b/g/n/ac/ax 2.4 GHz/5 GHz broadcast-capable router.
CPU	Quad Core 4xA55 1.9 GHz
Apple AirPlay	Works with AirPlay 2 on Apple devices iOS 11.4 and higher.
Direct Streaming Formats	Apple AirPlay 2, Spotify Direct Control

What's in the box?

Product	1 Amp Multi
Banana plugs	8 custom Sonos banana plugs
Ferrite clamp	1 ferrite clamp
Power cable	AC power cord
Documentation	Quickstart Guide (printed on the box) and legal/warranty information

Requirements

Passive speakers	Passive speakers with speaker wire
Internet connection	Access to the internet
Sonos app	The latest generation of the Sonos app running on a compatible device
Safety and compliance	**See here**

Important safety information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry soft cloth. Household cleaners or solvents can damage the circuitry or finish on your Sonos products.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Carefully evaluate the placement—including rack, space, and ventilation—as you may need to add active cooling solutions.
9. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
10. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. This product does not have any user-serviceable parts. Do not open or disassemble or attempt to repair it or replace any components. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. The Mains plug should be readily available to disconnect the equipment.
15. Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.