


Akuvox X912

Quick Guide

Unpacking

Before you begin using the device, please check the version you got and ensure that the following items are included in the shipped box:

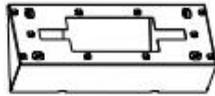


Rotary bracket x1




M4X10 crosshead screw x5

Akuvox X912

Installation

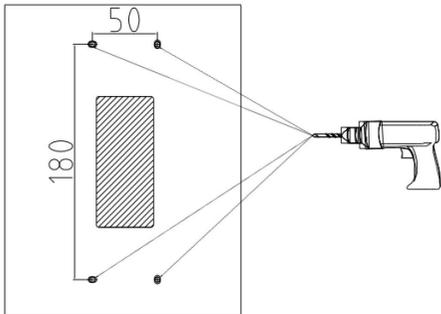

As figure shown, mark four screw holes on the position that according to the cable place. The horizontal distance of two holes should be 50 mm, and the vertical distance of two holes should be 180 mm. Then use a hand drill with a diameter of 6 mm to drill the four marked holes with a depth of 20 mm.

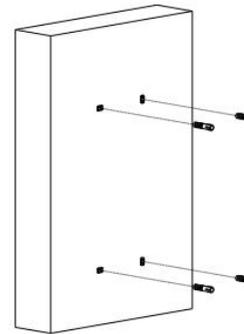


Insert the four plastic wall anchors into the drilled holes.



Akuvox X912




Rotate right in 30 degrees

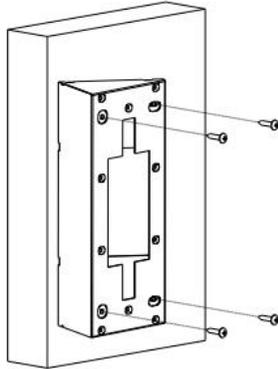


Or

Rotate left in 30 degrees

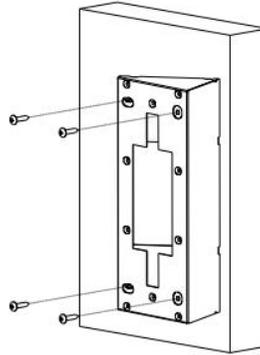


Place the rotary bracket closely against the wall while lining up its four holes with their corresponding drilled holes. And then fasten the rotary bracket on the wall by tightening four ST4x20 crosshead screws to the plastic wall anchors.

Rotate right 30 degrees

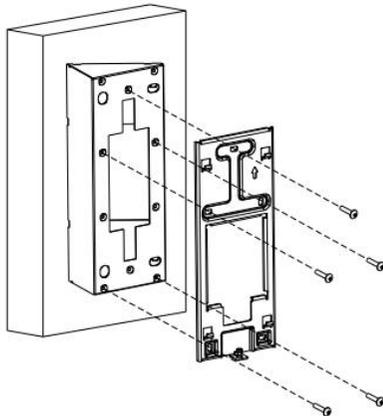

Or

Rotate left in 30 degrees

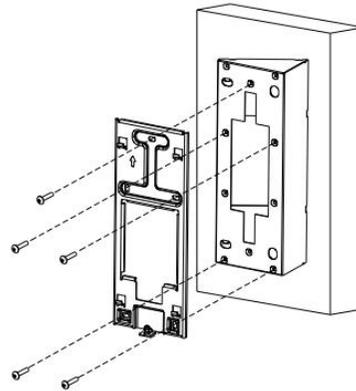

Fix wall-mounting bracket with five M4x10 crosshead screws on the rotary bracket.



Akuvox X912

Note Information

Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox's website: <http://www.akuvox.com> © Copyright 2022 Akuvox Ltd. All rights reserved.

