










КОМОД 5







ІНСТРУКЦІЯ !

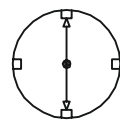

90
MIN

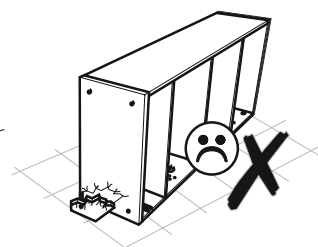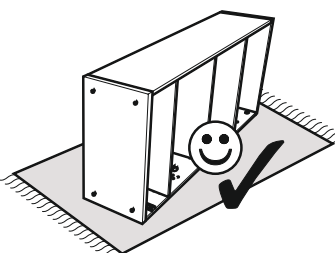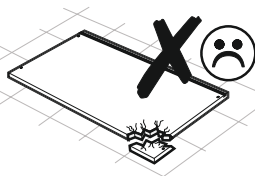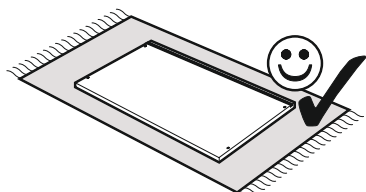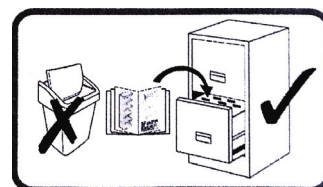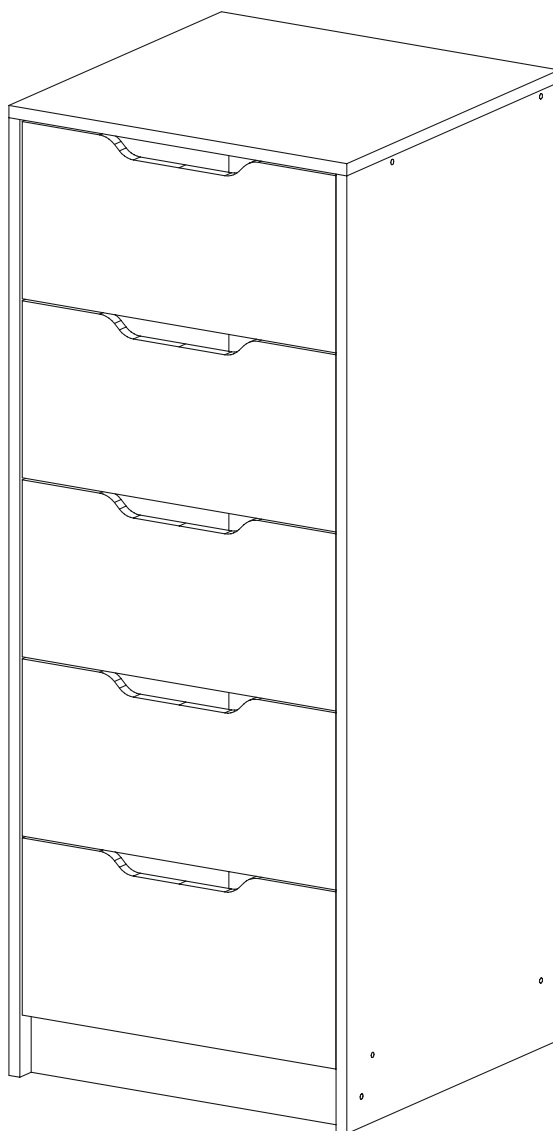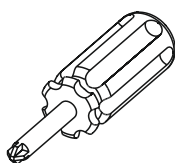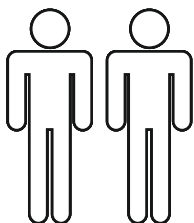

КОМОД 5

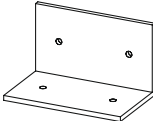
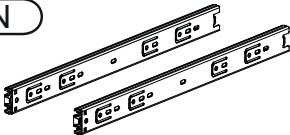
B1  x30	B03  x30	D0  3,0x15 x80
D1  3,5x16 x44	D2  3,5x30 x4	K1  x2
N  L400 x5	Z  x1	

MM


240
230
220
210
200
190
180
170
160
150
140
130
120
110
100
90
80
70
60
50
40
30
20
10
0

КОМОД 5






1	1250 x 500	1
2	1250 x 500	1
3	500 x 503	1
4	468 x 80	2
5	468 x 80	3
6	150 x 445	10
7	150 x 409	10
8	440 x 440	5
9	230 x 463	5
10	1150 x 495	1

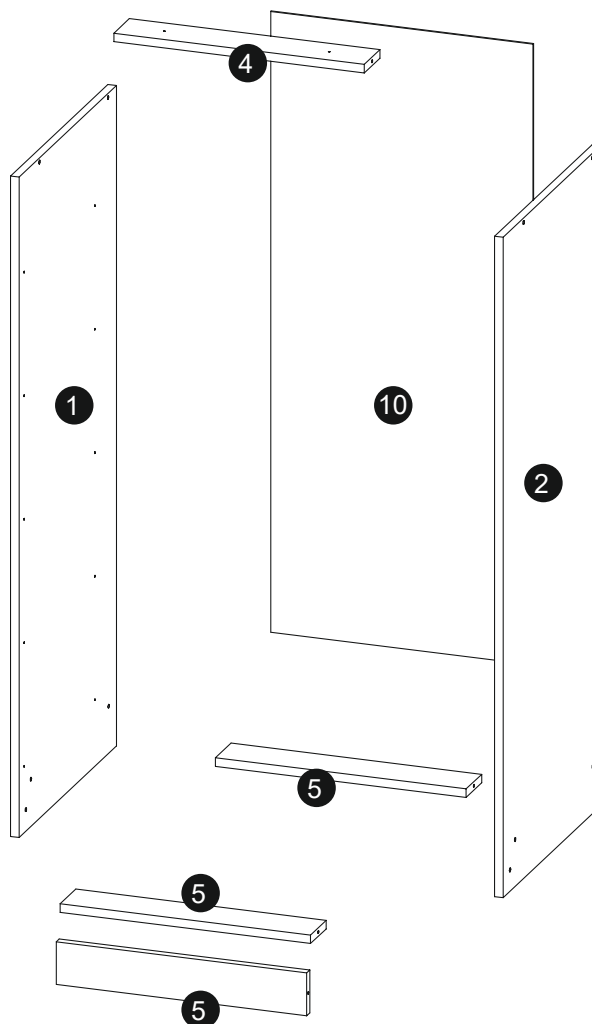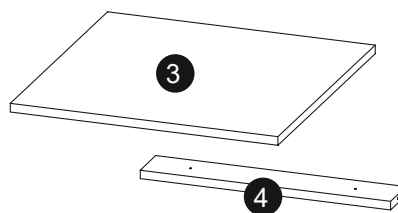




x5



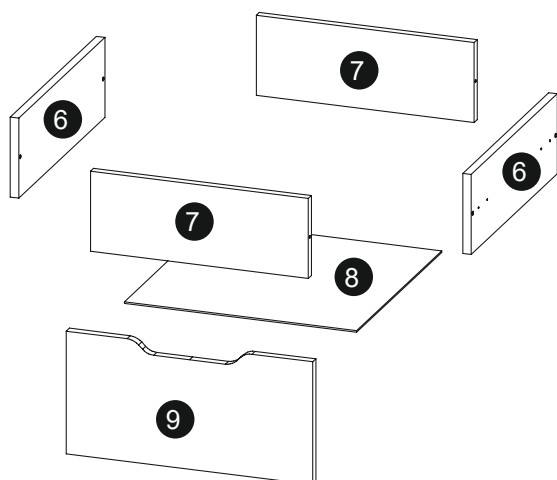


1

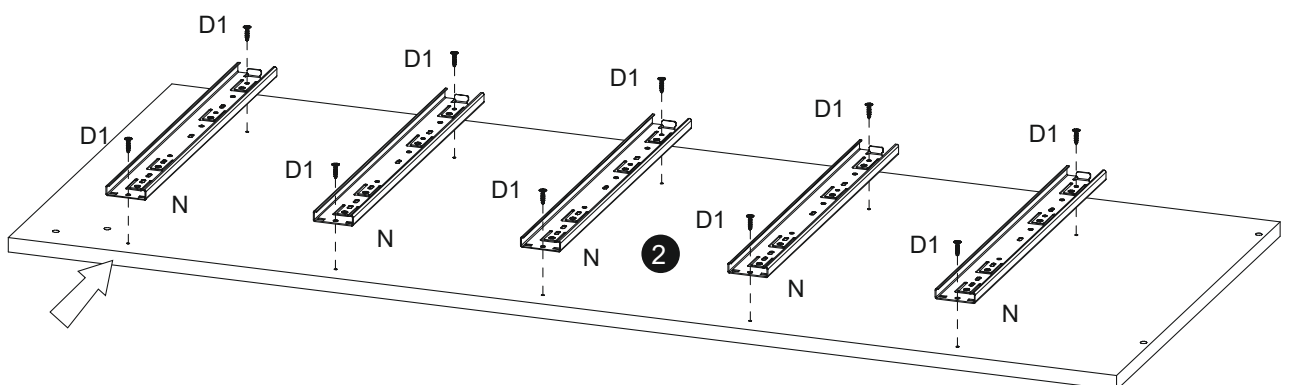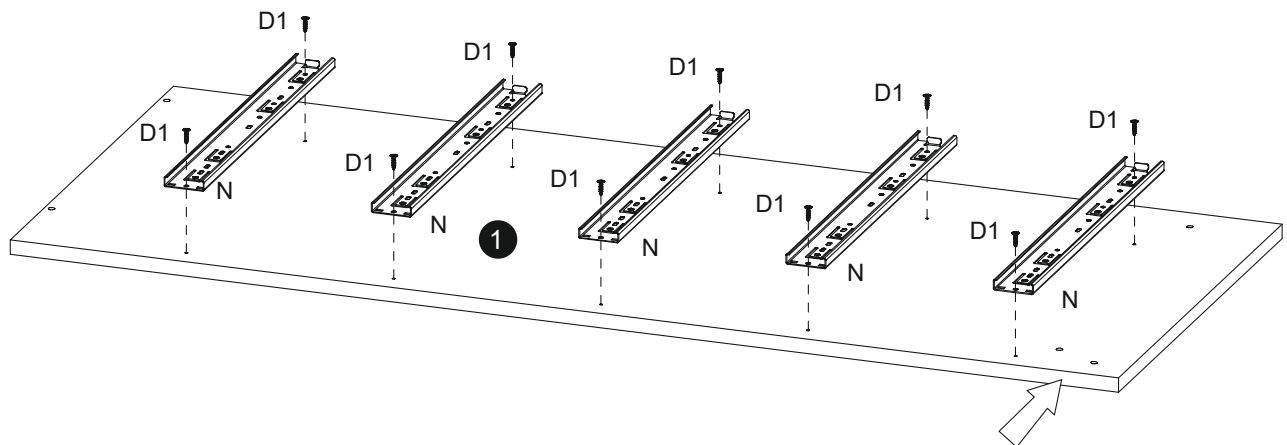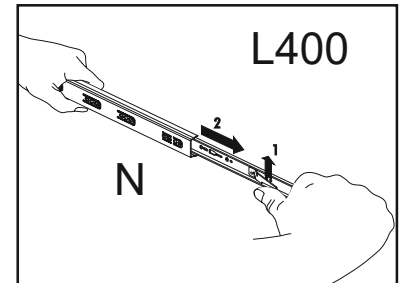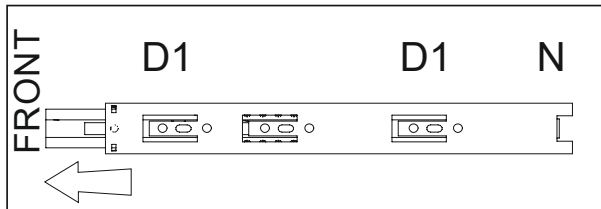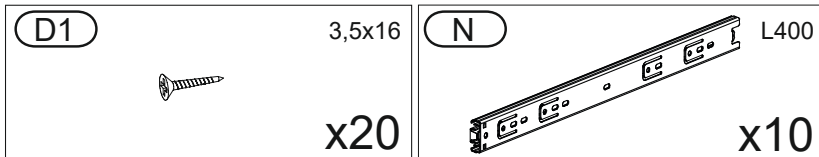


2

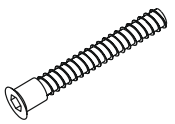B03  x10	B1  x10	Z  x1
---	---	--

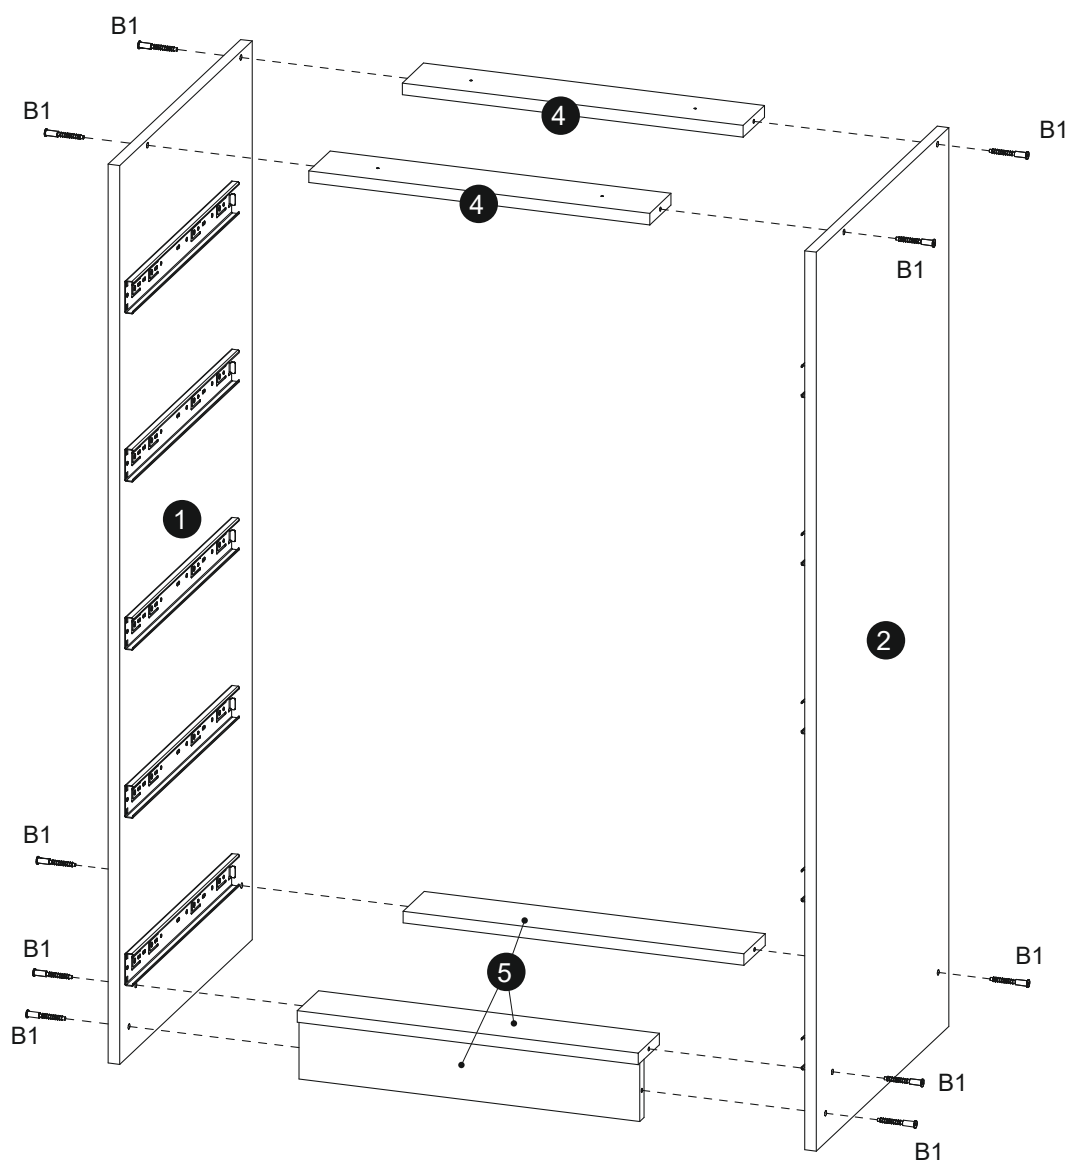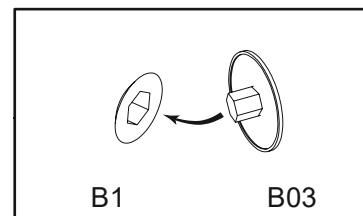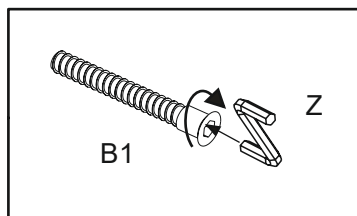


3





D0	3,0x15
	x30
D2	3,5x30
	x4








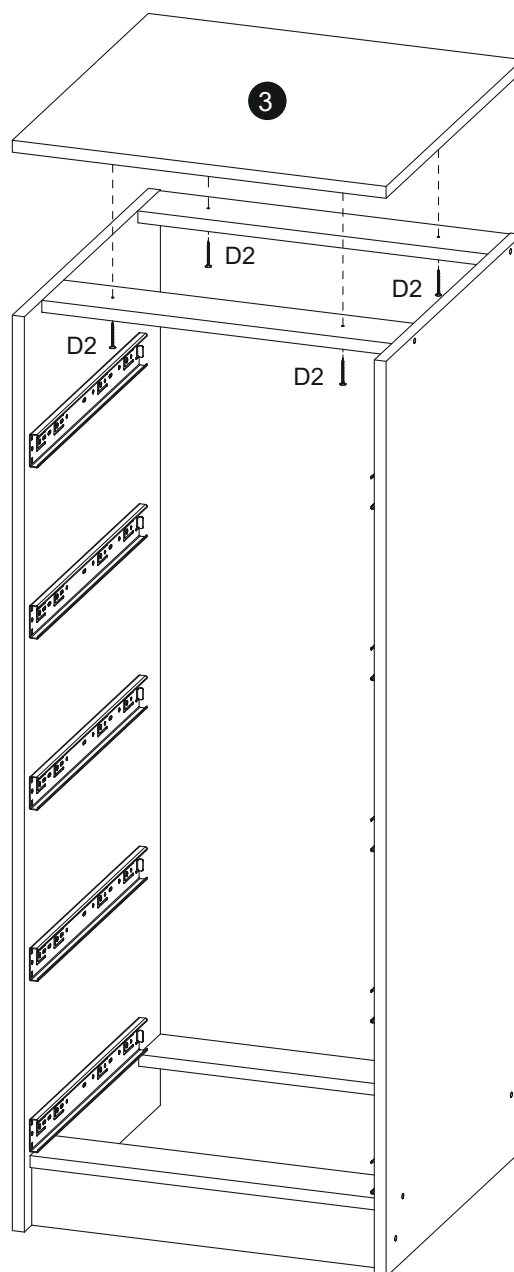


$a=b$




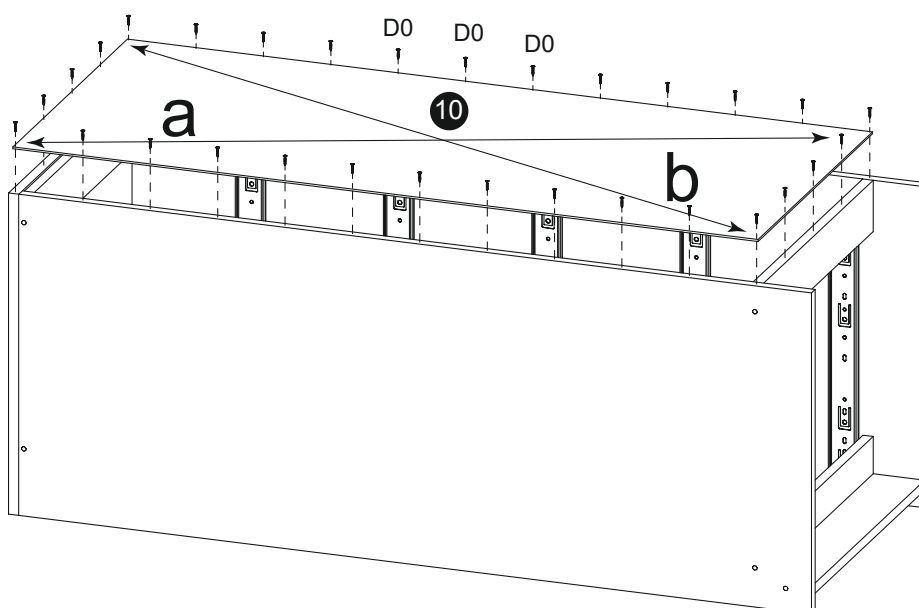


4

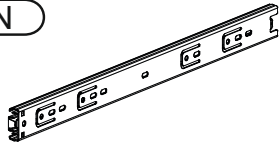B1  x20	B03  x20	D0  3,0x15 x50
D1  3,5x16 x20	D2  3,5x30 x10	N  L400 x6
		Z  x1

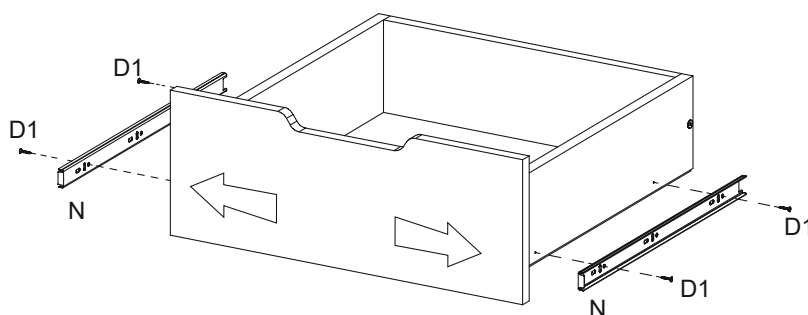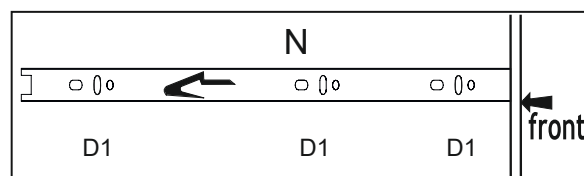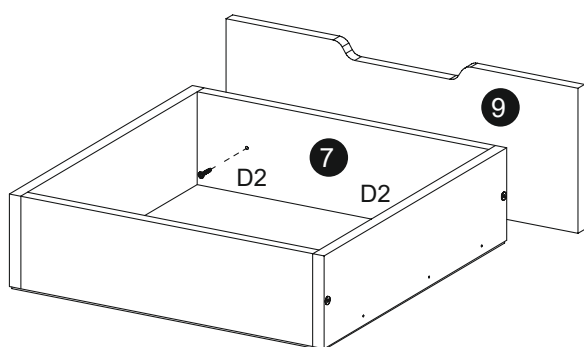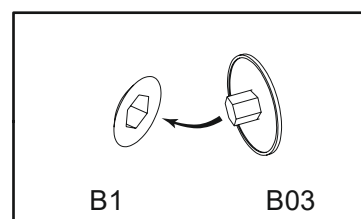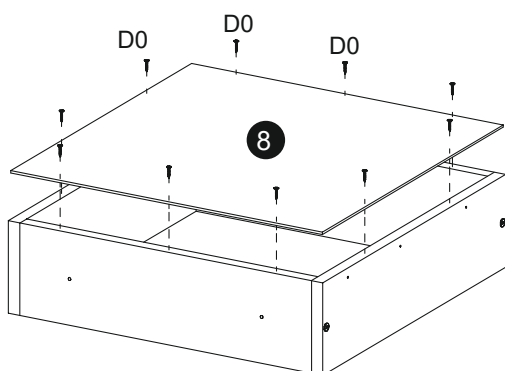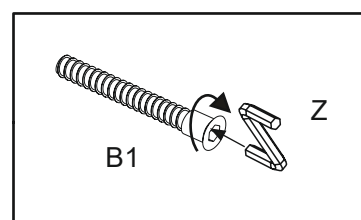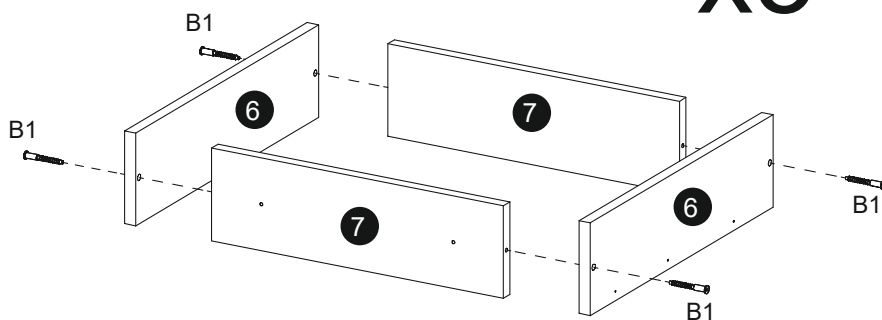

5

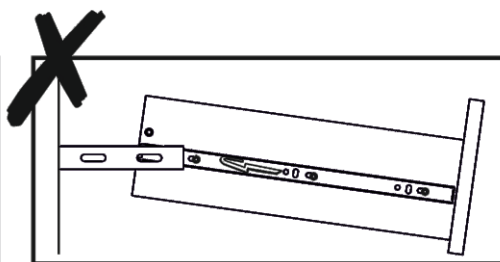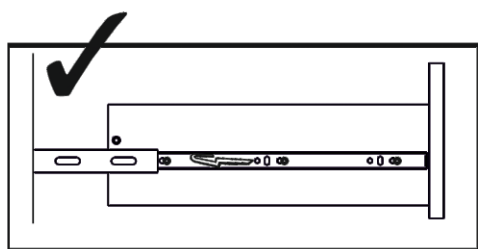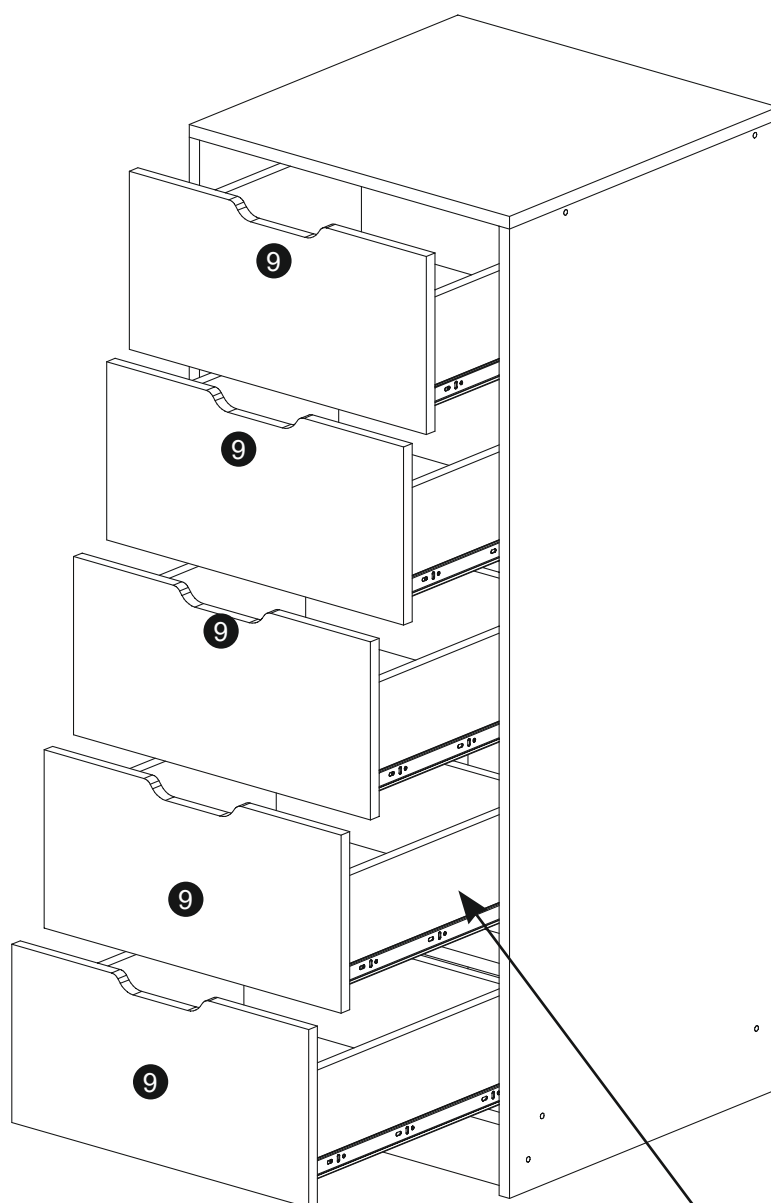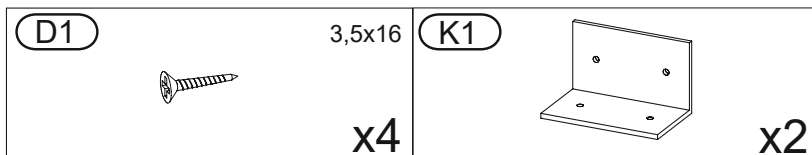

УВАГА!!!
ОБОВ'ЯЗКОВО ЗАФІКСУВАТИ КОМОД МЕТАЛЕВИМИ КУТНИКАМИ
ДО ГОРИЗАГТАЛЬНОЇ ЧИ ВЕРТИКАЛЬНОЇ ПОВЕРХОНЬ