

# **FERRO CONCEPTS**




# The Bora™ Belt | Table of Contents

Product Overview The Bora™ Belt.....	1
Interface and Adjustment.....	2-6
Accessory Installation.....	7-11
Bora™ Webbing Lock Installation.....	12-15



The Bora™ Belt  
with Bora™ Inner Belt (Front)

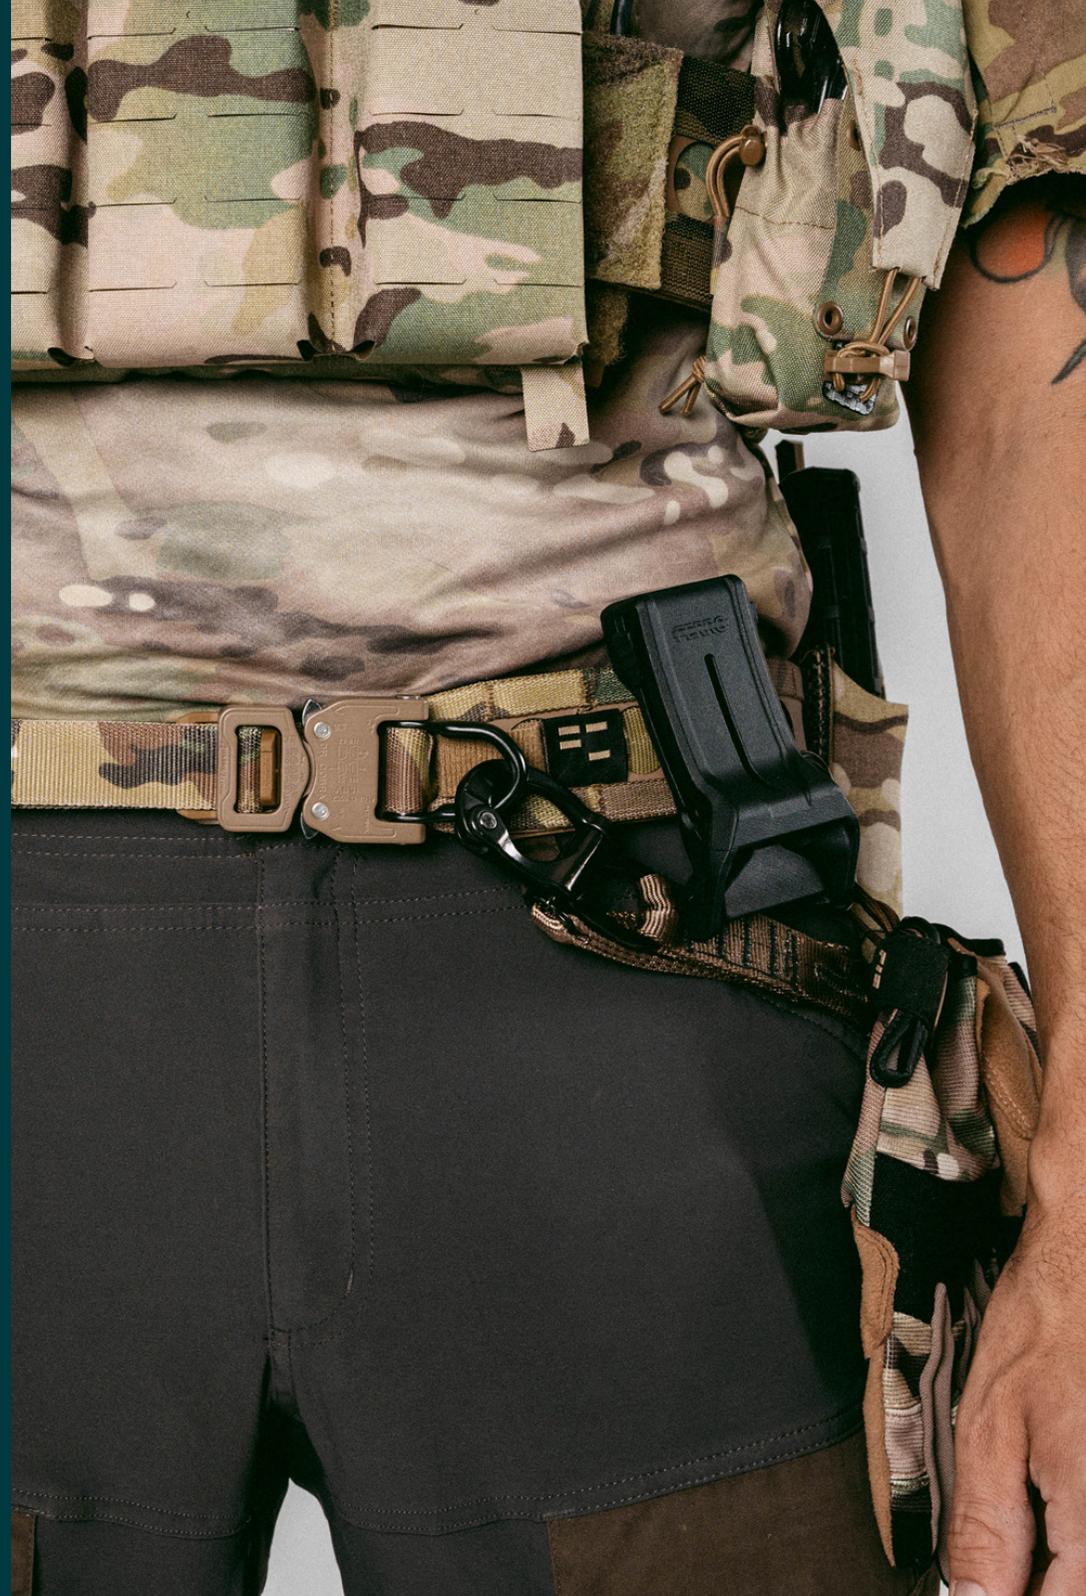

# The Bora™ Belt | Product Overview

Building on the legacy of the proven B███n Belt, The Bora™ Belt introduces the next evolution of the FC Battle Belt. Named after the powerful and unforgiving northern wind, it was developed in close collaboration with special operations and law enforcement professionals to provide a rugged, uncompromising platform for your loadout. This isn't just another duty belt, it's purpose-built to outlast and outperform under pressure.

Now improved with a color-matched, laser-cut thermoplastic frame, The Bora™ reduces both bulk and weight while increasing rigidity over traditional battle belt construction. The result is a clean, streamlined profile that sacrifices nothing in strength. A color-matched D-Ring Cobra® Buckle completes the minimalist aesthetic while delivering proven reliability.

At its core, a continuous length of 1" tubular webbing runs from buckle to buckle, providing unmatched structural integrity. The newly integrated ½" webbing MOLLE was selected for its low profile and ease of mounting holsters, mag pouches, and other mission-critical gear.

A major advancement is the addition of the Bora™ Webbing Lock; a precision-engineered component that keeps the belt securely tensioned during high-intensity movement and adverse conditions. It eliminates slippage and removes the need for constant readjustment in the field.

Lined with hook Velcro, the outer belt interfaces securely with the included inner pant belt, enabling rapid don/doff while maintaining a locked-in, stable platform.

## Features:

- Lightweight, low-profile
- ½" webbing MOLLE for secure and efficient gear mounting
- Included Bora™ Webbing Lock maintains belt tension under movement
- Continuous 1" tubular webbing core for maximum strength
- Color-matched thermoplastic and D-Ring Cobra® Buckle
- Hook-and-loop Velcro attachment system
- 2" outer belt, 1.5" inner pant belt
- IR/NOD-safe – no reflective signature under night vision
- Made in USA

## Components:

The Bora™ Belt  
The Bora™ Inner Belt  
Bora™ Webbing Lock



The Bora™ Belt  
with Bora™ Inner Belt (Front)



Bora™ Webbing Lock

## Interface & Adjustment



1. Weave the Inner Belt component (G-Hook First) through your pant belt loops. Make sure the hook is pointed downwards.



2. Adjust the Inner Belt to the length you require. Medium and X-Large use the first loop. Small and Large use the second loop.

## Interface & Adjustment



3. Hook and secure the hook of the G-Hook into the appropriate loop.



4. Place the female buckle of the Outer Belt in line with the center of your body and line up the top with the Inner Belt.

## Interface & Adjustment



5. Guide and secure the Outer Belt around the Inner Belt as evenly as possible. If installing the Bora™ Webbing Lock, skip to Bora™ Webbing Lock Installation on page 12.



6. Secure the male and female buckle ends together. Pull the 1" Webbing end to adjust the Outer Belt to preference.

## Interface & Adjustment



7. For webbing management, roll the extra webbing inwards toward the belt.



8. Undo the Velcro One-Wrap and place the rolled webbing down on the belt.

## Interface & Adjustment



9. Securely fasten the Velcro One-Wrap over the rolled webbing end. Your Bora™ Belt is now adjusted and ready to use.



## Accessory | Installation




1. Loosen and remove the webbing end from the first slot of the Male buckle.



2. Remove the Male buckle completely from the webbing end.

## Accessory | Installation

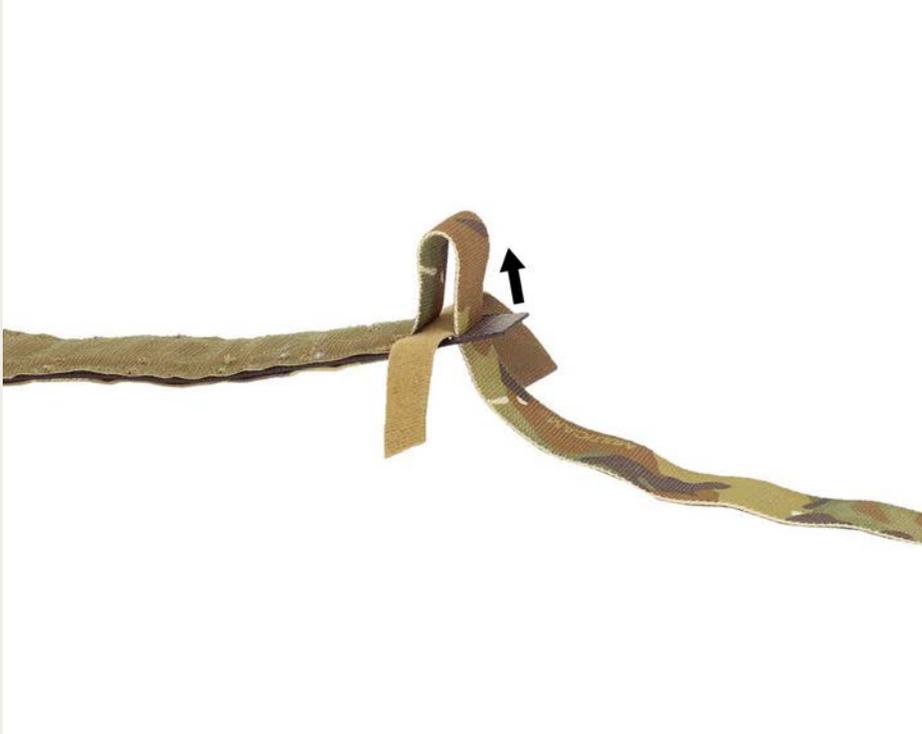


3. Loosen the webbing on the end of the Outer Belt to release the tension on the Velcro One-Wrap.




4. Remove the Velcro One-Wrap from the Outer Belt.

## Accessory | Installation

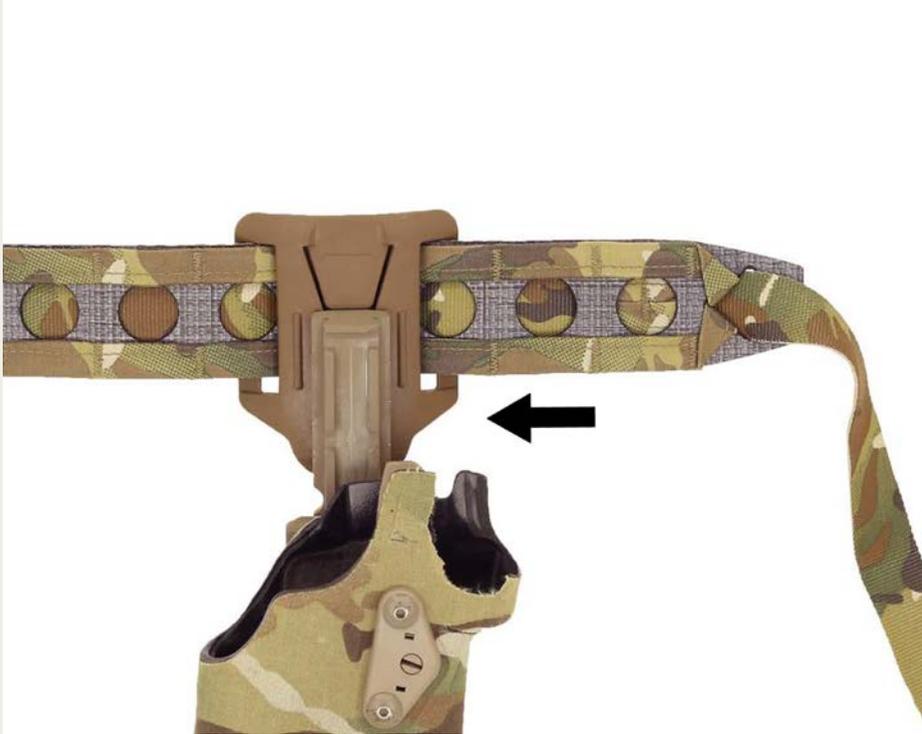

5. Slide your accessory onto the Outer Belt to your desired location.

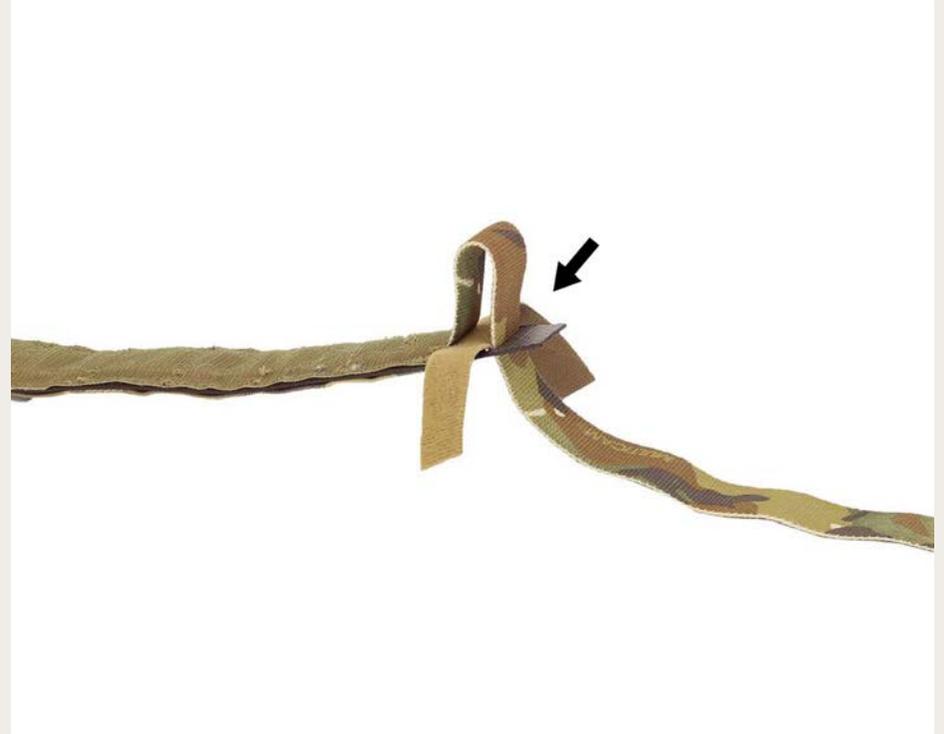

6. Reinstall the Velcro One-Wrap under the webbing. If installing the Bora™ Webbing Lock, skip to Bora™ Webbing Lock Installation on page 12.

## Accessory | Installation



7. Weave the webbing end through the back side of the bottom slot in the Male buckle.



8. Weave the webbing end through the front side of the upper slot in the Male buckle.

## Accessory | Installation



9. Adjust and resecure the webbing end by following steps 4 through 9 in the Interface and Adjustment section of this Product Guide.



## Bora™ Webbing Lock | Installation



1. To install the Bora™ Webbing Lock, start by removing the Male end of the Cobra® buckle from the 1" webbing.



2. Once the Male end of the Cobra® buckle has been removed, pass the 1" webbing through the slot on the Bora™ Webbing Lock.

## Bora™ Webbing Lock | Installation



3. Reinstall the Male end of the Cobra® buckle by passing the 1" webbing up through the innermost slot on the Male Cobra® buckle.




4. Pass the 1" webbing down through the outermost slot on the Male Cobra® buckle.

## Bora™ Webbing Lock | Installation




5. Tighten or loosen 1" webbing to desired length.  
\*Note - The Bora™ Webbing Lock allows you to tighten the webbing once installed.

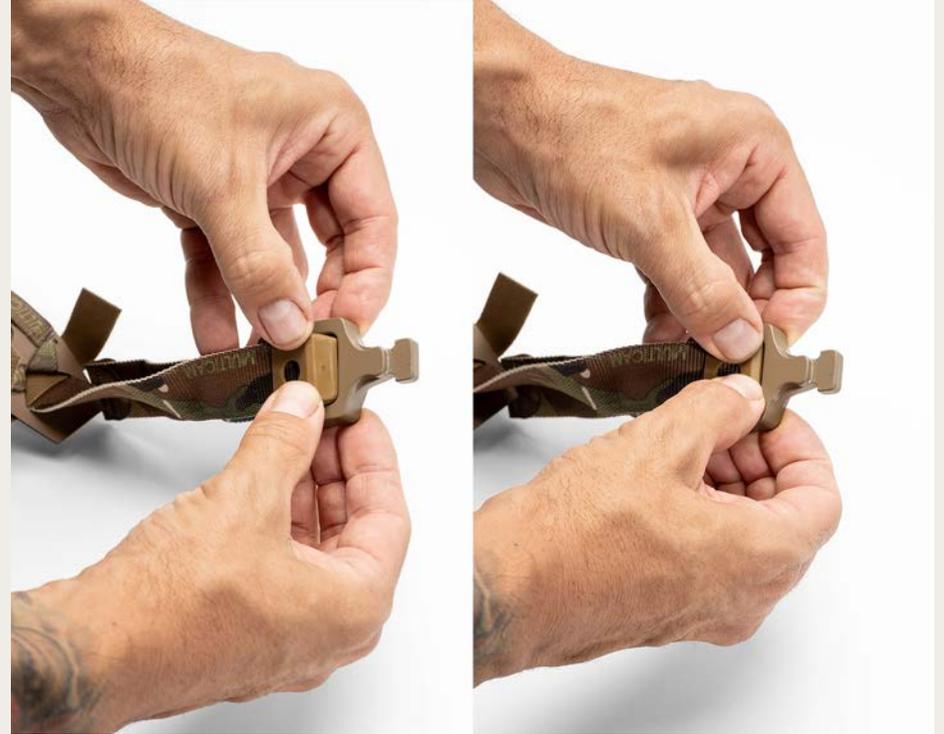

6. Once the webbing is adjusted to desired length, press the Bora™ Webbing Lock into the back of the Male Cobra® buckle.

## Bora™ Webbing Lock | Installation

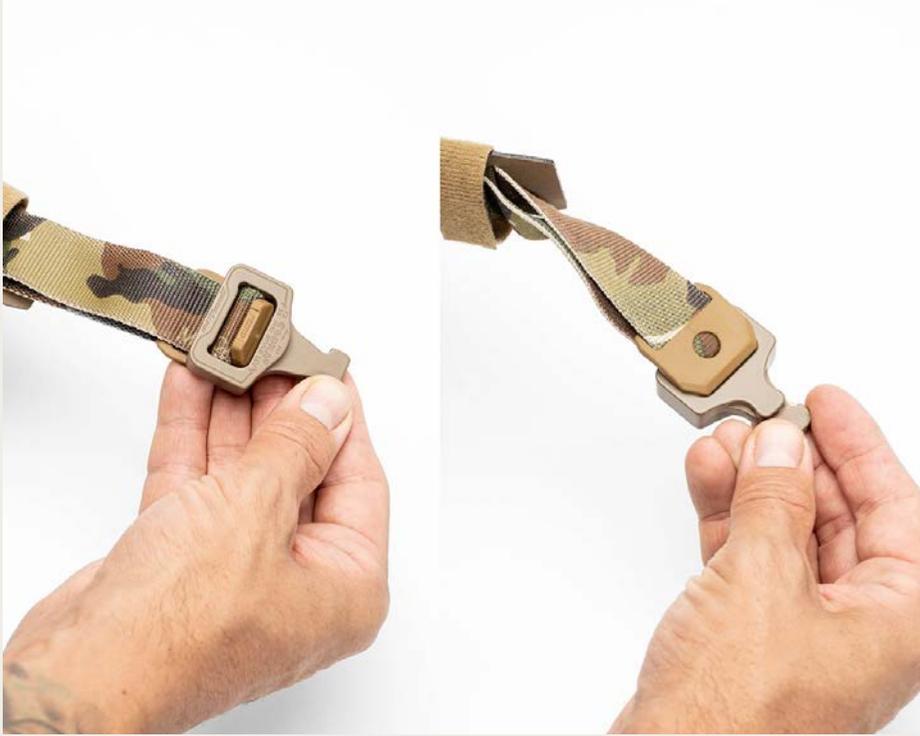

7. Make sure that the Bora™ Webbing Lock is fully seated into the back of the Male end of the Cobra® buckle and the 1" webbing is properly threaded through the buckle. The Bora™ Webbing Lock allows for tightening of the 1" webbing while the lock is engaged. If you need to loosen the 1" webbing press the lock down and out of the Male end of the Cobra® buckle to disengage.

