


Стіл «Компакт з набудовою»

Desk «Kompakt with add-on»












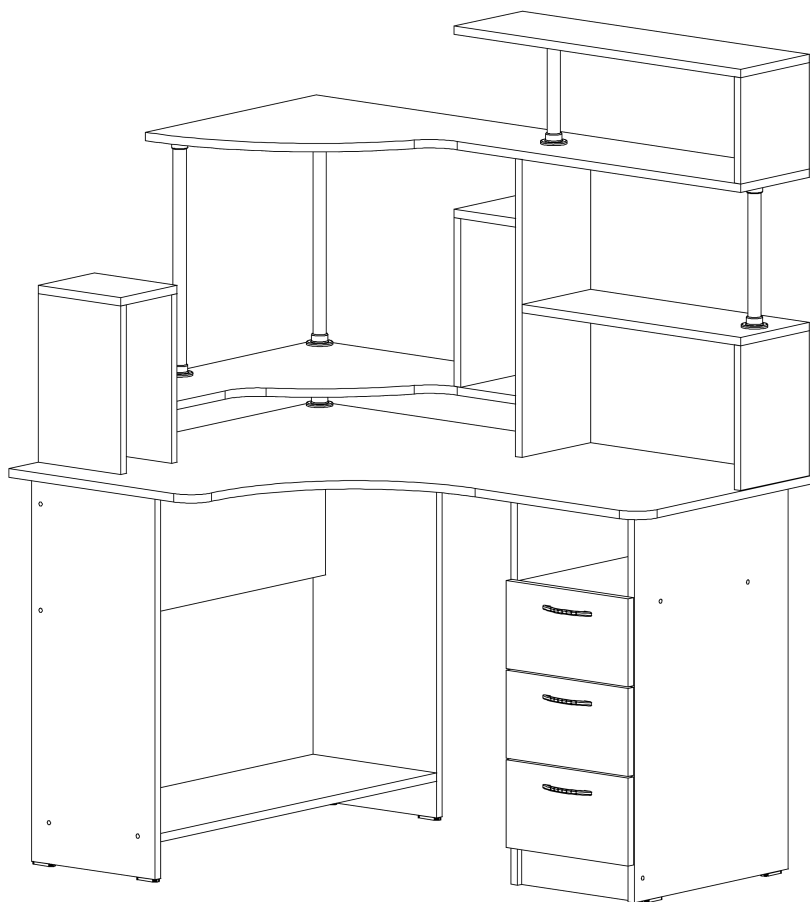


Д-1200, Ш-880, В-750(1540), мм.

L-1200, W-880, H-750(1540), mm.


Інструкція збірки
Assembly instruction

Компакт з набуд./Kompakt with add-on





№	довжина(мм) length(mm)	ширина(мм) width(mm)	кількість quantity
1.	1200**	880**	1
2.	649**	649**	1
3.	1200**	500**	1
4.	696**	200**	1
5.	200**	200	1
6.	566**	200	1
7.	149**	200*	1
8.	320**	200	1
9.	531**	200*	1
10.	275**	200	1
11.	165**	200**	1
12.	320**	200	1
13.	244*	100	3
14.	730**	300	2

№	довжина(мм) length(mm)	ширина(мм) width(mm)	кількість quantity
15.	757*	300	1
16.	757**	300	1
17.	166**	296**	3
18.	240	355	3
19.	730**	450	1
20.	268*	430	1
21.	268	86	1
22.	660	268	1
23.	730**	450	1
24.	334*	100	6

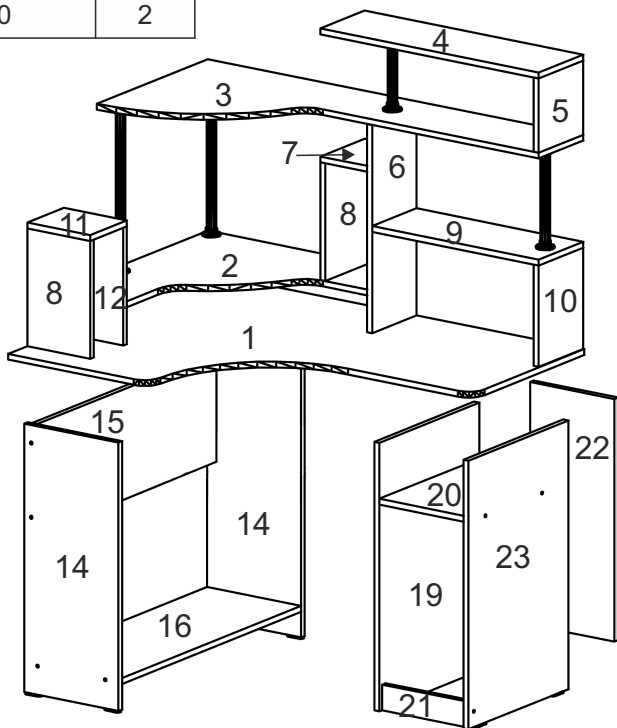

1.

 N	 D 3,5x16	 L3 L=350mm	 A2 30mm
---	--	--	---





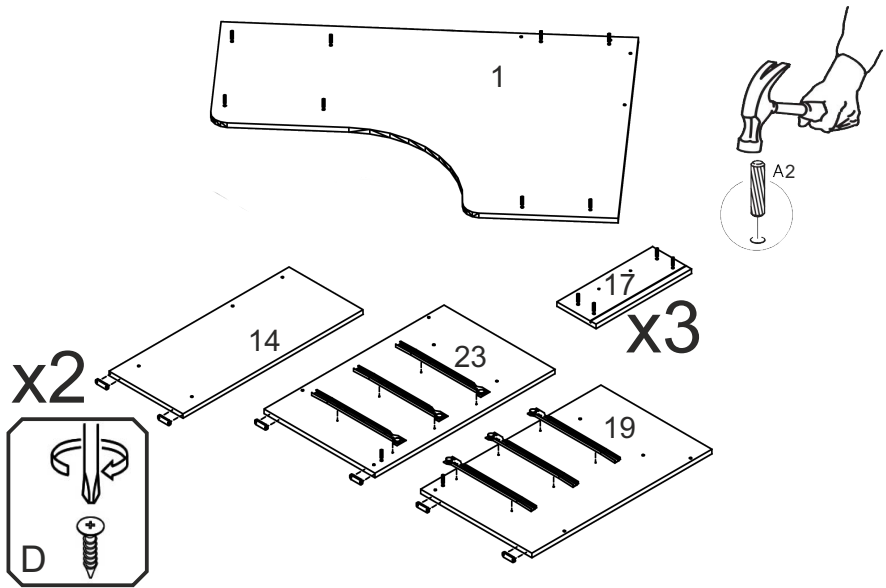


Diagram illustrating the assembly of the back panel (1) and side panels (14, 19, 23) using screws (D) and dividers (17). A callout shows a hammer driving a screw (A2) into the back panel.




2.

 B2	 B
---	--

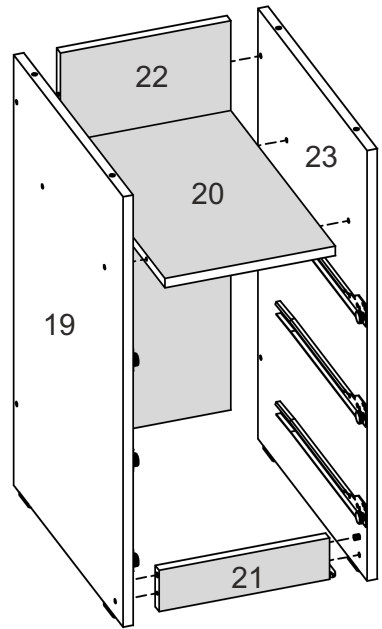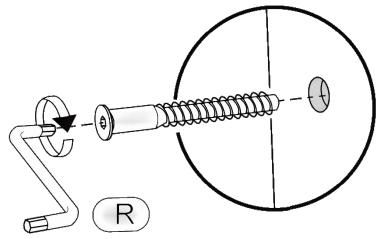


3

3.












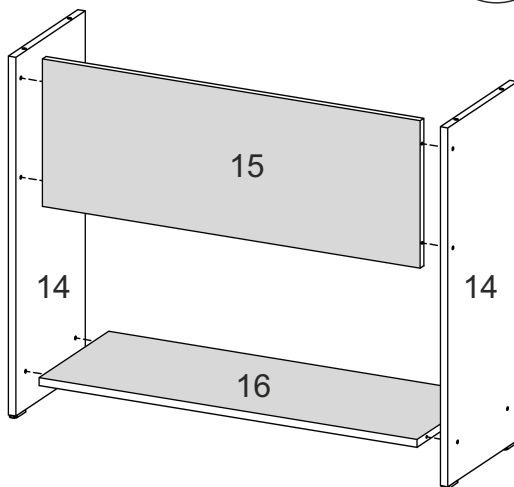
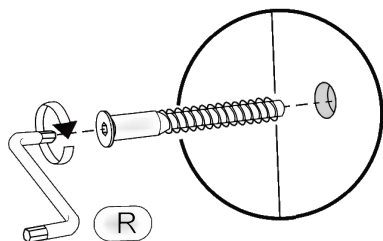
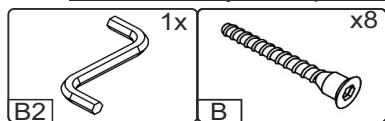


4.



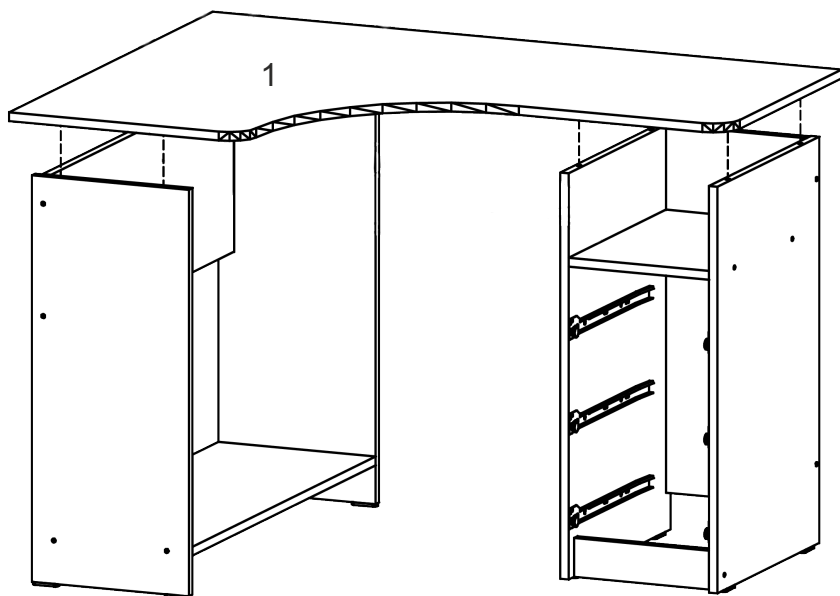


4





5. x3

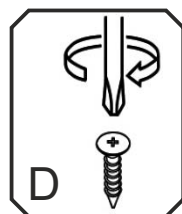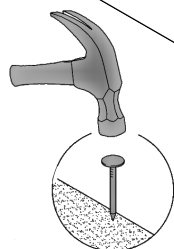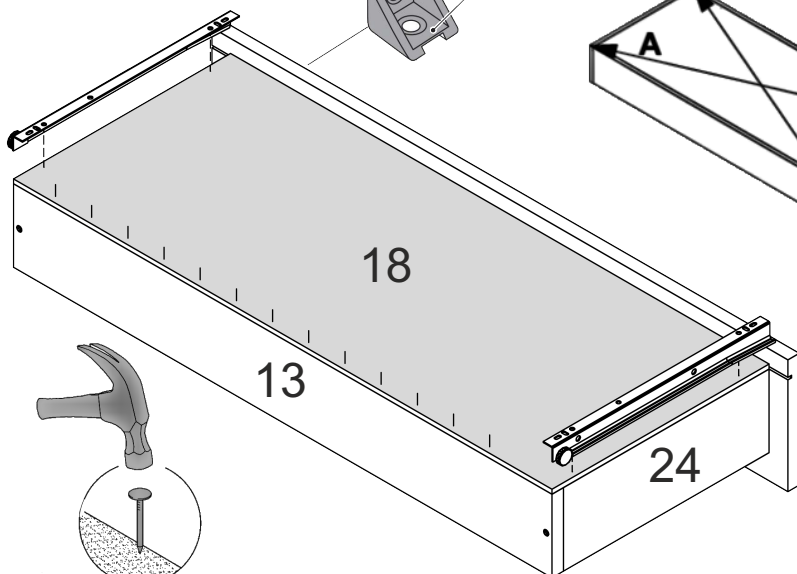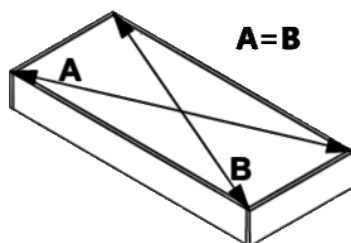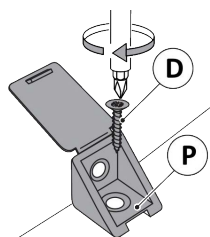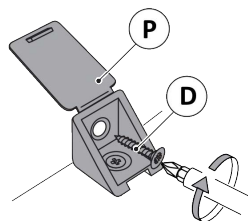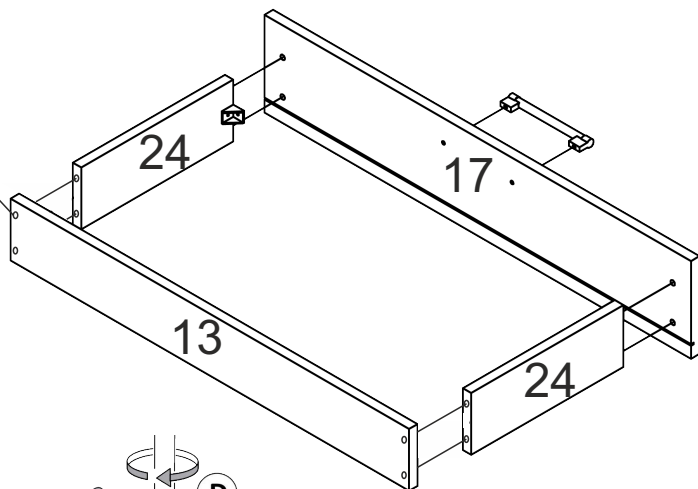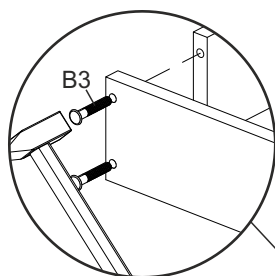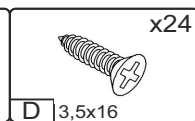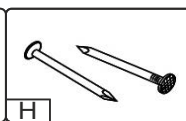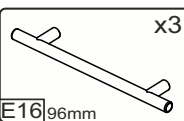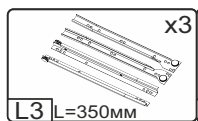






6.

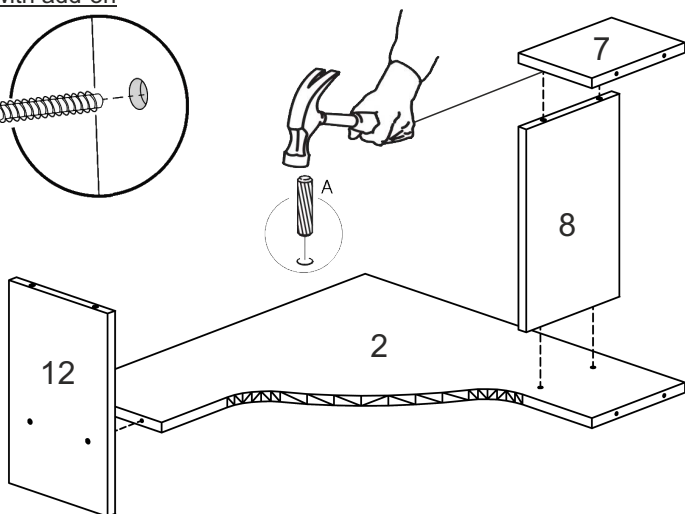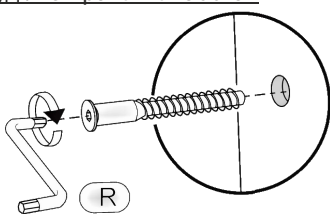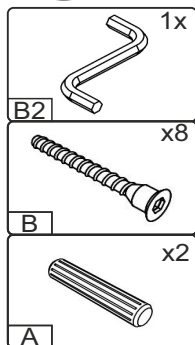

7.

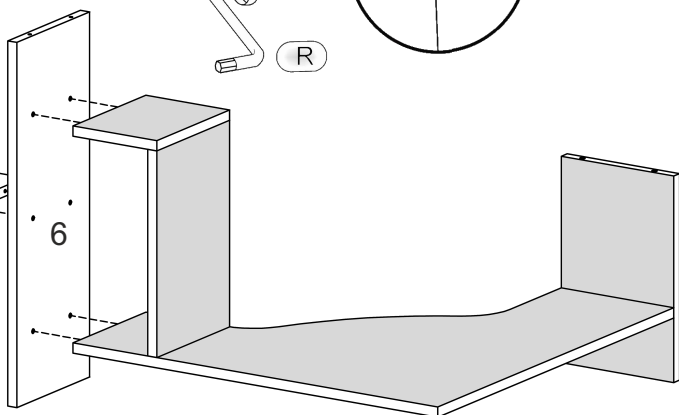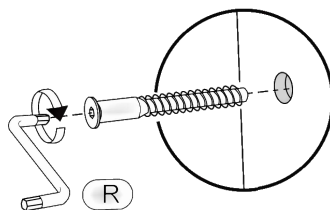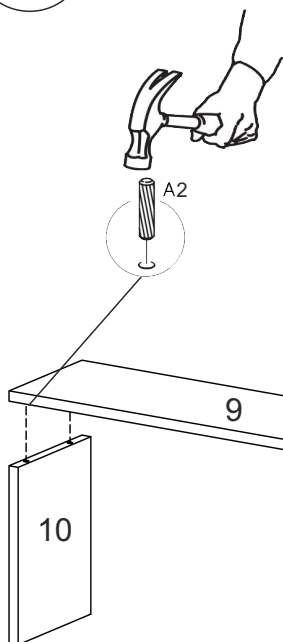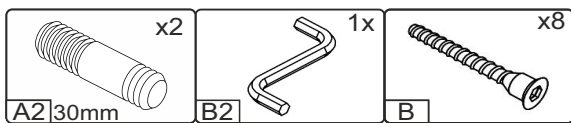

8.

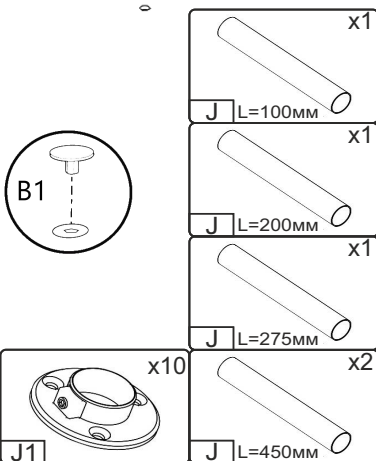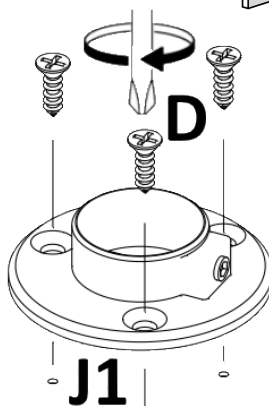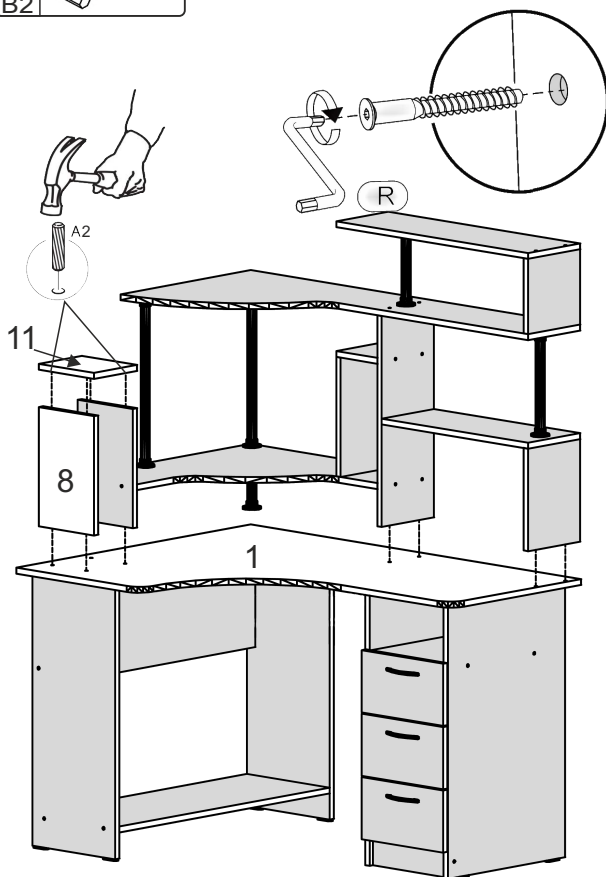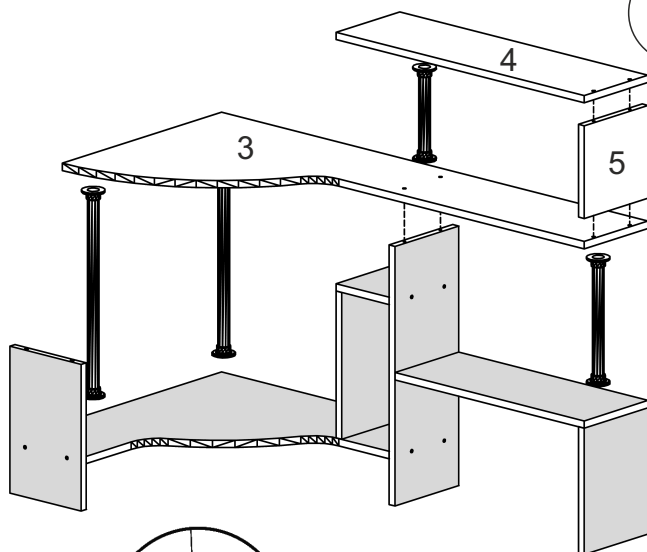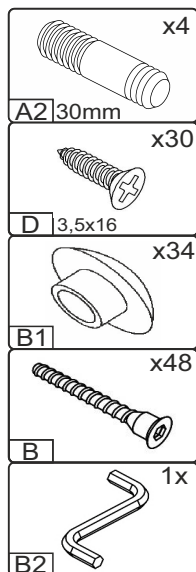

7

