


AV port Instructions:



Dimension Diagram:

Not included antennas and headband.



Safety instruction:

1. Read the entire instruction manual to become familiar with the features of the product before operating.
2. Age Recommendation: Over 14 years old. Using any near eye displays on children under 14 can cause eye development problems. This is not a toy.
3. Please avoid wet or humid environments.
4. Please use standard USB charger, charging voltage can only be 5V.
5. Audio output and Video input cannot work at the same time.

5.8G FPV Goggles

User's manual

With DVR



Feature:

- With DVR, you can record videos anytime and anywhere;
- Low power consumption;
- Double antenna reception to make the signal more stable;
- Auto-Searching, support a key search frequency;
- 5 Inch 800*480 dot high brightness LCD screen;
- Built-in super sensitiveness 5.8GHz 40ch receiver, especially with RaceBand;
- Built-in 3.7V/2000mAh high-capacity Li-ion polymer Battery;
- Universal USB charging interface;
- Real-time video return, Very low time-delay;
- Bilingual menu in support of Chinese and English;
- Support external video signal input;
- Support Audio signal output (You can connect headphones)


Thank you for your choose and buy the products of this company.

Specification:

Model									
Name	5.8G FPV Goggles								
LCD Screen	Screen size:	5 Inch							
	Resolution:	800*480							
	Display Ratio:	16:9							
	View Angle:	6 o'clock							
	Brightness:	300cd/m ² with high brightness backlight LED							
Video delay	Video time-delay less than 20ms								
Lens	2.8X Fresnel Lens, 92% transparent rate no distort of light								
Interface	Antenna	2 X RP-SMA male							
	USB	To charge the battery							
	AV Jack	External video signals input or internal video signal output							
	Card slot	TF-Card, Support up to 32G(C10 recommend)							
DVR	REC size:	VGA / D1 / HD			<i>Selectable</i>				
	REC sound:	ON / OFF			<i>Selectable</i>				
	REC time:	OFF / 3min / 5min / 10min			<i>Selectable</i>				
	Frame rate:	30 Frames							
	Compress format:	MJPEG							
	Record file format:	AVI							
Languages	English and Chinese								
Power Supply	Power adapter:	DC5V/2A (USB interface)							
	Battery:	3.7V/2000mAh,							
	DVR module ON:	Each full charge revive around 2.5hr working time							
	DVR module OFF:	Each full charge revive around 3.5hr working time							
	Power Consumption:								
	* Normal mode:	The device operating current of 400mA at 3.7V;							
	* Record Mode :	The device operating current of 620mA at 3.7V;							
	* Built-in battery maximum charge current of	500mA;							
Wireless	Frequency Table(MHz)								
		CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
	Band A	5865	5845	5825	5805	5785	5765	5745	5725
	Band B	5733	5752	5771	5790	5809	5828	5847	5866
	Band E	5705	5685	5665	5645	5885	5905	5925	5945
	Band F	5740	5760	5780	5800	5820	5840	5860	5880
Band R	5658	5695	5732	5769	5806	5843	5880	5917	
Body	Dimension:	180mm * 140mm * 84mm							
	Weight:	393g(with headband, not included antennas)							

* Note: Cannot record video input from AV port. *

Description:

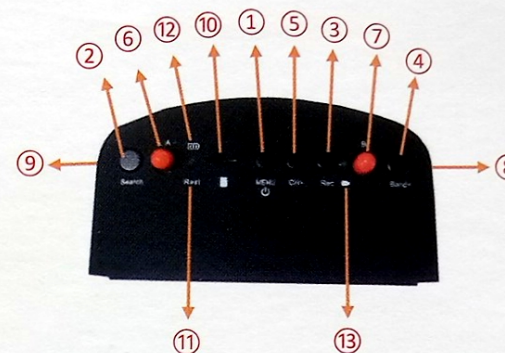

- ① **Key 1:** Short press into *MENU mode*; Long press (More than 2 sec) for *Power ON/OFF*.
- ② **Key 2:** Short press for *Auto-Searching*; Long press (More than 1.5 sec) into *AV mode*.
- ③ **Key 3:** Short press to *start or stop Recording*.
- ④ **Key 4:** Short press for *Band+* (Change bands A-B-E-F-R circularly).
- ⑤ **Key 5:** Short press for *Channel+* (Change channels 1-2-3-4-5-6-7-8 circularly).
- ⑥ **Antenna port A:** RP-SMA male.
- ⑦ **Antenna port B:** RP-SMA male.
- ⑧ **AV Jack:** In RF receiving mode can output video signal; In AV mode can enter the video signal.
- ⑨ **Micro-USB Charging port:** Supports DC5V only.
- ⑩ **Card slot:** Used for inserting memory card.
- ⑪ **RESET:** Power Reset.
- ⑫ **Charging indicator:** When is charging, the red light is on; When is full, the green light is on.
- ⑬ **REC indicator:** Show the different working states of the DVR module.

Menu Instructions:

In the normal mode, press **Key 1** to enter the MENU mode.

In MENU mode:

Key 1: Scroll options bar.

Key 2: Auto-Searching.

Key 3: Invalid.

Key 4: Enter / Value +.

Key 5: Enter / Value -.

Playback Instructions:

In the menu mode, select the "DVR" option bar to enter the DVR mode.

In DVR mode:

Key 1: Return / Quit Playback mode.

Key 2: Delete current file.

Key 3: Play / Pause.

Key 4: Forward selection of video / Fast Forward (When video is playing).

Key 5: Backward selection of video / Fast Rewind (When video is playing).