




DISTRIBUTORI
OLEODINAMICI

WE6

SOLENOID OPERATED
DIRECTIONAL CONTROL VALVES


WE6 SERIES DIRECTIONAL CONTROL VALVES
ARE SOLENOID OPERATED DIRECTIONAL
SPOOL VALVES.
THESE VALVES ARE USED TO THE START, STOP
AND DIRECTION OF FLOW.

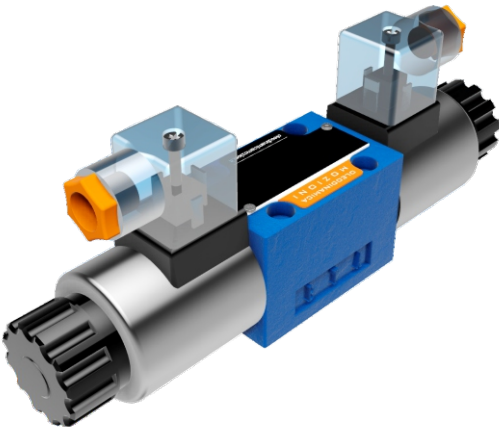

TECHNICAL DATA

SIZE		6
MAX. FLOW RATE (L/MIN)		80
OPERATING PRESSURE (MPA)	A, B, P PORTS	31.5
	T PORT	16
WEIGHT (KG) WITHOUT/WITH HANDLE	1 SOLENOID	1.6/2.2
	2 SOLENOIDS	2.2/2.8
VALVE BODY (MATERIAL)		CASTING PHOSPHATING SURFACE

CHARACTERISTIC CURVES

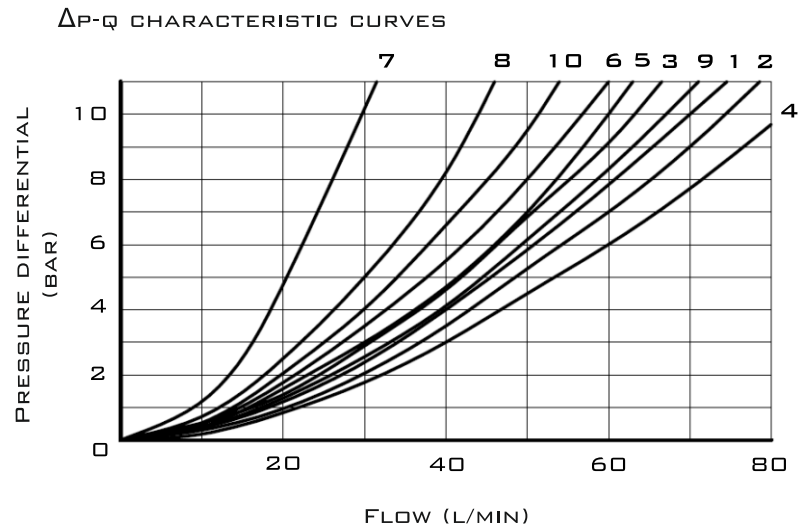


7 CURVE – SPOOL SYMBOL “R” IN SHIFTED POSITION B → A;
8 CURVE – SPOOL SYMBOL “G” AND “T” IN CENTRAL POSITION;
9 CURVE – SPOOL SYMBOL “H” AND “T” IN CENTRAL POSITION
P → T.


SPOOL SYMBOL	FLOW DIRECTION			
	P – A	P – B	A – T	B – T
A, B	3	3	–	–
C	1	1	3	1
D, Y	5	5	3	3
E	3	3	1	1
F	1	3	1	1
G	6	6	9	9
H	2	4	2	2
J, Q	1	1	2	1
L	3	3	4	9
M	2	4	3	3
P	3	1	1	1
R	5	5	4	–
T	10	10	9	9
U	3	3	9	4
V	1	2	1	1
W	1	1	2	2

SCHEMES

**SCHEMES OF 2-POSITION DIRECTIONAL SPOOL VALVES
VERSIONS WITH POSITIONS A, B**

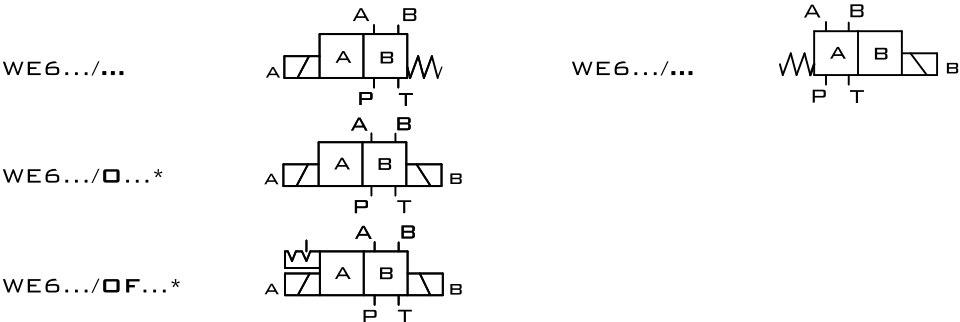


* – VERSIONS AVAILABLE ONLY FOR SPOOL SCHEMES: A, C, D

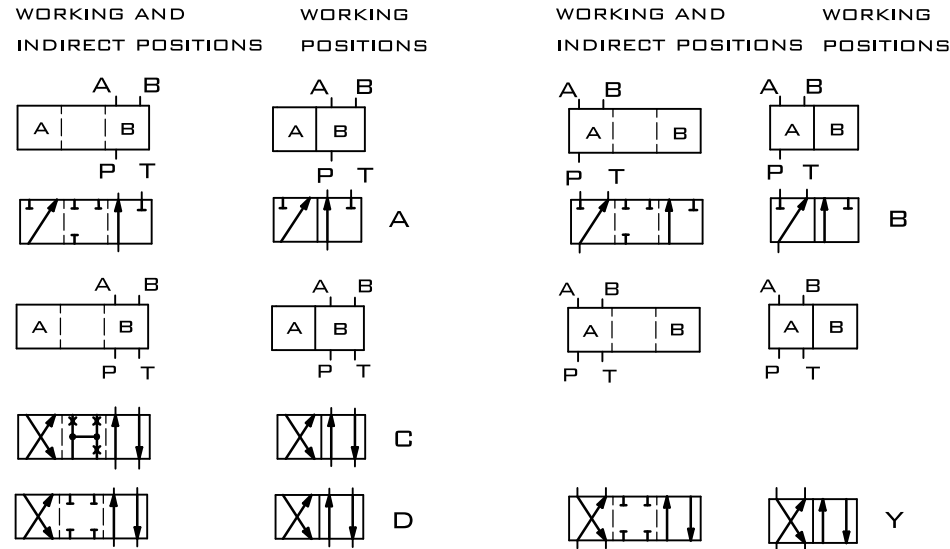

**SCHEMES OF 3-POSITION
DIRECTIONAL SPOOL VALVES**

**SCHEMES OF 2-POSITION DIRECTIONAL SPOOL VALVES
VERSIONS WITH POSITIONS A, □ VERSIONS WITH POSITIONS □, B**

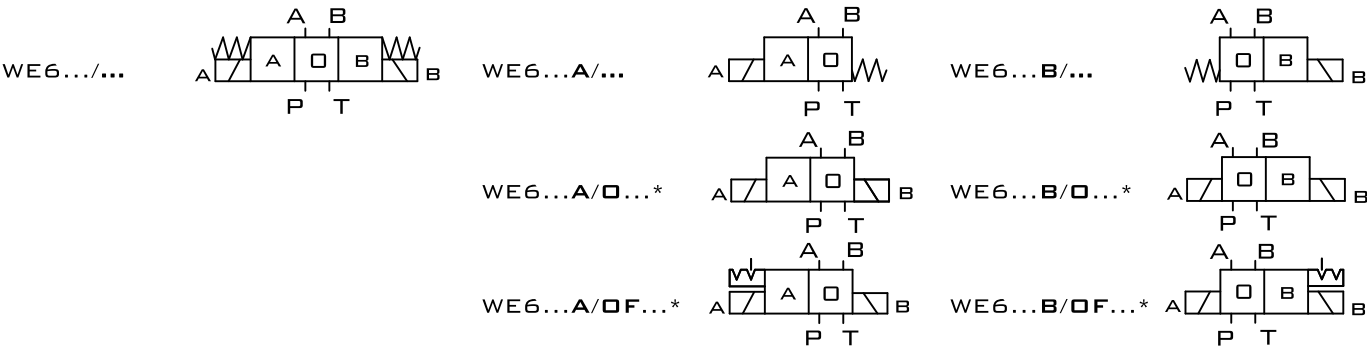

* – VERSIONS AVAILABLE ONLY FOR SPOOL SCHEMES: EA, GA, HA, JA, MA, EB, GB, HB, JB, MB

SEE ALSO:
WE1□, WEH




SCHEMES

HYDRAULIC SCHEMES OF SPOOLS

WORKING AND INDIRECT POSITIONS	WORKING POSITIONS	WORKING AND INDIRECT POSITIONS	WORKING POSITIONS	WORKING AND INDIRECT POSITIONS	WORKING POSITIONS

SUBPLATE INSTALLATION DIMENSIONS

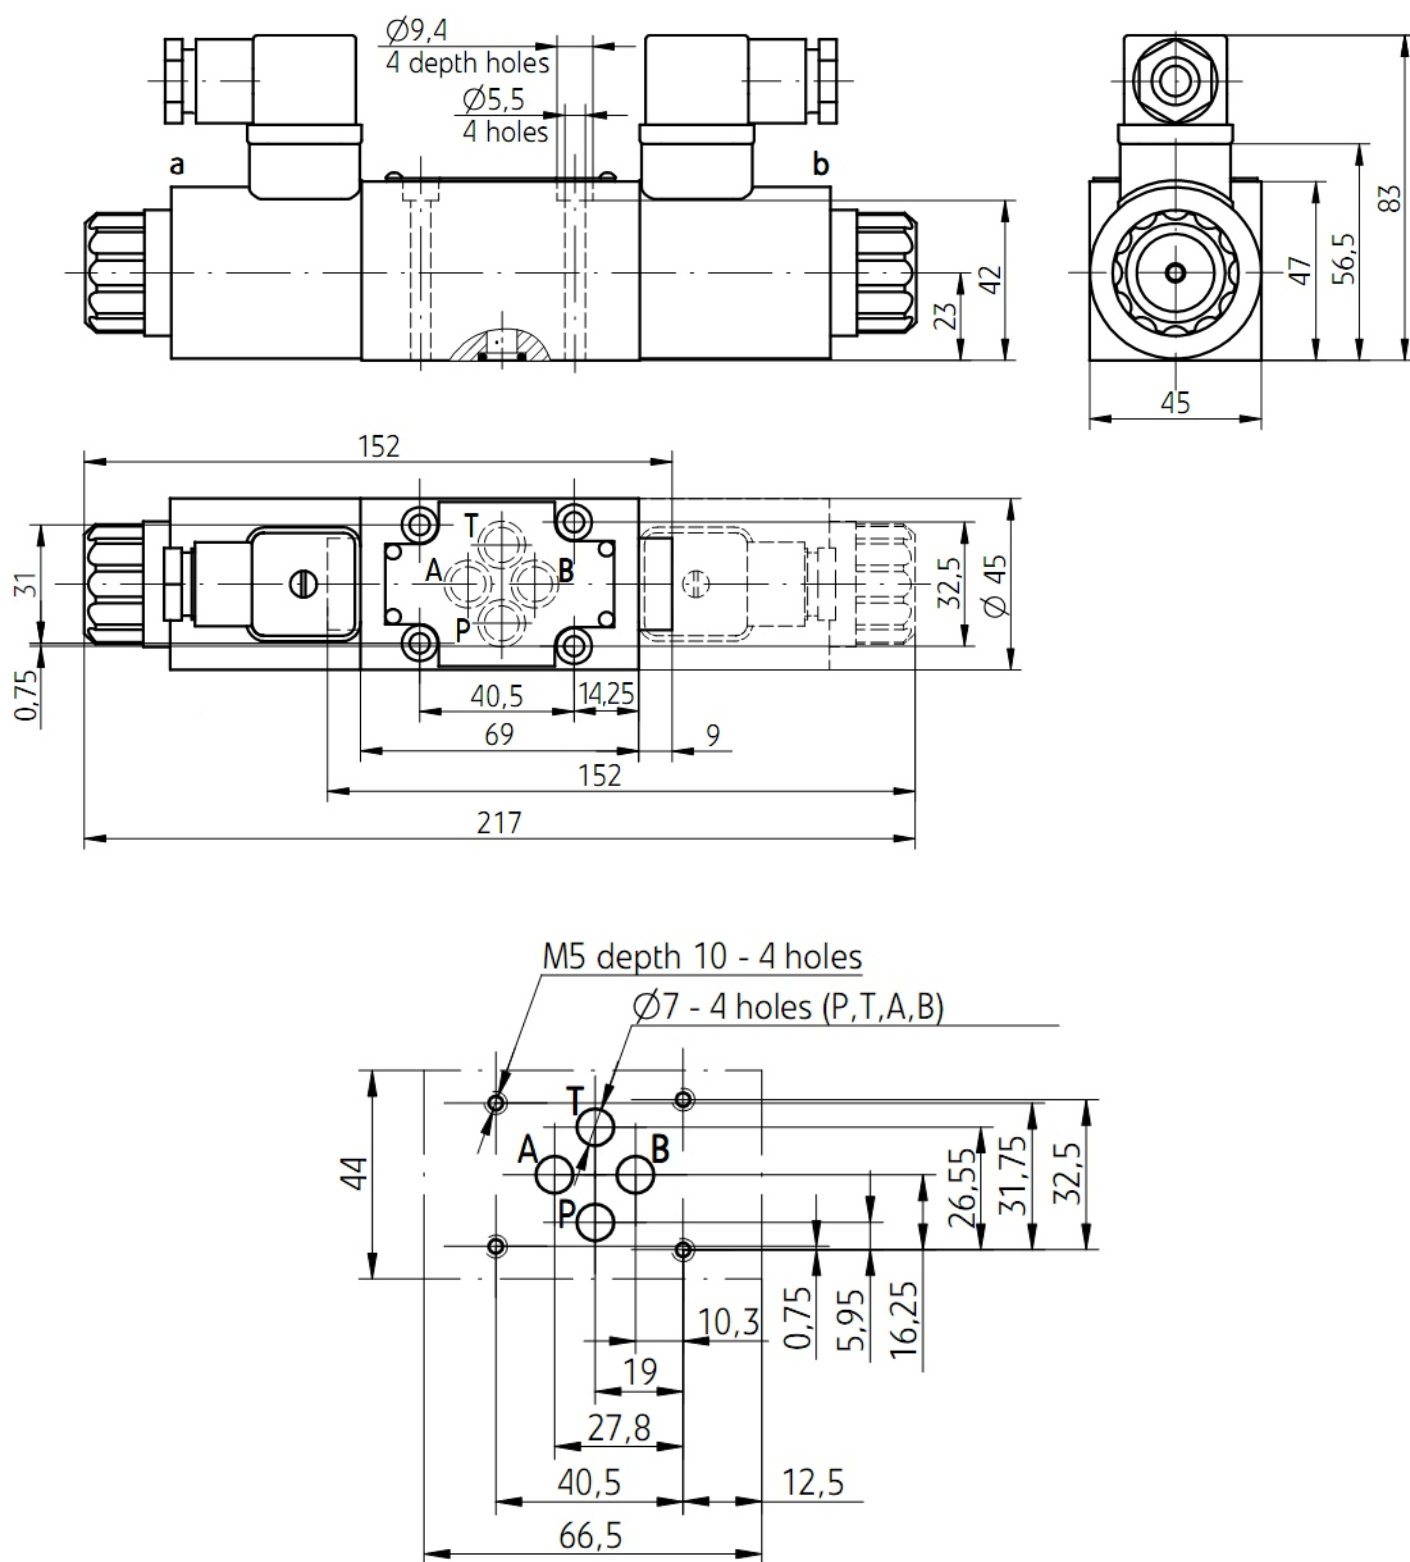

	DISTRIBUTORI OLEODINAMICI	WE6																																																																																					
		SOLENOID OPERATED DIRECTIONAL CONTROL VALVES																																																																																					
ORDER CODE																																																																																							
<table><tr><td></td><td>WE</td><td>6</td><td></td><td></td><td></td><td>E</td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>					WE	6				E																																																																													
	WE	6				E																																																																																	
<table><tr><td>3=3-WAY 4=4-WAY</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>6=6 SIZE</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>SPOOL TYPE</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>6X=60-69 SERIES</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>NO CODE=WITH SPRING RETURN □=WITHOUT SPRING RETURN □F=WITHOUT SPRING RETURN WITH DETENT</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>E=STANDARD SOLENOID</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>				3=3-WAY 4=4-WAY													6=6 SIZE													SPOOL TYPE													6X=60-69 SERIES													NO CODE=WITH SPRING RETURN □=WITHOUT SPRING RETURN □F=WITHOUT SPRING RETURN WITH DETENT													E=STANDARD SOLENOID													<table><tr><td>NO CODE=NBR SEALS V=FKM SEALS</td></tr><tr><td>Z5L=SQUIRE PLUGS WITH LAMP</td></tr><tr><td>NO CODE=WITHOUT THROTTLE INSERT B0.8=THROTTLE 0.8 MM B1.0=THROTTLE 1.0 MM B1.2=THROTTLE 1.2 MM</td></tr><tr><td>N9=WITH CONCEALED HAND EMERGENCY</td></tr><tr><td>G12=DC12V G24=DC24V W110R=AC110V W220R=AC220V</td></tr></table>	NO CODE=NBR SEALS V=FKM SEALS	Z5L=SQUIRE PLUGS WITH LAMP	NO CODE=WITHOUT THROTTLE INSERT B0.8=THROTTLE 0.8 MM B1.0=THROTTLE 1.0 MM B1.2=THROTTLE 1.2 MM	N9=WITH CONCEALED HAND EMERGENCY	G12=DC12V G24=DC24V W110R=AC110V W220R=AC220V
3=3-WAY 4=4-WAY																																																																																							
6=6 SIZE																																																																																							
SPOOL TYPE																																																																																							
6X=60-69 SERIES																																																																																							
NO CODE=WITH SPRING RETURN □=WITHOUT SPRING RETURN □F=WITHOUT SPRING RETURN WITH DETENT																																																																																							
E=STANDARD SOLENOID																																																																																							
NO CODE=NBR SEALS V=FKM SEALS																																																																																							
Z5L=SQUIRE PLUGS WITH LAMP																																																																																							
NO CODE=WITHOUT THROTTLE INSERT B0.8=THROTTLE 0.8 MM B1.0=THROTTLE 1.0 MM B1.2=THROTTLE 1.2 MM																																																																																							
N9=WITH CONCEALED HAND EMERGENCY																																																																																							
G12=DC12V G24=DC24V W110R=AC110V W220R=AC220V																																																																																							