



CLEAN WATER

WITH A WATER FILTER STRAW

*Nordic trust
global safety*

NORDIX
DNA





Backwash Cleansing Device Easily

Clean the filter with clean water when clogging occurs with simple pressure pump operation

NORDIX
DNA

Легко промийте очисний пристрій зворотнім промиванням!

Очищайте фільтр чистою водою, коли відбувається засмічення, за допомогою простої роботи напірного насоса, шприца, тощо

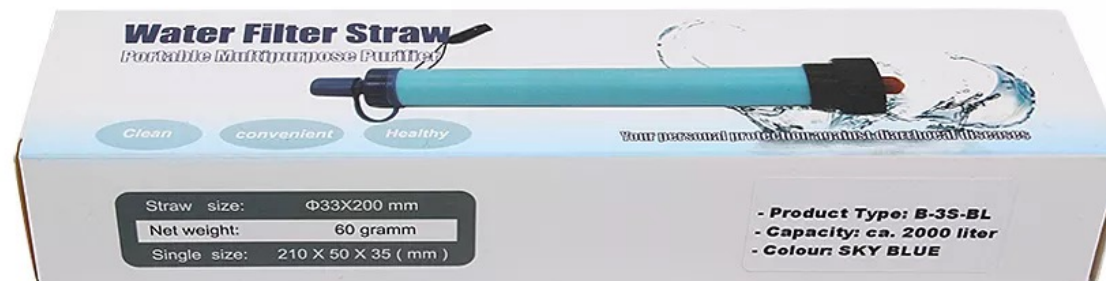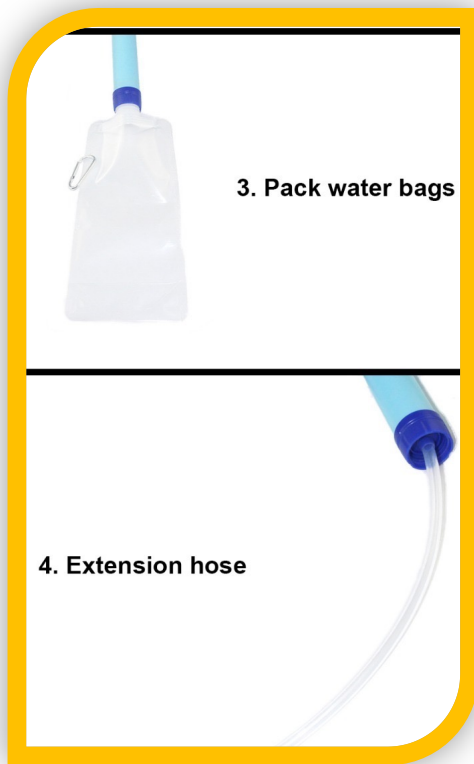


NORDIX
DNA

It is possible to complete with additional accessories


Є можливість комплектувати додатковими аксесуарами

The capacity is for a straw is minimum 2.000 liter water

Пропускна здатність соломинки для очистки води становить мінімум 2000 літрів

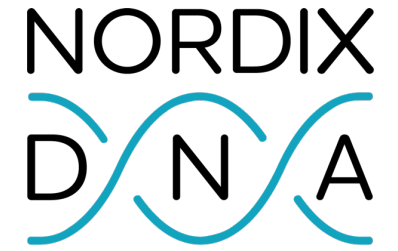

Professional Water Filter Straw

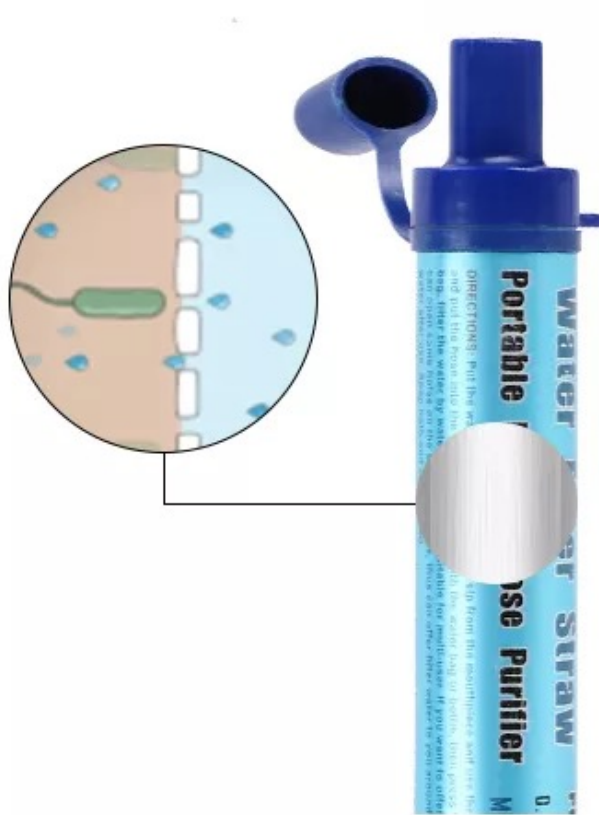

The hollow fiber UF mem-brane filters particles as small as 0.1 microns. By capturing 99.99% of water-borne bacteria, protozoa, mold




Carbon filter for removing chlorine, heavy metal ions and other toxic substances



High POLY-IODINE as a sterilizing medium that will kill 99.9999% bacteria, viruses in the water to prevent waterborne diseases. It can filter the organic contaminants and excess iodine, giving the treated water a good clean taste



The pre- filter attachment acts as your first line of defense

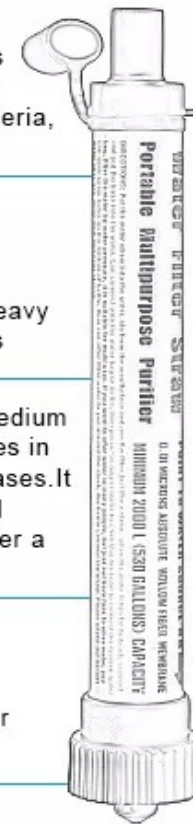



STAGE1




The pre- filter attachment acts as your first line of defense

STAGE2



High POLY-IODINE as a sterilizing medium that will kill 99.9999% bacteria, viruses in the water to prevent waterborne diseases. It can filter the organic contaminants and excess iodine, giving the treated water a good clean taste

STAGE3

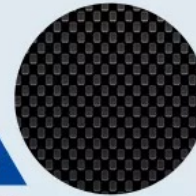

Carbon filter for removing chlorine, heavy metal ions and other toxic substances

STAGE4



The hollow fiber UF membrane filters particles as small as 0.1 microns. By capturing 99.99% of water-borne bacteria, protozoa, mold


NORDIX DNA

Етап 1. Насадка попереднього фільтра діє як ваша перша лінія захисту

Етап 2. Високий рівень ПОЛІЙОДУ як стерилізуюче середовище, яке вбиває 99,9999% бактерій, вірусів у воді, щоб запобігти захворюванням, що передаються через воду. Він може рятувати від органічних забруднень і надлишку йоду, надаючи очищеній воді гарний чистий смак.

Етап 3. Вугільний фільтр для видалення хлору, іонів важких металів та інших токсичних речовин

Етап 4. УФ-мембрана з порожнистих волокон фільтрує частинки розміром до 0,1 мікрона, захоплюючи 99,99% бактерій, найпростіших, цвілі, що переносяться через воду

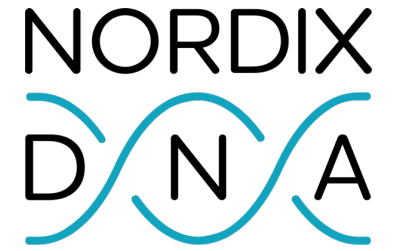



Always Getting Ready



For Camping & Hiking

Take advantage of the water purifier's lightweight build by bringing it with you on your next hiking or camping adventure. Keeping it on hand will allow you to access drinking water from nearby puddles, ponds, and streams.




For Hunters & Fishers

Whether you're on land or wading in the water, tracking down prey while on the hunt may take longer than you expect. The Personal Water Purifier allows you to hydrate as you go, so you won't have to fumble around with bulky canteens and canisters.



For Emergency

Packing the Personal Water Purifier in your first aid kits, emergency kits or bug out bag ensures that you will always have a clean water source.

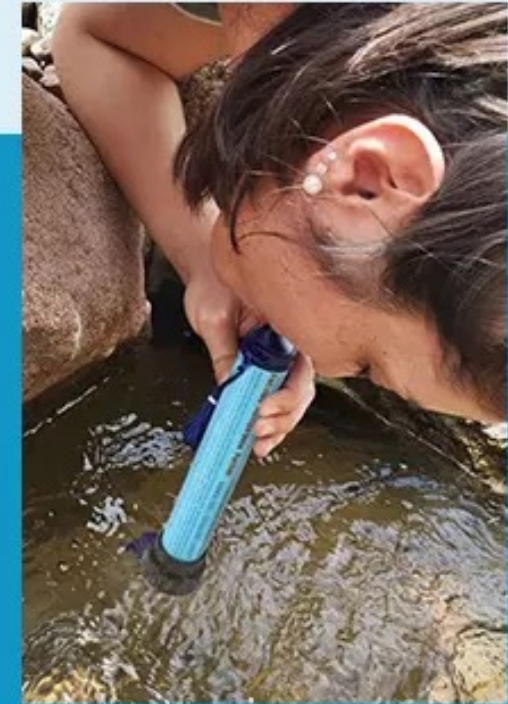

For Travel

Whether you are filling up at a hotel tap, or drinking out of the Amazon River, your SurvivalStraw will give you healthy drinking water.

KEEP YOUR WATER SAFE

Water Filter use 0.01 Microns
ultra-filtration membrane
cartridge meet EPA standards.
Keep your water safe and health.



NORDIX
DNA






Medical grade hollow fiber UF membrane, effective filtration for impurities and bacteria in water

0.01 Microns Filtration Membrane


More chance for entry of waterborne pathogens and protozoa.

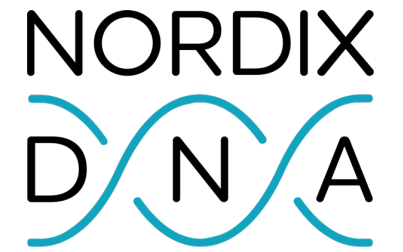



NORDIX
DNA

Compact water filter suction pipe

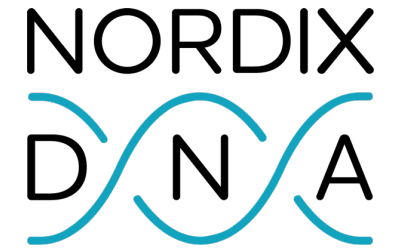

CONTACT INFO

DENMARK

Claus Mulberg

WhatsApp + 45 4046 8699

E-mail: claus@nordixdna.com

DENMARK

Christina Holm

WhatsApp + 45 2125 0006

E-mail: christina@nordixdna.com

UKRAINE

Oleksandr Kosar

WhatsApp + 380 67 877 7444

E-mail: ilikeexport@gmail.com

*Nordic trust
global safety*