



# μChiller

Controller for Chiller / Heat Pump



## USER MANUAL

**LEGGI E CONSERVA  
QUESTE ISTRUZIONI**  
→ **READ AND SAVE  
THESE INSTRUCTIONS** ←

**NO POWER  
& SIGNAL  
CABLES  
TOGETHER**  
READ CAREFULLY IN THE TEXT!

μChiller

+0300053EN - ENG

Up to date version available on

[www.carel.com](http://www.carel.com)



## GENERAL WARNINGS



CAREL bases the development of its products on decades of experience in HVAC/R, on continuous investments in technological innovations to products, procedures and strict quality processes with in-circuit and functional testing on 100% of its products, and on the most innovative production technology available on the market. CAREL and its subsidiaries/affiliates nonetheless cannot guarantee that all the aspects of the product and the software included with the product respond to the requirements of the final application, despite the product being developed according to start-of-the-art techniques. The customer (manufacturer, developer or installer of the final equipment) accepts all liability and risk relating to the configuration of the product in order to reach the expected results in relation to the specific final installation and/or equipment. CAREL may, based on specific agreements, act as a consultant for the successful commissioning of the final unit/application, however in no case does it accept liability for the correct operation of the final equipment/system. The CAREL product is a state-of-the-art product, whose operation is specified in the technical documentation supplied with the product or can be downloaded, even prior to purchase, from the website [www.carel.com](http://www.carel.com). Each CAREL product, in relation to its advanced level of technology, requires setup/configuration/programming/commissioning to be able to operate in the best possible way for the specific application. Failure to complete such operations, which are required/indicated in the user manual, may cause the final product to malfunction; CAREL accepts no liability in such cases. Only qualified personnel may install or carry out technical service on the product.

The customer must only use the product in the manner described in the documentation relating to the product. In addition to observing any further warnings described in this manual, the following warnings must be heeded for all CAREL products:

- prevent the electronic circuits from getting wet. Rain, humidity and all types of liquids or condensate contain corrosive minerals that may damage the electronic circuits. In any case, the product should be used or stored in environments that comply with the temperature and humidity limits specified in the manual;
- do not install the device in particularly hot environments. Too high temperatures may reduce the life of electronic devices, damage them and deform or melt the plastic parts. In any case, the product should be used or stored in environments that comply with the temperature and humidity limits specified in the manual;
- do not attempt to open the device in any way other than described in the manual.
- do not drop, hit or shake the device, as the internal circuits and mechanisms may be irreparably damaged.
- do not use corrosive chemicals, solvents or aggressive detergents to clean the device.
- do not use the product for applications other than those specified in the technical manual.

All of the above suggestions likewise apply to the controllers, serial cards, programming keys or any other accessory in the CAREL product portfolio. CAREL adopts a policy of continual development. Consequently, CAREL reserves the right to make changes and improvements to any product described in this document without prior warning. The technical specifications shown in the manual may be changed without prior warning. The liability of CAREL in relation to its products is specified in the CAREL general contract conditions, available on the website [www.carel.com](http://www.carel.com) and/or by specific agreements with customers; specifically, to the extent where allowed by applicable legislation, in no case will CAREL, its employees or subsidiaries/affiliates be liable for any lost earnings or sales, losses of data and information, costs of replacement goods or services, damage to things or people, downtime or any direct, indirect, incidental, actual, punitive, exemplary, special or consequential damage of any kind whatsoever, whether contractual, extra-contractual or due to negligence, or any other liabilities deriving from the installation, use or impossibility to use the product, even if CAREL or its subsidiaries/affiliates are warned of the possibility of such damage.

## DISPOSAL

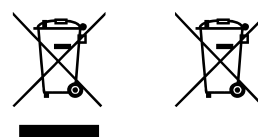


Fig. 1

Fig. 2

### INFORMATION FOR USERS ON THE CORRECT HANDLING OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)


The product is made up of metal parts and plastic parts. In reference to European Union directive 2002/96/EC issued on 27 January 2003 and related national legislation, please note that:

- WEEE cannot be disposed of as municipal waste and such waste must be collected and disposed of separately;
- the public or private waste collection systems defined by local legislation must be used. In addition, the equipment can be returned to the distributor at the end of its working life when buying new equipment;
- the equipment may contain hazardous substances: the improper use or incorrect disposal of such may have negative effects on human health and on the environment;
- the symbol (crossed-out wheeled bin) shown on the product or on the packaging and on the instruction sheet indicates that the equipment has been introduced onto the market after 13 August 2005 and that it must be disposed of separately;
- in the event of illegal disposal of electrical and electronic waste, the penalties are specified by local waste disposal legislation.

**Warranty on materials:** 2 years (from production date, excluding consumables).

**Approval:** the quality and safety of CAREL S.p.A. products are guaranteed by the ISO 9001 certified design and production system.

## IMPORTANT



**READ CAREFULLY IN THE TEXT!**

Separate as much as possible the probe and digital input cables from cables to inductive loads and power cables, so as to avoid possible electromagnetic disturbance. Never run power cables (including the electrical panel cables) and signal cables in the same conduits.

### Key to the symbols:

- Important:** to bring critical issues to the attention of those using the product.
- Note:** to focus attention on important topics; in particular the practical application of the various product functions.
- Important:** This product is to be integrated and/or incorporated into the final apparatus or equipment. Verification of conformity to the laws and technical standards in force in the country where the final apparatus or equipment will be operated is the manufacturer's responsibility. Before delivering the product, Carel has already completed the checks and tests required by the relevant European directives and harmonised standards, using a typical test setup, which however cannot be considered as representing all possible conditions of the final installation.



# Index

<b>1. Introduction.....</b>	<b>7</b>	<b>6. Parameter table.....</b>	<b>86</b>
1.1 Main functions.....	7	6.1 System.....	86
1.2 Models.....	8	6.2 Compressor.....	87
1.3 Accessories.....	8	6.3 BLDC and Inverter.....	88
<b>2. Installation.....</b>	<b>12</b>	6.4 Valve.....	89
2.1 Warnings.....	12	6.5 Source.....	89
2.2 Panel version.....	12	6.6 Input/output configuration.....	90
2.3 DIN rail version.....	13	6.7 mCH2 parameters (Legacy models only).....	91
2.4 Electrical installation.....	13	6.8 BMS port.....	91
2.5 Probe/digital input connection.....	14	6.9 Password.....	91
2.6 Connection to user terminals.....	15	6.10 Dashboard values.....	92
2.7 Positioning inside the panel.....	16	6.11 Settings.....	92
2.8 Electrical installation.....	17	<b>7. Supervisor table.....</b>	<b>93</b>
2.9 Connecting serial ports with two circuits.....	17	7.1 Coil Status.....	93
2.10 Connection to Power+ (for BLDC).....	18	7.2 Holding Register.....	94
2.11 Positioning of probes/ components.....	19	7.3 Input Register.....	100
2.12 Input/output configuration.....	19	7.4 Input Status.....	102
2.13 Functional diagrams.....	22	<b>8. Alarms and signals.....</b>	<b>105</b>
<b>3. Initial configuration.....</b>	<b>38</b>	8.1 Types of alarms.....	105
3.1 APPLICA app.....	38	8.2 Alarm list.....	106
3.2 Configuration procedure.....	38	<b>9. Technical specifications.....</b>	<b>108</b>
3.3 Unit set-up parameter list.....	42	9.1 Connector/cable table.....	110
3.4 Applica Desktop.....	45	<b>10. Release notes.....</b>	<b>110</b>
3.5 Configuration procedure with Applica Desktop - Legacy Model.....	46		
<b>4. User interface.....</b>	<b>48</b>		
4.1 Introduction.....	48		
4.2 User terminal.....	48		
4.3 Standard display.....	49		
<b>5. Functions.....</b>	<b>53</b>		
5.1 Temperature control.....	53		
5.2 User pumps.....	56		
5.3 Frost protection control.....	57		
5.4 Compressor rotation.....	61		
5.5 Compressor management.....	62		
5.6 BLDC compressor protectors.....	65		
5.7 BLDC comp. alarm prevention.....	66		
5.8 Compressor alarms.....	68		
5.9 Power+ Speed drive.....	68		
5.10 Expansion valve driver.....	69		
5.11 Control of the expansion valve.....	69		
5.12 Ultracap module and blackout management (DIN only).....	69		
5.13 Source pump.....	69		
5.14 Logs.....	70		
5.15 Source fans.....	71		
5.16 Free cooling.....	74		
5.17 Types of free cooling.....	74		
5.18 Free cooling.....	76		
5.19 Defrost.....	77		
5.20 4-way valve management.....	82		
5.21 Manual device management.....	82		
5.22 Air/air unit management (Legacy model only).....	82		
5.23 Automatic heater management for water units (Legacy model only).....	84		
5.24 Condensing unit management.....	84		
5.25 Automatic changeover (Legacy model only).....	85		



# 1. INTRODUCTION

µChiller is the Carel solution for complete management of air/water and water/water chillers and heat pumps, and condensing units. The solution also allows the field replacement of µchiller2 and µchiller2 SE with the new product (hereinafter called the Legacy model). The maximum configuration manages 2 compressors per circuit (\*), up to a maximum of 2 circuits (using an expansion card for circuit 2). The distinctive element of µChiller is complete control of high- efficiency units through integrated management of electronic expansion valves (ExV) and brushless BLDC compressors, thus ensuring greater compressor protection and reliability and a high-efficiency unit. The user terminal allows wireless connectivity with mobile devices and is built-in on the panel mounted models, or sold separately on DIN rail mounted models. CAREL's "APPLICA" app, available on Google Play for the Android operating system, makes it easier to configure parameters and commission the unit in the field.

(\*): 2 On/Off compressors or 1 BLDC compressor + 1 On/Off compressor.

## 1.1 Main functions

Ref.	Description
<b>Main features</b>	Up to two circuits and 2 + 2 compressors
	Compressors in tandem configuration with possible BLDC compressor (*)
	Air/water chiller or heat pump (A/W)
	Water/water chiller or heat pump (W/W)
	Cooling-only condensing unit
	Reverse-cycle condensing unit
	Air/air unit, cooling only (Legacy models only)
	Air/air unit, reverse-cycle (Legacy models only)
	1 evaporator per unit (2 evaporators on Legacy model only)
	Reverse-cycle water/water unit with reversal on the hydronic circuit
	Air-cooled condenser with separate/shared air circuit for A/W units
	Water-cooled condenser with single circuit for W/W units
	<b>Hardware</b>
DIN rail mounted model: management of ON-OFF compressors	
DIN rail mounted model, enhanced: management of ON-OFF compressors	
<b>User interface</b>	DIN rail mounted model, high efficiency: management of BLDC compressors
	2-row 7-segment LED display, optional pGDx graphic display, communication with APPLICA app (compatible with NFC and BTLE) for mobile devices
<b>Temperature control</b>	PID at start-up
	PID when running
	Set point compensation on outdoor temperature
<b>Compressor rotation</b>	FIFO or timed
<b>Compressor management</b>	Generic scroll compressors - Specific BLDC compressors (see list on KSA at: KSA / SW&Support /Configuration & Updating software / ST Configuration / Refrigerant Gases)
<b>Oil management with BLDC</b>	Oil recovery function (extended operation at part load)
	Oil equalisation (tandem with BLDC compressor)
<b>Circuit destabilisation</b>	Forced compressor rotation (extended operation at part load)
<b>ExV driver</b>	Built-in valve driver on enhanced and high efficiency models
	External driver management via FieldBus port (all versions)
<b>Programming with time bands</b>	Unit ON-OFF or 2nd set point (1 time band per day)
	"Noise reduction" function for condenser fans (1 time band per day)
<b>User pumps</b>	1/2 pumps (2 pumps only with 2 circuits)
	Rotation by time or with pump overload alarm
	Cyclical activation during standby
<b>Water-cooled condenser</b>	1 common pump for both circuits
<b>Air-cooled condenser</b>	Independent fans on each circuit or common to both circuits
	On/off or modulating fans with condensing temperature control
	Optimised start-up to quickly bring the compressor(s) to steady operation
	Fan anti-block protection (harsh climate)
<b>Defrost</b>	Simultaneous
	Separate
	Independent
	Only when the fans are used
	Defrost interval managed based on outside temperature (Sliding defrost)
<b>Prevent</b>	Prevention of scroll compressor operating limits in relation to condensing and evaporation temperature
	Evaporator frost prevention
	Total management of the BLDC compressor envelope limits
<b>Alarms</b>	Management of automatic and manual reset according to alarm severity (see "Alarms").
	Alarm log (up to 20 events): alarm and reset date and time recorded
<b>Connectivity/supervision</b>	RS485 serial port
	Baud rate up to 115200 bit/s
	Frame configurable by parity (none, even, odd) and stop bits (1 or 2); databits fixed at 8 bits.
	Frame configurable by Parity (None, Even, Odd) and StopBits (1 or 2); Databits fixed at 8 bits.

Tab. 1.a

(\*) the configuration envisaged requires the capacity of the ON/OFF compressor to be equal to 60% of the capacity of the BLDC compressor (at maximum speed).

## 1.2 Models

P/N	Assembly	Connectivity	Compresso management:	Notes	Electronic expansion valve management
UCHBP00000190	panel	NFC	On/Off	Standard version	bipolar: with EVD Evolution driver
UCHBP00000200	panel	NFC, Bluetooth (BLE)	On/Off	Standard version	bipolar: with EVD Evolution driver
UCHBD00001230	DIN rail	-	On/Off	Standard version	bipolar: with EVD Evolution driver
UCHBDE0001150	DIN rail	-	On/Off	Enhanced version	unipolar: built-in; bipolar with external EVD Evolution driver
UCHBDH0001150	DIN rail	-	On/Off and BLDC	-	bipolar: with external EVD Evolution driver
UCHBE00001230: 2nd circuit expansion	DIN rail	-	On/Off and BLDC	-	unipolar: built-in; bipolar with external EVD Evolution driver
UCHBE00001150: 2nd circuit expansion	DIN rail	-	On/Off and BLDC	-	unipolar: built-in; bipolar: with external EVD Evolution driver
UCHBP000X0190	panel	NFC	On/Off	Legacy version	bipolar: with EVD Evolution driver
UCHBP000X0200	NFC, Bluetooth	NFC, Bluetooth	On/Off	Legacy version	bipolar: with EVD Evolution driver
UCHBP000X1230	DIN rail	-	On/Off	Legacy version	bipolar: with EVD Evolution driver

Tab. 1.b

### Connectors available

P/N	Description
UCHCOND000	uChiller DIN Molex/Free connector kit
UCHCOND010	uChiller DIN Molex/Free 100 cm connector and cable kit
UCHCONP000	uChiller panel Molex/Free connector kit
UCHCONP010	uChiller panel Molex/Free 100 cm connector and cable kit
UCHCONP030	uChiller panel Molex/Free 300cm connector and cable kit
UCHCONPMCO	Panel mount adapter kit for MCH2

Tab. 1.c

## 1.3 Accessories

### 1.3.1 μChiller user terminal

For DIN rail mounted models (built-in on the panel model). The user terminal includes the display and keypad, comprising four buttons that, when pressed alone or combined with other buttons, access the operations available for the “User” and “Service” profiles (see the paragraph on “Commissioning”). Connectivity - NFC or NFC + Bluetooth (BLE) based on the model - allows interaction with mobile devices and simplifies unit commissioning (after having installed the CAREL “Applica” APP for the Android operating system, see chapters “Commissioning” and “User interface”). For assembly, see the technical leaflet +0500146IE.



Fig. 1.a

Code	Description
AX5000PD20A20	User terminal (NFC)
AX5000PD20A30	User terminal (NFC, Bluetooth BLE)
ACS00CB000020	Connection cable L=1.5 m
ACS00CB000010	Connection cable L=3 m

Tab. 1.d

### 1.3.2 pGDx Touch user terminal

The 4.3” pGDx graphic terminal is part of the touch screen family designed to make the user interface simple and intuitive. The electronic technology used and the 65K colour display enable management of high quality images and advanced features to ensure a high aesthetic standard. The touch screen display guarantees simple human-machine interaction, making it easier to browse between the various screens. See the technical leaflet +050001895.



Fig. 1.b

Code	Description
PGR04****B***	pGDx, 1 x RS485 port, 1 x 24 Vdc power connector, 1 optional keypad connector
PGR04****C***	pGDx, 1 x opto-isolated RS485 port, 1 x 24 Vdc power connector, 1 optional keypad connector, 1 Ethernet port

Tab. 1.e



### 1.3.3 EVD Evolution/EVD Evolution twin valve driver

The Enhanced and High Efficiency models have the driver built-into the controller, able to drive unipolar valves (up to Carel model E3V, with a cooling capacity less than 90-100kW); all versions can be connected to the external EVD Evolution driver to drive bipolar valves (with a higher cooling capacity).



Fig. 1.c

Part number	Description
EVD0000T20	EVD evolution twin universal (RS485/Modbus)
EVD0000T21	EVD evolution twin universal, (RS485/Modbus) multiple pack of 10 pcs.
EVD0000T50	EVD evolution twin Carel valve (RS485/Modbus)
EVD0000T51	EVD evolution twin Carel valve, (RS485/Modbus) multiple pack of 10 pcs.

Tab. 1.f

### 1.3.4 Temperature sensors

NTC sensors for measuring the temperatures in the user circuit, the outdoor air or source, and the refrigeration circuit. NTC\*\*HT sensors are recommended for discharge temperature measurement (with BLDC compressors in heat pump mode).



Fig. 1.d

Code	Type	Range
NTC060HF01	10 kΩ ±1% @25°C, IP67	-50 to 90°C strap-on
NTC060HP00	10 kΩ ±1% @25°C, IP67	-50 to 50 °C (105°C in air)
NTC060HT00	50 kΩ ±1% @25°C, IP67	-30 to 100°C RH95% in air (150°C in a dry environment)

Tab. 1.g

**Notice:** see manual +040010025 (ITA- ENG) /+040010026 (FRE- GER) for guidelines on installing the sensors on the unit.

### 1.3.5 Pressure sensors

These measure:

1. evaporation pressure in the circuit, used to control superheat, manage the evaporator frost protection function and the operating limits;
2. condensing pressure in the circuit, to control the condensing stage and manage the operating limits.

See the technical leaflet +050000488.



Fig. 1.e

Code	Type	Application	Range
SPKT0*13P*	0-5V	LP R407C, R290	-1 to 9.3 bars
SPKT0*43P*	0-5V	LP R410A, R32	0 to 17.3 bars
SPKT0*33P*	0-5V	HP R407C, R290	0 to 34.5 bars
SPKT0*B6P*	0-5V	HP R410A, R32	0 to 45 bars
SPKT0011C*	4-20mA	LP R407C, R290	0 to 10 bars
SPKT0041C*	4-20mA	LP R410A, R32	0 to 18.2 bars
SPKT0031C*	4-20mA	HP R407C, R290	0 to 30 bars
SPKT00B1C*	4-20mA	HP R410A, R32	0 to 44.8 bars
SPKC00*310	IP67 connection cable		L=2 to 12 m
SPKC00*311	IP67 connection cable - 50 pcs		L=0.65 to 1.3 m

Tab. 1.h

### 1.3.6 Unipolar valve (P/N E2V\*\*FSAC\*)



Fig. 1.f

Used with a compatible stator from the E2VSTA03\*\*series. Unipolar electronic expansion valve, managed directly by the controller, which guarantees precise refrigerant flow even at low flow- rates. See the technical leaflet +050001680.

### 1.3.7 Ultracap module (EVD0000UC0)



Fig. 1.g

The Ultracap module EVD0000UC0 is an optional external backup module for the EVD Evolution driver that ensures the valves are closed in the event of a power failure. The module guarantees temporary power supply to one EVD Evolution driver (single or twin) only in the event of a power failure, for enough time to immediately close the connected electronic valves (one or two). It therefore also avoids the need to install a solenoid valve in the refrigeration circuit, or a backup coil kit.

### 1.3.8 Ultracap module for unipolar valve (EVD000HAC0)



Fig. 1.h

The Ultracap module EVD000HAC0 is an optional device used with the  $\mu$ Chiller models equipped with an integrated unipolar electronic valve driver. This external backup module closes the valve in the event of a power failure.

Part number	Description
EVD000HAC0	Ultracap module for HVAC ACU APPLICATIONS
ACS00CB002370	Ultracap module cable for unipolar valve 0.3 m

### 1.3.9 Phase control speed controllers



Fig. 1.i

FCS/FCR series speed controllers are available to control and optimise the performance of the condenser fans when connected to a  $\mu$ Chiller family controller. These controllers are available in the single-phase and three-phase versions.

P/N	Description
FCSM042300	Speed controller, 0-10V 4A/230VAC
FCSM082300	Speed controller, 0-10V 8A/230VAC
FCSM122300	Speed controller, 0-10V 12A/230VAC
FCSM0423L0	Speed controller, 0-10V 4A/230VAC, linear output
FCSM0823L0	Speed controller, 0-10V 8A/230VAC, linear output
FCSM1223L0	Speed controller, 0-10V 12A/230VAC, linear output
FCR306402R	Speed controller, 3PH 400V, 06A, -20+50C, IP55, 0/10V
FCR309404R	Speed controller, 3PH 400V, 09A, -20+50C, IP55, 0/10V
FCR312402R	Speed controller, 3PH 400V, 12A, -20+50C, IP55, 0/10V

### 1.3.10 Couldgate for tERA connection



Fig. 1.j

CloudGate is CAREL's new family of IoT gateways to enable monitoring and tERA platform services for HVAC/R systems with up to 10 units. Compact, standard installation inside an electrical panel and a local LED interface with immediate indication of communication status make Cloudgate easy to install in the field, without the need for experts in connectivity devices.

### 1.3.11 Connector kit



Fig. 1.k

Part number	Description
UCHCONP000	uChiller panel MOLEX/free connector kit
UCHCONP010	uChiller panel MOLEX/free connector and 100 cm cable kit
UCHCONP030	uChiller panel Molex/free connector and 300 cm cable kit
UCHCOND000	uChiller DIN MOLEX/free connector kit
UCHCOND010	uChiller DIN MOLEX/free connector and 100 cm cable kit
UCHCONPMCO	Adapter kit for MCH2

### 1.3.12 Cables for LED displays (DIN models only)



Fig. 1.l

Part number	Description
ACS00CB000010	Display cable AX JST/JST 3 M
ACS00CB000020	Display cable AX JST/JST 1.5 m
ACS00CB000012	Display cable AX JST/JST 3 m, multiple pack (10 pcs)
ACS00CB000022	Display cable AX JST/JST 1.5 m, multiple pack (10 pcs)

### 1.3.13 USB/RS485 converter (CVSTDUMOR0)



Fig. 1.m

Electronic device used to interface an RS485 network to a personal computer via the USB port. See the technical leaflet +050000590.

## 2. INSTALLATION

### 2.1 Warnings

**▲ Important:** avoid installing the controller in environments with the following characteristics:

- temperature and humidity that do not comply with the ambient operating conditions (see "Technical specifications");
- strong vibrations or knocks;
- exposure to water sprays or condensate;
- exposure to aggressive and polluting atmospheres (e.g.: sulphur and ammonia gases, saline mist, smoke) which may cause corrosion and/or oxidation;
- strong magnetic and/or radio frequency interference (thus avoid installation near transmitting antennae);
- exposure to direct sunlight and the elements in general;
- wide and rapid fluctuations in ambient temperature;
- exposure to dust (formation of corrosive patina with possible oxidation and reduction of insulation).

### 2.2 Panel version

#### 2.2.1 Dimensions - mm (in)

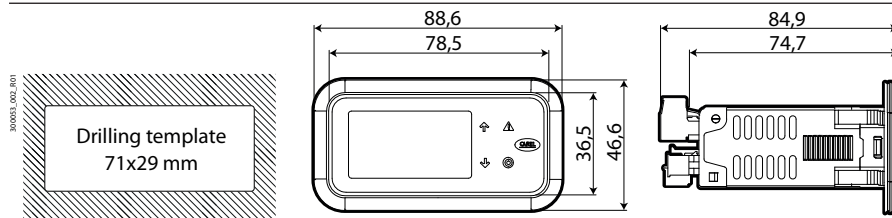


Fig. 2.a

#### 2.2.2 Assembly

**▲ Important:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

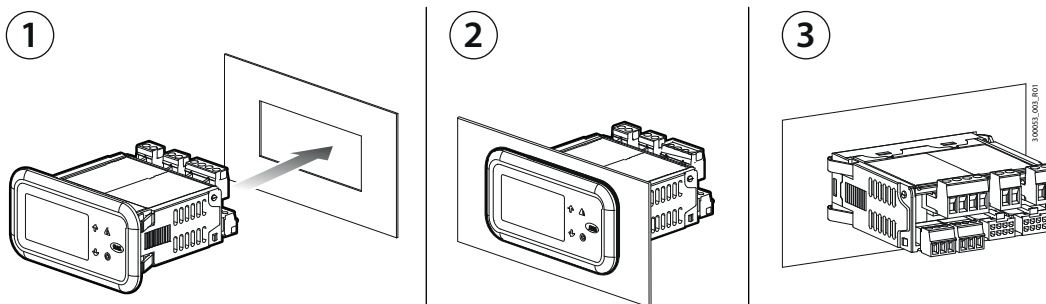


Fig. 2.b

1. Place the controller in the opening, pressing lightly on the side anchoring tabs.
2. Then press on the front until fully inserted (the side tabs will bend, and the catches will attach the controller to the panel).

**▲ Important:** IP65 front protection is guaranteed only if the following conditions are met:

- maximum deviation of the rectangular opening from flat surface:  $\leq 0.5$  mm;
- thickness of the electrical panel sheet metal: 0.8-2 mm;
- maximum roughness of the surface where the gasket is applied:  $\leq 120$   $\mu$ m.

**ⓘ Notice:** the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product.

### 2.2.3 Removal

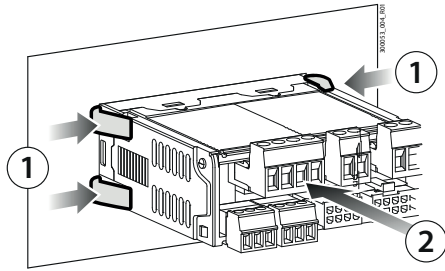


Fig. 2.c

Open the electrical panel from the rear and press the anchoring tabs and then the controller to remove it.

1. Gently press the side anchoring tabs on the controller;
2. Exert slight pressure on the controller until it is removed.

**⚠ Important:** the operation does not require the use of a screwdriver or other tools.

## 2.3 DIN rail version

### 2.3.1 Dimensions - mm(in)

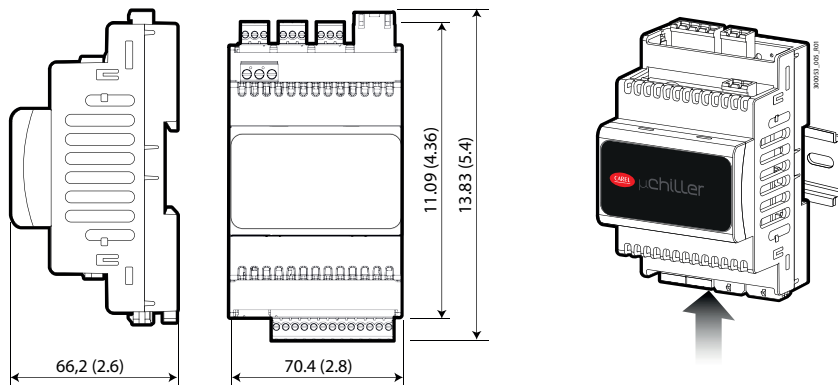


Fig. 2.d

Apply slight pressure to the controller resting on the DIN rail until the rear tab clicks into place.

### 2.3.2 Removal

Use a screwdriver as a lever in the hole to lift and release the tab. The tab is held in the locked position by return springs.

## 2.4 Electrical installation

**⚠ Important:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

### 2.4.1 Description of the terminals

Panel model


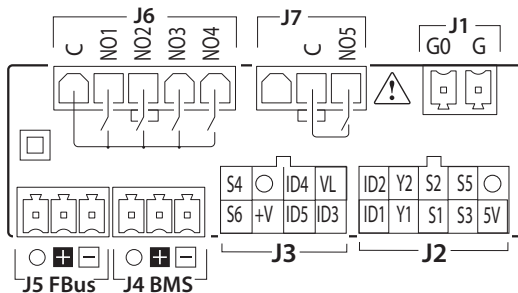


Fig. 2.e

DIN rail model

Basic

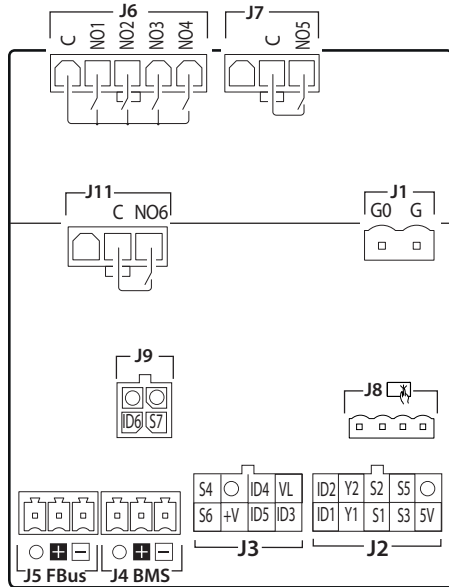

Enhanced/ High Efficiency

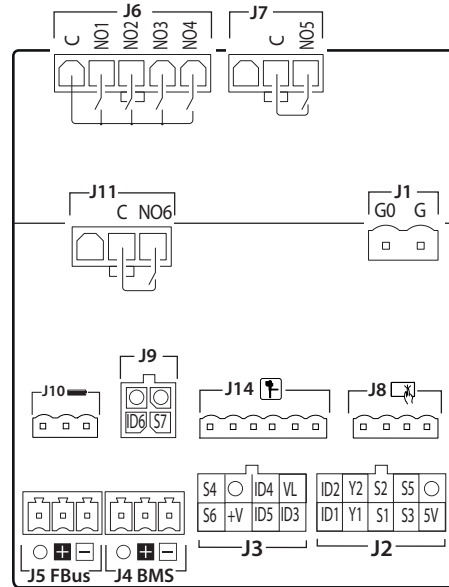


Fig. 2.f

Ref.	Description
J1	G Power supply
	G0 Power supply: reference
J2	5V Ratiometric probe power supply
	S3 Analogue input 3
	S1 Analogue input 1
	Y1 Analogue output 1
	ID1 Digital input 1
	O GND: reference for probes, digital inputs and analogue outputs
	S5 Analogue input 5
	S2 Analogue input 2
	Y2 Analogue output 2
	ID2 Digital input 2
J3	ID3 Digital input 3
	ID5 Digital input 5
	+V Power supply to 4-20 mA active probes
	S6 Analogue input 6
	VL Not used
	ID4 Digital input 4
	O GND: reference for analogue and digital inputs
	S4 Analogue input 4
J4	- BMS serial port (RS485): Rx/Tx-
	+ BMS serial port (RS485): Rx/Tx+
	O BMS serial port (RS485): GND

Ref.	Description
J5	- Fieldbus serial port (RS485): Rx/Tx -
	+ Fieldbus serial port (RS485): Rx/Tx +
	O Fieldbus serial port (RS485): GND
J6	C Common for relays 1, 2, 3, 4
	NO1 Digital output (relay) 1
	NO2 Digital output (relay) 2
	NO3 Digital output (relay) 3
	NO4 Digital output (relay) 4
J7	C Common for relay 5
	NO5 Digital output (relay) 5
J8	- Unit terminal connector (AX5* or PGR04*)
J9	S7 Analogue input 7
	ID6 Digital input 6
	O Input reference
	O Input reference
J10*	G Power supply for Ultracap module
	G0
	Vbat Emergency power from Ultracap modul
J11	- (not used)
	C Common for relay 6
	NO6 Digital output (relay) 6
J14*	Carel ExV unipolar valve connector

Tab. 2.a

(\*) for DIN Enhanced / High Efficiency models only

## 2.5 Probe/digital input connection

NTC probes

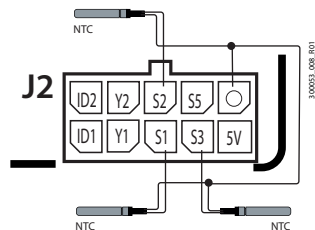


Fig. 2.g

0-5 V ratiometric pressure probes

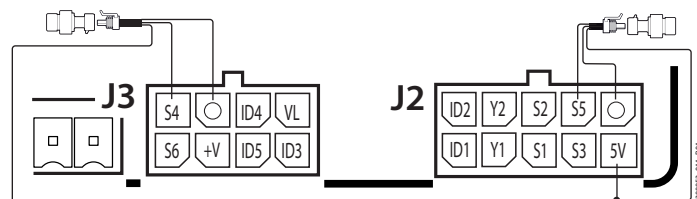


Fig. 2.h

0-10 Vdc probes

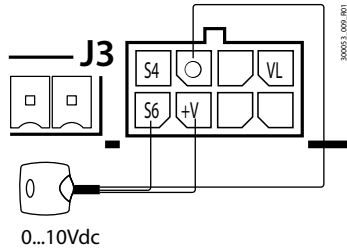


Fig. 2.i

4-20 mA probes/digital inputs

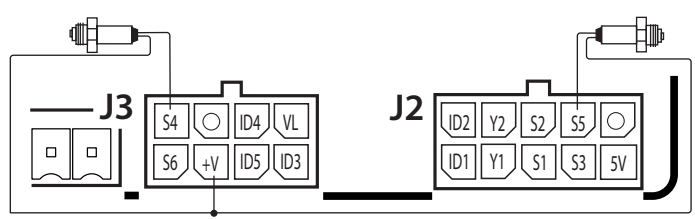


Fig. 2.j

Controller terminals	Pressure probe with current signal	
	1	
+V	Power supply	brown
S1	Signal	white

Tab. 2.b

Controller terminals	Pressure probe with current signal	
	1	
5V	Power supply	black
O	Power reference	green
S1	Signal	white

Tab. 2.c

⚠ Notice: O = GND

⚠ Notice: if an ExV valve is connected, an NTC temperature sensor must also be connected to read the gas suction temperature: this sensor must be connected to one of the available inputs provided. For the position of the sensor on the suction pipe, see the installation guide +040010025 "Sonde e sensori - Guida alla scelta e all'installazione ottimale / Probes and sensors - Selection and optimal installation guide", available at carel.com under product => sensor => quick guide.

## 2.6 Connection to user terminals

### 2.6.1 Panel model

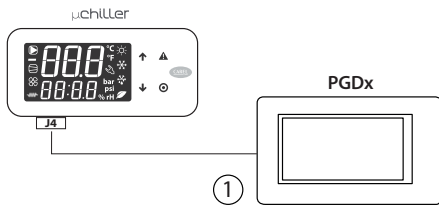


Fig. 2.k

### 2.6.2 DIN rail model

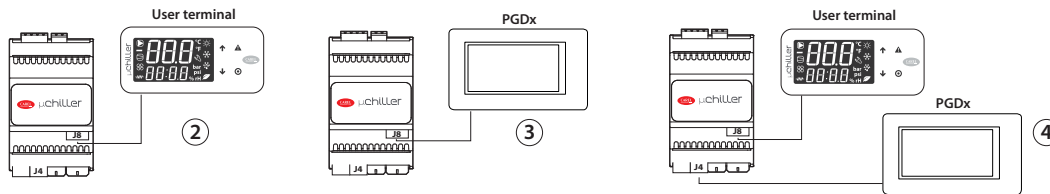


Fig. 2.l

### Connection to connector J4

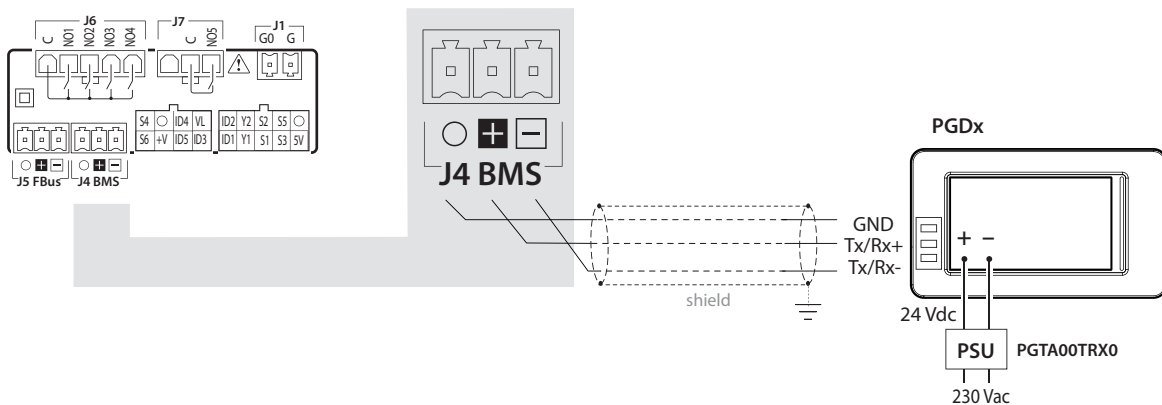


Fig. 2.m

Connection to connector J8

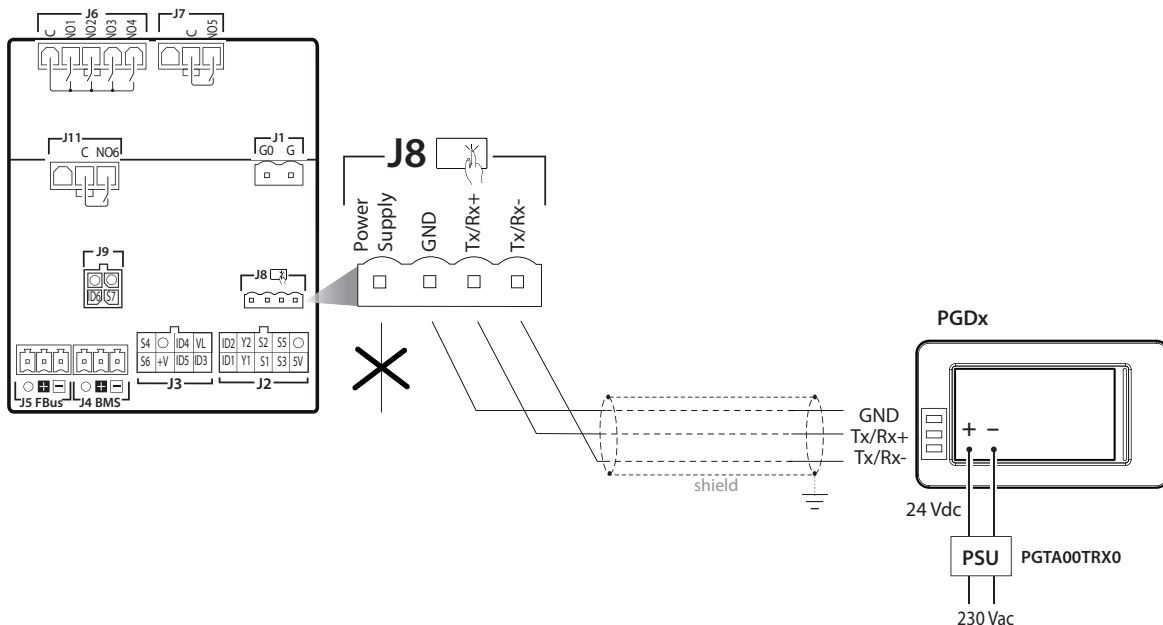


Fig. 2.n

Notice: (1) and (4) with PGDx connected to port J4 (BMS): the parameters must be set as shown in the following table.

Communication parameters

User	Display	Code	Description	Value
S	x	Hd00	BMS: serial address	1
S	x	Hd01	BMS: baud rate 3=9600; 4=19200; 5=38400; 6=57600; 7=115200	6
S	x	Hd02	BMS: settings 0=8-NONE-1; 1=8-NONE-2; 2=8-EVEN-1; 3=8-EVEN-2; 4=8-ODD-1; 5=8-ODD-2	0

Tab. 2.d

### 2.6.3 pGDx Data Transfer

pGDx transfers all Modbus data available on the uChiller BMS 485 port via its ETH port, using Modbus TCP/IP protocol. A supervisor connected to the pGDx ETH port can thus read/write the same parameters available on the BMS port. The pGDx can therefore be added to the system without losing the features required for supervision.

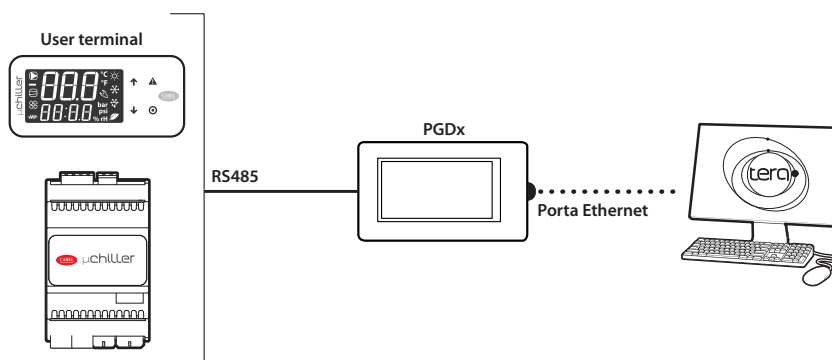


Fig. 2.o

## 2.7 Positioning inside the panel

The position of the controller in the electrical cabinet must be chosen so as to guarantee correct physical separation from the power components (solenoids, contactors, actuators, inverters, ...) and the connected cables. Proximity to such devices/cables may create random malfunctions that are not immediately evident. The structure of the panel must allow the correct flow of cooling air.



## 2.8 Electrical installation

**▲ Important:** When laying the wiring, “physically” separate the power part from the control part. The proximity of these two sets of wires will, in most cases, cause problems of induced disturbance or, over time, malfunctions or damage to the components. The ideal solution is to house these two circuits in two separate cabinets. Sometimes this is not possible, and therefore the power part and the control part must be installed in two separate areas inside the same panel.

For the control signals, it is recommended to use shielded cables with twisted wires. If the control cables have to cross over the power cables, the intersections must be as near as possible to 90 degrees, always avoiding running the control cables parallel to the power cables.

**Pay attention to the following warnings:**

- use cable ends suitable for the corresponding terminals. Loosen each screw and insert the cable ends, then tighten the screws. When the operation is completed, slightly tug the cables to check they are sufficiently tight;
- separate as much as possible the probe signal, digital input and serial line cables from the cables carrying inductive loads and power cables to avoid possible electromagnetic disturbance. Never run power cables (including the electrical cables) and probe signal cables in the same conduits. Do not install the probe cables in the immediate vicinity of power devices (contactors, circuit breakers or similar);
- reduce the path of the probe cables as much as possible, and avoid spiral paths that enclose power devices;
- avoid touching or nearly touching the electronic components fitted on the boards to avoid electrostatic discharges (extremely damaging) from the operator to the components;
- do not secure the cables to the terminals by pressing the screwdriver with excessive force, to avoid damaging the controller: maximum tightening torque 0.22-0.25 N•m;
- for applications subject to considerable vibrations (1.5 mm pk- pk 10/55 Hz), secure the cables connected to the controller around 3 cm from the connectors using clamps;
- all the extra low voltage connections (analogue and digital inputs, analogue outputs, serial bus connections, power supplies) must have reinforced or double insulation from the mains network.

## 2.9 Connecting serial ports with two circuits

For serial connections (FBus and BMS ports), the cables used must be suitable for the RS485 standard (shielded twisted pair, see the specifications in the following table). The earth connection of the shield must be made using the shortest connection possible on the metal plate at the bottom of the electrical panel.

Master device	Serial port	Lmax (m)	Wire/wire capacitance (pF/m)	Resistance on first and last device	Max no. of slave devices on bus	Data rate (bit/s)
µChiller	FBus	10	<90	120 Ω	16	19200
PC (supervision)	BMS	500	<90	120 Ω	16	115200

Tab. 2.e

**🔔 Notice:** 120 Ω 1/4W terminating resistors on the first and last devices in the network must be used when the length exceeds 100 m.

For two-circuit units, the power supply connections must be in phase between the two controllers (G0 on the master controller and G0 on the slave controller connected to the same power supply wire); the serial connection between the two controllers (J5 FBus on the master and J4 BMS on the slave) must be made as shown in the figure (+ with + and - with -).

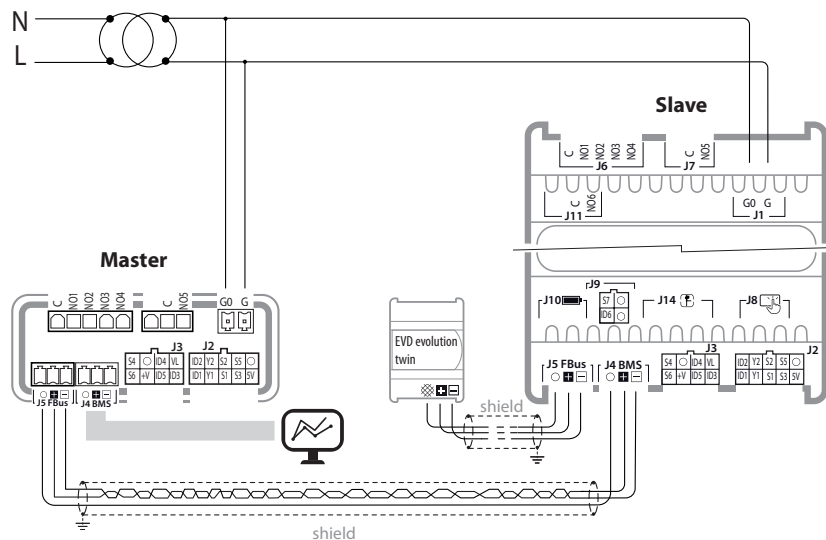


Fig. 2.p

## 2.10 Connection to Power+ (for BLDC)

For the serial connection between the controller and the Power+ speed drive, see the specific manual. Also see the following diagrams.

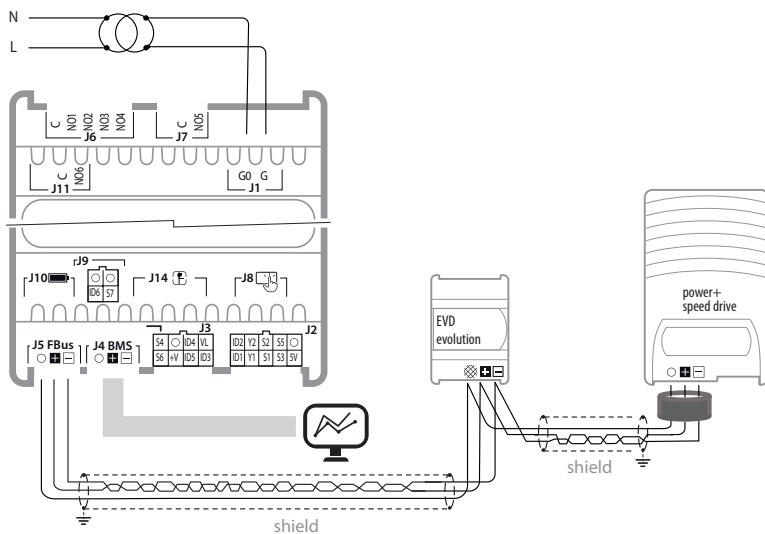


Fig. 2.q

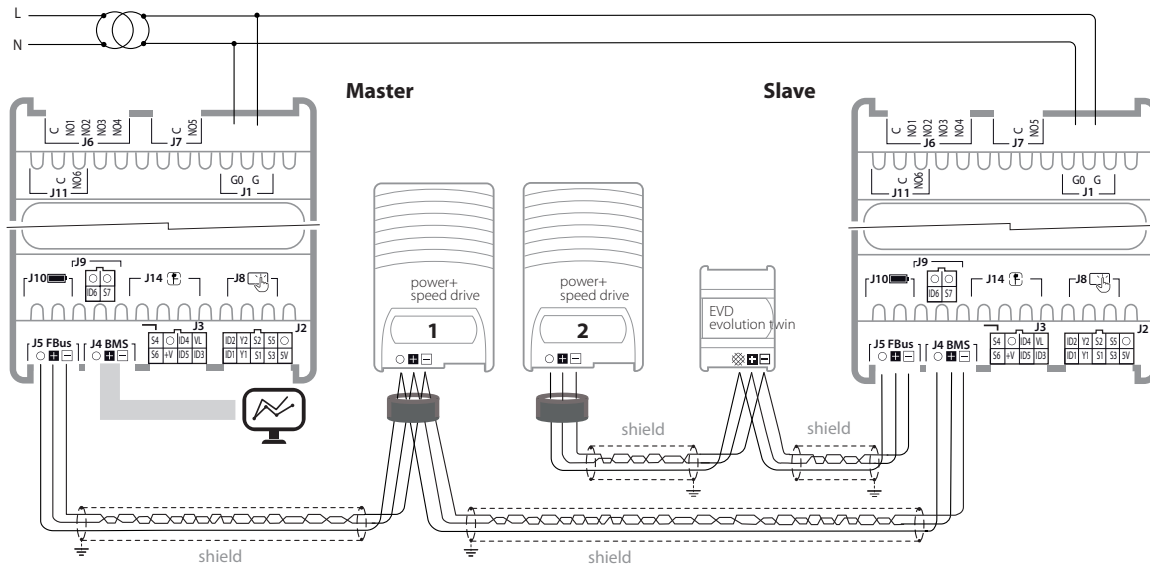


Fig. 2.r

**⚠ Notice:** if connecting Power+ (for BLDC) and EVD evolution, the connection parameters are not configurable, and must be set as shown in the table.

Device	Address	Network settings	Baudrate
Power+ speed drive 1	1	8 - NONE - 2	19200
Power+ speed drive 2	1	8 - NONE - 2	19200
EVD evolution	198	8 - NONE - 2	19200

Tab. 2.f

## 2.11 Positioning of probes/ components

Water-cooled unit

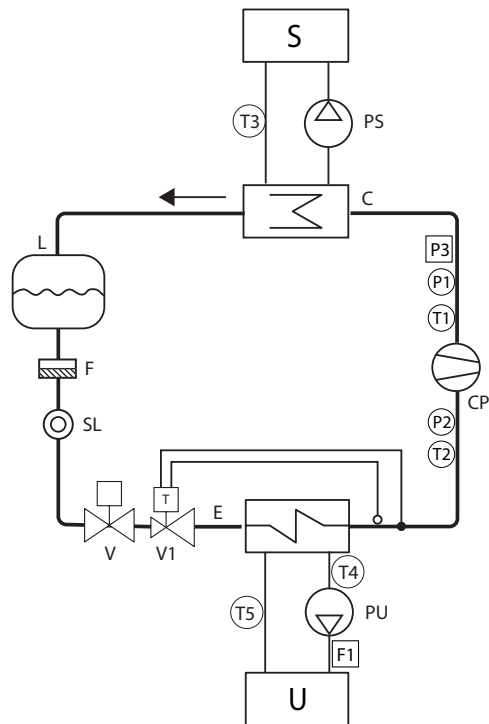


Fig. 2.s

Ref.	Description
S	Source
U	User
E	Evaporator
F	Filter-drier
L	Liquid receiver
CP	Compressor
C	Condenser
SL	Liquid sightglass
P1	Condensing pressure probe
V	Solenoid valve
V1	Thermostatic expansion valve

Air-cooled unit

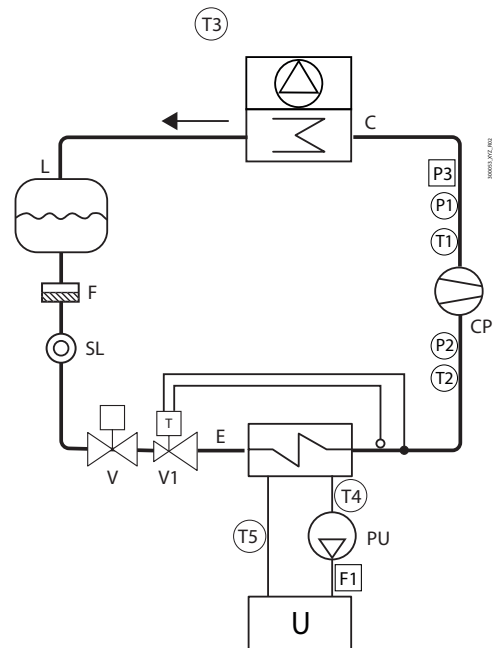


Fig. 2.t

Ref.	Description
PU	User pump
PS	Source pump
P2	Evaporation pressure probe
T1	Discharge temperature
T2	Suction temperature
P3	High pressure switch
T3	Outside air temperature
F1	User pump flow switch
T4	Water delivery temperature (to) user
T5	Water return temperature (from) user
T6	Water delivery temperature (to) source

Tab. 2.g

## 2.12 Input/output configuration

Information on how to configure the µChiller Legacy inputs and outputs to replace mCH2 and mCH2 SE is shown below.

Panel mounting model

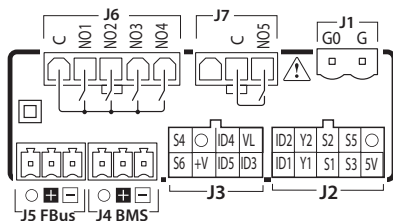


Fig. 2.u

DIN rail model (Basic)

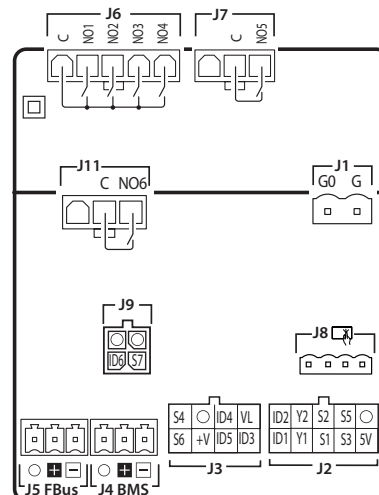


Fig. 2.v

## 2.12.1 Analogue inputs

The analogue inputs on  $\mu$ Chiller are divided into four groups, according to the type of probe connected. The groups and the list of parameters used to configure the different analogue inputs are shown below:

Group	Sensor	Master config. parameter	Slave config. parameter
GRP1	S1	HC31	HC41
	S2	HC32	HC42
	S3	HC00	HC43
GRP2	S4	HC34	HC44
	S5	HC35	HC45
GRP3	S6	HC03	HC05
GRP1*	S7*	HC04*	HC47

Tab. 2.h

(\*) available only on DIN version

The meanings assigned to the analogue inputs according to the various groups for the circuit 1 controller are as follows:

Value	GRP1	GRP2	GRP3
0	Not used	Not used	Not used
1	Source delivery water temp.	Source delivery water temp.	Source delivery water temp.
2	Outside temperature	Outside temperature	Outside temperature
3	Discharge temperature circuit 1	Discharge temperature circuit 1	Remote set point
4	Condensing temperature circ. 1	Condensing temperature circ. 1	Discharge temperature circuit 1
5	Suction temperature circ. 1	Suction temperature circ. 1	Condensing temperature circ. 1
6	Evaporation temperature circ. 1	Evaporation temperature circ. 1	Suction temperature circ. 1
7	System return water temperature	Condensing pressure circ. 1	Evaporation temperature circ. 1
8	System delivery water temp.	Evaporation pressure circ. 1	Condensing pressure circ. 1
9		System return water temperature	Evaporation pressure circ. 1
10		System delivery water temp.	System return water temperature
11			System delivery water temp.
12			Capacity request

Tab. 2.i

The meanings assigned to the analogue inputs according to the various groups for the circuit 2 controller are as follows:

Value	GRP1	GRP2	GRP3
0	Not used	Not used	Not used
1	Source delivery water temp.	Source delivery water temp.	Source delivery water temp.
2	Outside temperature	Outside temperature	Outside temperature
3	Discharge temperature circuit 2	Discharge temperature circuit 2	Remote set point
4	Condensing temperature circ. 2	Condensing temperature circ. 2	Discharge temperature circuit 2
5	Suction temperature circ. 2	Suction temperature circ. 2	Condensing temperature circ. 2
6	Evaporation temperature circ. 2	Evaporation temperature circ. 2	Suction temperature circ. 2
7	Common delivery water temperature	Condensing pressure circ. 2	Evaporation temperature circ. 2
8	Evap. water delivery temp. 2	Evaporation pressure circ. 2	Condensing pressure circ. 2
9		Common delivery water temperature	Evaporation pressure circ. 2
10		Evap. water delivery temp. 2	Common delivery water temperature
11			Evaporator 2 water outlet temperature
12			Capacity request

Tab. 2.j

## 2.12.2 Digital inputs

Below is the list of parameters used to configure the digital inputs:

Digital input	Master configuration parameter	Slave configuration parameter
ID1	HC14	HC16
ID2	HC15	HC17
ID3	High pressure switch circ. 1	High pressure switch circ. 2
ID4	HC06	HC09
ID5	HC07	HC10
ID6*	HC08*	HC11

Tab. 2.k

(\*) available only on DIN version

The digital input configuration parameters can have the following meaning:

Value	Master description (circuit 1)	Slave description (circuit 2)
0	Not used	Not used
1	User pump flow switch	User pump flow switch
2*	Comp. 1 thermal protector circ. 1	Comp. 1 thermal prot circ. 2
3*	Comp. 2 thermal protector circ. 1	Comp. 2 thermal prot. circ. 2
4	Remote on/off	Remote on/off
5	Cooling/heating	Cooling/heating
6	2nd set point	2nd set point

Value	Master description (circuit 1)	Slave description (circuit 2)
7	Remote alarm	Remote alarm
8	User pump 1 thermal protector	User pump 1 thermal protector
9	Low pressure switch circ. 1	Low pressure switch circ. 2
10	User pump 2 thermal protector	User pump 2 thermal protector
11**	Comp. 1 request circ. 1	Comp. 1 request circ. 2
12**	Comp. 2 request circ. 1	Comp. 2 request circ. 2
13	Source fan/pump overload	Source fan/pump overload

**Tab. 2.l**

(\*) In the Legacy model, compressor 1 thermal protector circ.1 and compressor 1 thermal protector circ. 2 are circuit 1 and circuit 2 thermal protector respectively. In the Legacy model, compressor 2 thermal protector circ.1 and compressor 2 thermal protector circ. 2 are not used.

(\*\*) available only for condensing units

### 2.12.3 Analogue outputs

Below is the list of parameters used to configure the analogue outputs:

Analogue output	Master configuration parameter	Slave configuration parameter
Y1	HC71	HC81
Y2	HC72	HC82

**Tab. 2.m**

The analogue input configuration parameters can have the following meaning:

Value	Master description (circuit 1)	Slave description (circuit 2)
0	Not used	Not used
1	On-off source fan/pump circ. 1	On-off source fan/pump circ. 2
2	Modulating source fan circ. 1	Modulating source fan circ. 2
3	Free cooling	Free cooling

**Tab. 2.n**

### 2.12.4 Digital outputs

Below is the list of parameters used to configure the digital outputs:

Digital input	Master configuration parameter	Slave configuration parameter
NO1	HC51	HC61
NO2	HC52	HC62
NO3	HC53	HC63
NO4	HC54	HC64
NO5	HC55	HC65
NO6*	HC56	HC66

**Tab. 2.o**

(\*) available only on DIN version

The digital output configuration parameters can have the following meaning:

Value	Master description (circuit 1)	Slave description (circuit 2)
0	Not used	Not used
1	Compressor1 circuit 1	Compressor1 circuit 2
2	Compressor 2 circuit 1	Compressor 2 circuit 2
3	User heater 1	User heater 2
4	User pump 1 / user fan	User pump 2
5	Source pump / fan	Source pump / fan
6	Frost protection heater evaporator 1	Frost protection heater evaporator 2
7	4-way valve circuit 1	4-way valve circuit 2
8	Oil equalisation valve circuit 1	Oil equalisation valve circuit 2
9	Freecooling valve	
10	General alarm	
11	User pump 2	
12	User heater 2	

**Tab. 2.p**

## 2.13 Functional diagrams

This chapter illustrates some examples of possible configurations for the types of units that can be controlled by uChiller. The configurations shown are examples only and are not a complete list of all possible combinations. As regards the type of sensors, the one shown in the configurations represents the default. However, other types of sensors can also be configured, such as the 4-20 mA active pressure sensor rather than the 0-5 V ratio-metric sensor. For detailed information on the I/O configuration parameters, see §3.3.2 I/O configuration.

### 2.13.1 Chillers, On/Off compressors and thermostatic expansion valve

**▲ Important:** The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

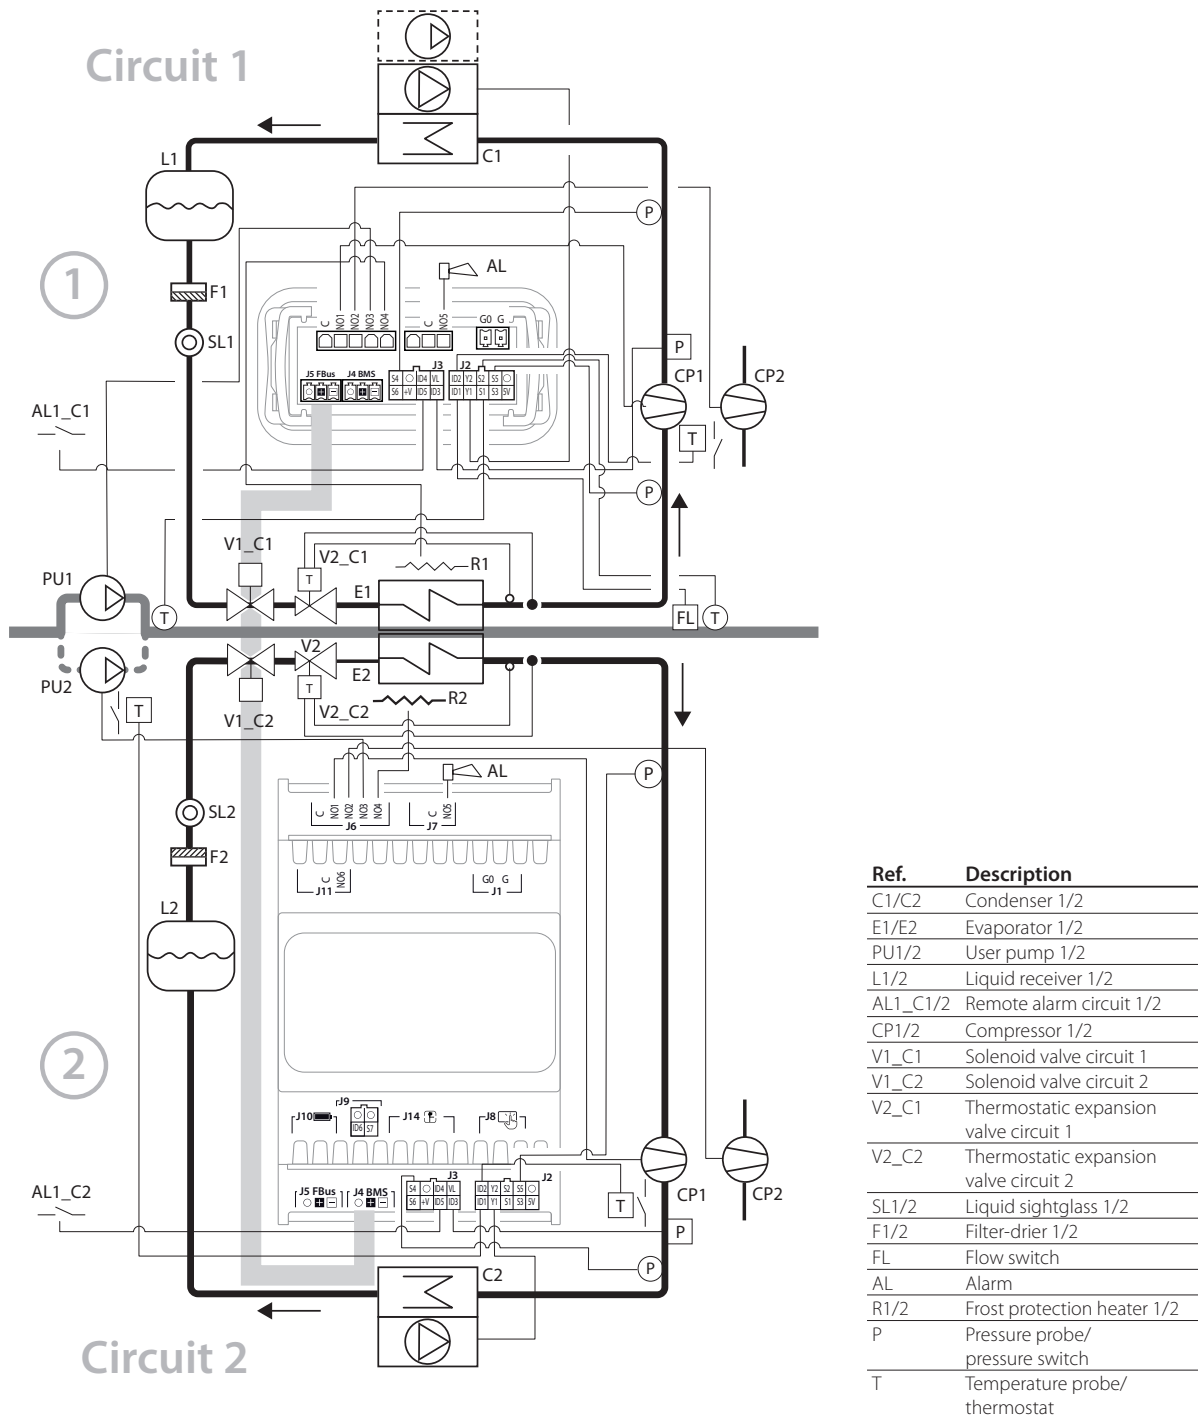


Fig. 2.w

Tab. 2.q

**Analogue inputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2	Delivery temperature to user	NTC	Hc32
S3	Not present	-	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027

Tab. 2.r

**Analogue inputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters
S1	Not present	-	Hc41
S2	Not present	-	Hc42
S3	Not present	-	Hc43
S4	Condensing pressure	0-5V	Hc44; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027

Tab. 2.s

☛ **Notice:** the discharge temperature probe is automatically assigned type NTC-HT.

**Digital inputs - Master circuit 1**

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061

Tab. 2.t

**Digital inputs - Slave circuit 2**

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not present	Hc09; C035; U059; U058; U062; U057; U061
ID5	Not present	Hc10;
ID6	Not present	Hc11

Tab. 2.u

**Digital outputs - Master circuit 1**

Ref.	Description	Configuration parameters
C-NO1	Compressor 1	Hc51; C036
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Frost protection heater (*)	Hc54; U066; S063; U065
C5-NO5	Alarm	Hc55; U064

Tab. 2.v

**Digital outputs - Slave circuit 2**

Ref.	Description	Configuration parameters
C-NO1	Compressor 1	Hc61; C036
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Frost protection heater (*)	Hc64; U066; S063; U065
C5-NO5	Not used	Hc65; U064
C6-NO6	Not used	Hc66

Tab. 2.w

☛ **Notice:** (\*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling (master only) => FC valve; otherwise => Frost protection heater.

**Analogue outputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	

Tab. 2.x

**Analogue outputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc81	FCS1*0
Y2	Not used	0-10V	Hc82	

Tab. 2.y

### 2.13.2 Chillers, On/Off compressors with free cooling and thermostatic expansion valve

**▲ Important:** The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

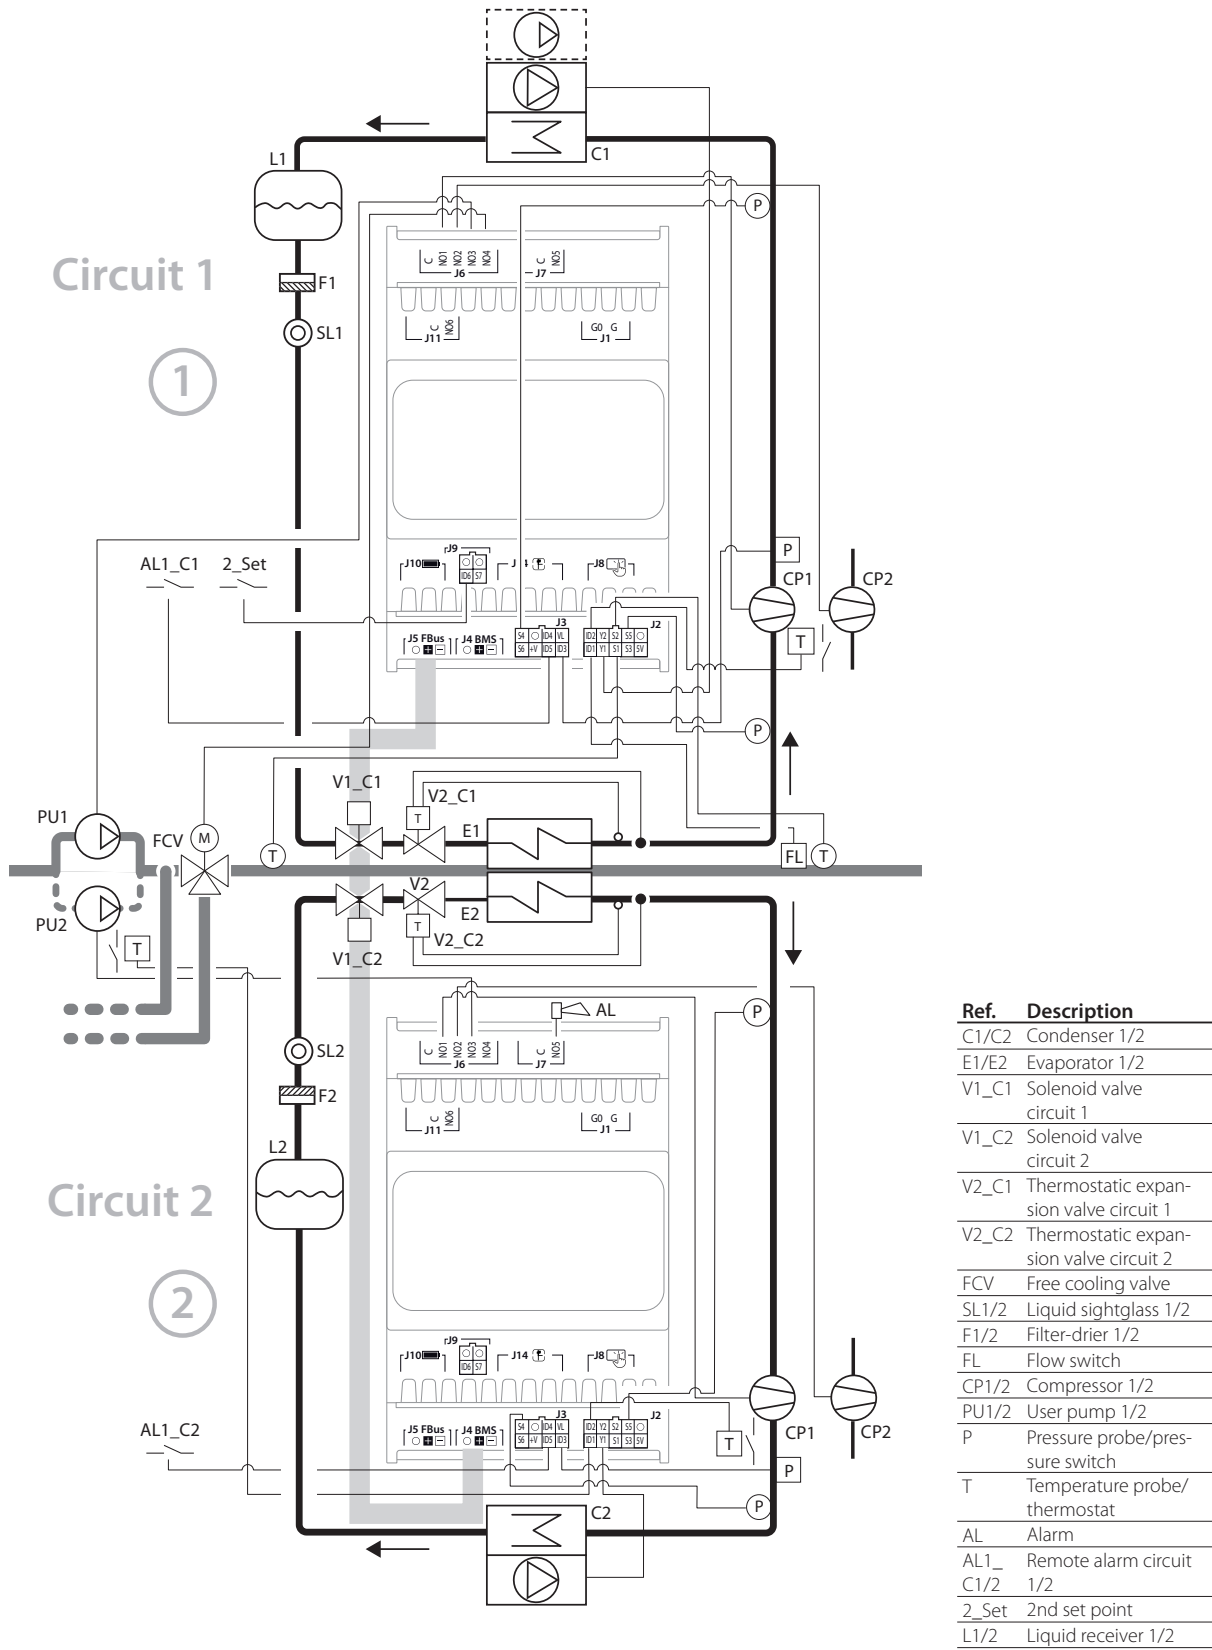


Fig. 2.x

Tab. 2.z



**Analogue inputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2	Delivery temperature to user	NTC	Hc32
S3	Not present	-	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027

Tab. 2.aa

**Analogue inputs - Slave circuit 1**

Ref.	Description	Type	Configuration parameters
S1	Not present	-	Hc41
S2	Not present	-	Hc42
S3	Not present	-	Hc43
S4	Condensing pressure	0-5V	Hc44; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027

Tab. 2.ab

**Notice:** the discharge temperature probe is automatically assigned type NTC-HT.

**Digital inputs - Master circuit 1**

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Not present	Hc07; C035; U059; U058; U062; U057; U061
ID6	Not present	Hc08; C035; U059; U058; U062; U057; U061

Tab. 2.ac

**Ingressi digitali - Slave circuito 2**

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not present	Hc09; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc10
ID6	Not present	Hc11

Tab. 2.ad

**Digital outputs - Master circuit 1**

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc51; C036
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Free cooling valve (*)	Hc54; U066; S063; U065
C5-NO5	Alarm	Hc55; U064
C6-NO6	Not used	Hc56

Tab. 2.ae

**Digital outputs - Slave circuit 2**

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc61; C036
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Not used	Hc64
C5-NO5	Alarm	Hc65
C6-NO6	Not used	Hc66

Tab. 2.af

**Notice:** (\*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling => FC valve; otherwise => Frost protection heater.

**Analogue outputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	

Tab. 2.ag

**Analogue outputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc81	FCS1*0
Y2	Not used	0-10V	Hc82	

Tab. 2.ah

### 2.13.3 Chillers/heat pumps, On/Off compressors and bipolar ExV expansion valve

**▲ Important:** The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

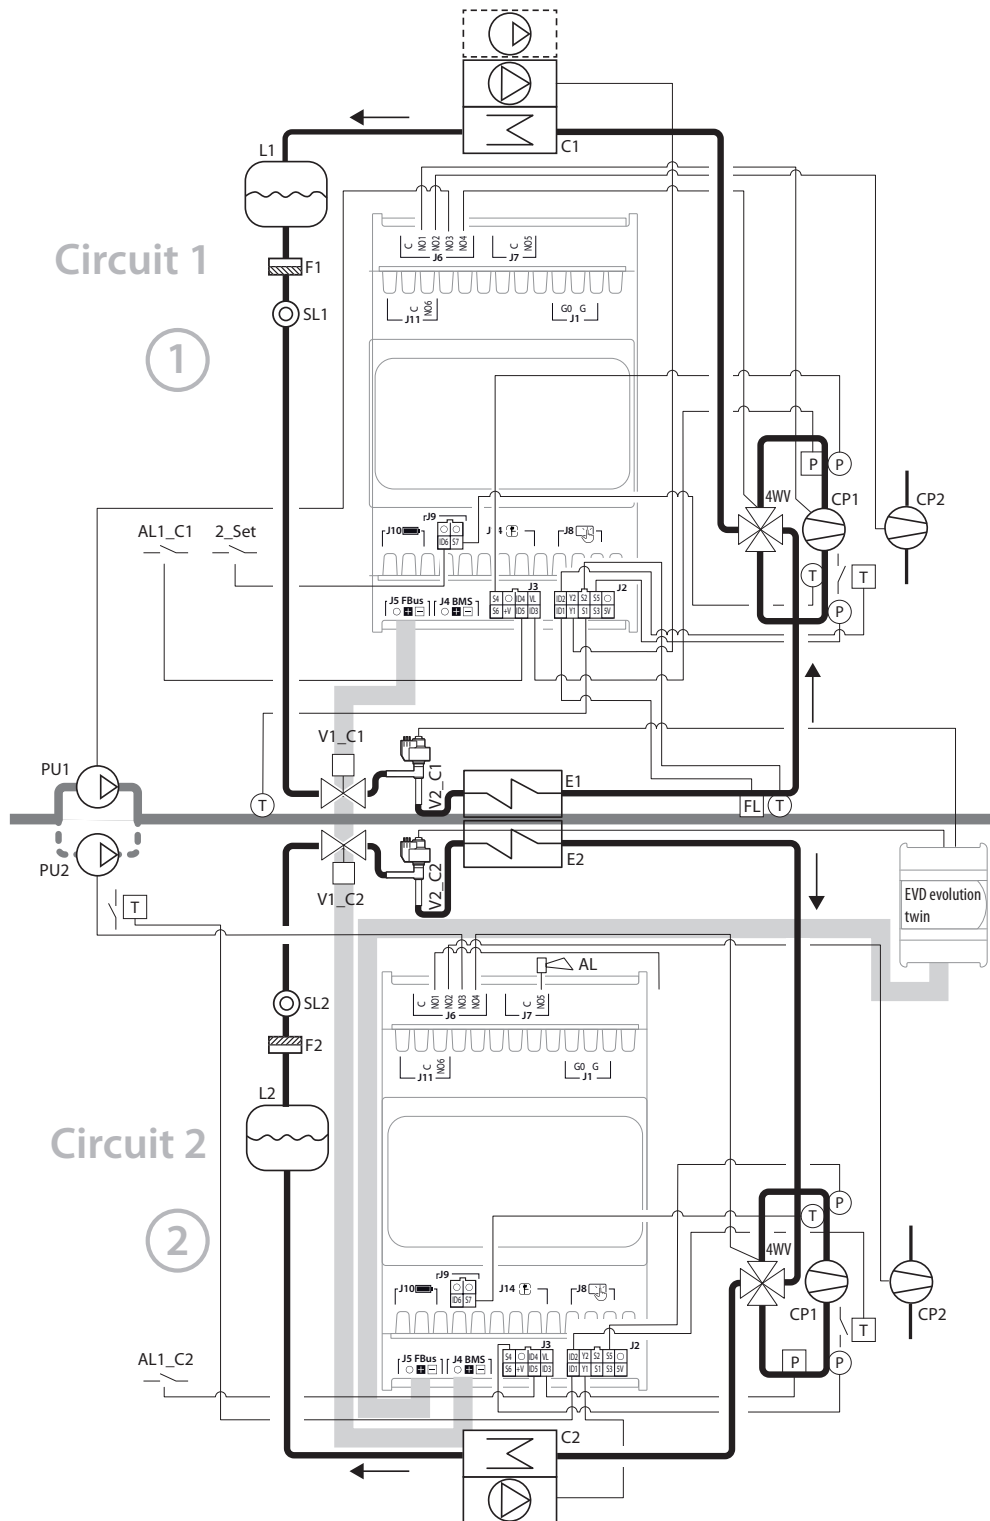


Fig. 2.y

Ref.	Description	Ref.	Description	Ref.	Description
C1/C2	Condenser 1/2	SL1/2	Liquid sightglass 1/2	4WW	Reversing valve
E1/E2	Evaporator 1/2	F1/2	Filter-drier 1/2	P	Pressure probe/pressure switch
V1_C1	Solenoid valve circuit 1	FL	Flow switch	AL	Alarm
V1_C2	Solenoid valve circuit 2	CP1/2	Compressor 1/2	T	Temperature probe/thermostat
V2_C1	Electronic expansion valve circuit 1	PU1/2	User pump 1/2	L1/2	Liquid receiver 1/2
V2_C2	Electronic expansion valve circuit 2	2_Set	2nd set point	AL1_C1/2	Remote alarm circuit 1/2

Tab. 2.ai

**Analogue inputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2	Delivery temperature to user	NTC	Hc32
S3	Not present	-	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; 041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027
S7	Suction temperature	NTC	Hc04

Tab. 2.aj

**Analogue inputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters
S1	Not present	-	Hc41
S2	Not present	-	-Hc42
S3	Not present	-	Hc43
S4	Condensing pressure	0-5V	Hc44; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027
S7	Suction temperature	NTC	Hc47

Tab. 2.ak

☛ **Notice:** the discharge temperature probe is automatically assigned type NTC-HT.

**Digital inputs - Master circuit 1**

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061
ID6	2nd set point	Hc08; C035; U059; U058; U062; U057; U061

Tab. 2.al

**Digital inputs - Slave circuit 2**

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not used	Hc09; C035; U059; U058; U062; U057; U061
ID5	Not used	Hc10; C035; U059; U058; U062; U057; U061
ID6	Not used	Hc11

Tab. 2.am

**Digital outputs - Master circuit 1**

Ref.	Description	Configuration param.
C-NO1	Compressor 1	Hc51; C036
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Reversing valve	Hc54; U066; S063; U065
C5-NO5	Alarm	Hc55; U064
C6-NO6	Not used	Hc56

Tab. 2.an

**Digital outputs - Slave circuit 2**

Ref.	Description	Configuration param.
C-NO1	Compressor 1	Hc61; C036
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Reversing valve	Hc64; U066; S063; U065
C5-NO5	Alarm	Hc65
C6-NO6	Not used	Hc66

Tab. 2.ao

☛ **Notice:** (\*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling => FC valve; otherwise => Frost protection heater.

**Analogue outputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	

Tab. 2.ap

**Analogue outputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc81	FCS1*0
Y2	Not used	0-10V	Hc82	

Tab. 2.aq

### 2.13.4 Chiller/water-to-water heat pump, On/Off compressors and bipolar ExV expansion valve

**▲ Important:** The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

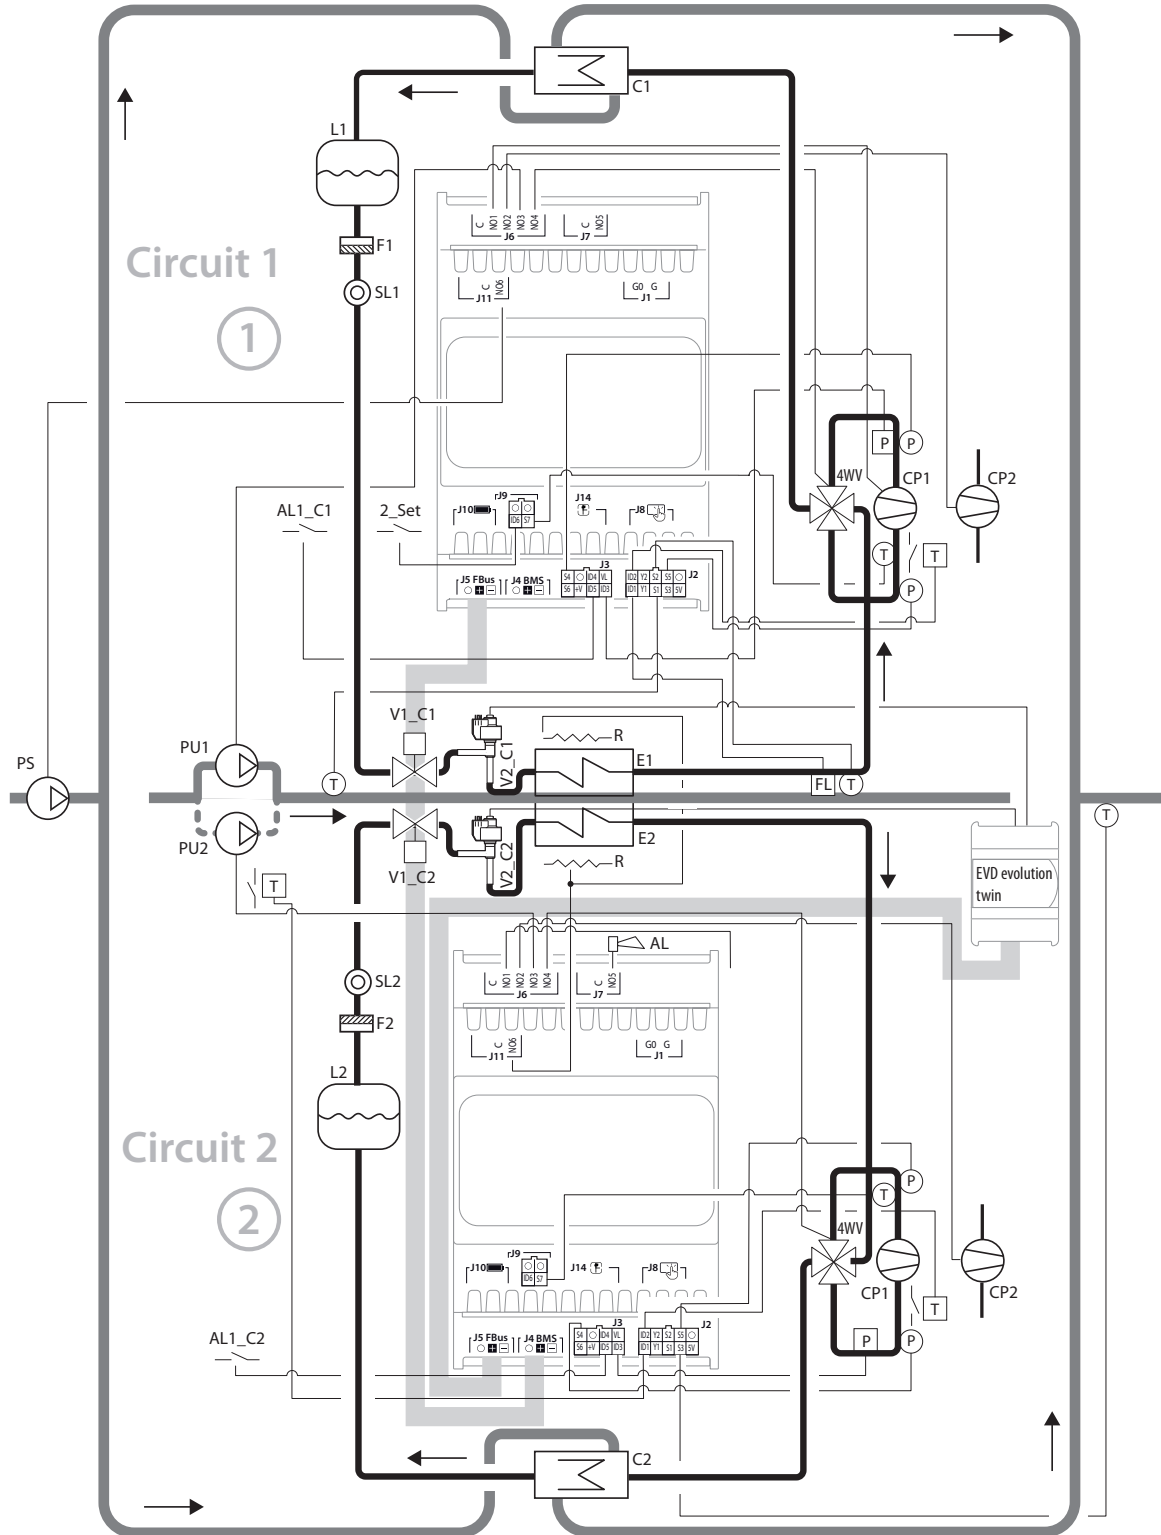


Fig. 2.z

Ref.	Description
C1/C2	Condenser 1/2
E1/E2	Evaporator 1/2
V1_C1	Solenoid valve circuit 1
V1_C2	Solenoid valve circuit 2
V2_C1	Electronic expansion valve circuit 1
V2_C2	Electronic expansion valve circuit 2
R1/2	Frost protection heater

Ref.	Description
SL1/2	Liquid sightglass 1/2
F1/2	Filter-drier 1/2
FL	Flow switch
CP1/2	Compressor 1/2
PU1/2	User pump 1/2
PS	Source pump
2_Set	2nd set point

Ref.	Description
4WV	Reversing valve
P	Pressure probe/pressure switch
AL	Alarm
T	Temperature probe/thermostat
L1/2	Liquid receiver 1/2
AL1_C1/2	Remote alarm circuit 1/2

Tab. 2.ar

**Analogue inputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2	Delivery temperature to user	NTC	Hc32
S3	Source water delivery temperature	NTC	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027
S7	Suction temperature	NTC	Hc04

Tab. 2.as

**Analogue inputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters
S1	Not present	-	Hc41
S2	Not present	-	Hc42
S3	Source water delivery temperature	NTC	Hc00
S4	Condensing pressure	0-5V	Hc44; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027
S7	Suction temperature	NTC	Hc47

Tab. 2.at

☛ **Notice:** the discharge temperature probe is automatically assigned type NTC-HT.

**Digital inputs - Master circuit 1**

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061
ID6	2nd set point	Hc08; C035; U059; U058; U062; U057; U061

Tab. 2.au

**Digital inputs - Slave circuit 2**

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not present	Hc09; C035; U059; U058; U062; U057; U061
ID5	Not present	Hc10; C035; U059; U058; U062; U057; U061
ID6	Not present	Hc11

Tab. 2.av

**Digital outputs - Master circuit 1**

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc51; C036
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Reversing valve	Hc54; U066; S063; U065
C5-NO5	Alarm	Hc55; U064
C6-NO6	Source water pump	Hc56;

Tab. 2.aw

**Digital outputs - Slave circuit 2**

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc61; C036
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Reversing valve	Hc64; U066; S063; U065
C5-NO5	Alarm	Hc65
C6-NO6	Frost protection heater	Hc66

Tab. 2.ax

☛ **Notice:** (\*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling => FC valve; otherwise => Frost protection heater.

**Analogue outputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters	Notes
Y1	On-Off source pump (panel model)	0-10V	Hc71	--
Y2	Not used	0-10V	Hc72	

Tab. 2.ay


**Analogue outputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Not used	0-10V	Hc81	--
Y2	Not used	0-10V	Hc82	

Tab. 2.az

### 2.13.5 Chillers, On/Off compressors and unipolar ExV expansion valve

**▲ Important:** The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

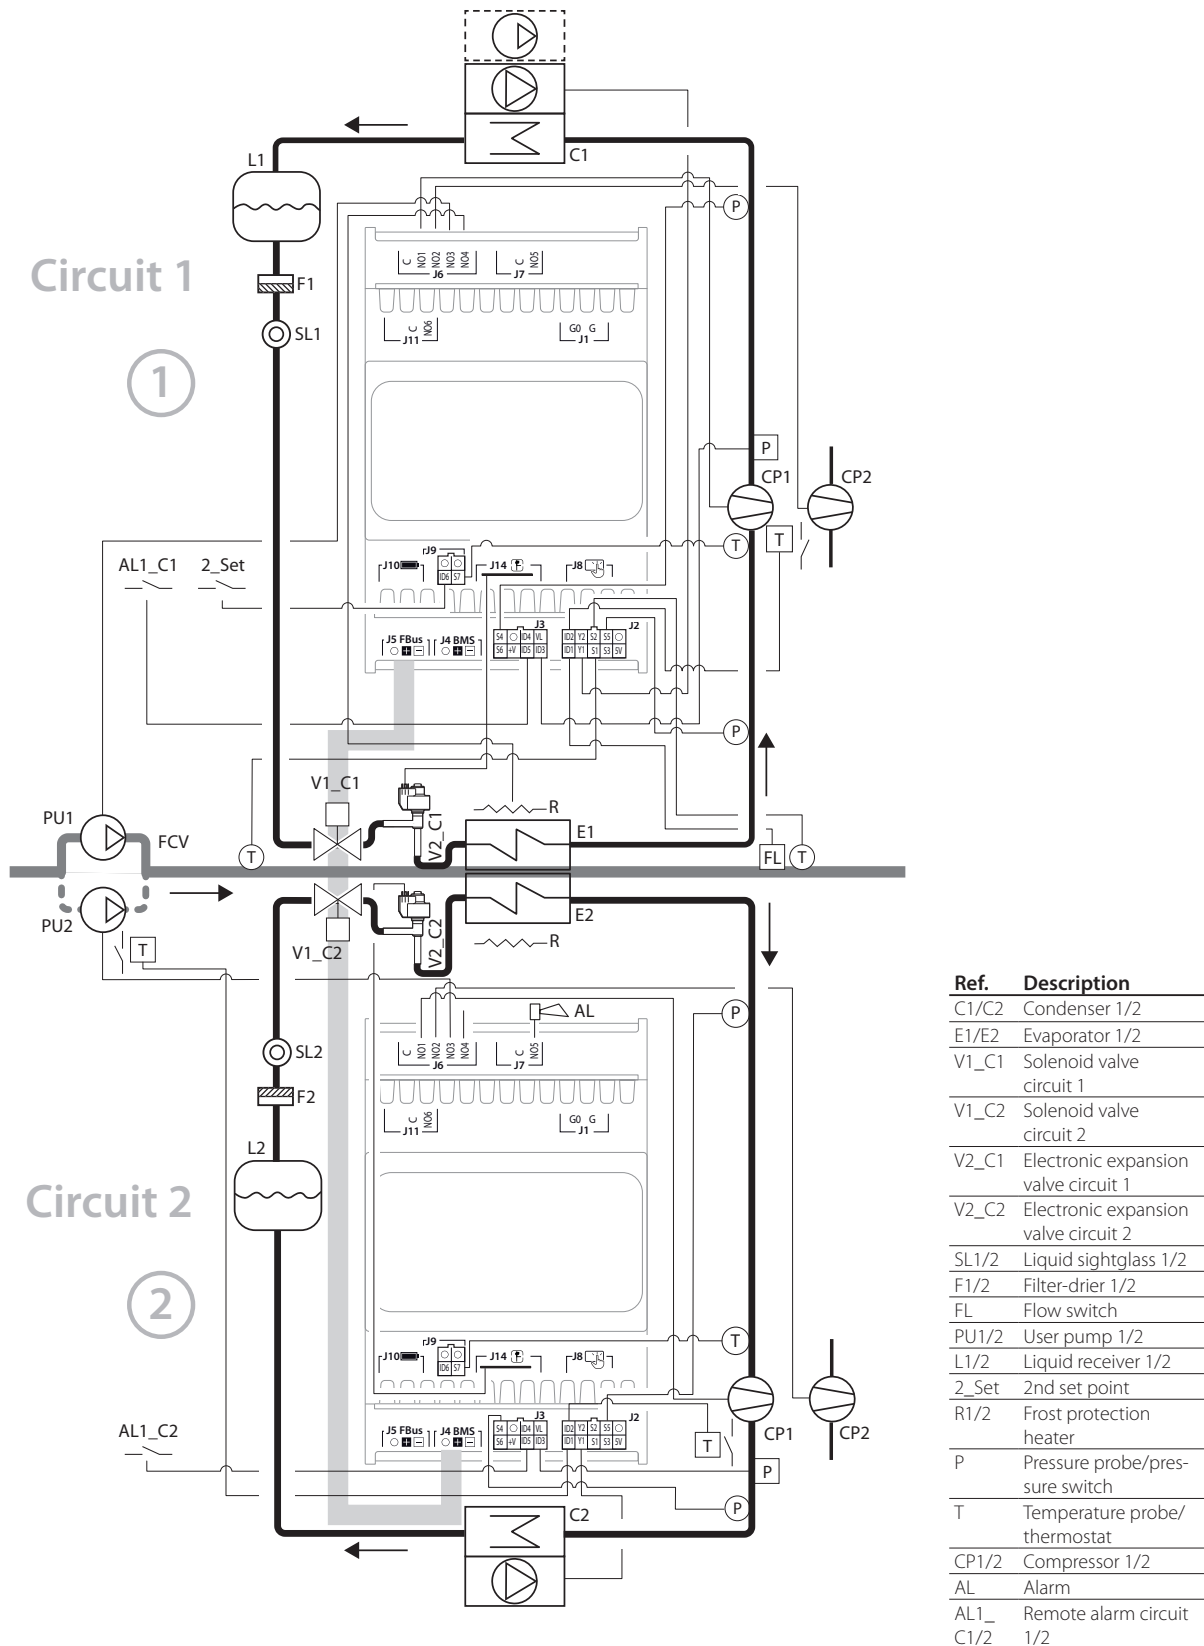

Ref.	Description
C1/C2	Condenser 1/2
E1/E2	Evaporator 1/2
V1_C1	Solenoid valve circuit 1
V1_C2	Solenoid valve circuit 2
V2_C1	Electronic expansion valve circuit 1
V2_C2	Electronic expansion valve circuit 2
SL1/2	Liquid sightglass 1/2
F1/2	Filter-drier 1/2
FL	Flow switch
PU1/2	User pump 1/2
L1/2	Liquid receiver 1/2
2_Set	2nd set point
R1/2	Frost protection heater
P	Pressure probe/pressure switch
T	Temperature probe/thermostat
CP1/2	Compressor 1/2
AL	Alarm
AL1_	Remote alarm circuit
C1/2	1/2

Fig. 2.aa

Tab. 2.ba

**Analogue inputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2	Delivery temperature to user	NTC	Hc32
S3	Not present	-	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; 041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027
S7	Suction temperature	NTC	Hc04

Tab. 2.bb

**Analogue inputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters
S1	Not present	-	Hc41
S2	Not present	-	Hc42
S3	Not present	-	Hc00
S4	Condensing pressure	0-5V	Hc44; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027
S7	Suction temperature	NTC	Hc47

Tab. 2.bc

☛ **Notice:** the discharge temperature probe is automatically assigned type NTC-HT.

**Digital inputs - Master circuit 1**

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061
ID6	2nd set point	Hc08; C035; U059; U058; U062; U057; U061

Tab. 2.bd

**Digital inputs - Slave circuit 2**

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not present	Hc09; C035; U059; U058; U062; U057; U061
ID5	Not present	Hc10; C035; U059; U058; U062; U057; U061
ID6	Not present	Hc11

Tab. 2.be

**Digital outputs - Master circuit 1**

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc51; C036
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Frost protection heater (*)	Hc54; U066; S063; U065
C5-NO5	Alarm	Hc55; U064
C5-NO6	Not used	Hc56

Tab. 2.bf

**Digital outputs - Slave circuit 2**

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc61; C036
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Frost protection heater (*)	Hc64; U066; S063; U065
C5-NO5	Alarm	Hc65; U064
C6-NO6	Not used	Hc66

Tab. 2.bg

☛ **Notice:** (\*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling (master only) => FC valve; otherwise => Frost protection heater.

**Analogue outputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	

Tab. 2.bh

**Analogue outputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc81	FCS1*0
Y2	Not used	0-10V	Hc82	

Tab. 2.bi

### 2.13.6 Chillers/heat pumps, BLDC+On/Off compressors and bipolar ExV expansion valve

**▲ Important:** The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

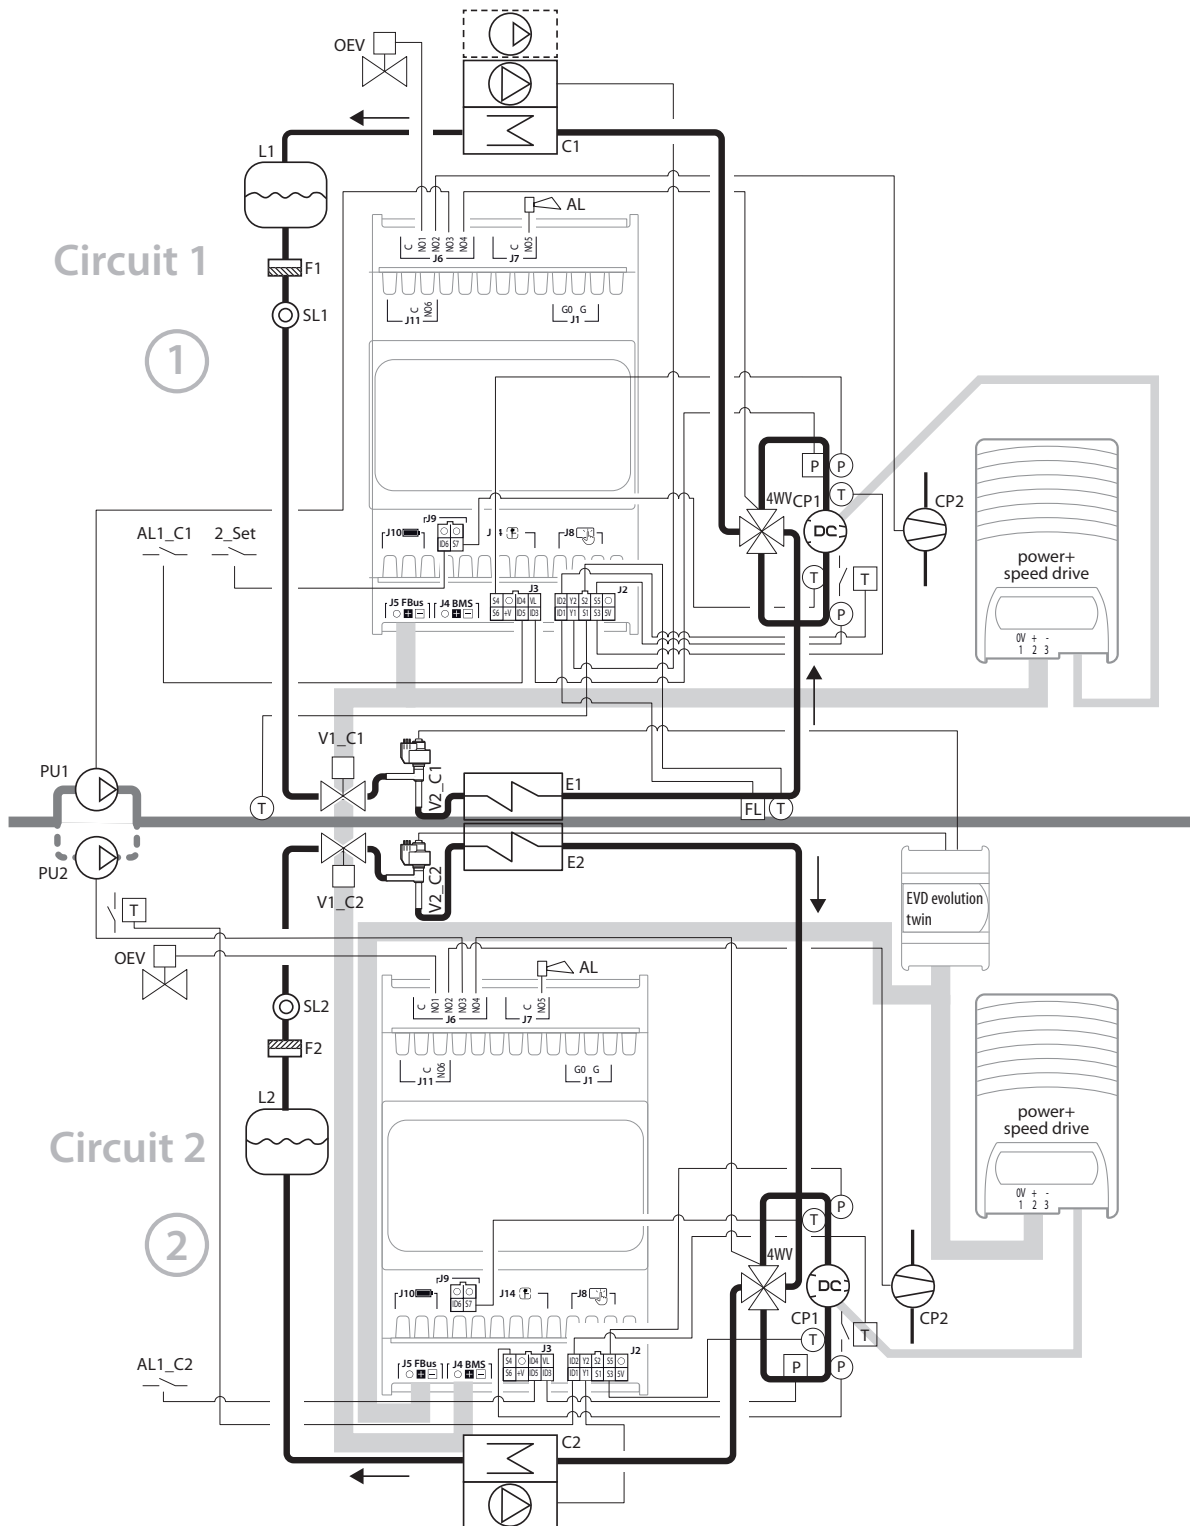


Fig. 2.ab

Ref.	Description	Ref.	Description	Ref.	Description
V1_C1	Solenoid valve circuit 1	PU1/2	User pump 1/2	SL1/2	Liquid sightglass 1/2
V1_C2	Solenoid valve circuit 2	AL1_C1/2	Remote alarm circuit 1/2	CP1/2	Compressor 1/2
V2_C1	Electronic expansion valve circuit 1	F1/2	Filter-drier 1/2	AL	Alarm
V2_C2	Electronic expansion valve circuit 2	L1/2	Liquid receiver 1/2	OEV	Oil equalis. valve
P	Pressure probe/pressure switch	C1/C2	Condenser 1/2	2_Set	2nd set point
T	Temperature probe/thermostat	E1/E2	Evaporator 1/2	FL	Flow switch
4WV	Reversing valve				

Tab. 2.bj



**Analogue inputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2	Delivery temperature to user	NTC	Hc32
S3	Discharge temperature	-	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; 041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027
S7	Suction temperature	NTC	Hc04

Tab. 2.bk

**Notice:** the discharge temperature probe is automatically assigned type NTC-HT.

**Analogue inputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters
S1	Not present	NTC	Hc41
S2	Not present	NTC	Hc42
S3	Discharge temperature	-	Hc00
S4	Condensing pressure	0-5V	Hc44; C040; 041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027
S7	Suction temperature	NTC	Hc47

Tab. 2.bl

**Digital inputs - Master circuit 1**

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061
ID6	2nd set point	Hc08; C035; U059; U058; U062; U057; U061

Tab. 2.bm

**Digital inputs - Slave circuit 2**

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not present	Hc09; C035; U059; U058; U062; U057; U061
ID5	Not present	Hc10; C035; U059; U058; U062; U057; U061
ID6	Not present	Hc11

Tab. 2.bn

**Digital outputs - Master circuit 1**

Ref.	Description	Configuration parameters
C-NO1	Oil equalisation valve (tandem compressors only)	Hc51; P017
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Reversing valve (*)	Hc54; U066; S063; U065
C-NO5	Alarm	Hc55; U064
C-NO6	Frost protection heater	Hc56;

Tab. 2.bo

**Digital outputs - Slave circuit 2**

Ref.	Description	Configuration parameters
C-NO1	Oil equalisation valve (tandem compressors only)	Hc61; P017
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Reversing valve (*)	Hc64; U066; S063; U065
C-NO5	Alarm	Hc65
C-NO6	Frost protection heater	Hc66;

Tab. 2.bp

**Notices:**

- BLDC compressor driven by Power+ speed drive.
- (\*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling (master only) => FC valve; otherwise => Frost protection heater.

**Analogue outputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	

Tab. 2.bq

**Analogue outputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc81	FCS1*0
Y2	Not used	0-10V	Hc82	

Tab. 2.br

### 2.13.7 Unit with reversal on the hydronic circuit

**▲ Important:** The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

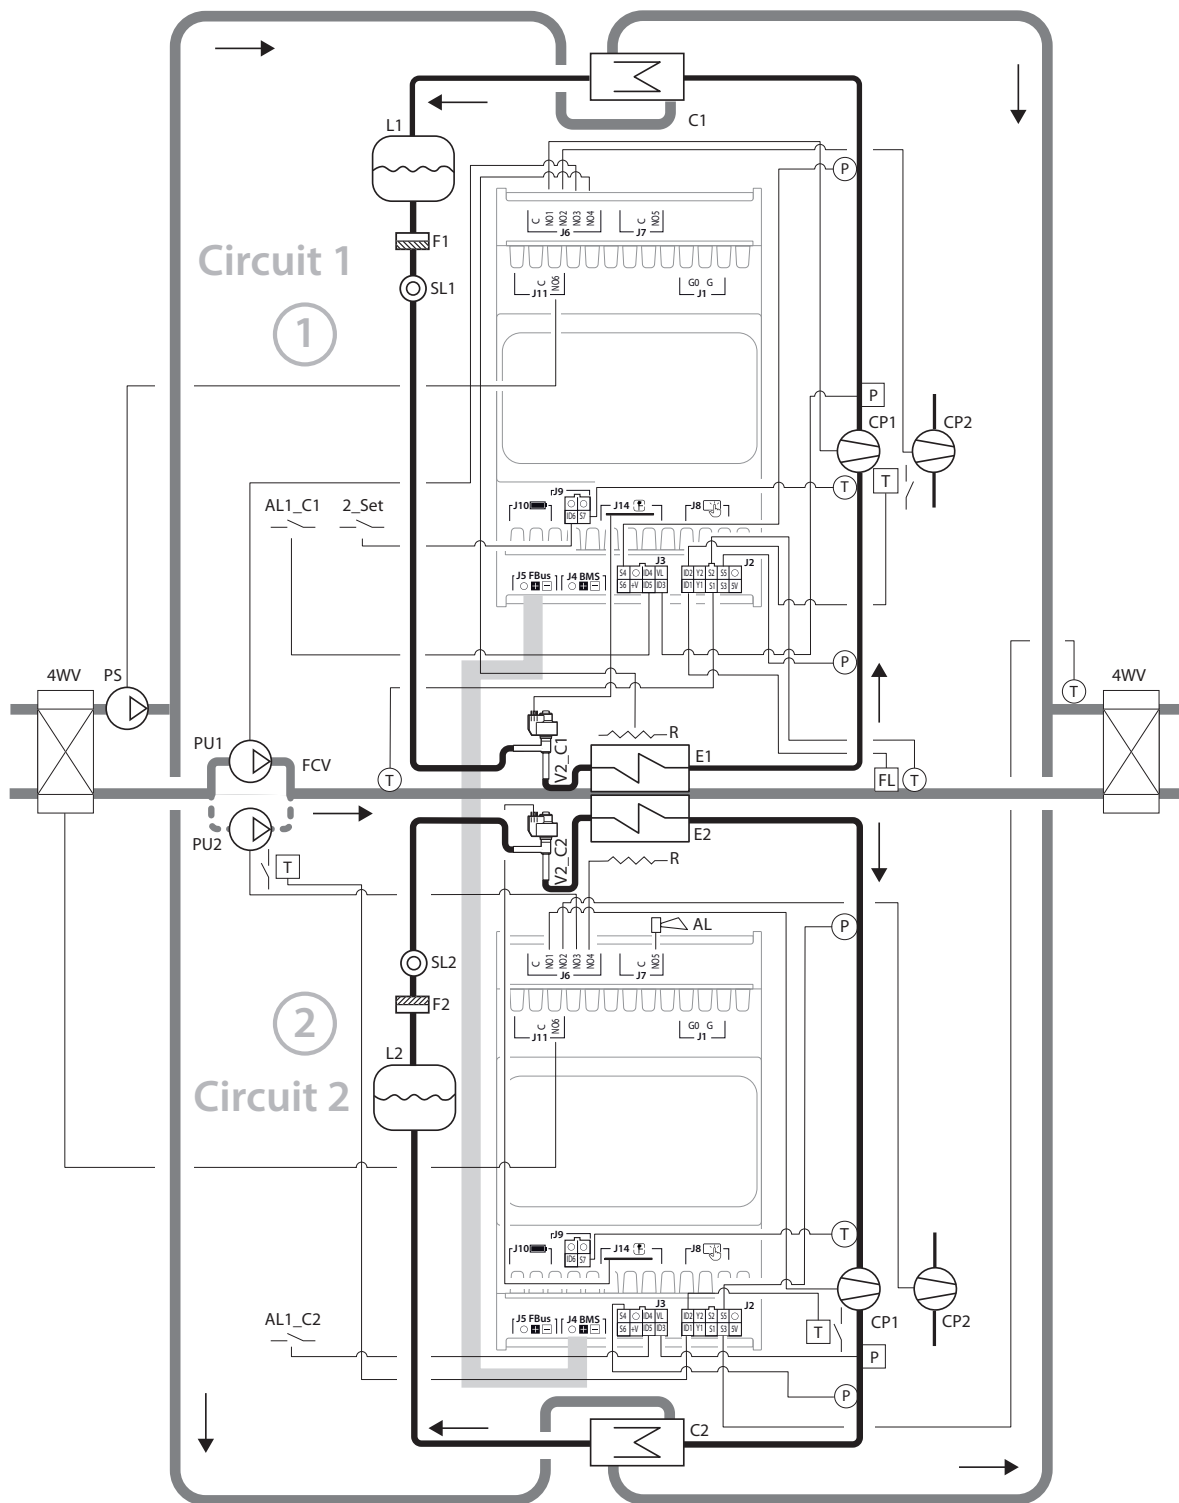


Fig. 2.a

Ref.	Description
C1/C2	Condenser 1/2
E1/E2	Evaporator 1/2
V1_C1	Solenoid valve circuit 1
V1_C2	Solenoid valve circuit 2
V2_C1	Electronic expansion valve circuit 1
V2_C2	Electronic expansion valve circuit 2

Ref.	Description
SL1/2	Liquid sightglass 1/2
F1/2	Filter-drier 1/2
FL	Flow switch
PU1/2	User pump 1/2
PS	Source pump
2_Set	2nd set point

Ref.	Description
4WV	Reversing valve
P	Pressure probe/pressure switch
AL	Alarm
T	Temperature probe/thermostat
L1/2	Liquid receiver 1/2
AL1_C1/2	Remote alarm circuit 1/2

Tab. 2.bs

**Analogue inputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2	Delivery temperature to user	NTC	Hc32
S3	Source water delivery temperature	NTC	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027
S7	Suction temperature	NTC	Hc04

Tab. 2.bt

**Analogue inputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters
S1	Not present	-	Hc41
S2	Not present	-	Hc42
S3	Source water temperature	NTC	Hc00
S4	Condensing pressure	0-5V	Hc44; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027
S7	Suction temperature	NTC	Hc47

Tab. 2.bu

**Notice:** the discharge temperature probe is automatically assigned type NTC-HT.

**Digital inputs - Master circuit 1**

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061
ID6	2nd set point	Hc08; C035; U059; U058; U062; U057; U061

Tab. 2.bv

**Digital inputs - Slave circuit 2**

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not present	Hc09; C035; U059; U058; U062; U057; U061
ID5	Not present	Hc10; C035; U059; U058; U062; U057; U061
ID6	Not present	Hc11

Tab. 2.bw

**Digital outputs - Master circuit 1**

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc51; C036
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Reversing valve	Hc54; U066; S063; U065
C5-NO5	Alarm	Hc55; U064
C6-NO6	Source water pump	Hc56; Hc12

Tab. 2.bx

**Digital outputs - Slave circuit 2**

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc61; C036
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Reversing valve	Hc64; U066; S063; U065
C5-NO5	Alarm	Hc65
C6-NO6	Reversing valve	Hc66

Tab. 2.by

**Notice:** (\*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling => FC valve; otherwise => Frost protection heater.

**Analogue outputs - Master circuit 1**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Not used	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	

Tab. 2.bz

**Analogue outputs - Slave circuit 2**

Ref.	Description	Type	Configuration parameters	Notes
Y1	Not used	0-10V	Hc81	FCS1*0
Y2	Not used	0-10V	Hc82	

Tab. 2.ca

### 2.13.8 Chillers/heat pumps, BLDC+On/Off compressors and bipolar ExV expansion valve

**▲ Important:** The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

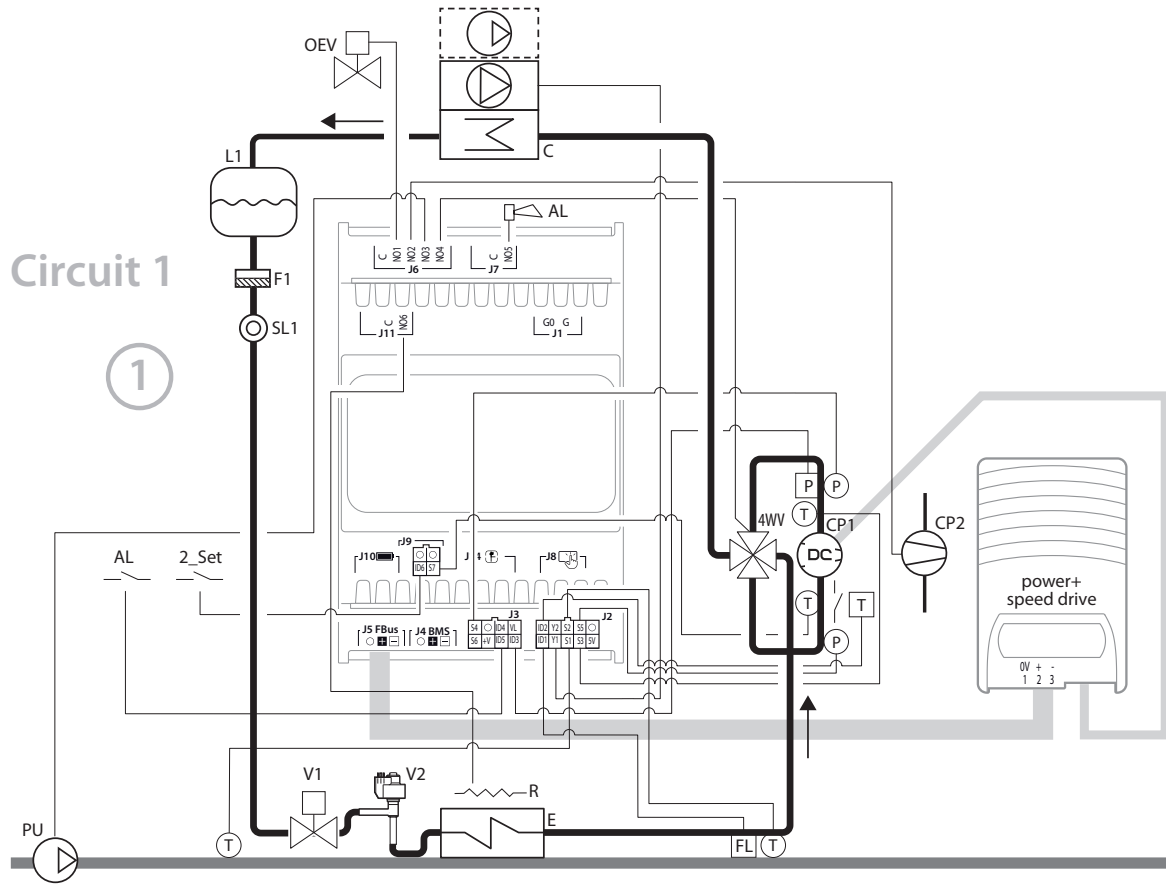


Fig. 2.ac

Ref.	Description	Ref.	Description	Ref.	Description
E	Evaporator	P	Pressure probe/pressure switch	CP1/2	Compressor 1/2
4WV	4-way reversing valve	C	Condenser	FL	Flow switch
V1	Solenoid valve	PU	User pump	L	Liquid receiver
V2	Electronic expansion valve	SL	Liquid sightglass	AL	Alarm
T	Temperature probe/thermostat	2_Set	2nd set point	AL1	Remote alarm
OEV	Oil equalisation valve	F1	Filter-drier		

Tab. 2.cb

#### Analogue inputs

Ref.	Description	Type	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2	Delivery temperature to user	NTC	-Hc32
S3	Discharge temperature	-	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; 041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027
S7	Suction temperature	NTC	Hc04

Tab. 2.cc

**ⓘ Notice:** the discharge temperature probe is automatically assigned type NTC-HT.

#### Digital inputs

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061
ID6	2nd set point	HC08; C035; U059; U058; U062; U057; U061

Tab. 2.cd

**Digital outputs**

<b>Ref.</b>	<b>Description</b>	<b>Configuration parameters</b>
C-NO1	Oil equalisation valve (tandem compressors only)	Hc51; P017
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Reversing valve (*)	Hc54; U066; S063; U065
C-NO5	Alarm	Hc55; U064
C-NO6	Frost protection heater	Hc56

Tab. 2.ce

**Analogue outputs**

<b>Ref.</b>	<b>Description</b>	<b>Type</b>	<b>Configuration parameters</b>	<b>Notes</b>
Y1	Modulating/On-Off fan	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	

Tab. 2.cf

## 3. INITIAL CONFIGURATION

The  $\mu$ Chiller user terminal contains a subset of the available control and configuration parameters (see par 4.2).

Consequently, the user terminal cannot be used to configure  $\mu$ Chiller.

This is done using Applica, an application that is available in two formats:

- Applica mobile (see par 3.1 APPLICA app)
- Applica desktop (see par 3.4 Applica Desktop)

Applica can connect to  $\mu$ Chiller and access the complete list of configuration parameters.

### 3.1 APPLICA app

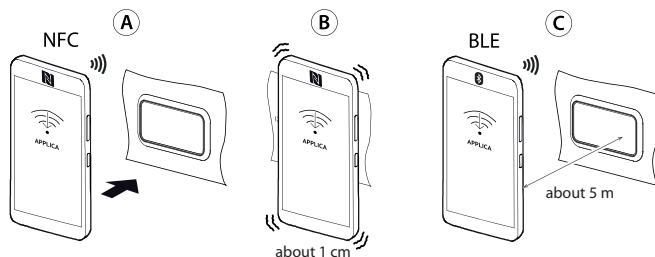


Fig. 3.a

The “Applica” app can be used to configure the controller from a mobile device (smartphone, tablet), via NFC (Near Field Communication) and Bluetooth (BLE). Users can both configure the commissioning parameters and set groups of preset parameters according to specific needs (recipes).

Once the Carel “Applica” app has been installed and opened (see the paragraph “Mobile device”, proceed as follows:

1. For NFC devices, move (A) the mobile device near to the  $\mu$ Chiller user terminal (the position of the NFC antenna on the mobile device must be identified in order to place it over the display): wait for the signal that the device has been read (B).
2. For Bluetooth devices (C), select the “SCAN BLUETOOTH” option, then choose the device from the list.


**Notice:** NFC devices use a “retain” (persistent memory) counter, while Bluetooth devices use a RAM (volatile) memory counter. The former is updated every 5 hours, the second every hour.

### 3.2 Configuration procedure


#### 3.2.1 Step 1 - Set the refrigerant

Standard, Enhanced and Legacy models

1. With Bluetooth devices, access the Service menu by clicking the icon at the bottom right (figure). With NFC devices, the Service menu is already displayed by default (figure below);

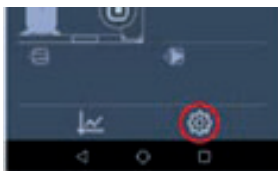

2. click “Set-up”--> “Configurations” --> “Defaults” (figure);
3. select the refrigerant used in the unit;

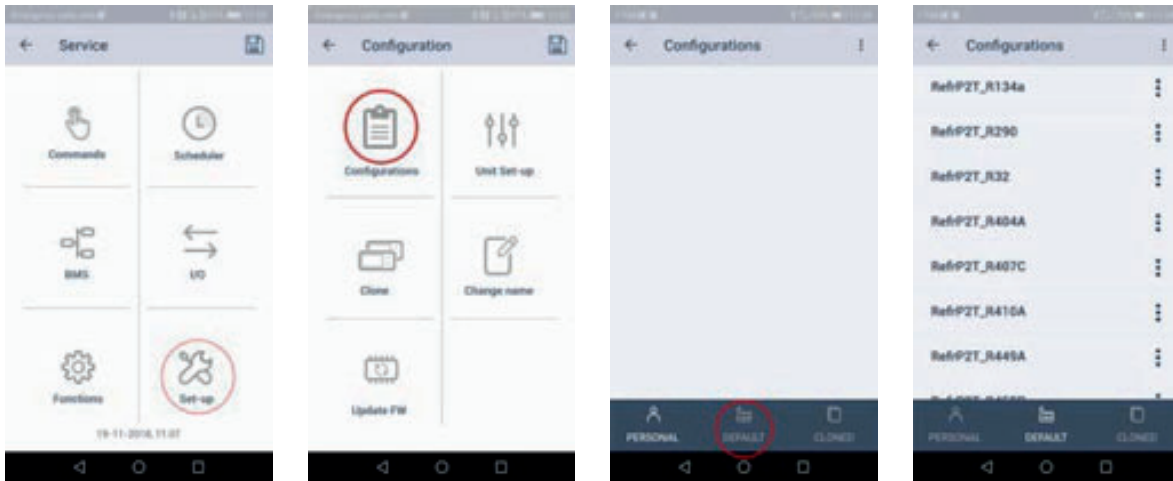

4. apply the selected configuration via NFC or Bluetooth. The refrigerant has now been correctly configured.


### High Efficiency model

1. With Bluetooth devices, access the Service menu by clicking the icon at the bottom right (figure). With NFC devices, the Service menu is already displayed by default (figure below);



Fig. 3.b


2. click "Set-up"-->"Configurations"-->"Defaults" (figure);
3. select the "BLDC Compressors" folder and then the compressor used on the unit;

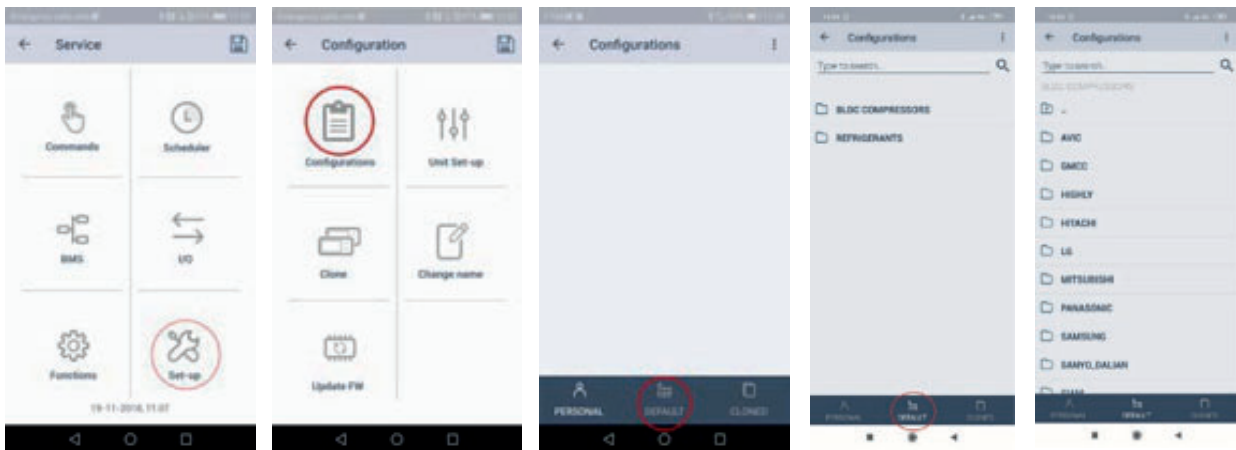

4. apply the selected configuration via NFC or Bluetooth. The refrigerant has now been correctly configured.

### 3.2.2 Step 2 - Configure the unit


1. continue configuring the unit by clicking the "Set-up"--> "Unit setup"--> "Unit configuration". Complete the unit configuration by pressing the PREV / NEXT buttons to scroll through all of the configuration parameter pages;

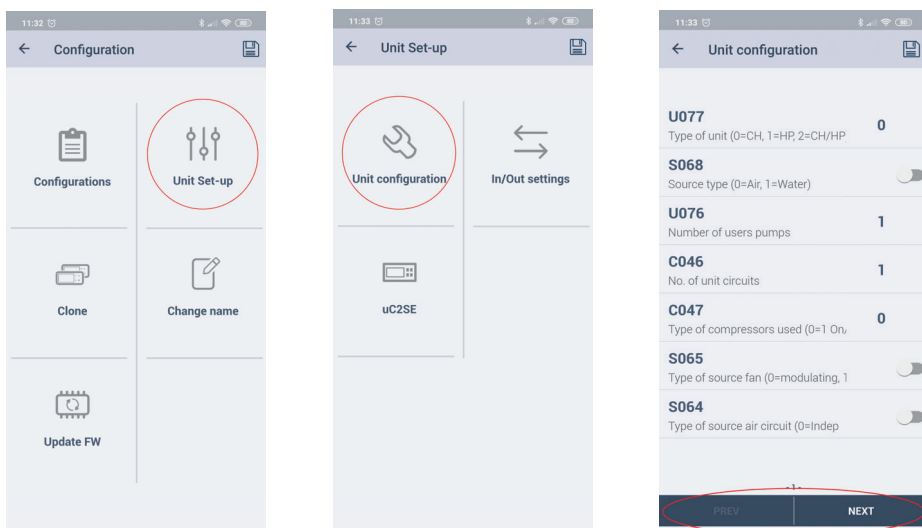

2. apply the parameters configured via NFC / Bluetooth to the controller.

### 3.2.3 Step 3 - Configure the inputs/outputs

1. click "Set-up"--> "Unit setup"--> "IO configuration". Complete the unit configuration by pressing the PREV / NEXT buttons to scroll through all of the configuration parameter pages;

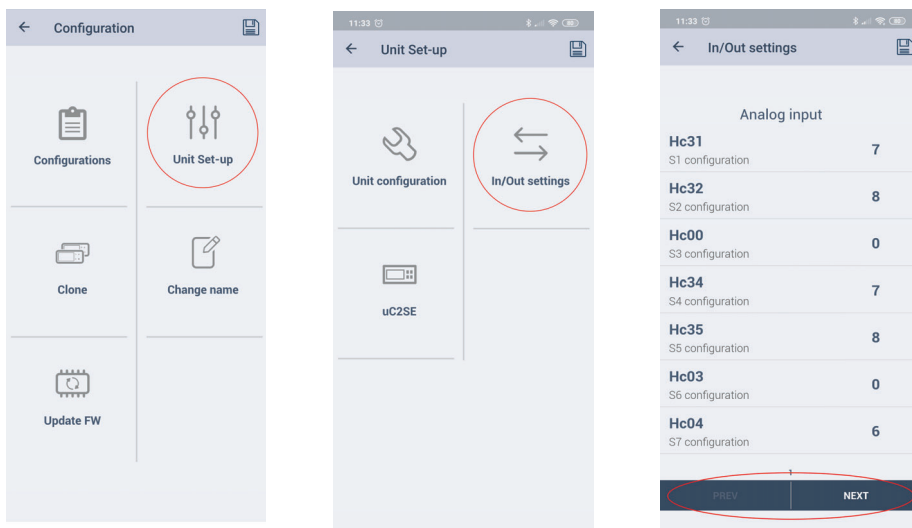


2. apply the parameters configured via NFC / Bluetooth to the controller



### 3.2.4 Step 4 - Check probe values


The correct overall configuration of the inputs/outputs can be checked by reading the values in real time, via a specific menu. The path is "Homepage" → "Service Area" → "I/O" → "In/Out value"

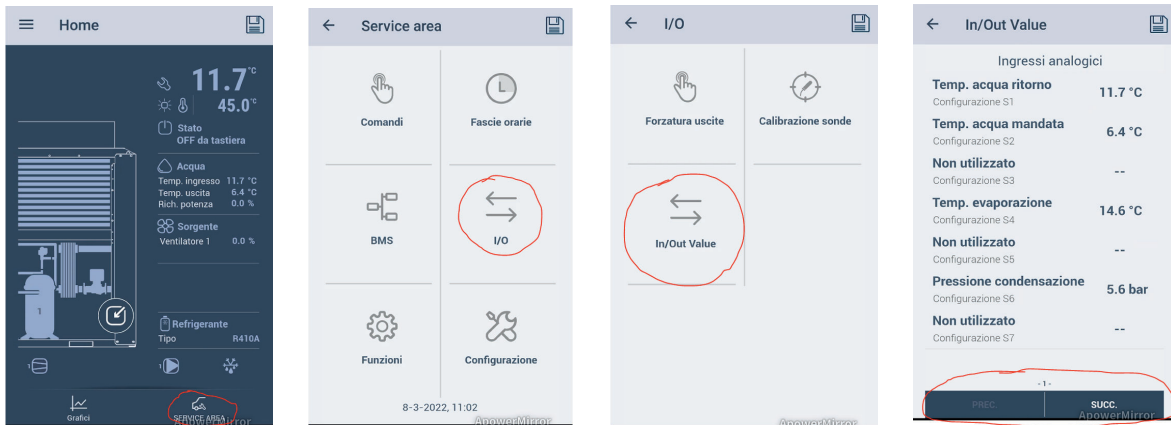

Navigate the pages using the PREV/NEXT buttons to view all the input and output values for both circuit 1 and circuit 2. This feature is only available via Applica Bluetooth.

### 3.2.5 Step 5 – Configure parameter compatibility with mCH2 (Legacy model only)


1. click "Set-up" → "Unit setup" → "mCH2 parameters" and complete the configuration of the unit

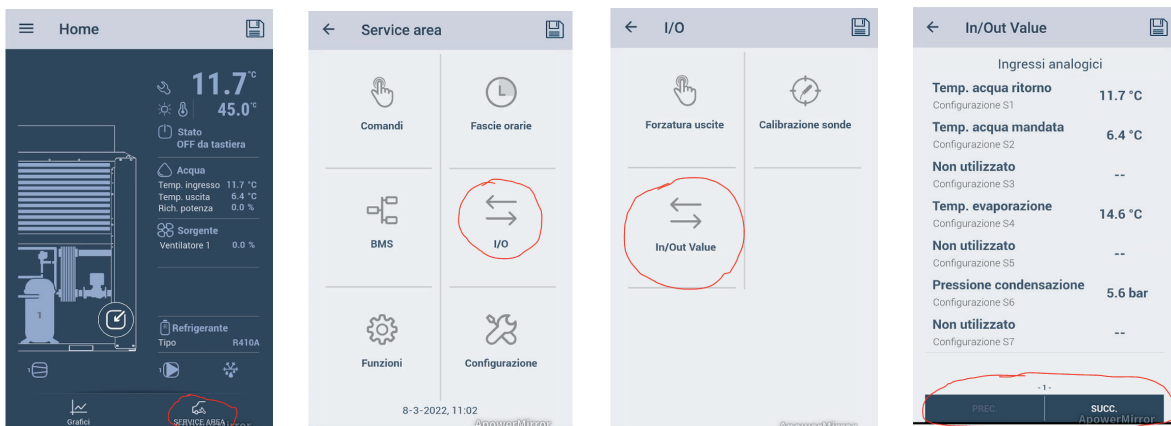

2. apply the parameters configured via NFC / Bluetooth to the controller.

### 3.2.6 Applica: date and time setting

Applica includes a feature for setting the date and time on µChiller in just one simple step, copying the values from the mobile device.

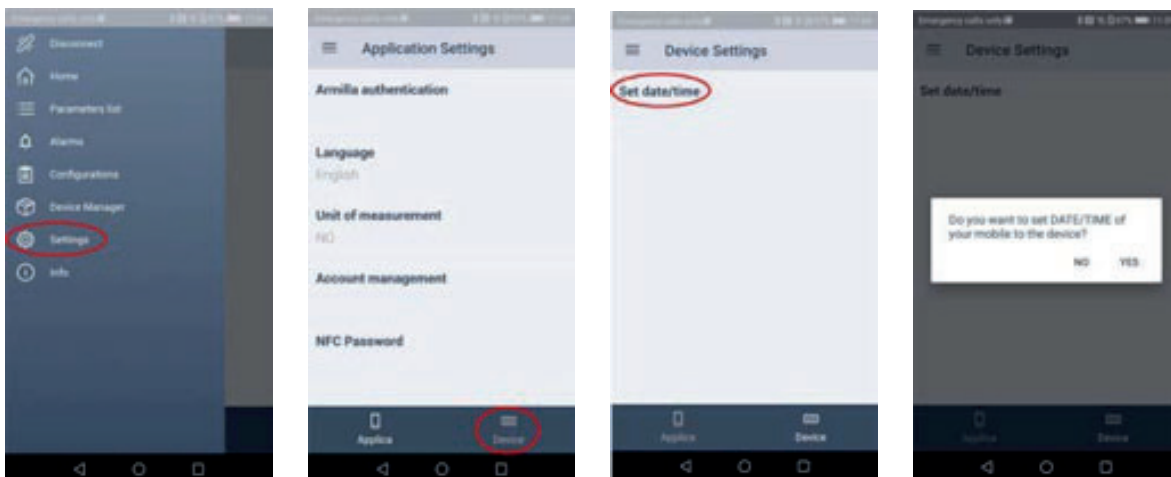

Procedure:

1. open Applica on the mobile device;
2. access the controller via NFC or Bluetooth, entering your profile credentials;
3. access the menu on the command bar at the top left;
4. select "set date/time";
5. confirm;
6. with an NFC connection, move the device near to the user terminal to write the copied values.

🔔 **Notice:** with a Bluetooth connection, the values are copied on confirmation.


### 3.2.7 Applica: copy configuration

Applica includes a "Clone" feature to acquire the configuration from one unit and replicate it "one-for-one" to other units.

Procedure:

1. open Applica on the mobile device;
2. access the controller via NFC or Bluetooth, using the "Service" or "Manufacturer" profile credentials;
3. follow the path "Configurations/Clone";
4. enter a name to describe the configuration being saved;
5. with an NFC connection: move the device near to the display terminal on the  $\mu$ Chiller that the configuration is being copied from; once the message shows the configuration has been acquired, this is saved to the smartphone's memory, available via icon 2 (see the following figure);
6. select the saved configuration; (with an NFC connection) move the device near to the display terminal on the  $\mu$ Chiller that the same configuration is being applied to;
7. confirm and wait for the confirmation message.

🔔 **Notice:** with a Bluetooth connection the configuration is saved/applied on confirmation.

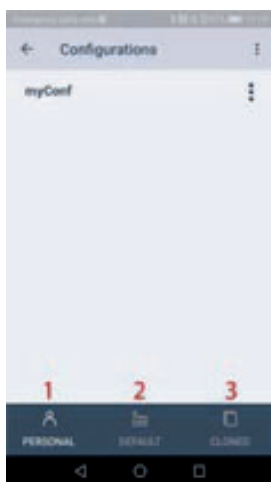

With reference to the previous figure, tapping the icon:

1. accesses the configurations saved by the user;
2. accesses the configurations prepared by Carel;
3. accesses the saved clones.

## 3.3 Unit set-up parameter list

### 3.3.1 Unit parameters

🔔 **Notice:** follow the order shown in the table to configure the Unit set-up parameters.

Par.	Description	Def.	Min.	Max.	UOM
U077	Type of unit	0	0	6	-
	0=CH;				
	1=HP;				
	2=CH/HP;				
	3=Cooling-only condensing unit;				
	4=Reverse-cycle condensing unit;				
	5=Cooling-only air/air;				
	6=Reverse-cycle air/air/air;				
	7=Water/water CH/HP with reversal on the hydronic circuit				
S068	Source type (0=Air, 1=Water)	0	0	1	-
U076	Number of system pumps	1	1	2	-
C046	No. of unit circuits	1	1	2	-
C047	Type of compressors used (0=1 On/Off; 1=2 On/Off; 2=1 BLDC; 3=1 BLDC+On/Off)	0	0	1/3	-
S065	Type of source fan (0/1=Modulating/ON-OFF)	0	0	1	-
S064	Type of source air circuit (0=Independent; 1=Common)	0	0	1	-

Par.	Description	Def.	Min.	Max.	UOM
S072	Source pump activation 0=always on 1=On with compressors on 2=control on condensing temperature	0	0	1	-
E047	ExV driver (0=Disabled; 1=Built-in; 2=EVD Evolution)	0	0	2	-
E046	EVD Evolution: valve (1=CAREL ExV, ...) (*) (*) see EVD Evolution manual for the complete list of selectable valves	1	1	24	-
E020	MOP in cooling: threshold	30.0	-60.0	200.0	°C
E022	MOP in heating: threshold	20.0	-60.0	200.0	°C
C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C
C018	Min low pressure threshold (LP)	0.2	-99.9	99.9	bar
U068	Free cooling: enable (0/1=no/yes)	0	0	1	-
U074	Free cooling type (0=Air; 1=Remote coil; 2=Water)	0	0	2	-
U071	Design free cooling delta T	8.0	0.0	99.9	K
U061	System pump overload: input logic (0/1=NC/NO)	0	0	1	-
U065	Freecooling valve: output logic (0/1=NO/NC)	0	0	1	-
S063	Reversing valve: output logic (0/1=NO/NC)	0	0	1	-
S054	4-way valve: pressure differential for reversing	3.0	0.0	999.9	bar
C049	Low pressure switch alarm delay on compressor activation	90	0	999	-
C050	Low pressure switch alarm delay with compressor on	15	0	999	-
C051	Low pressure switch input logic (0=NC; 1=NA)	0	0	1	-
S053	Defrost synchronisation (0=Independent, 1=Separate, 2=Simultaneous)	0	0	2	-
U006	Cooling set point: minimum limit	5.0	-99.9	999.9	°C
U007	Cooling set point: maximum limit	20.0	-99.9	999.9	°C
U008	Heating set point: minimum limit	30.0	0.0	999.9	°C
U009	Heating set point: maximum limit	45.0	0.0	999.9	°C
Hc13	Buzzer (0/1=No/Yes)	1	0	1	-
U081	High/low pressure and frost alarm reset configuration 0= HP1-2/LP1-2/A1-2/Manual frost protection 1= HP1-2/LP1-2/A1-2/Automatic frost protection 2= HP1-2/A1-2 Manual frost protection LP1-2 automatic 3= HP1-2 manual LP1-2/A1-2 Automatic frost protection 4= HP1-2/LP1-2 manual A1-2/Automatic frost protection 5= HP1-2/LP1-2 (3 times in an hour) manual; A1-2/Automatic frost protection 6= HP1-2/LP1-2 (3 times in an hour) manual; A1-2/Manual frost protection 7=HP1-2 manual/LP1-2 (3 times in an hour)/Manual frost protection	7	0	7	-

**Tab. 3.a**

(\*) see EVD Evolution manual for the complete list of selectable valves

### 3.3.2 I/O configuration

For the description of the following parameters, see chapter 3 of this document

Par.	Description	Def.	Min.	Max.	UOM
HC31	Analogue input 1 configuration Circuit 1	7	0	8	-
HC32	Analogue input 2 configuration Circuit 1	8	0	8	-
HC00	Analogue input 3 configuration Circuit 1	0	0	8	-
HC34	Analogue input 4 configuration Circuit 1	7	0	10	-
HC35	Analogue input 5 configuration Circuit 1	8	0	10	-
HC03	Analogue input 6 configuration Circuit 1	0	0	11	-
HC04	Analogue input 7 configuration Circuit 1	6	0	8	-
HC41	Analogue input 1 configuration Circuit 2	0	0	8	-
HC42	Analogue input 2 configuration Circuit 2	0	0	8	-
HC43	Analogue input 3 configuration Circuit 2	0	0	8	-
HC44	Analogue input 4 configuration Circuit 2	7	0	10	-
HC45	Analogue input 5 configuration Circuit 2	8	0	10	-
HC05	Analogue input 6 configuration Circuit 2	0	0	11	-
HC47	Analogue input 7 configuration Circuit 2	6	0	8	-
HC14	Digital input 1 configuration Circuit 1	1	0	12	-
HC15	Digital input 2 configuration Circuit 1	2	0	12	-
HC06	Digital input 4 configuration Circuit 1	0	0	12	-
HC07	Digital input 5 configuration Circuit 1	7	0	12	-
HC08	Digital input 6 configuration Circuit 1	6	0	12	-
HC16	Digital input 1 configuration Circuit 2	10	0	12	-
HC17	Digital input 2 configuration Circuit 2	2	0	12	-
HC09	Digital input 4 configuration Circuit 2	0	0	12	-
HC10	Digital input 5 configuration - Circuit 2	0	0	12	-
HC11	Digital input 6 configuration Circuit 2	0	0	12	-
HC71	Analogue output 1 configuration Circuit 1	1	0	3	-
HC72	Analogue output 2 configuration Circuit 1	3	0	3	-
HC81	Analogue output 1 configuration Circuit 2	1	0	3	-
HC82	Analogue output 2 configuration Circuit 2	0	0	3	-
HC51	Digital output 1 configuration Circuit 1	1	0	12	-
HC52	Digital output 2 configuration Circuit 1	2	0	12	-
HC53	Digital output 3 configuration Circuit 1	4	0	12	-

Par.	Description	Def.	Min.	Max.	UOM
HC54	Digital output 4 configuration Circuit 1	7	0	12	-
HC55	Digital output 5 configuration Circuit 1	10	0	12	-
HC56	Digital output 6 configuration Circuit 1	0	0	12	-
HC61	Digital output 1 configuration Circuit 2	1	0	8	-
HC62	Digital output 2 configuration Circuit 2	2	0	8	-
HC63	Digital output 3 configuration Circuit 2	4	0	8	-
HC64	Digital output 4 configuration Circuit 2	7	0	8	-
HC65	Digital output 5 configuration Circuit 2	0	0	8	-
HC66	Digital output 6 configuration Circuit 2	0	0	8	-
C021	Capacity distribution in the circuit (0=Equalised, 1=Grouped)	0	0	1	-
C037	Evaporation pressure: probe type (0=0-5V; 1=4-20mA)	0	0	1	-
C038	Evaporation pressure probe: min value	0.0	-1.0	99.9	bar
C039	Evaporation pressure probe: max value	17.3	0.0	99.9	bar
C040	Condensing pressure: probe type (0=0-5V; 1=4-20mA)	0	0	1	-
C041	Condensing pressure probe: min value	0.0	-1.0	99.9	bar
C042	Condensing pressure probe: max value	45.0	0.0	99.9	bar
C043	Discharge temperature: probe type (0=NTC, 1=NTC-HT)	1	0	1	---

Tab. 3.b

### 3.3.3 mCH2 parameters

Par.	Description	Def.	Min.	Max.	UOM
F003	Number of evaporators (0=1; 1=2)	0	0	1	-
F007	Sensor S4 installed on the source heat exchanger (0=No, 1=Yes: in CH mode reads condensing temp., in HP mode reads evap. temp.)	0	0	1	-
F008	Frost protection alarm delay	10	0	999	-
F009	Supply air temperature limit threshold	14.0	0.0	99.9	°C
F010	Supply air temperature limit diff.	4.0	0.0	20.0	°K
F011	Heater dig. output logic (0=NO; 1=NC)	0	0	1	-
F012	Offset on set point in cooling operation for the heaters	1.0	0.0	99.9	°K
F013	Differential on set point in cooling mode for the heaters	0.5	0.2	99.9	°K
F014	Offset on set point in heating mode for the heaters	3.0	0.0	99.9	°K
F015	Differential on set point in heating mode for the heaters	1.0	0.2	99.9	°K
F016	Heaters active during defrost (0=No, 1=Yes)	0	0	1	-
F017	Supply fan operating mode (0=Always ON; 1=ON by temp. control)	0	0	1	-
F018	Hot-start set point	40.0	0.0	99.9	°C
F019	Hot-keep differential	5.0	0.0	99.9	°K
F020	Compressor request logic from digital input (0=NC; 1=NO)	1	0	1	-
F021	Mixed water outlet temperature probe calibration (S1 expansion)	0.0	-99.9	99.9	°K
F022	Evaporator 2 water outlet temperature probe calibration (S2 expansion)	0.0	-99.9	99.9	°K
F023	Direct relationship between digital inputs and digital outputs for condensing unit (0=No, 1=Yes)	0	0	1	-
F024	Manual heater 1 management (0=AUTO; 1=OFF; 2=ON)	0	0	2	-
F025	Manual heater 2 management (0=AUTO; 1=OFF; 2=ON)	0	0	2	-
F026	Compressors off at low outside temperature (air/air)	-40.0	-40.0	99.9	°C
F027	Enable compressor capacity control 0/1=No/Yes	0	0	1	-
F028	Air heating: probe for user heater temperature control 0=ROOM 1=SUPPLY	0	0	1	-

Tab. 3.c

## 3.4 Applica Desktop

Applica Desktop is a program intended for manufacturers and installers of units fitted with the  $\mu$ Chiller controller. It can be downloaded from [ksa.carel.com](http://ksa.carel.com).

The Applica Desktop offers the possibility to:

- access the controller using the assigned profile;
- create configurations;
- apply configurations;
- clone a unit configuration, i.e. copy all of the unit's parameter values;
- complete the commissioning procedure;
- troubleshoot any problems on the unit.

### Notice:

- Applica Desktop can be used as an alternative to the Applica app, and requires an internet connection;
- For the physical connection to the BMS port on  $\mu$ Chiller, use the USB/RS485 converter P/N CVSTDUMORO


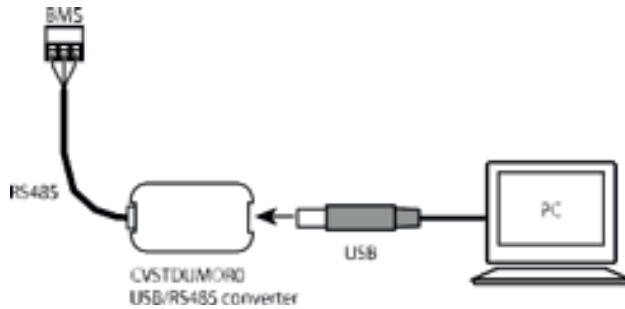



Fig. 3.c

### 3.4.1 Preparing for operation

1. Access KSA, "Software & Support", " $\mu$ Chiller" section.
2. Select the "Configurations" folder.
3. For  $\mu$ Chiller Standard, Enhanced and Legacy models (with On/Off compressor), select the "Refrigerants" section and then the refrigerant charged on the unit.
4. Connect to the BMS port on the  $\mu$ Chiller controller, as shown in Figure 5.b;
5. Open Applica Desktop; a window will be opened with the right part of the top bar as shown below:

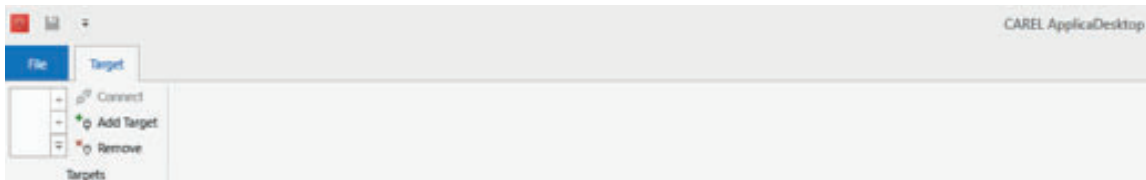


6. Select "Add target" and assign it a meaningful name (e.g.
7. In the "COM Port" field, enter the COM port used for the USB connection to the USB/RS485 converter;
8. Configure the connection parameters (Baudrate=115200, Bits=8, Parity=None, Stop Bits=Two, Serial Node=1) as shown in the figure (the data are saved automatically);
9. Use "Connect" to connect to the  $\mu$ Chiller (which must be powered on).

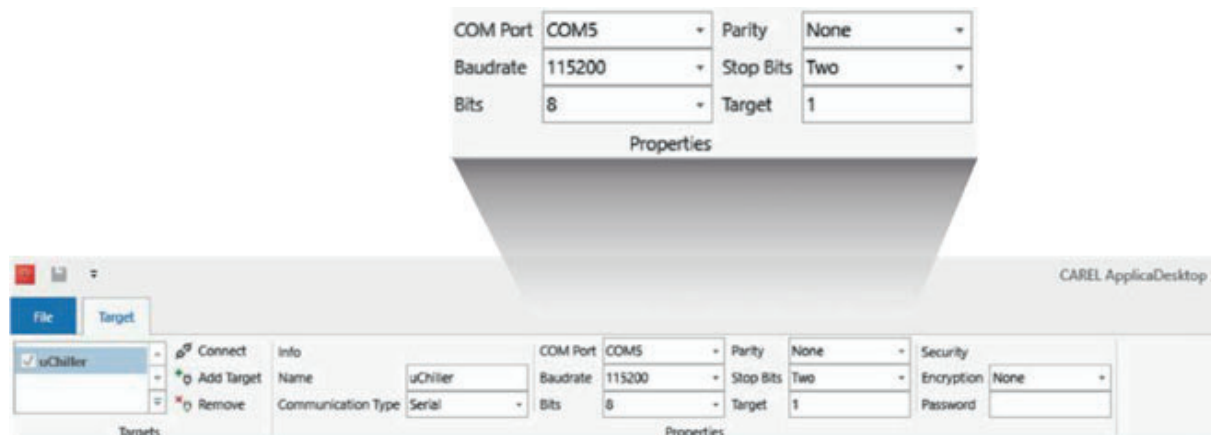


## 3.5 Configuration procedure with Applica Desktop - Legacy Model

### 3.5.1 Step 1 - Set the refrigerant

Once connected, select the "Configurations" label: the command bar will be displayed, as shown:

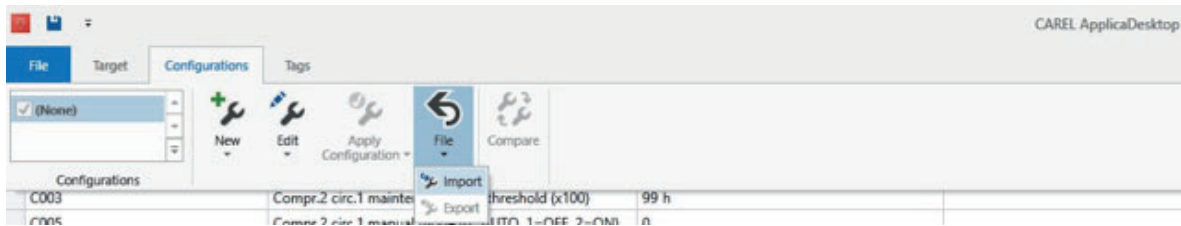


1. Select "File -> Import" to load the refrigerant configurations downloaded from KSA (path: KSA / SW&Support /Configuration & Updating software / ST Configuration / Refrigerant Gases);
2. Select the configuration to be applied to the  $\mu$ Chiller, and then "Apply Configuration";

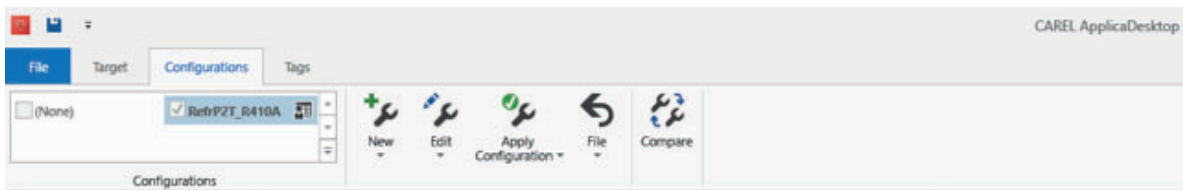


3. Applica Desktop will display a message when the parameters have been set, and if necessary indicating any values that have been applied that do not belong to the current user profile (some parameters may not be visible to the user).

### 3.5.2 Step 2 - Configure $\mu$ Chiller


1. Select the "Configurations" label, select "New -> New configuration" and assign a name to the new configuration being created.

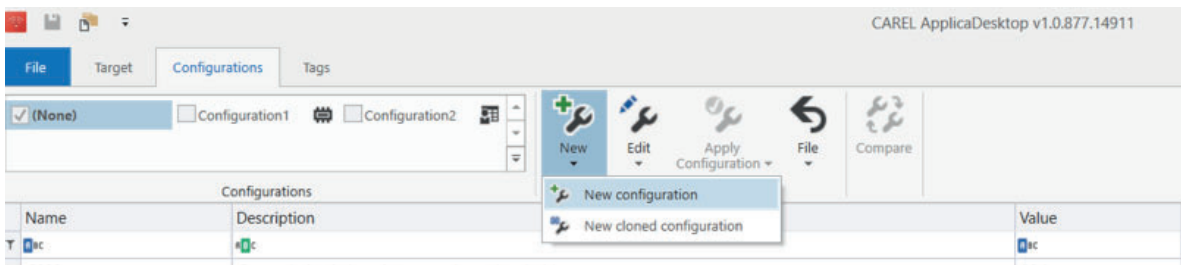


2. Select the newly created configuration
3. Select "Edit -> Apply Live Values": This operation copies the values of the parameters currently saved on the connected  $\mu$ Chiller to the newly created configuration.

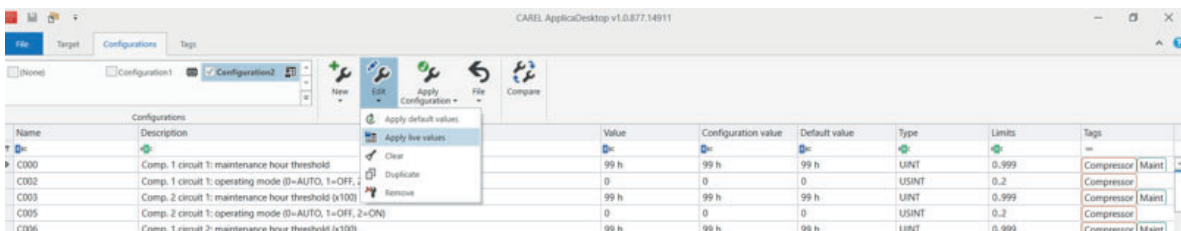


4. Select the "Tags" label and then the "Unit\_Cfg" command
5. Change the parameters listed in the "Configuration value" column to configure the unit

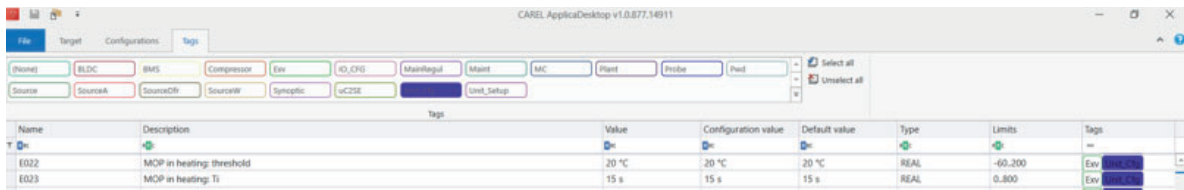

6. Repeat the same steps for the "IO\_CFG" and "uCH2SE" tags.
7. The unit has now been configured. If desired, the control parameters can be modified using the other tags available as search filters.
8. Once all of the desired parameters have been changed, to apply the changes select the "Configuration" label and select "Apply Configuration"

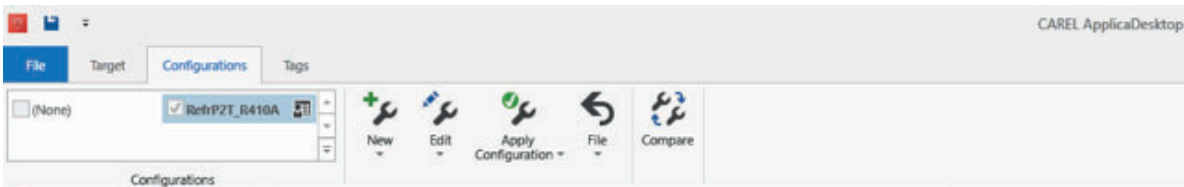


Finally, to save the newly-created configuration for future use, from the "Configurations" label select "File -> Export" and assign a name to the configuration being saved.

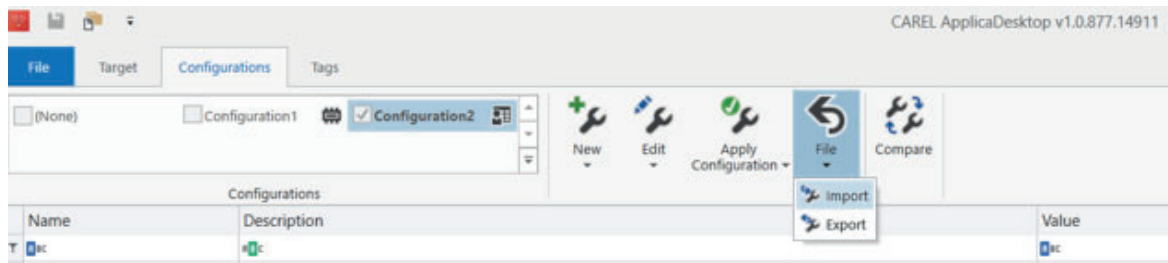


### 3.5.3 Applica Desktop: date and time setting

Applica Desktop can set the date and time on  $\mu$ Chiller in just one simple step, copying the values from the PC to the controller.

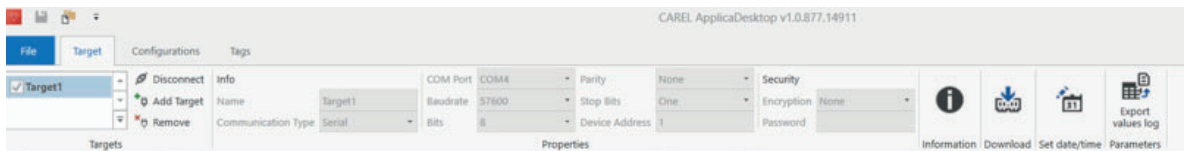

Procedure:

1. Once connected, select "Set date&time";
2. In the pop-up window, confirm synchronisation of the time and date on  $\mu$ Chiller with the PC

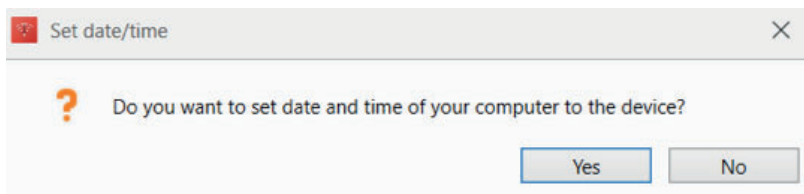



# 4. USER INTERFACE

## 4.1 Introduction

µChiller uses the user terminal to display the alarms, the main variables and to set the unit set points (User level) and manual functions (Service level). The terminal has a 7-segment LED display with two rows: the top row is 3-digit plus sign and decimal point; the bottom row is 4-digit plus sign (this can also display the hour format -hh:mm and date - MM:DD). There is a buzzer, 14 operating icons and 4 buttons for scrolling and setting the parameters. The terminal has NFC (Near Field Communication) and Bluetooth (depending on the model) connectivity for interaction with mobile devices (on which the Carel "Applica" app has been installed, available on Google Play for the Android operating system).

**Note:** access levels: U=User; S=Service; M=Manufacturer. See the parameter table.


The unit of measure on the display can be changed via parameter UoM, accessed at a Service level, including in the direct access functions menu.

Code	Description	Def.	UoM	Min	Max	Lev.
UoM	Unit of measure 0=°C/barg - 1=°F/psig	0	-	0	1	S

Tab. 4.a

The information and parameters accessible from the terminal and from the Applica app depend on the access level and the unit configuration parameters.

## 4.2 User terminal

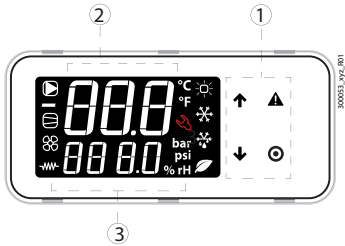

**Key:**

1	Keypad
2	Main field
3	Device status and operating mode icons

Fig. 4.a

**Note:** the user terminal only allows access to certain parameters at the User and Service levels: to access all of the Service and Manufacturer parameters, use the Carel Applica app or the configuration and commissioning tool.

### 4.2.1 Keypad

Button	Description	Function
	UP	<ul style="list-style-type: none"> <li>When scrolling: go to the previous parameter</li> <li>In programming mode: increase the value</li> <li>On the main screen: press and hold (3s): Switch unit on/off</li> </ul>
	DOWN	<ul style="list-style-type: none"> <li>When scrolling: go to the next parameter</li> <li>In programming mode: decrease in value</li> </ul> <p>Main menu:</p> <ul style="list-style-type: none"> <li>pressed briefly: unit dashboard display</li> <li>pressed and held (3 s): access User parameters (set point, unit on-off, ...)</li> </ul>
	Alarm	<ul style="list-style-type: none"> <li>Pressed briefly: display active alarms and mute buzzer</li> <li>Pressed and held (3 s): reset alarms.</li> </ul>
	PRG	<ul style="list-style-type: none"> <li>When scrolling: access parameter programming mode</li> </ul> <p>In programming mode:</p> <ul style="list-style-type: none"> <li>pressed briefly: confirm value</li> <li>pressed and held (3 s): return to the main menu</li> </ul>

Tab. 4.b



## 4.2.2 Icons

The icons indicate the device operating status and operating modes, as shown in the following table.

Icon	Function	On	Flashing
	System pump	Active	In manual operation
	Source device status (pump/fan)	Active	In manual operation
	Compressor status	Active	In manual operation (with ExV)
	Frost protection heater	Active	In manual operation
	Operating mode	Heating	-
		Cooling	High water temperature
		Defrost	Dripping after defrosting
		Free cooling	-
	Service	Service request on exceeding operating hours	Serious alarm, action required by qualified personnel

Tab. 4.c

## 4.3 Standard display

At start-up, the user terminal briefly shows "NFC", indicating that the NFC interface is available on the user terminal for communication with mobile devices, and then the standard display is shown. The main screen is then displayed. The values displayed in the two rows of the main page can be selected by the user using parameters Hc90 and Hc91. The following tables show the configuration values for the main page.

Code	Description	Limits	Hc90/91	Type of information	Hc90/91	Type of information
Hc90	Information on top row	1..9	1	Not present	6	Inlet temperature
Hc91	Information on bottom row	1..10	2	Control temperature *	7	Manifold outlet temperature
			3	Control set point	8	Evaporation temperature **
			4	Secondary temperature *	9	Capacity request
			5	Outlet temperature	10	Compressor status (Hc91 only)

\*The control probe in steady state is always considered

\*\*Circuit 1

When the unit is off, "OFF" is displayed on the bottom row to indicate the unit's status.

**Note:** "bLE" flashes on the display during "Bluetooth" communication.

### 4.3.1 Dashboard

From the main menu, press DOWN to access information on the status of the devices and the temperatures, superheat values, etc. for the two circuits:

- unit "OFF" and the reason for shutdown:
  - "diSP" from keypad;
  - "dl" from remote contact (via digital input);
  - "Schd" from time band (scheduler);
  - "bMS" from BMS;
  - "ChnG" from operating mode changeover (heating/cooling);
  - "AlrM" from alarm.
- "CMP" compressors;
- "AFE1" Circuit 1 - user delivery water temperature;
- "AFC1" Circuit 1 - source delivery water temperature;
- "AFE2" Circuit 2 - user delivery water temperature;
- "AFC2" Circuit 2 - source delivery water temperature;
- "EuP1" evaporation temperature circuit 1;
- "ScP1" Circuit 1 - evaporation pressure;
- "Sct1" Circuit 1 - suction temperature;
- "SSH1" superheat circuit 1;
- "Cnd1" condensing temperature circuit 1;
- "dSP1" Circuit 1 - condensing pressure;
- "dSt1" BLDC compressor discharge temperature circuit 1;
- "EuP2" evaporation temperature circuit 2;
- "ScP2" Circuit 2 - evaporation pressure;
- "Sct2" Circuit 2 - suction temperature;

- "SSH2" superheat circuit 2;
- "Cnd2" condensing temperature circuit 2;
- "dSP2" Circuit 2 - condensing pressure;
- "dSt2" BLDC compressor discharge temperature circuit 2;
- "SPrb" Source - return temperature (outside);
- "Opn1" - ExV circuit 1 - position;
- "Opn2" - ExV circuit 2 - position;
- "ESC" to exit the dashboard.

and if the access level is "Service":

- "Hd01" BMS baud rate;
- "Hd02" BMS communication parameters;
- "ESC" to exit the dashboard.


**Example**




Go to the standard display.



Press DOWN: COMP indicates that compressor 1 is on (o) and compressor 2 is off (□).

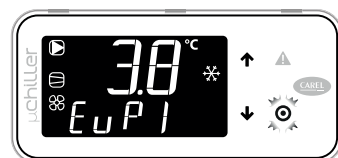

Press DOWN: EuP1 indicates the evaporation temperature in circuit 1 (3.8°C).

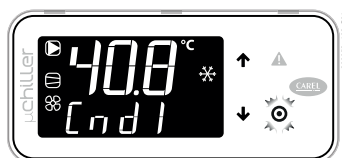

Press DOWN: Cnd1 indicates the condensing temperature in circuit 1 (40.8°C).



To return to the standard display, press PRG (corresponding to ESC).

**4.3.2 Direct access functions**

The user terminal only provides access to the basic configuration parameters, such as direct functions and active alarms without password protection, or, with password protection, to the parameters used to configure and optimise the unit.

Press DOWN for 3 s to access the direct access functions:

- set point;
- switching unit on and off;
- change operating mode (cooling/heating, only on reverse-cycle units);
- select unit of measure.

In programming mode, the bottom row shows the parameter code, and the top row shows the value.

In addition, the unit quick on/off function is available on the user terminal.

On the main screen, pressing and holding UP switches the unit on/off. On all the other screens, the UP button retains its original function of navigating the pages and/or setting the parameters.


**Procedure**

Press:


- DOWN for 3 s to access the parameters (User level, no password required);
- UP and DOWN to scroll and set the parameters;
- PRG to change the parameter value and save the changes;
- PRG (3 s) or ESC to return to the standard display.




1. Go to the standard display

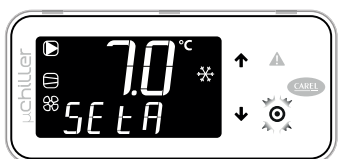


2. Press DOWN for 3 s: the current set point (SEtA) is shown - read-only

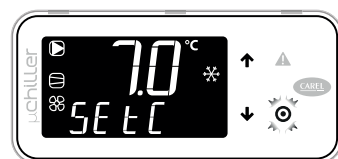

3. Press DOWN: the cooling set point (SEtC) is shown

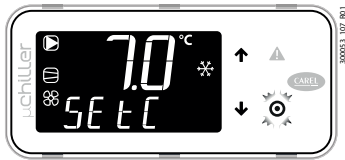


4. Press PRG: the value flashes; press UP/DOWN to change the value; PRG to confirm.

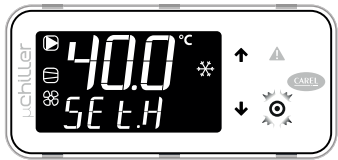

5. Press DOWN: the heating set point (SEtH) is shown - for heat pump units only.



6. Press DOWN: the unit ON/OFF function (UnSt) is shown.

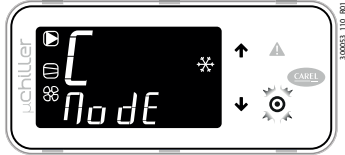


7. Press DOWN: the function for switching from cooling (C) to heating (H) mode (Mode) is shown - for heat pump units only.



8. Press DOWN: the manual defrost function (dFr) is shown - Service level and reverse-cycle A/W units only.



9. Press DOWN: the function to delete the alarm log (ClrH) is shown - Service level only.

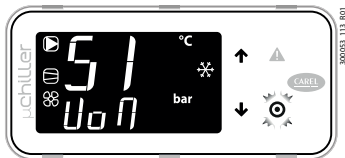

10. Press DOWN: the unit of measure selection (UoM) is shown



11. After having completed the settings, to exit either:  
 - from the categories press ESC and then PRG;  
 - press PRG for 3 s

### 4.3.3 Programming mode

Go to the standard display and press PRG to enter programming mode.


#### Procedure

Press:


- PRG to access the parameters with password protection;
- UP and DOWN to scroll and set the parameters;
- PRG to change the parameter value and save the changes;
- PRG (3 s) or ESC to return to the standard display.



1. Go to the standard display

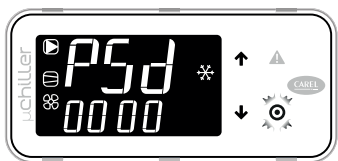

2. Press PRG: the password prompt (P5d) is shown

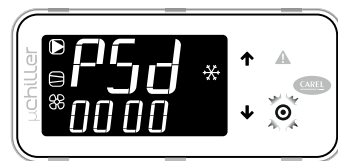

3. Press PRG: the first digit of the password flashes; set the value, press PRG. The second digit now flashes; enter the other digits to complete the password.




4. Press PRG: if the password is correct, the first parameter category is shown: PLt (= system)



5. Press PRG: the first parameter is shown: U002 (Pump 1 manual control)



6. Press PRG: the value flashes; press UP/DOWN to change the value; PRG to confirm.

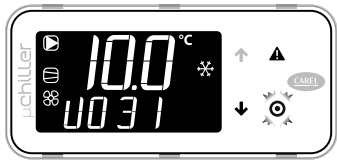

**Note:** User password: 1000; Service password: 2000; Manufacturer password: 1234. See the parameter table.

7. Press UP/DOWN to display the other parameters.

### 4.3.4 Programming menu




Category PLt (system): identified by code Uxxx, these parameters relate to control and management of the system units.



Category EEV (ExV valve): identified by code Exxx, these parameters all relate to control and management of the electronic expansion valve(s).



Category CMP (compressors): identified by code Cxxx, these parameters relate to control and management of the compressors and refrigerant circuits.

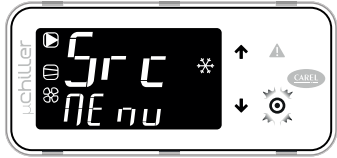

Category Src (source): identified by code Sxx, these parameters relate to control and management of the condenser / source.



Category CLc (Clock): identified by code Hxxx, these are the parameters for setting the date/time.



Category Hst (Alarm log): access the alarm log. Each event is described with the date (in the format DD MM) and time (in the format hh:mm) alternating.



Use Log- Out to exit the category.



Use ESC to return to the standard display.

**Notes:**

- the Service password also accesses the User parameters;
- if no button is pressed, after around 3 minutes the terminal will automatically return to the standard display.

# 5. FUNCTIONS

## 5.1 Temperature control

µChiller can control either the unit's return or delivery water temperature. The return (from user) and delivery (to user) water temperature probes can be installed on any of the channels. See the Installation chapter.

### 5.1.1 PID control

Two types of PID control are available:

- PID control at start-up;
- PID control in operation.

For each type of PID control, the following parameters can be set:

- Control probe (return or delivery);
- Proportional gain (Kp);
- Integral time (action disabled when time set to 0);
- Derivative time (action disabled when time set to 0).

The control set point and the operating mode (heating / cooling) are the same for both control types:

- control at start-up is aimed at preventing excess capacity being called. Indeed, as when starting the exact status of the units (loads) is not known, but rather only the temperature, capacity needs to be delivered gradually, awaiting the reaction from the system. Control can be applied to the water return temperature, using a low gain and a sufficiently high integral time, greater than the system time constant (120- 180 s, considering a system time constant of at least 60 s, corresponding to a minimum water content of 2.5 l/kW).
- control in operation needs to be more reactive, so as to respond quickly to any variations in load and keep the delivery water temperature as close as possible to the set point. In this case, the time constant depends on the response of the compressor-evaporator system, and is in the order of a few tens of seconds (slower with tube bundle evaporators, faster with plate evaporators).

The following table shows the recommended values (to be calibrated if necessary during system commissioning), according to the type of evaporator used

Code	Description	Evaporator	
		Tube bundle	Plate
U036	Control probe at start-up - 0=Return 1=Delivery	Return	Return
U039	PID at start-up: Kp	6.0	6.0
U040	PID at start-up: Ti - 0: integral action disabled	180 s	180 s
U041	PID at start-up: Td - 0: derivative action disabled	0 s	0 s
U038	Control probe in operation - 0=Return 1=Delivery	Delivery	Delivery
U042	PID in operation: Kp	10.0	10.0
U043	PID in operation: Ti - 0: integral action disabled	120 s	120 s
U044	PID in operation: Td - 0: derivative action disabled	3 s	3 s

Tab. 5.a

The control sequence is as follows:

1. when the unit is Off, both PID controls are disabled;
2. when the unit starts, following the set user pump – compressor delay, the PID at start-up is enabled and generates a capacity request (percentage) that is then processed so as to activate the compressors;
3. if this request is sufficient, one compressor will be started;
4. once the compressor has started, after a set time, control switches from PID at start-up to PID in operation;
5. when the controller requests deactivation of the compressors, these are enabled to stop;
6. after the last compressor has been stopped, restart is managed using the PID at start-up.

If the delay between PID at start-up/in operation is set to 0, PID control in operation will always be active.

User	Code	Description	Def	Min	Max	UOM
S	U047	Compressor activation delay after user pump	30	0	999	s
S	U037	PID control delay at start-up/operation	180	0	999	s

Tab. 5.b

### 5.1.2 Proportional control

If the desired control is only proportional to the water outlet or return temperature, consider the relationship:

$$K_p = 100/BP$$

For example, to have a proportional band of 2K, set the value of Kp to 50.

The following are the parameter settings required to control the return temperature:

User	Cod.	Description	Setting	UOM	Note
S	U036	Control probe at start-up - 0=Return 1=Delivery	0	-	-
S	U037	PID control delay at start-up/operation	180	s	Not significant
S	U038	Control probe in operation - 0=Return 1=Delivery	0	-	
S	U039	PID at start-up: Kp	50.0	-	=> Proportional band = 2K
			34.0		=> Proportional band = 3K
			25.0		=> Proportional band = 4K
			20.0		=> Proportional band = 5K
S	U040	PID at start-up: Ti - 0: integral action disabled	0	s	
S	U041	PID at start-up: Td - 0: derivative action disabled	0	s	
S	U042	PID in operation: Kp	=U039	s	Same as Kp at start-up
S	U043	PID in operation: Ti - 0: integral action disabled	0	s	
S	U044	PID in operation: Td - 0: derivative action disabled	0	s	

Tab. 5.c

### 5.1.3 Anti-bump

The PID control features a special anti-bump filter that serves to smooth the output following changes to the set point and/or parameter Kp. The anti-bump filter is disabled if the PID is set in pure proportional mode (Ti = Td = 0).

### 5.1.4 Capacity request from analogue input

The capacity request can only be configured on input S6 (group 3), both on the main board and on the expansion board. The type of signal is set using U089 (0=0-5V, 1=0-10V, 2=4-20mA) for both boards. The setting of U089 will be applied to the analogue input enabled for the request both on the main board and on the expansion board. If the capacity request from analogue input is enabled, the request will be taken into consideration for the main control, and the PID will be disabled.

The following parameters are used to configure S6 as a capacity request input:

Code	Description	Def	Min...Max	Supervisor
U089	Analogue capacity request input type	0	0 to 2	HR 817
U090	Analogue capacity request offset	0	-999.9 to 999.9	HR 818
U091	Analogue capacity request min value	0	-999.9 to 999.9	HR 820
U092	Analogue capacity request max value	100	-999.9 to 999.9	HR 822

Tab. 5.d

The unit capacity request is managed according to the following decreasing priority:

#### 1. Request from BMS

The capacity request from BMS is activated with  
Hd06 - Enable capacity request from BMS (0=Disabled, 1=Enabled)  
Hd05 - Enable unit ON/OFF command by\_ BMS net (0=Disabled, 1=Enabled)

#### 2. Request from S6 - main or expansion board

The capacity request from AIN is activated by configuring S6 with Hc03 = 12 or S6 with Hc05 = 12 (Exp)

#### 3. Request calculated by PID

**ⓘ Notice:** if S6 is configured as capacity request on both the MAIN and EXP boards, then the request is read from the MAIN board while input S6 on the EXP board is ignored.

### 5.1.5 Set point compensation

µChiller adjusts the set point based on the outside temperature.

**ⓘ Notice:** this function can only be enabled if the outside temperature probe is fitted.

The compensation (positive or negative) is determined by:

1. start compensation start (in cooling/heating);
2. end compensation threshold (in cooling/heating);
3. maximum compensation value (in cooling/heating).

User	Code	Description	Def	Min	Max	UOM
S	U010	Enable set point compensation: 0/1=no/yes	0	0	1	-
U	SEtC	Cooling set point	7.0	U006	U007	°C/°F
S	U011	Cooling compensation: start	25.0	-99.9	999.9	°C
S	U012	Cooling compensation: end	35.0	-99.9	999.9	°C
S	U013	Cooling compensation: maximum value	5.0	-99.9	999.9	K
U	SEtH	Heating set point	40.0	U008	U009	°C/°F
S	U014	Heating compensation: start	5.0	-99.9	999.9	°C
S	U015	Heating compensation: end	-10	-99.9	999.9	°C
S	U016	Heating compensation: maximum value	5.0	-99.9	999.9	K

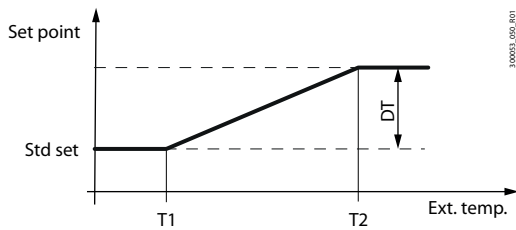
**Compensation in cooling:**


Fig. 5.a

**Key**

Ext. Temp.	Outside temperature
Std set	Control set point
T1	Outside temperature to start compensation in cooling mode
T2	Outside temperature to end compensation in cooling mode
DT	Maximum compensation value in cooling mode

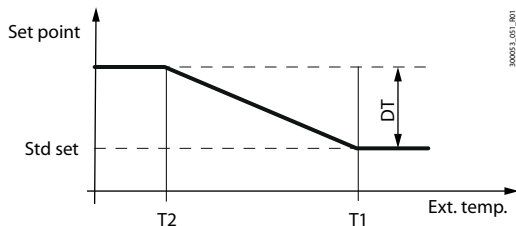
**Compensation in heating:**


Fig. 5.b

**Key**

Ext. Temp.	Outside temperature
Std set	Control set point
T1	Outside temperature to start compensation in heating mode
T2	Outside temperature to end compensation in heating mode
DT	Maximum compensation value in heating mode

### 5.1.6 Request from BMS

The request can be managed directly from a BMS, bypassing normal temperature control and enabling the external request signal (0-100.0%) via the specific Modbus serial variable (BMS\_PwrReq, HR 331). This operation is enabled via another serial variable (En\_BMS\_PwrReq, CS 22).

**Note:** if the supervisor is offline, the unit continues to operated in stand-alone mode, regardless of the request from the BMS.

### 5.1.7 High evaporator outlet temperature alarm

$\mu$ Chiller activates an alarm when the evaporator outlet temperature exceeds the threshold set by the user (via the offset relative to the control set point). When the outlet temperature exceeds the threshold, a counter starts and after a delay (settable), the alarm is activated. An initial delay disables the alarm in the transient period when the unit is starting.

**Notes:**

- the alarm is only available on chiller units.
- the high temperature alarm can be used to activate a backup unit in critical applications.

User	Code	Description	Def	Min	Max	UOM
U	SetA	Current set point	-	-999.9	999.9	°C
S	U031	High water temperature alarm: offset	10.0	0.0	99.9	K
S	U032	High water temperature alarm: delay at start-up	15	0	99	min
S	U033	High water temperature alarm: delay in operation	180	0	999	s

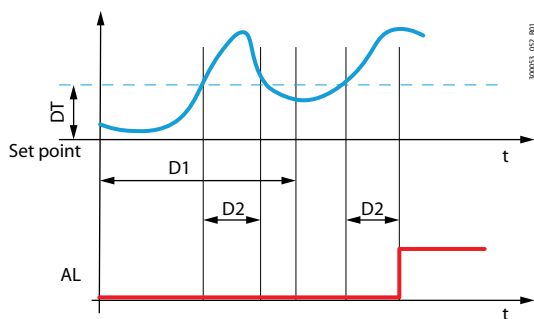


Fig. 5.c

**Key**


Set point	Current set point
DT	Offset
D1	Delay at start-up
D2	Delay in steady operation
AL	Alarm

## 5.2 User pumps

µChiller can manage up to two user- side pumps (depending on the hardware used and the required configuration). A delay can be set between pump and compressor activation (= temperature control enabled). A delay can also be set between the deactivation of the last compressor and the pump. If when the unit shuts down the compressors have been shutdown for at least the “user pump shutdown delay after compressor”, then the pump is stopped immediately.

User	Code	Description	Def	Min	Max	UOM
S	U047	Compressor activation delay after user pump	30	0	999	s
S	U048	User pump shutdown delay after compressor	180	0	999	s

Tab. 5.e

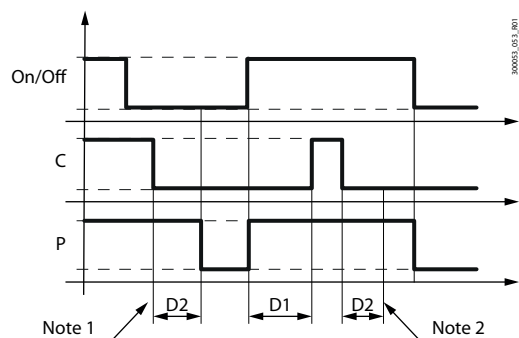

**Key**

Unit	Unit On-Off (local or remote control)
C	Compressor
P	User pump
D1	Compressor activation delay after user pump
D2	User pump shutdown delay after compressor
Note 1	Control is not active: the compressors are stopped based on their own safety times
Note 2	In this case, the pump can stop immediately

Fig. 5.d

Below is a diagram that represents operation for the configuration with one pump only:

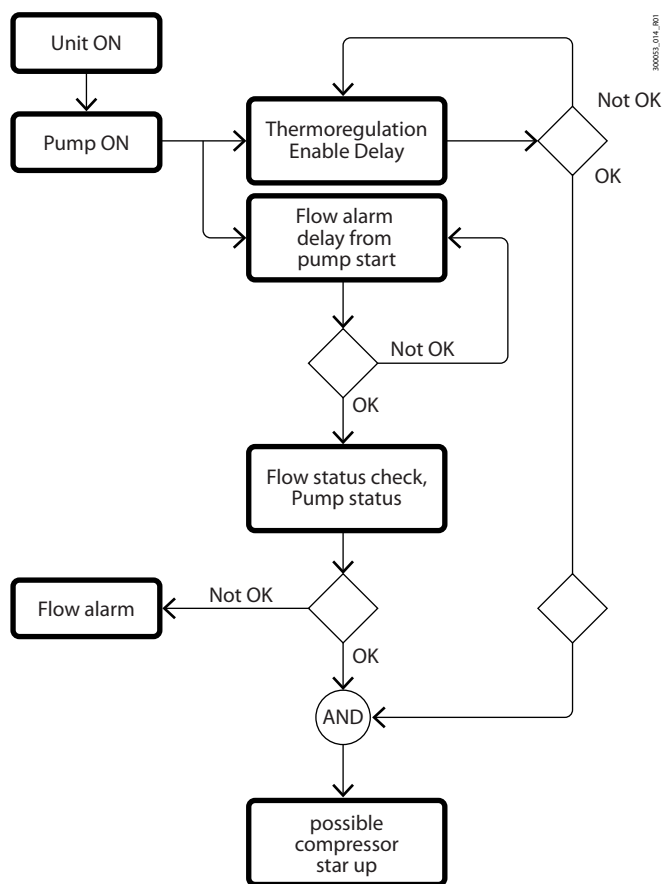


Fig. 5.e

Temperature control is enabled only after the flow alarm delay from pump on, so as to prevent the compressors from starting if there is no fluid flow.

Depending on the configuration, up to two user pumps can be enabled. µChiller includes the following functions:

- with two pumps, automatic rotation to ensure fluid circulation and equalisation of operating hours. Rotation is performed:
  - at the end of a period that can be set, in hours;
  - when there is an overload alarm on the active pump
- management of the pump overload alarm (if available, depending on the controller and the configuration) fault signal and immediate pump deactivation



- management of the flow switch that controls the circulation of fluid in the system: parameter U093, see §5.2.1 below
- frost protection control with unit off and/or on: this function is described in detail in §5.3
- management of the flow switch that monitors fluid circulation in the system.
- frost protection with unit off: the pump is started so as to activate fluid circulation (when the unit is on, the function is disabled).
- pump anti-blocking: if the pump is off for more than a week, it is activated for 3 seconds.

User	Code	Description	Def	Min	Max	UOM
S	U049	User pump rotation time	12	0	999	h

### 5.2.8 No-flow alarm management

Parameter U093 sets the behaviour of the user pump following a no-flow alarm from flow switch.

User	Code	Description	Def	Min	Max	UOM
S	U093	Management of no-flow alarm from flow switch	FALSE	0	1	-

**FALSE:**  
 The flow switch alarm is serious with manual reset.  
 No attempt is made to restore flow.  
 If the second pump is available in the system, the switchover is performed: if flow resumes, then the unit starts operating normally (with the no-flow signal in the alarm log), otherwise the alarm stops the unit and needs to be reset manually.

**TRUE:**  
 The flow switch alarm has semi-automatic reset.  
 Three attempts are made to restore flow.  
 If the second pump is available, the pumps are switched over. After the three attempts, if flow has not been restored, the alarm shuts down the unit and manual reset is required.

### 5.2.9 Cyclical pump activation during standby

When the chiller serves a chilled water tank (for example, in winemaking applications), the pump does not need to keep running, consequently energy can be saved by stopping the pump when the cooling demand is met. Control is only calculated when the pump is on.

A function can be activated to:

- switch the pump off after the compressors are stopped by the temperature controller;
- activate the pump periodically, in order to reactivate the compressors and satisfy demand from the user.

Parameter U078 enables/disables the function. When the pump is in the OFF phase, reading of the inputs and control are disabled: the unit remains temporarily off. Control can only resume in the pump ON phase, when the reading of the inputs is restored and the capacity request is recalculated. Furthermore, cyclical activation of the pump is automatically deactivated when the water temperature (measured with the pump on) is such as to generate a sufficient request to keep at least one compressor on.

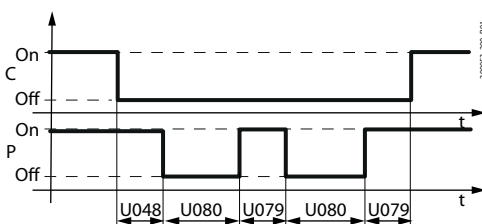


Fig. 5.f

User	Code	Description	Def	Min	Max	UOM
S	U078	Unit pump in standby: enable On-Off cycles	0	0	1	-
S	U079	Unit pump in standby: On time	3	1	15	min
S	U080	Unit pump in standby: Off time	15	3	99	min

Tab. 5.f

## 5.3 Frost protection control

Two frost protection control modes are available:

1. using the evaporation pressure probe, which directly monitors the conditions of the evaporator
2. using the water temperature probe to monitor the delivery water temperature or the source water temperature on water/water units in heating mode).

**Notice:** on the "legacy" units, frost protection control is performed exclusively on the water temperature sensor reading, with no selection. On the legacy model, parameter U082 = 1 (TRUE) cannot be changed.

User	Code	Description	Def	Min	Max	UOM
S	U082	Frost protection control type 0=Evaporation temperature 1=Water temperature	0	0	1	-

### 5.3.1 Frost protection alarm

When there is a frost alarm on the evaporator, the corresponding circuit is shut down. Each circuit manages its own evaporation pressure probe, and consequently also the frost protection alarm. The evaporation temperature value is filtered based on an exponential distribution formula that takes into consideration the thermal mass of the evaporator so as to avoid false alarms at start-up. A specific algorithm uses this filtered value and activates the alarm if the frost protection threshold is exceeded.

The frost protection alarm reset is set using parameter U081 (see par. 8.1 for further details).

If desired, the frost protection alarm can be set as automatic reset: this means the alarm signal will be cancelled automatically if the alarm condition is no longer present.

If an evaporation temperature probe is configured, frost protection control will automatically use this probe reading, even if a suction pressure probe is available. If only the suction pressure probe is available, then frost protection control will use the temperature converted from the pressure reading.

User	Code	Description	Def	Min	Max	UOM
S	U050	User side frost protection: alarm threshold	-0.8	-99.9	999.9	°C
S	U051	User side frost protection: differential	30.0	0.0	999.9	K
S	U052	User-side frost protection: delay time at 1K	30	0	999	s

The figure shows the action of the filter on the evaporation temperature, according to the exponential distribution formula.

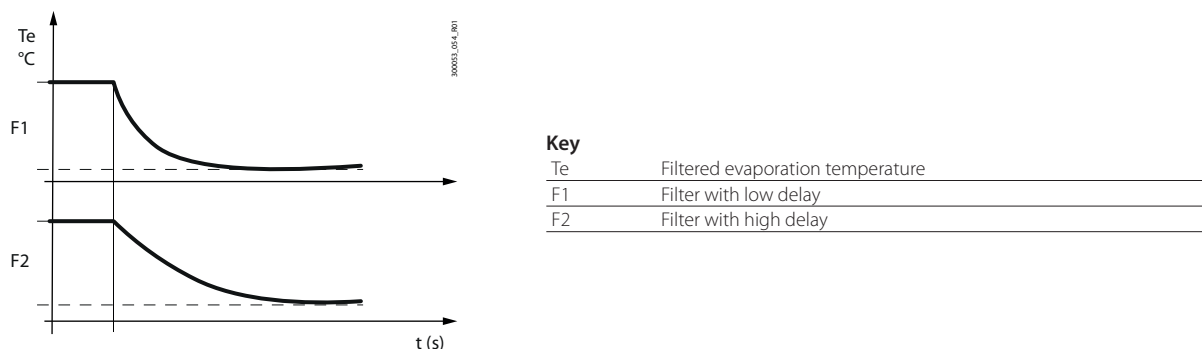


Fig. 5.g

When the filtered evaporation temperature falls below the alarm threshold, a counter is activated, and the counter time-out is either increased or decreased based on the deviation of the evaporation temperature from the frost protection threshold, until reaching zero when the deviation from the threshold it is greater than the differential, following a hyperbolic trend. This trend imitates the actual behaviour of ice formation and ensures better protection. The following diagram shows the trend in the alarm delay time according to the deviation from the alarm threshold, using the following values: delay time at 1K=60s; differential=30K. At the threshold the delay is equal to 10 times the set value (600s in the example).

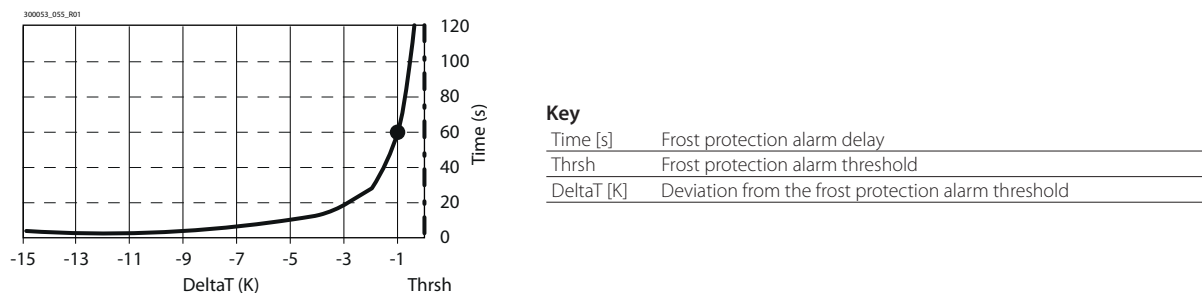


Fig. 5.h

#### Frost protection alarm operation:

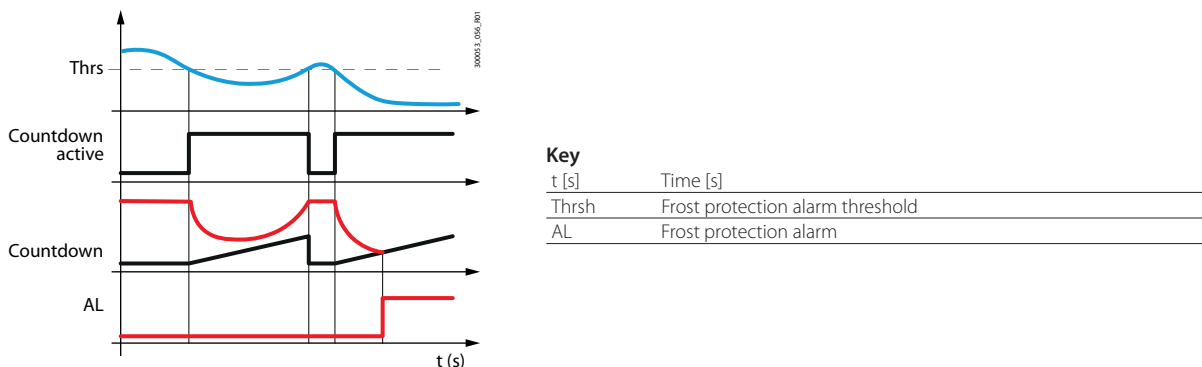


Fig. 5.i

The value of the delay (at 1K) in the previous example refers to a plate evaporator; if a tube bundle evaporator is used, which has greater thermal inertia, the delay time (at 1K) can be increased to a suitable value. The following table shows the recommended values for the alarm threshold (with pure water), differential and delay, according to the type of evaporator used.

Code	Description	Recommended values based on the heat exchanger	
		Tube bundle	Plate
U050	User side frost protection: alarm threshold	-0.3 °C	-1.2 °C
U051	User side frost protection: differential	30 °C	30 °C
U052	User-side frost protection: delay time at 1K	90 s	60 s

Tab. 5.g

With pure water, the frost protection threshold must be set just below zero (from -0.8°C to -1.5°C) to account for the heat transfer temperature gradient across the metal between the refrigerant and the water. For tube bundle heat exchangers, values close to zero (above -0.5°C) should be considered, to guarantee better protection due to their specific mechanical construction.

### 5.3.2 Frost protection threshold with glide (R407C)

A correct frost protection threshold also needs to consider the minimum temperature reached inside the evaporator. When using refrigerants without glide or with minimum glide (e.g. R410A, R134a), the value coincides with the pressure-temperature conversion (dew) of the transducer fitted on the suction pipe, while for refrigerants with glide (e.g. R407C), the value to be used is lower than the pressure-temperature conversion (in the case of R407C it is 5-6°C). The following diagram clearly shows the difference between the two temperature values ( $T_{in}$  and  $T_{out}$ ) at the evaporation pressure ( $P_{evap}$ ) due to the "glide" effect of the refrigerant.

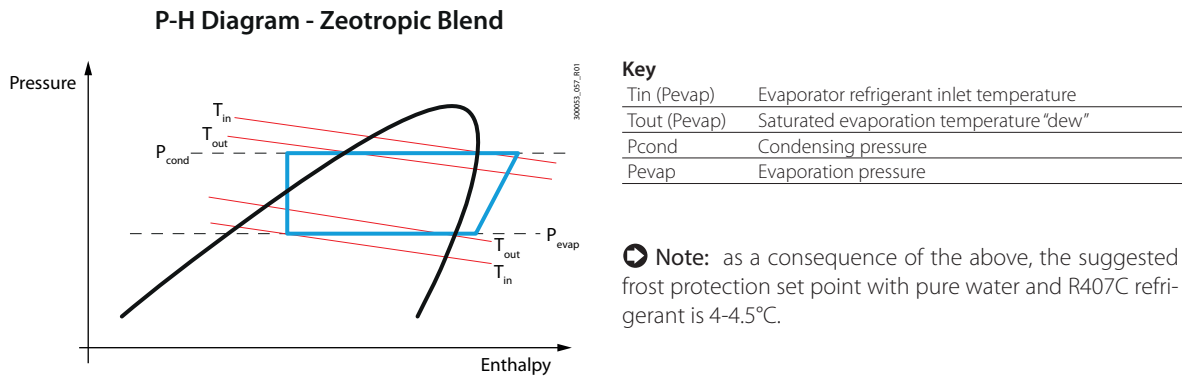


Fig. 5.j

### 5.3.3 Frost protection alarm with water temperature

The frost protection alarm uses the water delivery probe (user) in cooling mode, while in heating mode, on water/water units, it uses the water temperature. When there is a frost alarm, the corresponding circuits are shut down. When the temperature is below the alarm threshold, the alarm is activated, and it is reset when it rises back above the threshold plus a differential.

User	Code	Description	Def	Min	Max	UOM
S	U050	User side frost protection: alarm threshold	-0.8	-99.9	999.9	°C
S	U051	User side frost protection: differential	30.0	0.0	999.9	K

### 5.3.4 Frost prevention

The frost protection threshold on the evaporation temperature is used as the minimum evaporation temperature threshold for frost prevention. Prevention is applied by limiting circuit capacity when the threshold is exceeded and activating on the frost protection heater, if configured. For details on configuring the frost protection heater, see the next paragraph, par 5.3.5

**Note:** to ensure correct user-side frost protection, at least one probe - evaporation pressure/temperature or delivery water temperature - must be configured. For further details, see par 2.12.5 Disabling frost protection and/or free cooling when no probe is configured.

### 5.3.5 Frost protection management with two circuits

#### Frost protection management on Legacy models

The "Legacy" model for backward compatibility allows frost protection control only on the water temperature.

For units with a common evaporator (F003 = 0), frost protection control uses the common delivery temperature and the frost protection alarm shuts the unit down. If the common delivery temperature probe is not configured, frost protection control is disabled.

For units with two independent evaporators (F003 = 1), frost protection control is managed independently on each circuit. In this case, the frost protection alarm only stops the corresponding circuit. It can be normal for one circuit to stop due to a frost protection alarm while the other continues operating, when there are no additional alarm conditions.

Frost protection control uses the water outlet temperature probe on each evaporator.

If no outlet temperature probe is configured, frost protection control is disabled

#### Frost protection management on the standard model

The standard model does not manage independent evaporators (F003 = 0, not modifiable). Frost protection control can be selected to use the evaporation pressure/temperature or water temperature.

Frost protection control on evaporation pressure/temperature is managed independently on each circuit. The frost protection alarm only stops the corresponding circuit. Frost protection control uses the evaporation temperature (see par 5.3.1 for further details). If frost protection control is set on the water temperature, the frost protection alarm shuts the unit down.

If no frost protection control probe is configured, frost protection control is disabled

The following table illustrates frost protection management on a case-by-case basis for units with two circuits. For single-circuit units, management is practically the same, with only the difference that the frost protection alarm always shuts the unit down.

µChiller	Frost protection (U082)	Device	Unit status	Management
Standard	On water and/or on evaporation probe	Source User	OFF	Frost protection control is only performed on circuit 1, using the outlet temperature probe. When the frost protection threshold is reached, alarm signal A28 is activated. The heater is activated, where configured.
Standard	On water	User (CH) Source (HP WW)	ON	The standard µChiller does not manage two independent evaporators, each with its own outlet probe, but rather manages frost protection control using the common delivery temperature probe, which can only be configured on circuit 1. Frost protection control only uses this probe. The frost protection alarm shuts the unit down. The frost protection heater is activated if configured.
Standard	On evaporator probe	User (CH) Source (HP WW)	ON	Frost protection control is performed on both circuits independently, each with its own evaporation pressure/temperature probe. The frost protection alarm only stops the corresponding circuit. The heater in the circuit with the frost protection alarm is activated. If there are no additional alarm conditions, the other circuit continues operating normally.
Legacy	On water	User (CH) Source (HP WW)	OFF	Frost protection control is only performed on circuit 1. The common delivery temperature probe is used. The frost protection heater is activated on both circuits. The frost protection heater and auxiliary heater are activated if configured.
Legacy	On water	User (CH) Source (HP WW)	ON	<b>1 - Evaporators with common water circuit (F003 = 0)</b> Frost protection control uses the common delivery temperature probe. The frost protection heater and auxiliary heater are activated if configured.  <b>2 - Independent evaporators (F003 = 1)</b> Frost protection control is managed independently using the delivery temperature in each circuit. If there are no additional alarm conditions, the other circuit continues operating normally. The frost protection heater and auxiliary heater are activated if configured.

Tab. 5.h

#### Notice:

- The frost protection heater is always controlled based on its position and the unit operating mode, heating or cooling. See par. 5.6.7
- The second frost protection heater will only be linked to the frost protection control function on the second circuit and will never be used as the second frost protection stage.

### 5.3.6 Frost protection with the unit OFF

When the unit switched off, µChiller provides frost protection: the water is prevented from freezing by activating a pump and/or frost protection heater. When the water temperature in the heat exchangers reaches the frost protection set point, the selected device is activated. The probe used is the one located on the user heat exchanger outlet and source heat exchanger inlet. The following devices can be activated:

- heater;
- pump;
- heater and pump.

The frost protection alarm signal is shown even if the unit is off.

Considering that there is only one digital output per circuit for the heaters, the installation position of the frost protection heater needs to be selected using parameter U088, between:

- user
- source
- user and source (one digital output for both heaters)

### 5.3.7 Frost protection heater configuration

To correctly configure the frost protection heater, in addition to setting parameter U088, the digital output also needs to be set as “frost protection heater”. Only one heater can be configured per circuit. For further details also see par. 6.6

User	Code	Description	Def	Min	Max	UOM
S	U053	Unit OFF: frost protection set point	4.0	-99.9	999.9	°C
S	U054	Unit OFF: frost protection differential	2.0	0.0	99.9	K
S	U075	Frost protection type - 0=Heater 1=Pump 2=Heater/pump	2	0	2	-
S	U088	Frost protection heater position - 0 = User 1 = Source 2 = User/Source	0	0	2	-

The frost protection heater is also activated in the event of an frost protection alarm when the unit is ON, after the unit and/or circuit is stopped.

## 5.4 Compressor rotation

If there is just one compressor, the temperature control request will be exactly the same as the request that the compressor needs to satisfy. On units with two compressors, µChiller manages rotation in order to balance compressor operating hours and starts, so as to best deliver the required capacity.

### 5.4.1 Type of rotation

µChiller starts and stops the compressors based on:

- FIFO rotation (First In First Out), meaning the first compressor to start will also be the first to stop;
- activation time: the first compressor to start will be the one with the lowest number of operating hours.

If the circuit is equipped with a variable-speed (BLDC) compressor, this will always be the first to start and the last to stop.

User	Code	Description	Def	Min	Max	UOM
M	C048	Compressor rotation type - 1=FIFO, 2=Time	1	1	2	-

### 5.4.2 Capacity distribution

µChiller manages the most suitable capacity distribution between the circuits so as to increase overall unit efficiency. The behaviour of capacity distribution varies based on:

- whether there are 1 or 2 circuits;
- the type of compressor(s) used: modulating (BLDC) or fixed speed;
- the ratio between compressor capacities.

To avoid simultaneous starts or stops of several compressors, there are two fixed minimum delays: one between starts (30 s) and the other (10 s) between stops.

#### Compressor capacity distribution in steps

Below is an example of capacity distribution with two circuits in the tandem configuration with two fixed-speed compressors (scroll), each with the same capacity, and FIFO rotation.

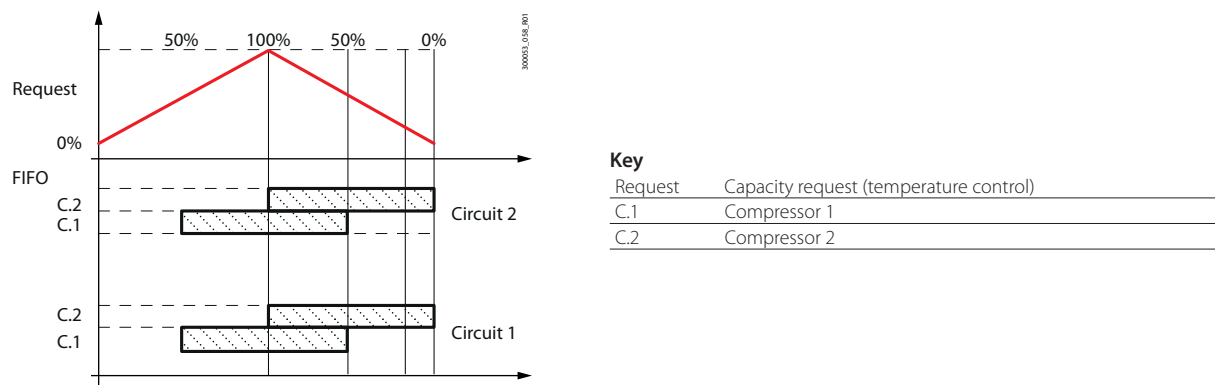


Fig. 5.k

### Capacity distribution with BLDC compressors

If the circuit is equipped with a BLDC compressor, this will always be the first to start and the last to stop. Circuit operation is modulated so as to meet the capacity request, adjusting BLDC compressor speed and controlling the activation of ON-OFF compressors.

**Note:** the configuration envisaged requires the capacity of the ON/OFF compressor to be equal to 60% of the capacity of the BLDC compressor (at maximum speed).

### 5.4.3 Rotation due to alarm

In the event of a compressor alarm, the next compressor available will be switched on as a replacement if the temperature control request is sufficiently high as to warrant starting another compressor.

### 5.4.4 Force rotation (destabilisation)

Some compressor manufacturers specify that on units with multiple compressors, the compressors need to be rotated after a certain period of inactivity, even if control is stable.

The destabilisation function, which meets this requirement:

- can be enabled by parameter;
- avoids refrigerant migration during long periods of inactivity;
- can also be used to keep all the compressors at operating temperature.


User	Code	Description	Def	Min	Max	UOM
M	C020	Maximum circuit destabilisation time	240	5	999	min
M	C044	Enable destabilisation - 0/1=No/Yes	1	0	1	-

## 5.5 Compressor management

µChiller manages scroll compressors with direct starting or modulating BLDC compressors (scroll and rotary).

A maximum of 4 scroll compressors are available in tandem configuration on two circuits; in the High Efficiency models, with BLDC compressors, the maximum is 1BLDC+1On-Off per circuit.

The flow chart below shows the process for calculating the request to the compressors:

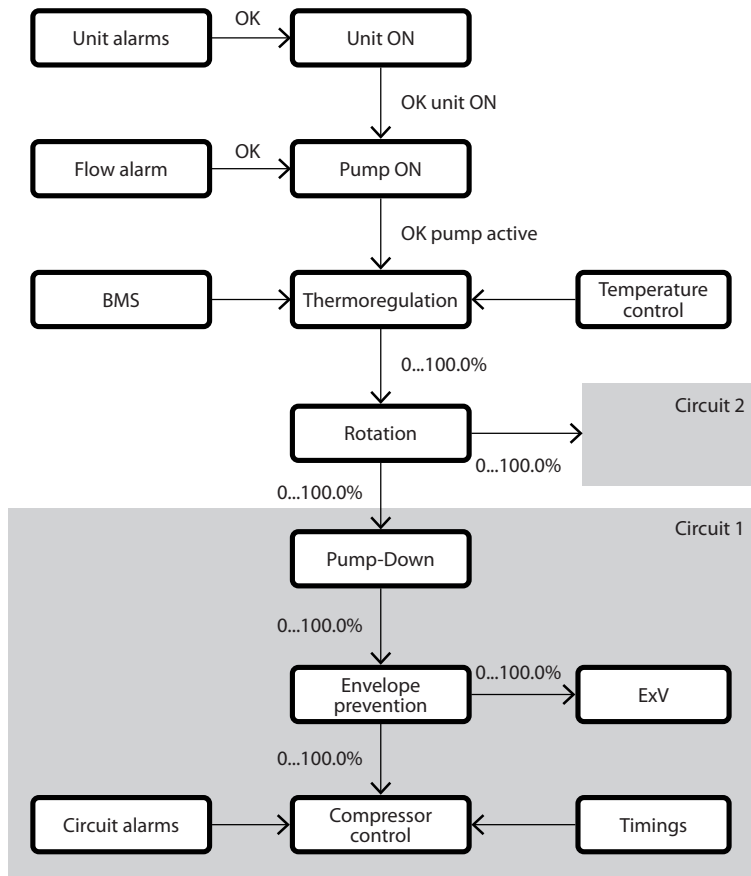

**Note:** for the sake of simplicity, the parameters are shown for just one compressor and one circuit, therefore all the compressors and circuits on the unit will have the same settings.

Fig. 5.1

### 5.5.1 Predefined BLDC compressors

The type of BLDC compressor can be chosen from the list of compressors available on KSA (ksa.carel.com), under:

KSA / SW&Support / Configuration & Updating software / ST Configuration / BLDC Compressors

When selecting a specific type of compressor, the following parameters are set based on the compressor manufacturer's technical specifications:

1. compressor motor:
  - all the characteristic electrical parameters of the compressor motor;
  - minimum and maximum frequency settings, acceleration and deceleration ramps.
2. compressor envelope:
  - all the characteristic points that define the shape of the compressor envelope;
  - maximum discharge temperature (compressor outlet).
3. compressor envelope management:
  - MOP and pressure difference (DeltaP), minimum ExV opening parameters;
  - working point control parameters;
  - prevention parameters.

### 5.5.2 Safety times

µChiller guarantees compliance with compressor safety times, such as:

- minimum on time;
- minimum off time after deactivation request from controller;
- minimum time between consecutive starts.

User	Code	Description	Def	Min	Max	UOM
M	C012	Min compressor on time	180	30	999	s
M	C013	Min compressor off time	60	30	999	s
M	C014	Min time between consecutive compressor starts	360	0	999	s
M	C015	Compressor load up time	30	5	999	s
M	C016	Compressor load down time	10	5	999	s

### 5.5.3 BLDC compressor start-up

µChiller manages the start-up of BLDC compressors in accordance with the manufacturer's specifications: on starting, the compressor is brought to start-up speed and kept at that speed, irrespective of the control request, for the entire minimum on time. At the end of this period, the speed is modulated by the controller, based on:

- request;
- position of the working point in relation to the compressor envelope (see par. "Prevention actions").

**Note:** if at start-up the differential pressure is greater than the maximum allowed start-up threshold, the compressor remains on call awaiting the pressure to drop below the threshold. If after 5 minutes the compressor has not yet started, a specific alarm will be activated (A43/A76). However, this alarm still allows the other compressors to start.

User	Code	Description	Def	Min	Max	UOM
M	P021	Max. deltaP at start-up	900.0	0.0	2000.0	kPa

### 5.5.4 BLDC oil recovery

When the refrigerant gas speed in the circuit is below the value required to entrain the oil, operation periodically needs to be set to a sufficient value to guarantee oil return to the compressor crankcase.

The function forces an increase in BLDC compressor capacity for a specific time, when the circuit has remained at low load (par. P007) for a minimum time (par. P008).

User	Code	Description	Def	Min	Max	UOM
M	P018	Enable oil recovery - 0/1=No/Yes	0	0	1	-
M	P007	Oil recovery: min speed for activation	35.0	0.0	999.9	rps
M	P008	Oil recovery: comp. operating time at low speed	15	0	999	min
M	P009	Oil recovery: force comp. speed time	3	0	999	min
M	P010	Oil recovery: force comp. speed value	50.0	0.0	999.9	rps

### 5.5.5 Tandem BLDC oil equalisation

A solenoid valve is activated to take the oil from the crankcase overflow on each compressor and put it back in circulation (for example, at the inlet to the common manifold). If the function is enabled, when the fixed speed compressor starts, the solenoid valve is activated for an initial time (par. P011), and then cyclically for a time (par. P012), with a pause that increases over time from the minimum value (par. P013) to the maximum value (par. P014) in the specified time (par. P015).

User	Code	Description	Def	Min	Max	UOM
M	P017	Enable oil recovery - 0/1=No/Yes	0	0	1	-
M	P011	Oil recovery: min speed for activation	30	0	999	s
M	P012	Oil recovery: comp. operating time at low speed	3	0	999	s
M	P013	Oil recovery: force comp. speed time	1	0	999	min
M	P014	Oil recovery: force comp. speed value	15	0	999	min
M	P015	Equalizzazione olio: tempo incremento elettrovalvola chiusa	20	0	999	min

### 5.5.6 Compressors with capacity control

Compressors with capacity control can be set in the compressor plus valve configuration, on a maximum of two circuits. For compressors with capacity control, the FIFO or timed rotation logic will refer to the circuit and not to the compressor valves.

By setting compressor capacity control with parameter F027, two compressors per circuit are automatically configured (C047=1). C047 cannot be modified.

The second compressor digital output is managed as a capacity control valve.

The logic of the digital output is identical to that of the compressors, as set by the same parameter C036. It may be necessary to add an external device to reverse the operating logic of the capacity control valve.

**Example:** if circuit 1 starts when power returns, compressor 1 starts at part capacity, then the valve is managed as the second step, so that the compressor works at the highest efficiency. If less capacity is needed, first the valve that manages compressor capacity will be deactivated and then the compressor itself. There is no rotation between compressor and valve. When capacity is needed again, the second circuit with compressor 2 will be activated and, subsequently, if required, the corresponding valve. On deactivation, the valve will be managed first, and only then the compressor.

REQUEST	DIGITAL OUTPUTS			
	Comp 1 Circ 1	Valve 1 Circ 1	Comp 1 Circ 2	Valve 1 Circ 2
0% to 25%	OFF	OFF	OFF	OFF
25% to 50%	ON	OFF	OFF	OFF
50% to 75%	ON	OFF	ON	OFF
75% to 100%	ON	ON	ON	OFF
100%	ON	ON	ON	ON

Tab. 5.i

User	Code	Description	Def	Min	Max	UOM
M	F027	Enable compressor capacity control 0/1=No/Yes	0	0	1	-

### 5.5.7 Prevent on condensing temperature with OnOff compressors

If more than one OnOff compressor is available on the unit, a check and consequent preventive action is carried out on the condensing pressure. Control is always active (it cannot be disabled by parameter). The activation threshold is set by parameter C017 minus 1°C; i.e. the prevent action starts 1°C below the condensing temperature value set for C017. The differential to reset the prevent action is 5°C (not modifiable).

If the circuit has both compressors on and the pressure exceeds the value C017 - 1°C, then one of the two compressors is switched off (according to the compressor rotation). The prevent action ends when the condensing temperature falls below the 5°C differential.

If the prevent function is not sufficient to guarantee correct operation of the unit and the condensing temperature exceeds C017, then the high condensing pressure alarm management is activated.

User	Code	Description	Def	Min	Max	UOM
M	C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C



## 5.6 BLDC compressor protectors

To prevent the compressor from working outside the safety limits specified by the manufacturer,  $\mu$ Chiller provides controls the operating limits (defined as the envelope) of BLDC compressors. In addition to the operating limits specified by the manufacturer, the maximum condensing temperature (par. P001) and minimum evaporation thresholds (par. P000) can be customised; these custom thresholds are considered only if they are more restrictive than the manufacturer's limits. On-Off compressors have no envelope data: the operating limits can be set using the parameters for the maximum high pressure threshold equivalent temperature (par. C017), frost protection alarm thresholds (par. U050 and S057) and MOP threshold (to control the maximum evaporation temperature, par. E020 and E022).

Utente	Cod.	Descrizione	Def	Min	Max	U.M.
S	P000	Min evaporation temp.: custom limit	-25.0	-99.9	999.9	°C/°F
S	P001	Max condensing temp.: custom limit	70.0	-99.9	999.9	°C/°F
M	C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C
M	C018	Min low pressure threshold (LP)	0.2	-99.9	99.9	bar
S	U050	User side frost protection: alarm threshold	-0.8	-99.9	999.9	°C
S	S057	Source frost protection: alarm threshold	-0.8	-999.9	999.9	K
M	E020	MOP in cooling: threshold	30.0	-60.0	200.0	°C
M	E022	MOP in heating: threshold	20.0	-60.0	200.0	°C

Di seguito la descrizione delle zone di lavoro di un involucro generico di un compressore BLDC:

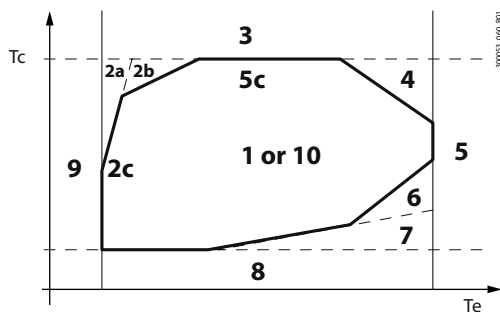


Fig. 5.m

Zone	Par.	Description
1		Zone inside the operating limits (the prevention function is still active to prevent operation outside of the limits)
2a		Maximum compression ratio 1
2b		Maximum compression ratio 2
3		Maximum condensing pressure
3c	P001	Custom maximum condensing pressure threshold
4		Maximum motor current
5		Maximum evaporation pressure
6		Minimum compression ratio
7		Minimum differential pressure
8		Minimum condensing pressure
9		Minimum evaporation pressure
9c	P000	Custom minimum evaporation pressure threshold
10		High discharge temperature (but working pressure inside the envelope)

Tab. 5.j

When the compressor working point is outside of the envelope, an alarm delay starts counting: if the working point remains outside of the envelope, when the delay expires, a specific alarm is activated that stops the compressor; if, on the other hand, the working point returns back inside the envelope limits, the alarm delay is reset.

The high condensing pressure limit is determined by the minimum between:

- the nominal compressor threshold;
- the threshold modifiable by Service (par. P001).

The high evaporation pressure limit is determined by the minimum between:

- the nominal compressor threshold;
- the set MOP threshold (par. E020: chiller and E022: heat pump);

The low evaporation pressure limit for the prevention action is determined by maximum between:

- the nominal compressor threshold;
- the threshold modifiable by Service (par. P000);
- the frost protection limit, depending on the mode (par. U050 in cooling and par. S057 in heating with water/water units).


In addition to the operating limits defined by the shape of the envelope, there is also (heat pump versions only) a "Maximum discharge temperature" limit (specified by the compressor manufacturer), at which the compressor is shut down.

## 5.7 BLDC comp. alarm prevention

The evaporation and condensation pressures determine a working point in a zone of the envelope, and depending on the zone, the controller applies corrective actions to maintain or return BLDC compressor operation within the limits.

### 5.7.1 Prevention actions for BLDC compressors

Below is the description of the working zones in a generic envelope for BLDC compressors:

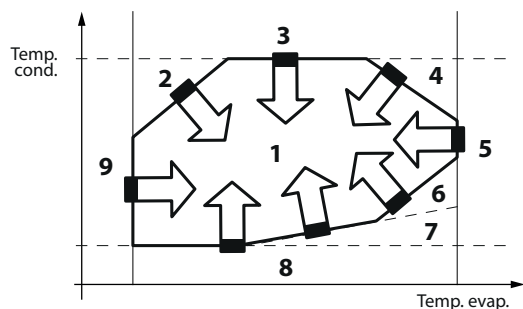

Zone	Description
1	Zone inside the operating limits
2	Prevention due to high compression ratio
3	Prevention due to high condensing pressure
4	Prevention due to high motor current
5	Prevention due to high evaporation pressure
6	Prevention due to low compression ratio
7	Prevention due to low differential pressure
8	Prevention due to low condensing pressure
9	Prevention due to low evaporation pressure

Tab. 5.a

Fig. 5.b

To allow the compressor to work inside the envelope, specific prevention actions are adopted that adjust circuit capacity, the source fan set point and the opening of the ExV valve.

In particular, the actions involving circuit capacity are:

- decrease the rate at which the capacity request from the temperature controller increases/decreases when approaching the limit of the envelope;
- limit/increase circuit capacity.

The action on the ExV valve is applied by varying the MOP threshold (maximum evaporation temperature): the algorithm follows the set point, decreasing valve opening, and therefore reducing the mass flow of refrigerant, which in turn lowers the evaporation temperature. This action is applied with both BLDC compressors and fixed-speed compressors.

The actions involving the rate of capacity variation start when the working point is a set distance from the compressor operating limits. These actions are only possible with BLDC compressors.

In the event of fixed-speed compressors, the only actions possible on the circuit are to limit capacity via the number of the compressors on: this is implemented as soon as the working point exceeds the maximum condensing temperature (par. C017) or minimum evaporation temperature (par. U050/S057) or minimum evaporation threshold (par. C018) - or the minimum of the two.

Below are details of the various actions to prevent the operating limits from being exceeded; action 1 refers to the control action (before exiting the envelope); action 2 to the limiting action (working point already outside of the envelope).

#### Low evaporation pressure prevention (zone 9)


The low evaporation pressure limit for the prevention action is determined by maximum between:

- the nominal compressor threshold (BLDC only);
- the threshold set by the "Manufacturer": par. C018/P000 for On-Off/BLDC compressor;
- the frost protection limit, depending on the operating mode: par. U050 in cooling mode and S057 in heating mode with water/water units.

Device	Description
BLDC compressor	1. Decrease the rate of capacity increase.
	2. Limit capacity
Tandem on-off compressors	1. -
	2. Shutdown a compressor
ExV	-
Fan	-

### High compression ratio prevention (zone 2)

A high compression ratio is a thermal limit of compressor operation: normally control is activated at the limit of the envelope, reducing capacity when the limit is exceeded; if a probe is fitted to measure discharge temperature (HP version only) and if the temperature approaches the limits, compressor capacity will be modulated so as to managed the critical condition. A specific algorithm initially slows down the increase in capacity, until stopping it completely when at the set point (5°C below the maximum limit); if the temperature increases further, the algorithm gradually and slowly reduces capacity, taking into account compressor thermal inertia.

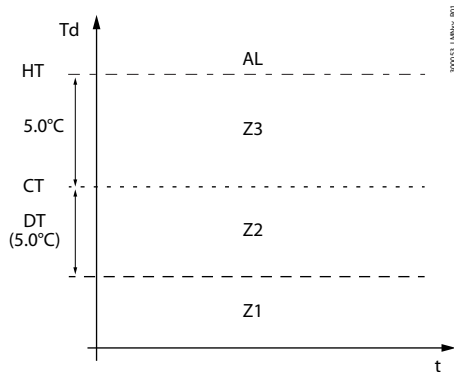
**Key**

Td	Discharge temperature
HT	Low discharge temperature alarm threshold
CT	High discharge temperature control threshold
DT	Control action deviation
AL	High discharge temperature alarm zone
Z3	Capacity reduction zone
Z2	Acceleration control zone
Z1	Normal operating zone

Fig. 5.n

Device	Description
BLDC compressor	1. Decrease the rate of capacity increase. 2. Limit capacity
Tandem on-off compressors	-
ExV valve	-
Fan	-

### High condensing pressure prevention (zone 3)

Device	Description
BLDC compressor	1. Decrease the rate of capacity increase. 2. Limit capacity
Tandem on-off compressors	1. - 2. Shutdown a compressor
ExV valve	-
Fan	-

### High motor current prevention (zone 4)

Device	Description
BLDC compressor	1. Decrease the rate of capacity increase. 2. Limit capacity
Tandem on-off compressors	1. - 2. Shutdown a compressor
ExV valve	MOP with specific algorithm
Fan	-

### High evaporation pressure prevention (zone 5)

Device	Description
BLDC compressor	1. Decrease the rate of capacity reduction. 2.
Tandem on-off compressors	-
ExV valve	MOP
Fan	-

### Low compression ratio prevention (zone 6)

Device	Description
BLDC compressor	1. Decrease the rate of capacity reduction. 2. Increase capacity
Tandem on-off compressors	-
ExV valve	Variable MOP
Fan	Increase condensing pressure set point/decrease evaporation pressure setpoint

### Low differential pressure prevention (zone 7)

Device	Description
BLDC compressor	1. Decrease the rate of capacity reduction. 2. Increase capacity
Tandem on-off compressors	-
ExV valve	Variable MOP
Fan	Increase condensing pressure set point/decrease evaporation pressure setpoint

### Low condensing pressure prevention (zone 8)

Device	Description
BLDC compressor	1. Decrease the rate of capacity reduction. 2. Increase capacity
Tandem on-off compressors	-
ExV valve	-
Fan	-

## 5.8 Compressor alarms

If abnormal conditions occur and the prevention actions are not effective, the compressor will be shut down so as to avoid damage to the compressor itself or other unit components, i.e. the control algorithm stops the compressors and closes the expansion valve.

### Compressor shutdown

The compressors will be available again after the:

- minimum compressor off time (par. C013);
- minimum time between consecutive compressor starts (par. C014).

User	Code	Description	Def	Min	Max	UOM
M	C013	Min compressor off time	60	30	999	s
M	C014	Min time between consecutive compressor starts	360	0	999	s

### Compressor delay at start-up/in operatio

Compressor start-up is a critical phase. µChiller thus manages certain alarms differently, in order to switch smoothly from start-up to normal, steady operation. These alarms are:

- low differential pressure;
- out of envelope alarm.

There are thus two delays for these alarms:

- delay at start-up;
- delay in operation.

The alarm condition is ignored when the compressor is off and during the start-up phase. When the unit reaches steady operation, the condition causes the corresponding alarm once the delay has elapsed.

Behaviour will thus be as follows

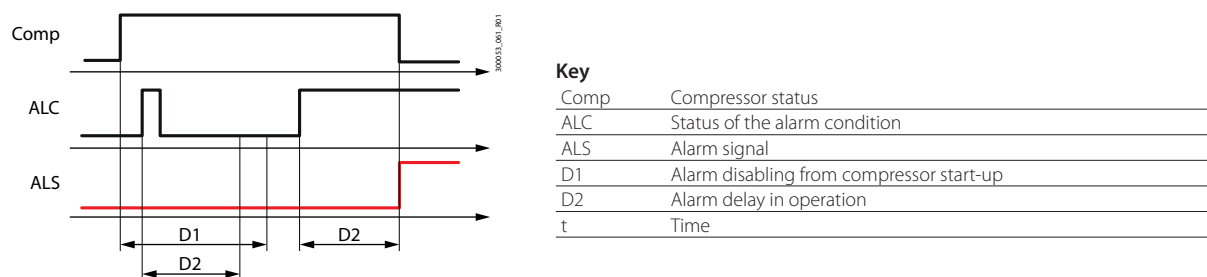


Fig. 5.0

## 5.9 Power+ Speed drive

When the unit is fitted with a BLDC compressor, this is controlled by the Power+ speed drive, connected to the FBus serial port on µChiller via the Modbus circuit 1 protocol with a baud rate of 19200 bps. Use a specific cable for RS485 (AWG20-22 with 1½ twisted pair plus shield). See the Power+ instruction manual +0300048EN.

## 5.10 Expansion valve driver

The driver to manage the electronic expansion valve is a fundamental device for the µChiller controller. This is used to safely manage the compressor and thus the circuit, constantly controlling the discharge temperature and the position of the working point inside the compressor envelope. The solution provided manages unipolar valves up to a certain cooling capacity (Carel E3V - cooling capacity up to 90- 100 kW) with the built-in driver (DIN model only) and bipolar valves with higher capacities, using the external EVD Evolution driver. This must be connected to the FBus serial port on µChiller via the Modbus circuit 1 protocol with a baud rate of 19200 bps. Use a specific cable for RS485 (AWG20- 22 with 1½ twisted pair plus shield). See the chapter "Installation".

**Note:**

- EVD Evolution is only used as an expansion valve positioner;
- if the ExV electronic expansion valve is used, the suction temperature probe is connected to input S3 (panel model) or S7 (DIN rail model). See the functional diagrams. For the installation guidelines, see document +040010025, available at [www.carel.com](http://www.carel.com).

## 5.11 Control of the expansion valve

The control logic manages various functions:

- communication with the EVD Evolution driver, if used (read/write parameters via FBus serial port);
- control of suction superheat (SSH);
- low superheat control and alarm (Low SH);
- minimum evaporation temperature control and alarm (LOP);
- maximum evaporation temperature control and alarm (MOP);
- control of cooling capacity, so as to position the valve correctly in the transient stages according to circuit control status;
- control algorithm that calculates the valve opening steps;
- valve opening value sent to the valve driver.

If the EVD Evolution driver is offline, all the compressors are stopped immediately.

### Dedicated electronic expansion valve parameters

Certain parameters relating to the electronic expansion valve vary according to the operating mode:

- chiller;
- heat pump. These are:
- superheat parameters (set point and PID);
- alarm thresholds and integral actions for protection functions: LOP, MOP and Low SH

## 5.12 Ultracap module and blackout management (DIN only)

In the event of a blackout and if the Ultracap module is connected to uChiller, the following actions are performed:

1. Serious alarm "A90 - Power failure alarm": the alarm will be saved in the alarm log
2. Unit safety shutdown with the connected devices switched off (compressor, fan ...)
3. Forced closing of the unipolar ExV valve.
4. The display is switched off to save energy and extend the operating autonomy of the Ultracap module as much as possible

In the event where power returns before the Ultracap module has run out of power, the alarms are automatically reset and the unit resumes normal operation. In any case, the blackout signal is always available in the alarm log as alarm A90.

## 5.13 Source pump

µChiller manages one source-side pump (water/water units only). In the same way as for the user pumps, the source pump is activated when the unit is switched on, and a shutdown delay after the last compressor stops can be set.

The source pump can be activated:

- when the unit is switched on, and after a set delay for switching off after the unit has been switched off;
- when the first compressor starts, and after a set delay for switching off after the last compressor stops;
- via temperature control. Below is a table summarising the probes used for controlling the pump in each configuration:

Circuit	Probes used for control	
	Chiller	Heat pump
1	Condensing press./temp. circuit 1	Evaporation press./temp. circuit 1
2	Condensing press./temp. circuit 2	Evaporation press./temp. circuit 2

Tab. 5.k

µChiller manages:

- frost protection with the unit off: the pump is started so as to activate fluid circulation (when the unit is on the function is disabled).
- pump anti-blocking: if the pump is off for more than a week, it is activated for 3 seconds

User	Code	Description	Def	Min	Max	UOM
S	S072	Source pump activation 0=Always on 1= On with compressor on 2= Control on condensing press./temp.	0	0	2	-
S	S028	Source pump in cooling: set point	30.0	-999.9	999.9	°C
S	S029	Source pump in heating: set point	10.0	0.0	99.9	°C
S	S034	Source pump: differential in cooling	15.0	0.0	99.9	K
S	S035	Source pump: differential in heating	5.0	0.0	99.9	K

### 5.13.1 Source pump and/or fan alarm

µChiller provides the possibility to configure a digital input, for each circuit, to signal a problem on the source side, such as a fan or pump overload. Alarms A88 and A89 are generated respectively. Each digital input affects its own circuit. For units with two circuits, with alarms on both inputs, the unit will be switched off; otherwise each alarm only stops its own circuit. For single-circuit units, the alarm (A88) shuts down the unit. For two-circuit units with S064 = 1 (common water/air circuit), the "Source fan/pump 2 alarm" will be ignored. Both A88 and A89 have manual reset without delay.

Also see:

- 2.12.2 Digital input configuration
- 8.2 Alarm list

## 5.14 Logs

µChiller manages two logs that record the recent operation of the unit.

The two logs have different sampling and variable settings. The features of each are shown below.

**LOG 1:** Troubleshooting

**Type:** periodical

**No. of samples per variable:** 720

**Sampling time:** 5 s

**Total storage time:** 1h

#	Description	Type	UOM
1	Water temperature currently used for control	REAL	C
2	Actual main control set point	REAL	C
3	User delivery water temperature	REAL	C
4	Unit status (0=OFF from remote DI, 1=OFF from keypad, 2=OFF from scheduler, 3=OFF from BMS, 4=OFF from CH/HP changeover mode, 5=OFF from alarm, 6=Unit defrosting, 7=Unit ON, 8=Manual mode)	USINT	-
5	Suction pressure - circuit 1	REAL	bars
6	Suction pressure - circuit 2	REAL	bars
7	Discharge pressure - circuit 1	REAL	bars
8	Discharge pressure - circuit 2	REAL	bars
9	Discharge temperature - circuit 1	REAL	C
10	Discharge temperature - circuit 2	REAL	C
11	Suction temperature - circuit 1	REAL	C
12	Suction temperature - circuit 2	REAL	C
13	EEV position - circuit 1	UINT	%
14	EEV position - circuit 2	UINT	%
15	Compressor 1 status - circuit 1	BOOL	-
16	Compressor 2 status - circuit 1	BOOL	-
17	Compressor 1 status - circuit 2	BOOL	-
18	Compressor 2 status - circuit 2	BOOL	-
19	BLDC: current rotor speed - circuit 1	REAL	rps
20	BLDC: current rotor speed - circuit 2	REAL	rps
21	Capacity request	REAL	%
22	User pump 1 status	BOOL	-
23	User pump 2 status	BOOL	-
24	Source fan inverter request - circuit 1	REAL	%
25	Source fan inverter request - circuit 2	REAL	%
26	Source fan 1 status - circuit 1	BOOL	-
27	Source fan 2 status - circuit 1	BOOL	-
28	Free cooling control ramp	REAL	%
29	User heater 1 status	BOOL	-
30	User heater 2 status	BOOL	-
31	User heater status	BOOL	-
32	Source outside air temperature;	REAL	C
33	User fan status	BOOL	-

#	Description	Type	UOM
34	Operating mode (0 = Cooling, 1 = Heating)	BOOL	-
35	Output command for 4-way reversing valve - circuit 1	BOOL	-
36	Output command for 4-way reversing valve - circuit 2	BOOL	-
37	Defrost status - circuit 1	UINT	-
38	Defrost status - circuit 2	UINT	-

Tab. 5.l

LOG 2: Control

Type: periodical

No. of samples per variable: 864

Sampling time: 5 min

Total storage time: 3 d

#	Description	Type	UOM
1	Actual main control set point	REAL	C
2	Water temperature currently used for control	REAL	C
3	Unit status (0=OFF from remote DI, 1=OFF from keypad, 2=OFF from scheduler, 3=OFF from BMS, 4=OFF from CH/HP changeover mode, 5=OFF from alarm, 6=Unit defrosting, 7=Unit ON, 8=Manual mode)	USINT	-
4	Compressor 1 status - circuit 1	BOOL	-
5	Compressor 2 status - circuit 1	BOOL	-
6	Compressor 1 status - circuit 2	BOOL	-
7	Compressor 2 status - circuit 2	BOOL	-
8	User pump 1 status	BOOL	-
9	User pump 2 status	BOOL	-
10	Operating mode (0 = Cooling, 1 = Heating)	BOOL	-

Tab. 5.m

## 5.15 Source fans

On units with two circuits,  $\mu$ Chiller manages the source (condenser) either separately (independent air circuits) or with one common air circuit, by setting a parameter: when there is a common air circuit, fan 1 works based on the higher request between circuit 1 and 2.

User	Code	Description	Def	Min	Max	UOM
S	S064	Type of source air circuit - 0 = Independent 1 = Common	0	0	1	-

Below is a table summarising the probes used for controlling the fans in each configuration:

Circuit	Probes used for control	
	Chiller	Heat pump
1	Condensing press./temp. circuit 1	Evaporation press./temp. circuit 1
2	Condensing press./temp. circuit 2	Evaporation press./temp. circuit 2

Tab. 5.n

The control mode changes based on the operating mode (chiller or heat pump).

### 5.15.1 Modulating/On-Off fans


The modulating fan can be configured on an analogue output (Y). On-off fans can be configured on a digital output. For the output configuration parameters see paragraphs 2.12.3 and 2.12.4

The following parameters refer to the source fan and are valid for both types of fan, modulating or OnOff.

User	Code	Description	Def	Min	Max	UOM
S	S065	Type of source fan 0/1=Modulating/ON-OFF	0	0	1	-
S	S028	Source fan in cooling: set point	30.0	-999.9	999.9	°C
S	S029	Source fan in heating: set point	10.0	0.0	99.9	°C
S	S031	Source fan in cooling: set point at start-up	45.0	0.0	999.9	°C
S	S032	Source fan: delay at start-up in cooling	240	0	999	s
S	S034	Source fan: differential in cooling	15.0	0.0	99.9	K
S	S035	Source fan: differential in heating	5.0	0.0	99.9	K
S	S036	Modulating source fan: min speed value	20.0	0.0	100.0	%
S	S037	Modulating source fan: max speed value	80.0	0.0	100.0	%

Tab. 5.o

The following diagram shows the two control modes (modulating or on-off) in chiller operation (cooling):

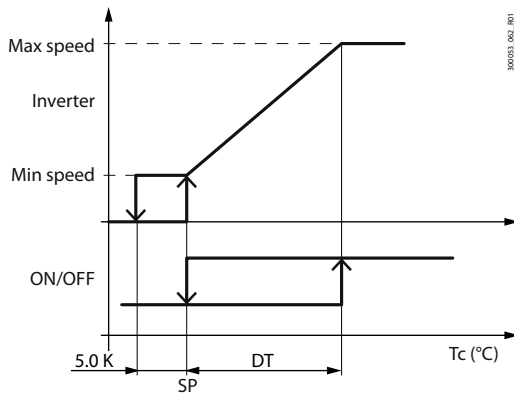

**Key**

Max speed	Modulating source fan: max speed value
Min speed	Modulating source fan: min speed value
SP	Control set point
DT	Control differential
Tc	Condensing temperature


Fig. 5.p

### 5.15.2 Control in chiller mode

Fan control may be modulating or ON-OFF and is based on the saturated temperature value, equivalent to the condensing pressure, limited by Tc max.

User	Code	Description	Def	Min	Max	UOM
S	C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C
S	S028	Source fan in cooling: set point	30.0	-999.9	999.9	°C
S	S034	Source fan: differential in cooling	15.0	0.0	99.9	K
S	S036	Modulating source fan: min speed value	20.0	0.0	100.0	%
S	S037	Modulating source fan: max speed value	80.0	0.0	100.0	%

The control diagram is shown below:

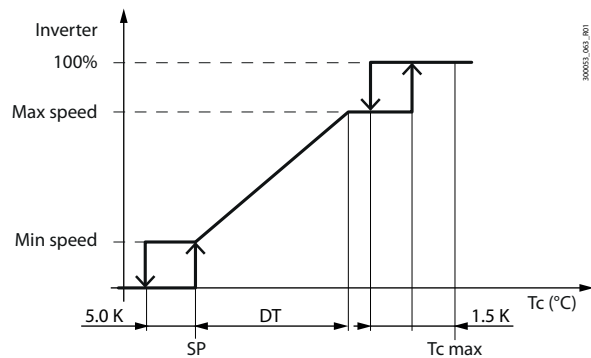

**Key**

Max speed	Modulating source fan: max speed value
Min speed	Modulating source fan: min speed value
SP	Control set point
DT	Control differential
Tc max	Maximum condensing temperature
Tc	Condensing temperature


Fig. 5.q

In the graph, some offsets are expressed with a numerical value, indicating that they are not modifiable but rather are fixed parameters. The current calculated set point value is displayed on the dashboard.

### Set point control

In chiller mode, a specific condensing temperature set point for starting the compressor can be set to a value that is higher than the nominal set point, so that the compressor can reach steady operation more quickly. The transition to the nominal set point is made gradually over a time equal to the delay at start-up.

User	Code	Description	Def	Min	Max	UOM
S	S031	Source fan in cooling: set point at start-up	45.0	0.0	999.9	°C
S	S032	Source fan: delay at start-up in cooling	240	0	999	s

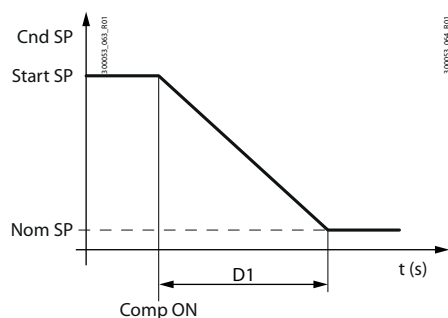

**Key**

Cnd SP	Condensing temperature set point
Start SP	Set point at start-up
Nom SP	Nominal set point
Cmp ON	Compressor activation
D1	Delay at start-up

Fig. 5.r



### 5.15.3 Control in heat pump mode

Fan control may be modulating or ON-OFF and is based on the saturated temperature value, equivalent to the evaporation pressure.

User	Code	Description	Def	Min	Max	UOM
S	C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C
S	S029	Source fan in heating: set point	10.0	0.0	99.9	°C
S	S035	Source fan: differential in heating	5.0	0.0	99.9	K
S	S036	Modulating source fan: min speed value	20.0	0.0	100.0	%
S	S037	Modulating source fan: max speed value	80.0	0.0	100.0	%

The control diagram is shown below:

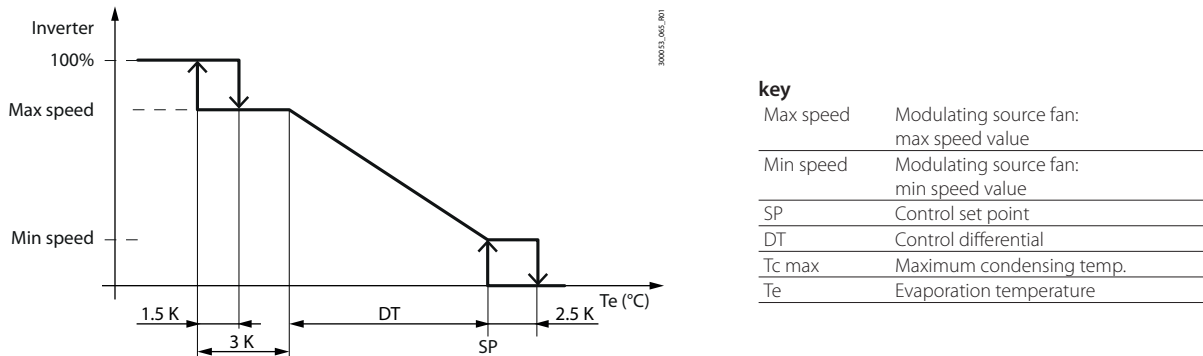


Fig. 5.s

In the graph, some offsets are expressed with a numerical value, indicating that they are not modifiable on the display but rather are fixed parameters. The current calculated set point value is displayed on the dashboard.

### 5.15.4 “Low noise” function

This function reduces the noise emitted by modulating fans by increasing the set point at night.

User	Code	Description	Def	Min	Max	UOM
S	S020	Enable noise reduction 0/1=No/Yes	0	0	1	-
S	S021	Noise reduction time band: start hours	22	0	23	h
S	S022	Noise reduction time band: start minutes	30	0	59	min
S	S023	Noise reduction time band: end hours	8	0	23	h
S	S024	Noise reduction time band: end minutes	30	0	59	min
S	S025	Source fan: noise reduction set point	45.0	0.0	999.9	°C

### 5.15.5 Fan anti-blocking function

For systems intended to operate in cold climates,  $\mu$ Chiller modulates fan speed so as to prevent the unit from shutting down due to frost formation. The function is activated when the outdoor temperature falls below a threshold, and, instead of turning off the fans, keeps them on at a minimum speed. If the outside temperature is reached when the fans are off, these are activated at start-up speed for a certain time, and then switch to the minimum speed.

User	Code	Description	Def	Min	Max	UOM
S	S016	Source fan: cold climate temperature threshold	-0.5	-999.9	999.9	°C
S	S017	Source fan: min cold climate speed	10.0	0.0	100.0	%
S	S018	Source fan: cold climate speed at start-up	50.0	0.0	100.0	%
S	S019	Source fan: cold climate speed at start-up time	5	0	300	s

### 5.15.6 Source fan alarm

A single alarm is available on  $\mu$ Chiller for the source fan and/or pump. See §5.12.1 for a detailed description of this alarm.

## 5.16 Free cooling

The free cooling (FC) function can be enabled only on chiller units. The type of free cooling is configured by parameter, and may be:

- air free cooling, on air/water units equipped with air- water heat exchanger coils upstream of the condenser coils and with modulating fan control;
- remote air free cooling (see the specific paragraph);
- water free cooling, on water/water units with mixing of the source water or via water- water heat exchanger upstream of the evaporator and a 3-way modulating valve on the free cooling circuit.

User	Code	Description	Def	Min	Max	UOM
S	U068	Free cooling: enable 0/1=no/yes	0	0	1	-
S	U069	Free cooling: activation differential	3.0	0.0	99.9	K
S	U070	Free cooling: hysteresis	1.5	0.0	99.9	K
S	U071	Design free cooling delta T	8.0	0.0	99.9	K
S	U072	Water free cooling: valve closing threshold	5.0	-999.9	999.9°C	°C
S	U073	Water free cooling: valve closing differential	3.0	0.0	99.9	K
M	U074	Free cooling type: 0=Air 1=Remote coil 2=Water	0	0	2	-

Free cooling is enabled when the outside source temperature is sufficiently lower than the temperature of the water entering the unit, as shown in the following figure:

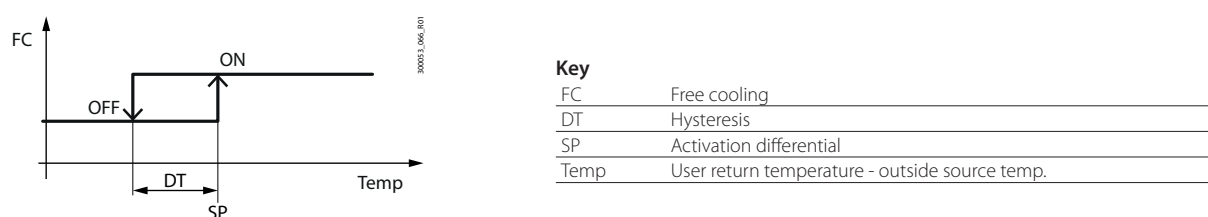


Fig. 5.t

On air/water units, the fans are controlled based on the condensing temperature as long as the circuit's compressor is on; as soon as the compressor stops, the free cooling fan is controlled so as to maintain the desired water temperature set point.

## 5.17 Types of free cooling

### 5.17.1 Condensing unit with common air circuit

Free cooling is enabled based on the comparison between the user return water temperature and the outside air temperature; this directly controls switching of the three-way valve, which allows the water returning from the user terminals to flow through the free cooling coil before entering the evaporator. Free cooling capacity is controlled by modulating the fan speed (with the compressors off); in combined operation (free cooling + mechanical cooling), fan speed is controlled so as to correctly manage the condensing stage.

#### Inputs used:

To enable free cooling:


- User return temperature;
- Outside air temperature;

To manage capacity in free cooling mode:

- (according to the control probe used) Return/delivery water temp.

Outputs used:

- 0-10V to manage the common fan between free cooling and condenser;
- Free cooling valve On-Off control.

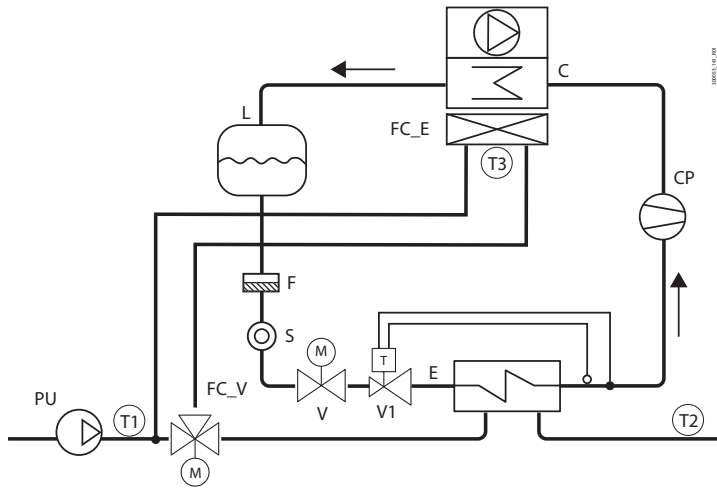

Ref.	Description
FC_E	Free cooling heat exchanger
C	Condenser
E	Evaporator
F	Filter-drier
L	Liquid receiver
CP	Compressor
S	Liquid sightglass
FC_V	Free cooling valve
PU	User pump
T1	User return probe
T2	User delivery probe
T3	Outside temperature probe
V1	Thermostatic expansion valve
V	Solenoid valve

Fig. 5.u

### 5.17.2 Air-cooled condensing unit with separate air circuit

Free cooling is enabled based on the comparison between the user return water temperature and the outside air temperature; this directly controls switching of the three-way valve, which allows the water returning from the user terminals to flow through the free cooling coil before entering the evaporator. Free cooling capacity is controlled by modulating the specific fan speed; in combined operation (free cooling + mechanical cooling), free cooling fan speed is always 100%.

#### Inputs used:

To enable free cooling:

- User return temperature;
- Outside air temperature;

To manage capacity in free cooling mode:

- (according to the control probe used) Return/delivery water temp.

Outputs used:

- 0-10 V to manage the condenser fan (Y1: Circuit 1 and Circuit 2)
- 0-10 V to manage the free cooling fan (Y2: Circuit 1);
- Free cooling valve On-Off control.

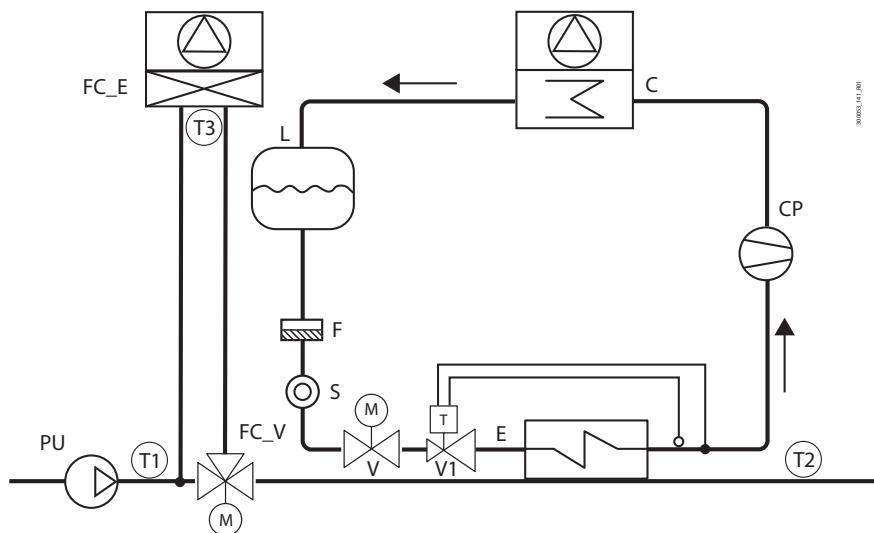


Fig. 5.v

Ref.	Description
FC_E	Free cooling heat exchanger
C	Condenser
E	Evaporator
F	Filter-drier
L	Liquid receiver
CP	Compressor
S	Liquid sightglass

Ref.	Description
FC_V	Free cooling valve
PU	User pump
T1	User return probe
T2	User delivery probe
T3	Outside temperature probe
V1	Thermostatic expansion valve
V	Solenoid valve

### 5.17.3 Water-cooled condensing unit

Free cooling is enabled based on the comparison between the user return water temperature and the source water temperature (Temp. IN source); this controls modulation of the three-way valve that mixes the source water with the water returning from the user terminals through the free cooling coil before entering the evaporator.

Free cooling capacity is controlled by modulating the three-way free cooling valve; in combined operation (free cooling + mechanical cooling), the three-way free cooling valve is always open at 100%.

#### Inputs used:

To enable free cooling:

- User return temperature;
- Source inlet temperature;

To manage capacity in free cooling mode:

- (according to the control probe used) Return/delivery water temp.

#### Outputs used:

- 0-10 V to manage the condenser fan
- 0-10 V to manage the free cooling valve.

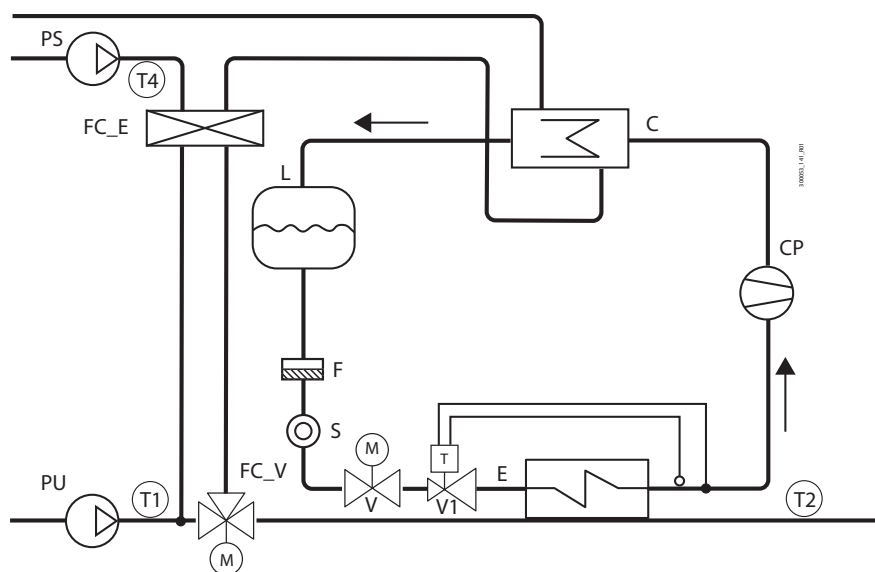


Fig. 5.w

Ref.	Description
FC_E	Free cooling heat exchanger
C	Condenser
E	Evaporator
F	Filter-drier
L	Liquid receiver
CP	Compressor
FC_E	Free cooling heat exchanger
S	Liquid sightglass

Ref.	Description
V	Solenoid valve
FC_V	Free cooling valve
PU	User pump
PS	Source pump
T1	User return probe
T2	User delivery probe
T4	Source return probe
V1	Thermostatic expansion valve


## 5.18 Free cooling

### 5.18.1 Dynamic control gain

This special function manages the balancing of capacity between the free cooling coil and the evaporator: this optimises control stability and fluidity.

User	Code	Description	Def	Min	Max	UOM
S	U070	Free cooling: hysteresis	1.5	0.0	99.9	K
S	U069	Free cooling: activation differential	3.0	0.0	99.9	K
S	U071	Design free cooling delta T	8.0	0.0	99.9	K

Tab. 5.p

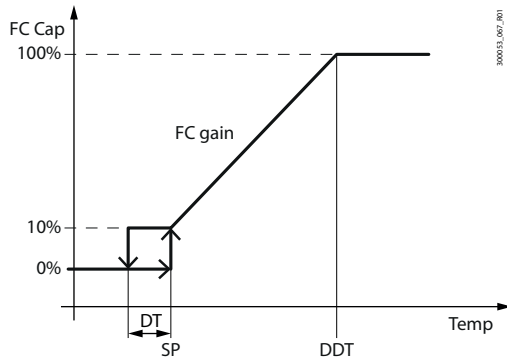

**Fig. 5.x**

The diagram shows the ideal behaviour of free cooling control (FC) in relation proportionally to its capacity; "Design free cooling delta T" is the temperature difference (water inlet - source) needed to cover the rated unit capacity using the free cooling coil only.

The value obtained - "FC gain" - is used to adapt the control ramp to the various cooling sources, as shown in the figure.

**Key**

FC Cap	Free cooling capacity
DT	Hysteresis
SP	Activation differential
DDT	Design free cooling delta T
Temp	User return temp. - source temp.

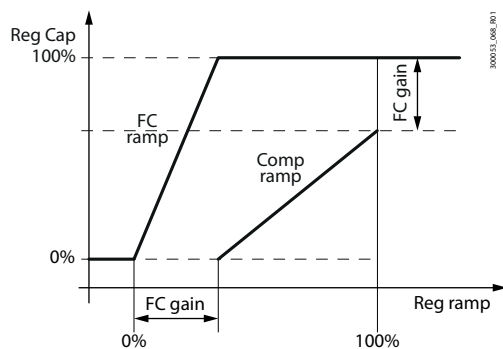
**Fig. 5.y**

The result is a perfect balance between the cooling capacities of the free cooling coil and the evaporator, in order to maintain the same proportionality in all load conditions. In other words, the same percentage of capacity is obtained for the same temperature variation in any load condition.

**Key**

Reg Cap	Control capacity
FC ramp	Free cooling control ramp
FC gain	Dynamic gain of free cooling control
Comp ramp	Compressor control ramp
Reg ramp	Control ramp

### 5.18.2 Effectiveness control

µChiller uses this function to start the compressors when the free cooling coil alone cannot bring the water to the set point, despite the fact that the source conditions theoretically allow for free cooling operation only. When this occurs, there may be a malfunction on the devices activated during free cooling; the compressors thus need to be started and free cooling disabled in order to ensure unit operation.

This situation is signalled by the "Free cooling warning".

### 5.18.3 Valve anti-block management


To avoid mechanical blocking of the valve, when a position (closed or open) is kept for more than a week, the valve is moved for 30 seconds to the opposite position.

## 5.19 Defrost

During heat pump operation on air/water units, the outdoor coil works as an evaporator. If the outside temperature is low, frost may form on the coil, resulting in reduced unit efficiency. To free the coil from frost and restore maximum efficiency, µChiller activates the defrost function. Activation depends on the value read by the reference probe (pressure transducer, low pressure side -> evaporation temperature in the graph), on the activation threshold being exceeded, and a possible delay.

User	Code	Description	Def	Min	Max	UOM
S	S039	Defrost: start temperature	-1.0	-99.9	99.0	°C
S	S040	Defrost: reset start defrost delay threshold	1.0	S039	99.9	°C
S	S041	Defrost: delay at start-up	30	0	999	min
S	S042	Defrost: end temperature	52.0	-999.9	999.9	°C
S	S046	Defrost: min duration	1	0	99	min
S	S047	Defrost: max duration	5	0	99	min

Example of defrost activation:

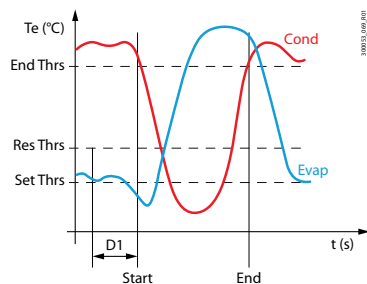

**Key**

T	Temperature
End Thrs	End defrost temperature
Res Thrs	Reset start defrost delay threshold
Set Thrs	Start defrost temperature
D1	Defrost start delay
Start	Start defrost
End	End defrost
T_Con	Condensing temperature
T_Evap	Evaporation temperature

Fig. 5.z

If the defrost temperature does not exceed the reset threshold during the defrost start delay, then the defrost starts. It ends when the reference probe (pressure transducer, high pressure side -> condensing temperature in the graph) exceeds the end defrost temperature or the maximum defrost duration has elapsed.

**Note:** for optimal defrost management, it is recommended to set the start defrost temperature to the evaporation temperature value at which ice starts forming on the coil (-1.0°C / -1.5°C); the defrost start delay expresses the time needed to accumulate a layer of ice that requires defrosting (30- 60 minutes). Also see the paragraph "Sliding defrost".

### 5.19.1 Defrost procedure

**Notes:** in the following description:

- "case with compressor ON" indicates that the phase is only featured if defrost is set with the compressor On;
- "case with compressor off" indicates that the phase is only featured if defrost is set with the compressor Off;

End defrost can be managed in two ways:

- with the compressor off: the thermal inertia of the condenser is used to end the defrost;
- with the compressor on: to make the defrost as fast as possible.

User	Code	Description	Def	Min	Max	UOM
M	S055	Compressor after defrost 0/1=On/Off	0	0	1	-

#### Compressor off at end defrost

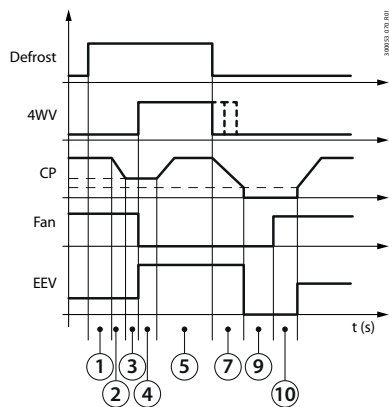


Fig. 5.aa

**Key**

Defrost	Defrost request
4WV	Cycle reversal (4-way valve)
CP	Compressor capacity

#### Compressor on for the entire defrost

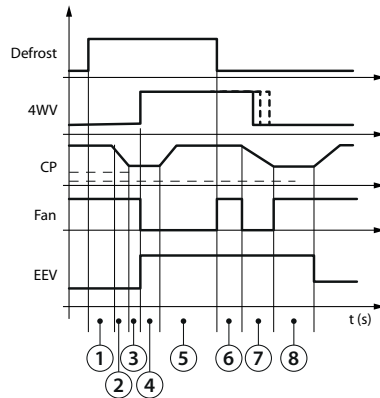


Fig. 5.ab

Fan	Enable fans
EEV	Electronic expansion valve

The control phases are described below.

#### Synchronisation (1)

Once the defrost start condition is true, there is a fixed delay of 10 s to check whether the other circuit requires defrosting, so as to carry out a simultaneous defrost if needed.

User	Code	Description	Def	Min	Max	UOM
S	S053	Defrost synchronisation: 0=Independent 1=Separate 2=Simultaneous	40.0	0.0	999.9	rps

#### Decrease capacity to start defrosting (2)

Capacity at start defrost can be managed in two ways:

- stopping the compressors
- compressors running at minimum power. For circuits with on-off compressors, a single compressor is kept on, while the compressor is kept at minimum capacity for circuits with BLDC compressor.

User	Code	Description	Def	Min	Max	UOM
M	S073	Compressor status at start defrost 0/1=On/Off	0	0	1	-
S	S052	BLDC compressor speed for cycle reversing in defrost	40.0	0.0	999.9	rps

### Waiting time before reversing the cycle (3)

The 4-way valve is positioned in chiller mode to run the defrost, the fans are stopped and the compressor remains at the cycle-reversal speed for 5 seconds. Normally during this phase the electronic expansion valve tends to close, due to low superheat. As a result it is forced to the maximum opening so as to guarantee a constant flow of refrigerant and maximum defrost capacity.

User	Code	Description	Def	Min	Max	UOM
S	S044	Operation time at min capacity before cycle reversing	20	0	999	s

### Cycle reversal and waiting time after reversal (4)

La valvola 4 vie si posiziona in modalità chiller per eseguire lo sbrinamento, i ventilatori si spengono e il compressore rimane alla velocità di inversione di ciclo per 5 secondi. Normalmente durante questa fase la valvola di espansione elettronica tende a chiudersi per basso surriscaldamento. Per questo essa è forzata alla massima apertura per garantire il flusso costante di refrigerante e la potenza massima di sbrinamento.

### Defrosting (5)

The actual defrosting procedure starts: the compressor delivers full capacity so as to defrost the outdoor coil. In this phase, the BLDC compressor goes to the speed set by the corresponding parameter, the electronic expansion valve remains at the maximum opening and the fans remain off. The minimum/maximum defrost time and minimum time between two consecutive defrosts start counting in this phase.

User	Code	Description	Def	Min	Max	UOM
S	S046	Defrost: min duration	1	0	99	min
S	S047	Defrost: max duration	5	0	99	min
S	S050	Minimum delay between consecutive defrosts	20	0	999	min
S	S051	BDLC compressor speed in defrost	80.0	0.0	999.9	rps

The minimum defrost time protects compressors and circuit components from transients with high dynamics that are too close together. The maximum defrost time is a safety feature that avoids any abnormal conditions (end defrost threshold not reached - e.g. due to strong winds) that would stop the production of hot water required by the user terminals. The minimum time between consecutive defrosts is needed to prevent the unit from defrosting too frequently and thus only partly meeting demand. The actual defrosting procedure therefore ends after a maximum time or when the set condensing temperature is reached. If the compressor stops during this phase, the counters are reset.

### Dripping (case with compressor on) (6)

In this phase, the compressor remains on at the defrost speed, the electronic valve is opened to the maximum and the fans are started at maximum speed, and remain at this speed for the entire dripping phase. The duration of the dripping phase can be set.

User	Code	Description	Def	Min	Max	UOM
S	S048	Dripping: duration	90	0	999	s

### Decreased compressor capacity to end defrost (7)

Circuit capacity is reduced to the minimum and the cycle is reversed. In this phase, the fans are stopped (they are only activated if necessary for high pressure prevention) and the cycle reversing valve is moved to the heat pump position, controlled based on the difference between condensation and evaporation pressure: as soon as this pressure difference falls below the minimum differential for valve activation + 1 bar, the cycle is reversed (return to heat pump mode). If the reversing threshold is not reached, the cycle is reversed after a fixed time (60 s). The electronic expansion valve is opened to the maximum position.

User	Code	Description	Def	Min	Max	UOM
M	S054	4-way valve: pressure differential for reversing	3.0	0.0	999.9	bar

### Waiting after cycle reversal (case with comp. ON) (8)

After reversing the cycle, there is a waiting time to ensure the correct flow of refrigerant; in this phase too, the ExV remains in the 100% open position.

User	Code	Description	Def	Min	Max	UOM
S	S045	Operation time at min capacity after cycle reversing	30	0	999	s

### Dripping (case with comp. OFF) (9)

In this phase, the compressors, the electronic expansion valve and the fans are stopped, waiting for the coil to complete defrosting due to thermal inertia and stop dripping. The duration of the dripping phase can be set.

User	Code	Description	Def	Min	Max	UOM
S	S048	Dripping: duration - 0=Dripping not performed	90	0	999	s

### Post-dripping phase (case with comp. OFF) (10)

During this phase, the fans are started at 100% speed to completely expel any water still on the coil. The duration of the post-dripping phase can be set. At the end of the post-dripping phase, the circuit is reactivated in normal heat pump operation.

User	Code	Description	Def	Min	Max	UOM
S	S049	Post-dripping: duration - 0=Post-dripping not performed	30	0	999	s

### Quick start phase (case with comp. OFF) (11)

The compressor restarts based on the control request and the unit returns to normal operation. The start-up time is reduced so as to quickly bring compressor speed in line with the request.

User	Code	Description	Def	Min	Max	UOM
S	S056	BLDC smart start: duration (*)	20	0	999	s

(\*) Shortened compressor start-up after defrost

This action assumes that the compressor has been off for a very short time, and therefore does not require complete preheating as is the case during normal start-up.

During the defrost phase (when the unit is in chiller mode), the fans are started if the condensing pressure exceeds the high condensing pressure alarm threshold - 5K.

User	Code	Description	Def	Min	Max	UOM
M	C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C

## 5.19.2 Defrost with fans

When the outside temperature allows (outside temperature > 6- 7°C), the fans alone can be used to defrost the coil, without operating the compressors, so as to improve system energy efficiency. When the outside temperature is greater than or equal to the value of S069, the function is activated: in this condition, the waiting time S041 before the defrost request is halved (to facilitate defrosting with fans only).

**Note:** if parameter S069 is set to 0.0°C (32°F), the function is disabled.

User	Code	Description	Def	Min	Max	UOM
S	S069	Defrost with fans: outside temperature threshold 0.0=Function disabled	0.0	0.0	99.9	°C

The defrost phases are as follows.

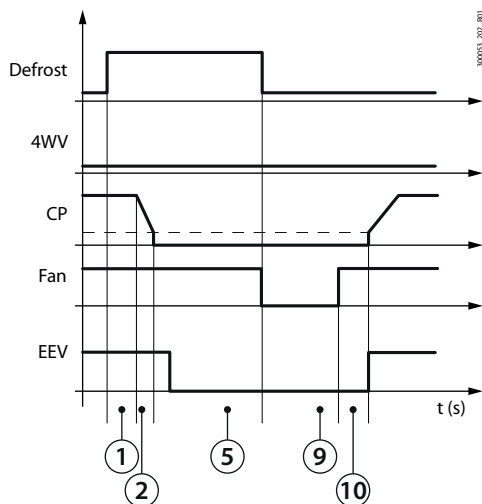


Fig. 5.ac

#### Synchronisation (1):

See the previous defrosts.

#### Compressor stopped to start defrosting (2)

The circuit with the BLDC compressor decreases its capacity to the minimum set value, and then switches off; on-off compressors are all switched off.

#### Defrosting (5)

The actual defrosting phase starts: the fans are started at 100% speed to heat the coil and melt the ice that has formed on the fins. Defrosting ends, once the minimum time has elapsed, when the evaporation temperature reaches 2°C, or after the maximum time. The minimum/maximum defrost time and minimum time between two consecutive defrosts start counting in this phase.



### Dripping (9)

The fans are stopped, waiting for the coil to complete defrosting due to thermal inertia and stop dripping. The dripping time can be set.

### Post-dripping (10)


The fans are started at 100% speed to completely expel any water still on the coil. The post-dripping time can be set. At the end of the post-dripping phase, the circuit is reactivated in normal heat pump operation.

## 5.19.3 Sliding defrost

As the water vapour content in the air decreases as the outside temperature decreases, the time needed for a layer of ice to form that requires defrosting increases proportionally as the outside temperature decreases. Consequently, a function has been added, enabled when the outside air probe is available, which extends the defrost delay time, as shown in the following figure.

**Note:** the outside probe can be connected to inputs S3/S6 (setting: external temperature)

User	Code	Description	Def	Min	Max	UOM
M	Hc00	S3 configuration 0=Not used      2=Discharge temp.      4=Source water delivery temp. 1=External temp.      3=Suction temp.	0	0	3/4	-
M	Hc03	S6 configuration (0 = Not used, 1= Source delivery water temp., 2= Outdoor temp., 3= Remote set point, 4= Discharge temp., 5= Condensing temp., 6= Suction temp., 7= Evaporation temp., 8= Condensing press., 9= Evaporation press., 10= User return water temp., 11= User delivery water temp., 12= Capacity request from AIN)	0	0	2	-
S	S041	Defrost: delay at start-up	30	0	999	min
S	S043	Enable sliding defrost: 0/1=No/Yes	0	0	1	-

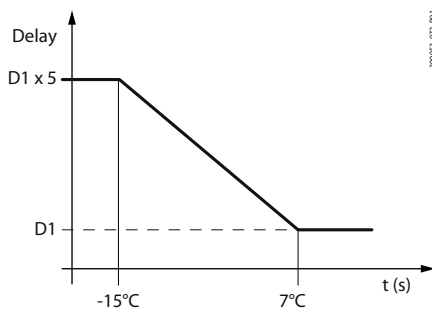

#### Key

Delay	Calculated defrost start delay
D1	Defrost start delay
D1 x 5	Maximum defrost delay (5 x D1)
Temp	Outside air temperature

Fig. 5.ad

## 5.19.4 Defrost synchronisation

On two-circuit units, the defrosting procedures can be synchronised.

User	Code	Description	Def	Min	Max	UOM
S	S053	Defrost synchronisation: 0=Independent; 1=Separate; 2=Simultaneous	0	0	2	-

### Independent

The two circuits start defrosting when the conditions are right, independently of each other. In other words, there is no synchronisation and the circuits can defrost at the same time.

### Separate

When the first circuit requires defrosting:

- it starts the defrost procedure;
- the other continues to work in heat pump mode.

When the first circuit has finished defrosting, the other is free to start.

### Simultaneous

This procedure is used if the air flow cooling the condenser coils on one circuit affects the other: during the defrost phase this would mean a considerable waste of energy to recover the heat lost in the air flow on the other circuit. The first circuit that requires defrosting thus puts the entire unit into defrost mode. If only one circuit starts defrosting, it completes all the defrost phases while the other remains off. If the other circuit one requires defrosting but is waiting until the defrost start delay elapses, the delay is ignored and the circuit also starts defrosting. When one of the circuits reaches the end defrost condition, it remains in the dripping phase until the other circuit ends the procedure. In this way, the dripping phase is performed by both circuits, preventing the air flow to the condenser coils from affecting the defrost procedure. During this phase, the compressor is stopped instead of operating at end defrost capacity, to prevent the waiting phase of the other compressor from bringing the user terminals to excessively low temperatures.

**Note:** if there is a common air circuit for the condensers, simultaneous defrosting is enabled automatically.

## 5.20 4-way valve management

A special function has been included to ensure correct control of the 4-way valve that reverses the refrigerating cycle. When there is a request to reverse the valve, the controller checks whether the pressure difference is higher than a threshold before activating the valve: if the difference is lower, the application waits until the compressor starts and then activates the valve when the pressure difference is reached.

User	Code	Description	Def	Min	Max	UOM
M	S054	4-way valve: pressure differential for reversing	3.0	0.0	999.9	bar

In the event of a power failure, the controller realigns the 4-way valve with the physical position of the valve at next start-up, considering the status of the circuit at the time of the power failure.

## 5.21 Manual device management

In the menu relating to the individual devices, operation of the individual actuators fitted on the unit can be switched from automatic to manual. For digital outputs, the options are ON or OFF, while analogue outputs can be set from 0 to 100%; the default values are all Auto.

User	Code	Description	Def	Min	Max	UOM
S	E000	ExV circuit 1: manual mode 0/1=No/Yes	0	0	1	-
S	E001	ExV circuit 1: steps in manual mode	0	0	65535	steps
S	E002	ExV circuit 2: manual mode 0/1=No/Yes	0	0	1	-
S	E003	ExV circuit 2: steps in manual mode	0	0	65535	steps
S	U002	User pump 1: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	U005	User pump 2: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	C002	Comp. 1 circuit 1: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	C005	Comp. 2 circuit 1: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	C008	Comp. 1 circuit 2: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	C011	Comp. 2 circuit 2: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	S002	Source pump 1: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	S011	Source modulating fan circuit 1: operating mode 0=AUTO; 1=0%; 2=1%, ..; 101=100%	0	0	101	-
S	S014	Source ON/OFF fan 1 circuit 2: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	S015	Source modulating fan circuit 2: operating mode 0=AUTO; 1=0%; 2=1%, ..; 101=100%	0	0	101	-

These operations bypass temperature control, but not the alarm thresholds set to protect unit safety; in general, these operations are used to test the individual actuators during installation.

Manual operation of the devices is described below:

Device	Notes
Compressors	Safety times taken into account All compressor alarms are enabled
User pumps	Pump overload and flow alarm active
Source pump	-
Defrost	-
Source fans	Speed-up disabled
ExV	All alarms disabled

## 5.22 Air/air unit management (Legacy model only)

The µChiller Legacy version can manage air/air units, both cooling only and reverse cycle. The type of unit is selected via parameter U077, which in the Legacy model can be set as Air/Air CH or Air/Air CH/HP.

On these units, the control probes have the following meaning:

Sensor	Meaning
System water return temperature	Room air return temperature
System water delivery temperature	Air supply temperature

### Air supply limit management in cooling mode

A function is used to limit the air supply temperature. When the air supply temperature falls below a certain threshold, set for parameter F009, in the band defined by parameter F010, the control ramp is limited proportionally.

User	Code	Description	Def	Min	Max	UOM
S	F009	Minimum air supply temp. limit: set point	14.0	0	99.9	°C
S	F024	Manual control of heater 1 0=AUTO, 1=OFF, 2=ON	0	0	2	-
S	F025	Manual control of heater 2 0=AUTO, 1=OFF, 2=ON	0	0	2	-
S	F010	Minimum air supply temp. limit: proportional band	4	1	20	K

### 5.22.1 User fan

On air/air units, the user pump is replaced by a user fan. The water flow switch alarm is used as an air flow switch alarm. Fan control is subject to the following conditions:

- parameter F017  
If F017 = 0, it follows standard mode, i.e. unit on -> fan on.  
If F017 = 1, the fan follows the temperature control request and remains off until there is a temperature control request.
- Hot-start and hot-keep functions

The user fan will be activated as shown in the following table:

Unit status	Mode	Control status	Parameter F017	Hot-start Hot-keep	Fan status
OFF	Not considered	Not considered	Not considered	Not considered	OFF (switch-off delay after compressor and/or heater off U048)
ON	Cooling	Not considered	FALSE	Not considered	ON
ON	Cooling	Off	TRUE	Not considered	OFF
ON	Cooling	On call	TRUE	Not considered	ON
ON	Cooling	Not considered	FALSE	Not considered	ON
ON	Heating	Off	TRUE	Not considered	OFF
ON	Heating	On call	TRUE	Enabled (F018+F019)	ON on Hot-Start function command

Tab. 5.b

User	Code	Description	Def	Min	Max	UOM
S	F017	Main fan: activation mode 0=always On, 1=ON from control	0	0	1	-

#### Hot-start and Hot-keep functions

These functions are only active in heating mode.

The Hot-Start function is active on air/air units in heating mode only. The function keeps the fan off until the condensing temperature reaches a set point (parameter F018) to avoid sending cold air into the room. If the condensing pressure or condensing temperature probe is not fitted, control is based on the air supply temperature. If the electric heaters are activated, the fan is switched on immediately.

The Hot-keep function has two modes:

- in heating mode, if the compressors and/or heaters are off, the fan remains on until the condensing temperature is greater than the hot-start set point (parameter F018) minus the differential set for parameter F019.
- in cooling mode, the fan will be switched off after the time set for parameter U048, after the compressor and/or heater has been deactivated.

User	Code	Description	Def	Min	Max	UOM
S	F018	Hot-start: set point	40.0	0	99.9	°C
S	F019	Hot-keep: differential	5.0	0	99.9	K

#### Temperature set point for deactivating the compressors

To avoid energy efficiency below that of electric heaters, the compressors are deactivated if the outside temperature falls below F026, with a fixed reactivation differential of 1 degree. The heaters are activated according to the corresponding set points. Setting F026 to "-40°C" (default value) disables the function.

User	Code	Description	Def	Min	Max	UOM
S	F026	Compressor deactivation due to low outside air temperature	-40	-40	99.9	°C

### 5.22.2 Heater management on air-air units

This function is only active when the unit is on - main fan on and control active or in defrost.

The type of control is set using parameter F028:

- room temperature (F028 = 0)
- air supply temperature (F028 = 1)

The user can set two different offsets, one in cooling mode and one in heating mode.

The offset is a value that is subtracted from the current set point in cooling mode, or added to the current set point in heating mode. A differential can also be set to define the activation/deactivation temperature of the two heater steps.

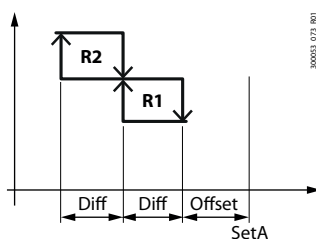


Fig. 5.ae

Electric heaters can be activated during defrosting. If this function is activated by the user, the heaters remain on for the entire duration of the defrost, including the dripping and post-dripping phases.

Operation of the electric heaters follows the scheme shown below.

User	Code	Description	Def	Min	Max	UOM
M	F012	Offset on set point in cooling mode for the heaters	1.0	0.0	99.9	°K
M	F013	Differential on set point in cooling mode for the heaters	0.5	0.2	99.9	°K
M	F014	Offset on set point in heating mode for the heaters	3.0	0.0	99.9	°K
M	F015	Differential on set point in heating mode for the heaters	1.0	0.2	99.9	°K
M	F016	Heaters active during defrost (0= No, 1=Yes)	0	0	1	-
M	F028	Air heating: probe for user heater temperature control 0 = ROOM 1 = SUPPLY	0	0	1	-

### 5.23 Automatic heater management for water units (Legacy model only)

The uChiller Legacy version can manage auxiliary heaters as part of the main control, even on air/water and water/water units. The function is active

- only when the unit is on
- with the fan/pump on
- only in heating mode
- when control is active

The heater control diagram is the same as shown in par. 5.20.2 for air/air units.

The control set point (SetH) and probe are the same used for the main control.

An offset (F014) and differential (F015) can be set to define the auxiliary heater activation/deactivation limits.

Example: The following figure shows the control diagram with one auxiliary heater only.

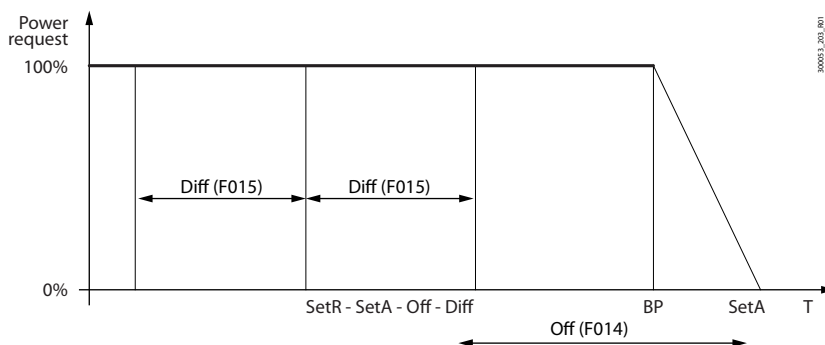


Fig. 5.af

The auxiliary heater works mainly to supplement the main control, but also remains active for frost protection. In the event of frost protection, when both auxiliary and frost protection heaters are installed, both outputs will be active.

Up to two heaters are available, however with the following configuration required:

- heater 1 configured on circuit 1
- heater 2 configured on circuit 2 using the I/O expansion

Code	Description	Def	Min	Max	UOM
F014	Offset on set point in heating mode for the heaters	3.0	0.0	99.9	°K
F015	Differential on set point in heating mode for the heaters	1.0	0.2	99.9	°K
F016	Heaters active during defrost (0= No, 1=Yes)	0	0	1	-
F028	Air heating: probe for user heater temperature control 0 = ROOM 1 = SUPPLY	0	0	1	-

Tab. 5.q

### 5.24 Condensing unit management

µChiller can manage condensing units with one or two circuits, air- or water-cooled, in cooling-only mode or reverse cycle with defrost. The mode is set using parameter U077.

Compared to a chiller unit, the condensing unit does not manage circulation of the primary fluid (pump, flow switch, etc.)

The control signal can be sent to the condensing unit in two ways:

- via BMS (not available on Legacy models)
- via digital inputs

#### Request via BMS

The request is written by an external device to register HR 331. If the unit is offline, the request is overridden to 0% and the devices are turned off.

### Request via digital inputs

There is a digital input for each compressor. Activation of the digital input corresponds to a control step request. The  $\mu$ Chiller application manages rotation between steps, stop due to alarms, and timings.

For Legacy models only, the direct relationship between request digital inputs and compressor digital outputs can be set using parameter F023. In this case, rotation of the steps must be managed externally.

User	Code	Description	Def	Min	Max	UOM
S	F023	Direct relationship DI - compressor DO (MC only) 0=No, 1=Yes	0	0	1	-

## 5.25 Automatic changeover (Legacy model only)

This function is used to switch automatically between cooling/heating modes based on the selected probe.

When automatic changeover is enabled, summer/winter seasons are ignored..

The function is only available for the Legacy model.

The following table shows the parameters used to manage this function.

Code	Description	Def	Min	Max	UOM
U083	Changeover type 0: disabled 1: outside air temperature; 2: air return temperature (air/air units only) 3: delivery water temperature (air/water or water/water units only)	0	0	3	-
U084	Changeover threshold (type 1 only)	23	-99.9	99.9	°C/F
U085	Changeover dead zone	2	0	99.9	°C/F
U086	Automatic changeover set point minimum limit	0	-99.9	999.9	°C/F
U087	Automatic changeover set point maximum limit	80	-99.9	999.9	°C/F
U035	Automatic changeover delay	15	0	999	Min
SEtU	Automatic changeover set point (types 2 and 3 only)	23	U086	U087	°C/F

Tab. 5.c

The operating mode selection diagrams are shown for each single case.

### 5.25.1 Mode 1: outside air temperature;

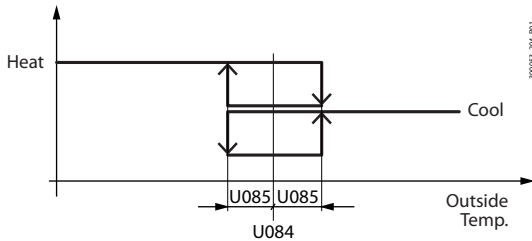


Fig. 5.c

If automatic changeover is set based on the outside temperature, the main temperature control will use the probes configured for U036 (start-up) and Uo38 (running) and the set points SetC (cooling) and SetH (heating).

### 5.25.2 Mode 2: air return temperature (A/A units)

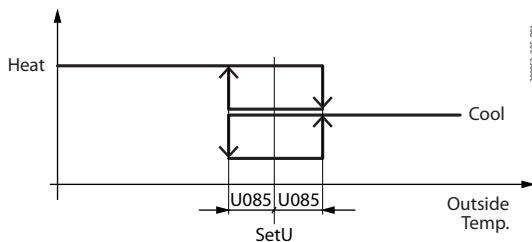


Fig. 5.d

If the automatic changeover is set based on the air return temperature, the main temperature control will also use the same set point SEtU for changeover.

### 5.25.3 Mode 3: delivery water temperature (A/W and W/W units)

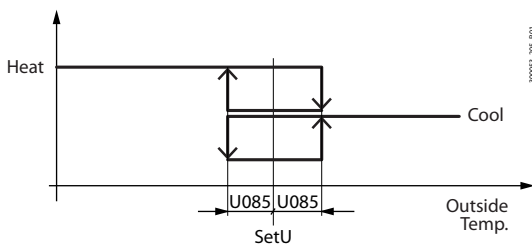


Fig. 5.e

If the automatic changeover is set based on the delivery water temperature, the main temperature control will also use the same set point SEtU for changeover.

## 6. PARAMETER TABLE

### Notes:

- Levels: U=User; S=Service; M=Manufacturer; Display: the x indicates that the parameter can be accessed from the display terminal;
- R/W=read/write parameters; R=read-only parameters.

### 6.1 System

User	Display	Code	Description	Def.	Min.	Max.	UOM	R/W	Modbus
Plt = System									
S		U000	User pump 1: maintenance hour threshold (x100)	99	0	999	h	R/W	HR002
S		U001	User pump 1: reset hour counter	0	0	1	-	R/W	CS000
S	x	U002	User pump 1: operating mode 0=AUTO - 1=OFF - 2=ON	0	0	2	-	R/W	HR003
S		U003	User pump 2: maintenance hour threshold (x100)	99	0	999	h	R/W	HR004
S		U004	User pump 2: reset hour counter	0	0	1	-	R/W	CS001
S	x	U005	User pump 2: operating mode 0=AUTO - 1=OFF - 2=ON	0	0	2	-	R/W	HR005
S		U006	Cooling set point: minimum limit	5.0	-99.9	999.9	°C/°F	R/W	HR007 (2R)
S		U007	Cooling set point: maximum limit	20.0	-99.9	999.9	°C/°F	R/W	HR009 (2R)
S		U008	Heating set point: minimum limit	30.0	0.0	999.9	°C/°F	R/W	HR01 (2R)
S		U009	Heating set point: maximum limit	45.0	0.0	999.9	°C/°F	R/W	HR011 (2R)
S		U010	Enable set point compensation 0/1=no/yes	0	0	1	-	R/W	CS002
S		U011	Cooling compensation: start	25.0	-99.9	999.9	°C/°F	R/W	HR015 (2R)
S		U012	Cooling compensation: end	35.0	-99.9	999.9	°C/°F	R/W	HR017 (2R)
S		U013	Cooling compensation: maximum value	5.0	-99.9	999.9	K/R	R/W	HR019 (2R)
S		U014	Heating compensation: start	5.0	-99.9	999.9	°C/°F	R/W	HR021 (2R)
S		U015	Heating compensation: end	-10	-99.9	999.9	°C/°F	R/W	HR023 (2R)
S		U016	Heating compensation: maximum value	5.0	-99.9	999.9	K/R	R/W	HR025 (2R)
S		U017	Enable scheduler 0/1=No/Yes	0	0	1	-	R/W	CS003
S		U018	Time band: start hours	17	0	23	h	R/W	HR027
S		U019	Time band: start minutes	30	0	59	min	R/W	HR028
S		U020	Time band: end hours	7	0	23	h	R/W	HR029
S		U021	Time band: end minutes	0	0	59	min	R/W	HR030
S		U022	Type of changeover in time band 0=Off - 1=2nd set point	0	0	1	-	R/W	CS004
U	x	U023	2nd cooling set point	10.0	U006	U007	°C/°F	R/W	HR031(2R)
U	x	U024	2nd heating set point	35.0	U008	U009	°C/°F	R/W	HR033(2R)
S		U025	Remote set point: analogue input 0 = 0-5V - 1=0-10V - 2=4-20 mA	0	0	2	-	R/W	HR035
S		U026	Remote set point: min value	5.0	-99.9	999.9	°C/°F	R/W	HR037(2R)
S		U027	Remote set point: max value	35.0	-99.9	99.9	°C/°F	R/W	HR039(2R)
S		U028	Remote set point: offset	0.0	-99.9	99.9	K/R	R/W	HR043(2R)
S	x	U031	High water temp. alarm: offset	10.0	0.0	99.9	K/R	R/W	HR049(2R)
S	x	U032	High water temp. alarm: delay at start-up	15	0	99	min	R/W	HR051
S	x	U033	High water temp. alarm: delay when running	180	0	999	s	R/W	HR052
S		U034	Operating mode changeover 0=Keypad - 1=Digital input	0	0	1	-	R/W	CS005
S		U035	Cooling/heating changeover: delay	15	0	999	min	R/W	HR053
S		U036	Control probe at start-up 0=Return - 1=Delivery	0	0	1	-	R/W	CS006
S		U037	PID control delay at start-up/operation	180	0	999	s	R/W	HR054
S		U038	Control probe when running: 0=Return - 1=Delivery	1	0	1	-	R/W	CS007
S		U039	PID at start-up: Kp	50.0	0.0	999.9	-	R/W	HR055(2R)
S		U040	PID at start-up: Ti 0: integral action disabled	0	0	999	s	R/W	HR057
S		U041	PID at start-up: Td 0: derivative action disabled	0	0	99	s	R/W	HR058
S		U042	PID when running: Kp	50.0	0.0	999.9	-	R/W	HR059(2R)
S		U043	PID when running: Ti 0: integral action disabled	0	0	999	s	R/W	HR061
S		U044	PID when running: Td 0: derivative action disabled	0	0	99	s	R/W	HR062
S		U045	User pump flow alarm: delay at start-up	10	0	999	s	R/W	HR063
S		U046	User pump flow alarm: delay when running	3	0	99	s	R/W	HR064
S		U047	Compressor start delay after user pump	30	0	999	s	R/W	HR065
S		U048	User pump shutdown delay after compressor	180	0	999	s	R/W	HR066
S		U049	User pump rotation time	12	0	999	h	R/W	HR067
S		U050	User side frost protection: alarm threshold	-0.8	-99.9	999.9	°C/°F	R/W	HR068 (2R)
S		U051	User side frost protection: differential	30.0	0.0	999.9	K/R	R/W	HR070 (2R)
S		U052	User-side frost protection: delay time at 1K	30	0	999	s	R/W	HR072
S		U053	Unit OFF: frost protection set point	4.0	-99.9	999.9	°C/°F	R/W	HR073 (2R)
S		U054	Unit OFF: frost protection differential	2.0	0.0	99.9	K/R	R/W	HR075 (2R)
S		U055	User return temp. probe: offset	0.0	-99.9	99.9	K/R	R/W	HR079 (2R)
S		U056	User delivery temp. probe: offset	0.0	-99.9	99.9	K/R	R/W	HR083 (2R)
S		U057	Remote alarm: input logic 0/1=NC/NO	0	0	1	-	R/W	CS008
S		U058	Cooling/heating input: logic 0/1=NO/NC	1	0	1	-	R/W	CS009
S	x	U059	Remote ON/OFF: input logic 0/1=NO/NC	1	0	1	-	R/W	CS010
S		U060	User pump flow switch: input logic 0/1=NC/NO	0	0	1	-	R/W	CS011

User	Display	Code	Description	Def.	Min.	Max.	UOM	R/W	Modbus
S		U061	User pump overload protector: input logic 0/1=NC/NO	0	0	1	-	R/W	CS012
S		U062	2nd set point: input logic 0/1=NO/NC	1	0	1	-	R/W	CS013
M		U063	User pump: input logic 0/1=NC/NO	0	0	1	-	R/W	CS014
S		U064	Global alarm relay: output logic 0/1=NC/NO	0	0	1	-	R/W	CS015
S		U065	Free cooling valve: output logic 0/1=NO/NC	0	0	1	-	R/W	CS016
M		U066	Frost protection heater: output logic 0/1=NO/NC	0	0	1	-	R/W	CS017
S		U067	Alarm relay configuration 0/1=Control alarms/All	0	0	1	-	R/W	CS018
S		U068	Free cooling: enable 0/1=no/yes	0	0	1	-	R/W	CS019
S		U069	Free cooling: activation differential	3.0	0.0	99.9	K/R	R/W	HR085 (2R)
S		U070	Free cooling: hysteresis	1.5	0.0	99.9	K/R	R/W	HR087 (2R)
S		U071	Design free cooling delta T	8.0	0.0	99.9	K/R	R/W	HR089 (2R)
S		U072	Water free cooling: valve closing threshold	5.0	-999.9	999.9	°C/°F	R/W	HR091 (2R)
S		U073	Water free cooling: valve closing differential	3.0	0.0	99.9	K/R	R/W	HR093 (2R)
M		U074	Free cooling type 0=Air - 1=Remote coil - 2=Water	0	0	2	-	R/W	HR095
S		U075	Frost protection type 0=Heater - 1=Pump - 2=Heater/pump	2	0	2	-	R/W	HR096
M		U076	Number of user pumps	1	1	2	-	R/W	HR097
M		U077	Type of unit 0 = CH 1 = HP 2 = CH/HP 3 = Condensing unit CH 4 = Condensing unit CH/HP 5 = Air/air CH 6 = Air/air CH/HP 7 = Water/water CH/HP with reversal on the hydronic circuit	0	0	7	-	R/W	HR098
S		U078	User pump in standby: enable On-Off cycles 0/1=No/Yes	0	0	1	-	R/W	CS080
S		U079	Unit pump in standby: On time	3	1	15	min	R/W	HR709
S		U080	Unit pump in standby: Off time	15	3	99	min	R/W	HR710
S		U081	Pressure alarm reset configuration	7	0	7	-	R/W	HR239
M		U082	Frost protection type 0 = Evaporation temperature 1 = Delivery water temperature	0	0	1	-	R/W	CS093
M		U083	Type of automatic changeover 0: disabled 1: on outside temperature 2: on air return temp. (for legacy AA units only) 3: on delivery water temp. (AW and WW units only)	0	0	3	-	R/W	HR6
M		U084	Automatic changeover threshold (type 1 only (U083 = 1))	23	-99.9	99.9	°C/°F	R/W	HR765
		U085	Automatic changeover dead band	2	0	99.9	K/R	R/W	HR772
		U086	Automatic changeover set point lower limit	0	-99.9	999.9	°C/°F	R/W	HR774
		U087	Automatic changeover set point upper limit	80	-99.9	999.9	°C/°F	R/W	HR776
M		U088	Frost protection heater position 0 = user 1 = source (WW units only) 2 = user and source (WW units only)	0	0	2	-	R/W	HR769
M		U089	Probe type for capacity request from analogue input (0=0-5V, 1=0-10V, 2=4-20mA)	0	0	2	-	R/W	HR817
M		U090	Offset for capacity request from analogue input.	0	U091	U092	%	R/W	HR818
M		U091	Minimum value for capacity request from analogue input	0	-999.9	999.9	%	R/W	HR820
M		U092	Maximum value for capacity request from analogue input	0	-999.9	999.9	%	R/W	HR822
M		U093	Flow alarm management from flow switch (0 = manual, 1 = 3 attempts)	0	0	1	-	R/W	HR121

Tab. 6.a

## 6.2 Compressor

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
CMP = Compressor									
S		C000	Comp. 1 circuit 1: maintenance hour threshold (x100)	99	0	999	h	R/W	HR153
S		C001	Comp. 1 circuit 1: reset hour counter	0	0	1	-	R/W	CS023
S	x	C002	Comp. 1 circuit 1: operating mode 0=AUTO - 1=OFF - 2=ON	0	0	2	-	R/W	HR154
S		C003	Comp. 2 circuit 1: maintenance hour threshold (x100)	99	0	999	h	R/W	HR155
S		C004	Comp. 2 circuit 1: reset hour counter	0	0	1	-	R/W	CS024
S	x	C005	Comp. 2 circuit 1: operating mode 0=AUTO - 1=OFF - 2=ON	0	0	2	-	R/W	HR156
S		C006	Comp. 2 circuit 1: maintenance hour threshold	99	0	999	h	R/W	HR157
S		C007	Comp. 2 circuit 1: reset hour counter	0	0	1	-	R/W	CS025
S	x	C008	Comp. 2 circuit 1: operating mode 0=AUTO - 1=OFF - 2=ON	0	0	2	-	R/W	HR158
S		C009	Comp. 2 circuit 2: maintenance hour threshold (x100)	99	0	999	h	R/W	HR159
S		C010	Comp. 2 circuit 2: reset hour counter	0	0	1	-	R/W	CS026



User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
S	x	C011	Comp. 2 circuit 2: operating mode 0=AUTO - 1=OFF - 2=ON	0	0	2	-	R/W	HR160
M		C012	Min compressor on time	180	30	999	s	R/W	HR162
M		C013	Min compressor off time	60	30	999	s	R/W	HR163
M		C014	Min time between consecutive compressor starts	360	0	999	s	R/W	HR164
M		C015	Compressor load up time	30	5	999	s	R/W	HR165
M		C016	Compressor load down time	10	5	999	S	R/W	HR166
M		C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C/°F	R/W	HR324 (2R)
M		C018	Min low pressure threshold (LP)	0.2	-99.9	99.9	bar/psi	R/W	HR326 (2R)
M		C020	Maximum circuit destabilisation time	240	5	999	min	R/W	HR168
M		C021	Circuit capacity distribution (0 = balanced, 1 = grouped)	0	0	1	-	R/W	HR169
S		C022	Circuit 1: discharge temp. offset	0.0	-99.9	99.9	K/R	R/W	HR170 (2R)
S		C023	Circuit 1: suction temp. offset	0.0	-99.9	99.9	K/R	R/W	HR172 (2R)
S		C024	Circuit 2: discharge temp. offset	0.0	-99.9	99.9	K/R	R/W	HR174 (2R)
S		C025	Circuit 2: suction temp. offset	0.0	-99.9	99.9	K/R	R/W	HR176 (2R)
S		C026	Circuit 1: condensing pressure offset	0.0	-99.9	99.9	bar/psi	R/W	HR178 (2R)
S		C027	Circuit 1: evaporation pressure offset	0.0	-99.9	99.9	bar/psi	R/W	HR180 (2R)
S		C028	Circuit 1: condensing temp. offset	0.0	-99.9	99.9	K/R	R/W	HR182 (2R)
S		C029	Circuit 1: evaporation temp. offset	0.0	-99.9	99.9	K/R	R/W	HR184 (2R)
S		C030	Circuit 2: condensing pressure offset	0.0	-99.9	99.9	bar/psi	R/W	HR186 (2R)
S		C031	Circuit 2: evaporation pressure offset	0.0	-99.9	99.9	bar/psi	R/W	HR188 (2R)
S		C032	Circuit 2: condensing temp. offset	0.0	-99.9	99.9	K/R	R/W	HR190 (2R)
S		C033	Circuit 2: evaporation temp. offset	0.0	-99.9	99.9	K/R	R/W	HR192 (2R)
M		C034	HP pressure switch: input logic 0/1=NC/NO	0	0	1	-	R/W	CS027
M		C035	Compressor overload protector: input logic 0/1=NC/NO	0	0	1	-	R/W	CS028
M		C036	Compressor: input logic 0/1=NO/NC	0	0	1	-	R/W	CS029
M		C037	Evaporation pressure: probe type 0=0-5V; 1=4-20mA	0	0	1	-	R/W	HR194
M		C038	Evaporation pressure probe: min value	0.0	-1.0	99.9	bar/psi	R/W	HR195 (2R)
M		C039	Evaporation pressure probe: max value	17.3	0.0	99.9	bar/psi	R/W	HR197 (2R)
M		C040	Condensing pressure: probe type 0=0-5V; 1=4-20mA	0	0	1	-	R/W	HR199
M		C041	Condensing pressure probe: min value	0.0	-1.0	99.9	bar/psi	R/W	HR200 (2R)
M		C042	Condensing pressure probe: max value	45.0	0.0	99.9	bar/psi	R/W	HR202 (2R)
M		C043	Discharge temperature - Probe type (0=NTC, 1=NTC-HT)	1	0	1	-	R/W	204
M		C044	Enable destabilisation 0/1=No/Yes	1	0	1	-	R/W	CS030
S		C045	Refrigerant - 3=R407C - 4=R410a - 6=R290 - 10=R744 - 22=R32	4	0	99	-	R	IR038
M		C046	No. of unit circuits	1	1	2	-	R/W	HR206
M		C047	Type of compressors used - 0=1 On/Off - 1=2 On/Off - 2=1 BLDC - 3= 1 BLDC+On/Off	0	0	3	-	R/W	HR207
M		C049	LP pressure switch: alarm delay from compressor start If C049 = 0 the alarm is triggered even if the compressors are off. If C049 > 0 the alarm is only triggered when the compressors are on	90	0	999	-	R/W	HR269
M		C050	LP pressure switch: alarm delay when running	15	0	999	-	R/W	HR269
M		C051	Low press. pressostat input logic (0=N.C., 1=N.O.)	0	0	1	-	R/W	CS76

Tab. 6.b

### 6.3 BLDC and Inverter

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
S		P000	Min evaporation temp.: custom limit	-25.0	-99.9	999.9	°C/°F	R/W	HR335 (2R)
S		P001	Max condensing temp.: custom limit	70.0	-99.9	999.9	°C/°F	R/W	HR337 (2R)
M		P003	Out of envelope alarm delay	120	0	999	s	R/W	HR340
M		P004	Low pressure differential alarm delay	60	0	999	s	R/W	HR341
M		P005	Min. BLDC speed threshold for circuit destabilisation	35	0	999	s	R/W	HR342
M		P006	Oil recovery: min request for activation	35.0	0.0	100.0	%	R/W	HR344 (2R)
M		P007	Oil recovery: min speed for activation	35.0	0.0	999.9	rps	R/W	HR346 (2R)
M		P008	Oil recovery: comp. running time at low speed	15	0	999	min	R/W	HR348
M		P009	Oil recovery: force comp. speed time	3	0	999	min	R/W	HR349
M		P010	Oil recovery: force comp. speed value	50.0	0.0	999.9	rps	R/W	HR350 (2R)
M		P011	Oil equalisation: solenoid valve opening time at start-up	30	0	999	s	R/W	HR352
M		P012	Oil equalisation: solenoid valve opening time	3	0	999	s	R/W	HR353
M		P013	Oil equalisation: min solenoid valve closed time	1	0	999	min	R/W	HR354
M		P014	Oil equalisation: max solenoid valve closed time	15	0	999	min	R/W	HR355
M		P015	Oil equalisation: solenoid valve closed time increment	20	0	999	min	R/W	HR356
S		P016	Oil equalisation valve: output logic 0/1= NO/NC	0	0	1	-	R/W	CS66
M		P017	Enable oil equalisation 0/1=No/Yes	0	0	1	-	R/W	CS67
M		P018	Enable oil recovery 0/1=No/Yes	0	0	1	-	R/W	CS68
S	x	P019	BLDC compressor circ. 1: operating mode 0=AUTO; 1=0%, ... 101=100%	0	0101-	R/W	HR357		
S	x	P020	BLDC compressor circ. 2: operating mode 0=AUTO; 1=0%, ... 101=100%	0	0	101	-	R/W	HR358
M		P021	Max. deltaP at start-up	900.0	0.0	2000.0	kPa	R/W	HR359 (2R)
M		P022	EVD: max pre-opening time for pressure equalisation	10	0	999	s	R/W	HR361
M		P023	EVD: pre-opening value for pressure equalisation	50.0	0.0	100.0	%	R/W	HR362 (2R)
M		P024	Start-up speed	50.0	20.0	120.0	rps	R/W	HR363 (2R)
M		P025	Custom speed: max value	120.0	0.0	999.9	rps	R/W	HR365 (2R)
M		P026	Custom speed: min value	20.0	0.0	999.9	rps	R/W	HR367 (2R)
M		P027	BLDC speed request threshold to start comp.	45	0	100	%	R/W	HR369(2R)
M		P028	BLDC speed request threshold % to start 2nd OnOff compressor	85	20	100	%	R/W	HR371(2R)



User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
M		P029	BLDC speed request threshold % to stop 2nd OnOff compressor	25	20	100	%	R/W	HR373(2R)
S		P030	Skip frequency: centre point [010]	0.0	0.0	999.9	Hz	R/W	HR375 (2R)
S		P031	Skip frequency: band [011]	0.0	0.0	999.9	Hz	R/W	HR377 (2R)
M		P032	Enable motor over-temperature alarm (PTC) [027] 0/1=No/Yes	0	0	1		R/W	HR379
M		P033	Motor over-temperature delay delay (PTC) [028]	0	0	999	s	R/W	HR380
M		P034	Enable crankcase heater function 0/1=No/Yes	0	0	1		R/W	CS69

**Tab. 6.c**

## 6.4 Valve

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
EEU = Valve									
S		E000	ExV circuit 1: manual mode - 0/1=No/Yes	0	0	1	-	R/W	CS020
S		E001	ExV circuit 1: steps in manual mode	0	0	65535	steps	R/W	HR099
S		E002	ExV circuit 2: manual mode - 0/1=No/Yes	0	0	1	-	R/W	CS021
S		E003	ExV circuit 2: steps in manual mode	0	0	65535	steps	R/W	HR100
S	x	E004	SH in cooling: set point	6.0	-40.0	180.0	K/R	R/W	HR101 (2R)
S		E005	SH in cooling: Kp	15.0	0.0	800.0	-	R/W	HR103 (2R)
S		E006	SH in cooling: Ti	150.0	0.0	1000.0	s	R/W	HR105 (2R)
S		E007	SH in cooling: Td	1.0	0.0	800.0	s	R/W	HR107 (2R)
S	x	E008	SH in heating: set point	6.0	-40.0	180.0	K/R	R/W	HR109 (2R)
S		E009	SH in heating: Kp	15.0	0.0	800.0	-	R/W	HR111 (2R)
S		E010	SH in heating: Ti	150.0	0.0	1000.0	s	R/W	HR113 (2R)
S		E011	SH in heating: Td	1.0	0.0	800.0	s	R/W	HR115 (2R)
S		E012	LowSH in cooling: threshold	1.0	-40.0	180.0	K/R	R/W	HR117 (2R)
S		E013	LowSH in cooling: Ti	10.0	0.0	800.0	s	R/W	HR119 (2R)
S		E014	LowSH in heating: threshold	1.0	-40.0	180.0	K/R	R/W	HR121 (2R)
S		E015	LowSH in heating: Ti	10.0	0.0	800.0	s	R/W	HR123 (2R)
S		E016	LOP in cooling: threshold	-5.0	-60.0	200.0	°C/°F	R/W	HR125 (2R)
S		E017	LOP in cooling: Ti	5.0	0.0	800.0	s	R/W	HR127 (2R)
S		E018	LOP in heating: threshold	-50.0	-60.0	200.0	°C/°F	R/W	HR129 (2R)
S		E019	LOP in heating: Ti	5.0	0.0	800.0	s	R/W	HR131 (2R)
M		E020	MOP in cooling: threshold	30.0	-60.0	200.0	°C/°F	R/W	HR133 (2R)
M		E021	MOP in cooling: Ti	15.0	0.0	800.0	s	R/W	HR135 (2R)
M		E022	MOP in heating: threshold	20.0	-60.0	200.0	°C	R/W	HR137 (2R)
M		E023	MOP in heating: Ti	15.0	0.0	800.0	s	R/W	HR139 (2R)
M		E024	LowSH: alarm delay time	300	0	18000	s	R/W	HR141
M		E025	LOP: alarm delay time	300	0	18000	s	R/W	HR142
M		E026	MOP: alarm delay time	300	0	18000	s	R/W	HR143
M		E032	Valve opening % at start-up (EVAP/EEV capacity ratio) in cooling	100	0	100	%	R/W	HR144
M		E033	Valve opening % at start-up (EVAP/EEV capacity ratio) in heating	100	0	100	%	R/W	HR145
M		E034	Control delay after pre-positioning	6	3	18000	s	R/W	HR146
M		E046	EVD Evolution: valve (1=CAREL EXV, ...) (*)	1	1	35	-	R/W	HR048
S		E047	ExV driver (0=Disabled, 1=Built-in, 2=EVD Evolution)	0	0	2	-	R/W	HR328

**Tab. 6.d**

🔍 **Note:** (\*) see the EVD Evolution manual for the complete list of selectable valves.

## 6.5 Source

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
Src = Source									
S		S000	Source pump 1: maintenance hour threshold (x100)	99	0	999	h	R/W	HR209
S		S001	Source pump 1: reset hour counter	0	0	1	-	R/W	CS031
S	x	S002	Source pump 1: operating mode - 0=AUTO - 1=OFF - 2=ON	0	0	2	-	R/W	HR210
S		S008	Source fan 1 circuit 1: maintenance hour threshold (X100)	99	0	999	h	R/W	HR214
S		S009	Source fan 1 circuit 1: reset hour counter	0	0	1	-	R/W	CS033
S	x	S010	Source ON/OFF fan 1 circuit 1: operating mode 0=AUTO 1=OFF 2=ON	0	0	2	-	R/W	HR215
S	x	S011	Source modulating fan circuit 1: operating mode 0=AUTO 1=0% 2=1%, ... 101=100%	0	0	101	-	R/W	HR216
S		S012	Source fan 1 circuit 2: maintenance hour threshold (X100)	99	0	999	h	R/W	HR217
S		S013	Source fan 1 circuit 2: reset hour counter	0	0	1	-	R/W	CS034
S	x	S014	Source ON/OFF fan circuit 2: operating mode 0=AUTO 1=OFF 2=ON	0	0	2	-	R/W	HR218
S	x	S015	Source modulating fan circuit 2: operating mode 0=AUTO 1=0% 2=1%, ... 101=100%	0	0	101	-	R/W	HR219
S		S016	Source fan: cold climate temperature threshold	-0.5	-999.9	999.9	°C/°F	R/W	HR220 (2R)
S		S017	Source fan: min cold climate speed	10.0	0.0	100.0	%	R/W	HR222 (2R)
S		S018	Source fan: cold climate speed at start-up	50.0	0.0	100.0	%	R/W	HR224 (2R)
S		S019	Source fan: cold climate speed at start-up time	5	0	300	s	R/W	HR226
S	x	S020	Enable noise reduction 0/1=No/Yes	0	0	1	-	R/W	CS035
S		S021	Noise reduction time band: start hours	22	0	23	h	R/W	HR167
S		S022	Noise reduction time band: start minutes	30	0	59	min	R/W	HR212
S		S023	Noise reduction time band: end hours	8	0	23	h	R/W	HR041
S		S024	Noise reduction time band: end minutes	30	0	59	min	R/W	HR042
S		S025	Source fan: noise reduction set point	45.0	0.0	999.9	°C/°F	R/W	HR231 (2R)
S		S026	Compressor start delay after pump start	30	0	999	s	R/W	HR233
S		S027	Pump (source) shutdown delay after compressor off	10	0	999	s	R/W	HR234

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
S		S028	Source fan in cooling: set point	30.0	-999.9	999.9	°C/°F	R/W	HR235 (2R)
S		S029	Source fan in heating: set point	10.0	0.0	99.9	°C/°F	R/W	HR237 (2R)
S		S031	Source fan in cooling set point at start-up	45.0	0.0	999.9	°C/°F	R/W	HR241 (2R)
S		S032	Source fan: delay at start-up in cooling	240	0	999	s	R/W	HR243
S		S034	Source fan: differential in cooling	15.0	0.0	99.9	K	R/W	HR246 (2R)
S		S035	Source fan: differential in heating	5.0	0.0	99.9	K	R/W	HR248 (2R)
S		S036	Modulating source fan: min speed value	20.0	0.0	100.0	%	R/W	HR250 (2R)
S		S037	Modulating source fan: max speed value	80.0	0.0	100.0	%	R/W	HR252 (2R)
S		S039	Defrost: start temperature	-1.0	-99.9	99.0	°C/°F	R/W	HR254 (2R)
S		S040	Defrost: reset start defrost delay threshold	1.0	S039	99.9	°C/°F	R/W	HR256 (2R)
S		S041	Defrost: delay at start-up	30	0	999	min	R/W	HR258
S		S042	Defrost: end temperature	52.0	-999.9	999.9	°C/°F	R/W	HR259 (2R)
S		S043	Enable sliding defrost 0/1=No/Yes	0	0	1	-	R/W	CS037
S		S044	Operation time at min capacity before cycle reversing	20	0	999	s	R/W	HR261
S		S045	Running time at min capacity after reversing cycle	30	0	999	s	R/W	HR262
S		S046	Defrost: min duration	1	0	99	min	R/W	HR263
S		S047	Defrost: max duration	5	0	99	min	R/W	HR264
S		S048	Dripping: duration - 0=Dripping not performed	90	0	999	s	R/W	HR265
S		S049	Post-dripping: duration - 0=Post-dripping not performed	30	0	999	s	R/W	HR266
S		S050	Minimum delay between consecutive defrosts	20	0	999	min	R/W	HR267
S		S051	BLDC compressor speed in defrost	80.0	0.0	999.9	rps	R/W	HR382 (2R)
S		S052	BLDC compressor speed for reversing the cycle when defrosting	40.0	0.0	999.9	rps	R/W	HR384 (2R)
S		S053	Defrost synchronisation 0=Independent - 1=Separate - 2=Simultaneous	0	0	2	-	R/W	HR272
M		S054	4-way valve: pressure differential for reversing	3.0	0.0	999.9	bar/psi	R/W	HR274 (2R)
M		S055	Compressor after defrost - 0/1=On/Off	0	0	1	-	R/W	CS038
S		S056	BLDC smart start: duration (*)	20	0	999	s	R/W	HR278
S		S057	Source frost protection: alarm threshold	-0.8	-999.9	999.9	K/R	R/W	HR279 (2R)
S		S058	Source frost protection: alarm differential	30.0	0.0	999.9	K/R	R/W	HR281 (2R)
S		S059	Frost protection alarm delay at threshold -1K	30	0	999	s	R/W	HR283
S		S060	Source: outside air temperature probe offset	0.0	-99.9	99.9	K/R	R/W	HR284 (2R)
M		S061	Source fan: output logic 0/1=NO/NC	0	0	1	-	R/W	CS039
M		S062	Source pump: output logic 0/1=NO/NC	0	0	1	-	R/W	CS040
S		S063	Reversing valve: output logic 0/1=NO/NC	0	0	1	-	R/W	CS041
S		S064	Type of source air circuit 0=Independent - 1=Common	0	0	1	-	R/W	CS042
S		S065	Type of source fan 0/1=Modulating/ON-OFF	0	0	1	-	R/W	CS044
M		S066	Source water flow type (0=Independent, 1=Common)	1	0	1	-	R/W	CS96
S		S068	Unit type 0=Air - 1=Water	0	0	1	-	R/W	CS046
S		S069	Defrost with fans: outside temperature threshold - 0.0°C/32.0 °F=Function disabled	0.0	0.0	99.9	-	R/W	HR736
M		S070	Cond. 1 frost temperature probe offset	0	-99.9	99.9	-	R/W	HR732
M		S071	Cond. 2 frost temperature probe offset	0	-99.9	99.9	-	R/W	HR734
S		S072	Source pump activation 0=on with unit on 1=on with compressor on 2=modulating on/off with condensing temperature	0	0	2	-	R/W	HR213
S		S073	Compressor status at start defrost 0=On minimum speed - 1=Off	0	0	1	-	R/W	CS92
S		S074	Logic for source fan/pump alarm from digital input	0	0	1	-	R/W	CS117

Tab. 6.e

## 6.6 Input/output configuration

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
S		Hc31	S1 configuration	7	0	8	-	R/W	HR752
S		Hc32	S2 configuration	8	0	8	-	R/W	HR753
S		Hc00	S3 configuration	0	0	8	-	R/W	HR286
S		S008	Source fan 1 circuit 1 - maintenance hour threshold (x100)	99	0	999	h	R/W	HR214
S		Hc34	S4 configuration	7	0	10	-	R/W	HR754
S		Hc35	S5 configuration	8	0	10	-	R/W	HR755
S		Hc03	S6 configuration	0	0	12	-	R/W	HR288
S		Hc04	S7 configuration (DIN)	6	0	8	-	R/W	HR289
S		Hc41	S1 configuration (circuit 2)	0	0	8	-	R/W	HR756
S		Hc42	S2 configuration (circuit 2)	0	0	8	-	R/W	HR757
S		Hc43	S3 configuration (circuit 2)	0	0	8	-	R/W	HR758
S		Hc44	S4 configuration (circuit 2)	7	0	10	-	R/W	HR759
S		Hc45	S5 configuration (circuit 2)	8	0	10	-	R/W	HR760
S		Hc05	S6 configuration (circuit 2)	0	0	11	-	R/W	HR290
S		Hc47	S7 configuration (circuit 2)	6	0	8	-	R/W	HR761
S		Hc14	ID1 configuration	1	0	10	-	R/W	HR297
S		Hc15	ID2 configuration	2	0	10	-	R/W	HR298
S		Hc06	ID4 configuration	0	0	10	-	R/W	HR291
S		Hc07	ID5 configuration	7	0	10	-	R/W	HR292
S		Hc08	ID6 configuration	6	0	10	-	R/W	HR293
S		Hc16	ID1 configuration (circuit 2)	10	0	10	-	R/W	HR299
S		Hc17	ID2 configuration (circuit 2)	2	0	10	-	R/W	HR300
S		Hc09	ID4 configuration (circuit 2)	0	0	10	-	R/W	HR294
S		Hc10	ID5 configuration (circuit 2)	0	0	10	-	R/W	HR295
S		Hc11	ID6 configuration (circuit 2)	0	0	10	-	R/W	HR296
S		Hc51	NO1 configuration	1	0	11	-	R/W	HR740

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
S		Hc52	NO2 configuration	2	0	11	-	R/W	HR741
S		Hc53	NO3 configuration	4	0	11	-	R/W	HR742
S		Hc54	NO4 configuration	7	0	11	-	R/W	HR743
S		Hc55	NO5 configuration	10	0	11	-	R/W	HR744
S		Hc56	NO6 configuration	0	0	11	-	R/W	HR745
S		Hc61	NO1 configuration (circuit 2)	1	0	8	-	R/W	HR746
S		Hc62	NO2 configuration (circuit 2)	2	0	8	-	R/W	HR747
S		Hc63	NO3 configuration (circuit 2)	4	0	8	-	R/W	HR748
S		Hc64	NO4 configuration (circuit 2)	7	0	8	-	R/W	HR749
S		Hc65	NO5 configuration (circuit 2)	0	0	8	-	R/W	HR750
S		Hc66	NO6 configuration (circuit 2)	0	0	8	-	R/W	HR751
S		Hc71	Y1 configuration	1	0	3	-	R/W	HR240
S		Hc72	Y2 configuration	3	0	3	-	R/W	HR245
S		Hc81	Y1 configuration (circuit 2)	1	0	2	-	R/W	HR244
S		Hc82	Y2 configuration (circuit 2)	0	0	2	-	R/W	HR276
S		Hc13	Buzzer 0/1=No/Yes	0	0	1	-	R/W	CS050

Tab. 6.f

☛ Note: (1) Max = 3 with Panel model, Max = 2 with DIN model.

## 6.7 mCH2 parameters (Legacy models only)

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
M	X	F003	Number of evaporators (0=1; 1=2)	0	0	1	-	-	-
M	X	F007	Probe S4 installed on the source heat exchanger (0=No, 1=Yes: 0 condensing in CH mode, evaporation in HP mode)	0	0	1	-	-	-
M	X	F008	Frost protection alarm delay	10	0	999	-	-	-
M	X	F009	Supply air temperature limit threshold	14.0	0.0	99.9	°C	-	-
M	X	F010	Supply air temperature limit differential	4.0	0.0	20.0	°K	-	-
M	X	F011	Heater digital output logic (0=NO; 1=NC)	0	0	1	-	-	-
M	X	F012	Offset on set point in cooling mode for the heaters	1.0	0.0	99.9	°K	-	-
M	X	F013	Differential on set point in cooling mode for the heaters	0.5	0.2	99.9	°K	-	-
M	X	F014	Offset on set point in heating mode for the heaters	3.0	0.0	99.9	°K	-	-
M	X	F015	Differential on set point in heating mode for the heaters	1.0	0.2	99.9	°K	-	-
M	X	F016	Heaters active during defrost (0= No, 1=Yes)	0	0	1	-	-	-
M	X	F017	Supply fan operating mode (0=Always ON; 1=ON by temp. control)	0	0	1	-	-	-
M	X	F018	Hot-start set point	40.0	0.0	99.9	°C	-	-
M	X	F019	Hot-keep differential	5.0	0.0	99.9	°K	-	-
M	X	F020	Compressor request logic from digital input (0=NC; 1=NO)	1	0	1	-	-	-
M	X	F021	Mix delivery water temperature probe calibration (S1 expansion)	0.0	-99.9	99.9	°K	-	-
M	X	F022	Evaporator 2 water outlet temperature probe calibration (S2 expansion)	0.0	-99.9	99.9	°K	-	-
M	X	F023	Direct relationship between digital inputs and digital outputs for condensing unit (0=No; 1=Yes)	0	0	1	-	-	-
M	X	F024	Manual heater 1 management (0=AUTO; 1=OFF; 2=ON)	0	0	2	-	-	-
M	X	F025	Manual heater 2 management (0=AUTO; 1=OFF; 2=ON)	0	0	2	-	-	-
M	x	F026	Compressors off at low outside temperature (air/air)	-40.0	-40.0	99.9	°C	-	-
M		F027	Enable compressor capacity control 0/1=No/Yes	0	0	1	-	R/W	CS49
M		F028	Air heating: probe for user heater temperature control 0 = ROOM - 1 = SUPPLY	FALSE	-	-	-	R/W	CS94

Tab. 6.g

## 6.8 BMS port

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
S	x	Hd00	BMS: serial address	1	1	247	-	-	HR147
S	x	Hd01	BMS: baud rate 3=9600; 4=19200; 5=38400; 6=57600; 7=115200	7	3	7	-	-	HR148
S	x	Hd02	BMS: settings 0= 8-NONE-1 - 1= 8-NONE-2 - 2= 8-EVEN-1 3= 8-EVEN-2 - 4= 8-ODD-1 - 5= 8-ODD-2	1	0	5	-	-	HR149
S	x	Hd07	BMS: supervisor database 0= 32bit 1=16bit	0	0	1	-	-	CS48

Tab. 6.h

## 6.9 Password

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
U		He00	User password	1000	0000	9999	-	-	-
S		He01	Service password	2000	0000	9999	-	-	-
M		He02	Manufacturer password	1234	0000	9999	-	-	-
M		He03	Password for profile 1	0001	0000	9999	-	-	-
M		He04	Password for profile 2	0002	0000	9999	-	-	-
M		He05	Password for profile 3	0003	0000	9999	-	-	-
M		He06	Password for profile 4	0004	0000	9999	-	-	-
M		He07	Password for profile 5	0005	0000	9999	-	-	-
M		He08	Password for profile 6	0006	0000	9999	-	-	-
M		He09	Password for profile 7	0007	0000	9999	-	-	-

Tab. 6.i

## 6.10 Dashboard values

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
U	x	AFC1	Circuit 1: source delivery water temperature	-	-999.9	999.9	°C/°F	R	IR217 (2R)
U	x	AFC2	Circuit 2: source delivery water temperature	-	-999.9	999.9	°C/°F	R	IR213 (2R)
U	x	AFE1	Circuit 1: user delivery water temperature	-	-999.9	999.9	°C/°F	R	
U	x	AFE2	Circuit 2: user delivery water temperature	-	-999.9	999.9	°C/°F	R	
U	x	EuP1	Circuit 1: evaporation temperature (or converted value)	-	-999.9	999.9	°C/°F	R	IR026 (2R)
U	x	EuP2	Circuit 2: evaporation temperature (or converted value)	-	-999.9	999.9	°C/°F	R	IR034 (2R)
U		dSP1	Circuit 1: condensing pressure	-	-999.9	999.9	bar/psi	R	IR020 (2R)
U		dSP2	Circuit 2: condensing pressure	-	-999.9	999.9	bar/psi	R	IR028 (2R)
U	x	dSt1	Circuit 1: discharge temperature	-	-999.9	999.9	°C/°F	R	IR012 (2R)
U	x	dSt2	Circuit 2: discharge temperature	-	-999.9	999.9	°C/°F	R	IR016 (2R)
U	x	rUSr	User: return water temperature	-	-999.9	999.9	°C/°F	R	IR054 (2R)
U	x	dUSr	User: delivery water temperature	-	-999.9	999.9	°C/°F	R	IR056 (2R)
U	x	Cnd1	Circuit 1: condensing temperature (or converted value)	-	-999.9	999.9	°C/°F	R	IR024 (2R)
U	x	Cnd2	Circuit 2: condensing temperature (or converted value)	-	-999.9	999.9	°C/°F	R	IR032 (2R)
U		Sprb	Source: outside air temperature	-	-999.9	999.9	°C/°F	R	HR229
U		ScP1	Circuit 1: evaporation pressure	-	-999.9	999.9	bar/psi	R	IR022 (2R)
U		ScP2	Circuit 2: evaporation pressure	-	-999.9	999.9	bar/psi	R	IR030 (2R)
U		Sct1	Circuit 1: suction temperature	-	-999.9	999.9	°C/°F	R	IR014 (2R)
U		Sct2	Circuit 2: suction temperature	-	-999.9	999.9	°C/°F	R	IR018 (2R)
U	x	SetA	Current set point	-	-999.9	999.9	°C/°F	R	IR046 (2R)
U		rSPt	Remote set point	-	-999.9	999.9	°C/°F	R	IR090 (2R)
U	x	SetU	Automatic set point changeover	23	U086	U087	°C/°F	R/W	HR767 (2R)
U		Opn1	ExV circuit 1: position	-	0	9999	%	R	IR050
U		Opn2	ExV circuit 2: position	-	0	9999	%	R	IR053
U	x	SSH1	Circuit 1: suction superheat	-	-999.9	999.9	°C/°F	R	IR048 (2R)
U	x	SSH2	Circuit 2: suction superheat	-	-999.9	999.9	°C/°F	R	IR051 (2R)
S	x	Hd00	BMS: serial address	1	1	245	-	R	HR147
S	x	Hd01	BMS: baud rate	7	3	7	-	R	HR148
S	x	Hd02	BMS: settings 0=8-NONE-1    2=8-EVEN-1    4=8-ODD-1 1=8-NONE-2    3=8-EVEN-2    5=8-ODD-2	0	0	5	-	R	HR149
S		H1C1	Comp. 1 circuit 1: hour counter	-	0	99999	h	R	IR004 (2R)
S		H1C2	Comp. 2 circuit 1: hour counter	-	0	99999	h	R	IR006 (2R)
S		H2C1	Comp. 2 circuit 1: hour counter	-	0	99999	h	R	IR008 (2R)
S		H2C2	Comp. 2 circuit 2: hour counter	-	0	99999	h	R	IR010 (2R)
S		HSP1	Source pump: hour counter	-	0	99999	h	R	IR036 (2R)
S		HuP1	User pump 1: hour counter	-	0	99999	h	R	IR000 (2R)
S		HuP2	User pump 2: hour counter	-	0	99999	h	R	IR002 (2R)
S		HFn1	Fan circuit 1: hour counter	-	0	99999	h	R	IR040 (2R)
S		HFn2	Fan circuit 2: hour counter	-	0	99999	h	R	IR042 (2R)
S	x	rps1	BLDC 1 speed	-	0	999.9	rps	R	IR100 (2R)
S	x	rps2	BLDC 2 speed	-	0	999.9	rps	R	IR181 (2R)
S	x	Mc1	BLDC 1 current	-	0	99.9	A	R	IR102 (2R)
S	x	Mc2	BLDC 2 current	-	0	99.9	A	R	IR183 (2R)
S		MP1	BLDC1 power	-	0	99.9	kW	R	IR104 (2R)
S		MP2	BLDC2 power	-	0	99.9	kW	R	IR185 (2R)
S		Drt1	Current speed drive 1 temperature	-	0	999.9	°C/°F	R	IR106 (2R)
S		Drt2	Current speed drive 2 temperature	-	0	999.9	°C/°F	R	IR187 (2R)
S		AIHs1_1	Speed drive 1 alarm log: last	-	0	99	R	R	IR108
S		AIHs2_1	Speed drive 1 alarm log: second-to-last	-	0	99	R	R	IR109
S		AIHs3_1	Speed drive 1 alarm log: third-to-last	-	0	99	R	R	IR110
S		AIHs4_1	Speed drive 1 alarm log: fourth-to-last	-	0	99	R	R	IR111
S		AIHs1_2	Speed drive 2 alarm log: last	-	0	99	R	R	IR189
S		AIHs2_2	Speed drive 2 alarm log: second-to-last	-	0	99	R	R	IR190
S		AIHs3_2	Speed drive 2 alarm log: third-to-last	-	0	99	R	R	IR191
S		AIHs4_2	Speed drive 2 alarm log: fourth-to-last	-	0	99	R	R	IR192

Tab. 6.j

## 6.11 Settings

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
U	x	SETC	Cooling set point	7.0	U006	U007	°C/°F	R/W	HR307 (2R)
U	x	SEtH	Heating set point	40.0	U008	U009	°C/°F	R/W	HR309 (2R)
U	x	0-1	Unit On-Off from keypad 0=OFF 1=ON	0	0	1	-	R/W	CS54
U	x	ModE	Cooling/heating from keypad 0=Cooling 1=Heating	0	0	1	-	R/W	CS55
-		RES	Reset alarms from BMS 0/1=No/Yes	0	0	1	-	R/W	CS56
S	x	DFr	Force defrost 0=No 1=Circuit 1 2=Circuit 2 3=Circuit 1 and 2	0	0	3	-	R/W	HR78
S	x	ClrH	Reset alarm log 0/1=No/Yes	0	0	1	-	R/W	CS59
S	x	UoM	Unit of measure 0=°C/barq 1=°F/psig	0	0	1	-	R/W	CS47
S	x	rStr	Reset factory parameters	0	0	1	-	R/W	CS45

Tab. 6.k

# 7. SUPERVISOR TABLE

µChiller provides a database of supervisor variables via Modbus RTU protocol over RS485 (BMS port on the µChiller controller). The BMS port has the following default settings:

- baud rate 115,200;
- data bits 8;
- no parity;
- stop bits 2.

See "Parameter table: BMS port" to set different values. "Index" is the address specified in the Modbus® frame.

## Unit on/off management from BMS.

The unit can also be switched on/off from the BMS supervisor, as follows.

By setting Hd05 = TRUE (CS 63) and UnSt = TRUE (CS 54), the unit can be switched on/off via BMS with BmsOnOff (CS 64).

Remember that the capacity request from BMS (HR 331) is a REAL data type: the value is written to 2 registers in big endian not swapped mode.

Register Hd07 (CS 48) can be used to select the database type (FALSE: 32bit, TRUE: 16bit).

## 7.1 Coil Status

Index	Size	Acronym	Data Type	Min Value	Max Value	R/W	Init Value	UoM	Description
0	1	U001	BOOL			R/W	FALSE		U001 - User pump 1 reset hour counters
1	1	U004	BOOL			R/W	FALSE		U004 - User pump 2 reset hour counters
2	1	U010	BOOL			R/W	FALSE		U010 - Enable set point compensation (0=Disabled, 1=Enabled)
3	1	U017	BOOL			R/W	FALSE		U017 - Enable scheduler (0=Disabled, 1=Enabled)
4	1	U022	BOOL			R/W	FALSE		U022 - Type of scheduling (0=Switch OFF, 1=Change set point)
5	1	U034	BOOL			R/W	FALSE		U034 - Cool/heat changeover type (0=keypad, 1=DIn)
6	1	U036	BOOL			R/W	FALSE		U036 - Startup control probe (0=Return, 1=Delivery)
7	1	U038	BOOL			R/W	TRUE		U038 - Run control probe (0=Return, 1=Delivery)
8	1	U057	BOOL			R/W	FALSE		U057 - Remote alarm input logic (0=N.C., 1=N.O.)
9	1	U058	BOOL			R/W	TRUE		U058 - Cool/Heat input logic (0=N.O., 1=N.C.)
10	1	U059	BOOL			R/W	TRUE		U059 - Remote unit ON/OFF input logic (0=N.O., 1=N.C.)
11	1	U060	BOOL			R/W	FALSE		U060 - User pump flow input logic (0=N.C., 1=N.O.)
12	1	U061	BOOL			R/W	FALSE		U061 - User pump overload input logic (0=N.C., 1=N.O.)
13	1	U062	BOOL			R/W	TRUE		U062 - 2nd set point input logic (0=N.O., 1=N.C.)
14	1	U063	BOOL			R/W	FALSE		U063 - User pump output logic (0=N.O., 1=N.C.)
15	1	U064	BOOL			R/W	FALSE		U064 - Global alarm relay output logic (0=N.C., 1=N.O.)
16	1	U065	BOOL			R/W	FALSE		U065 - Free-Cooling valve output logic (0=N.O., 1=N.C.)
17	1	U066	BOOL			R/W	FALSE		U066 - Frost heater output logic (0=N.O., 1=N.C.)
18	1	U067	BOOL			R/W	FALSE		U067 - Alarm relay configuration (0=Control alarms, 1=All alarms)
19	1	U068	BOOL			R/W	FALSE		U068 - Enable Free-Cooling (0=Disabled, 1=Enabled)
20	1	E000	BOOL			R/W	FALSE		E000 - ExV circ.1 enable manual mode
21	1	E002	BOOL			R/W	FALSE		E002 - ExV circ.2 enable manual mode
22	1	Hd06	BOOL			R/W	FALSE		Hd06 - Enable capacity request from BMS (0=Disabled, 1=Enabled)
23	1	C001	BOOL			R/W	FALSE		C001 - Comp.1 circ.1 reset hour counters
24	1	C004	BOOL			R/W	FALSE		C004 - Comp.2 circ.1 reset hour counters
25	1	C007	BOOL			R/W	FALSE		C007 - Comp.1 circ.2 reset hour counters
26	1	C010	BOOL			R/W	FALSE		C010 - Comp.2 circ.2 reset hour counters
27	1	C034	BOOL			R/W	FALSE		C034 - High press. switch input logic (0=N.C., 1=N.O.)
28	1	C035	BOOL			R/W	FALSE		C035 - Comp. overload input logic (0=N.C., 1=N.O.)
29	1	C036	BOOL			R/W	FALSE		C036 - Comp. output logic (0=N.O., 1=N.C.)
30	1	C044	BOOL			R/W	FALSE		C044 - Enable circuit destabilisation (0=Disabled, 1=Enabled)
31	1	S001	BOOL			R/W	FALSE		S001 - Source pump 1 reset hour counters
33	1	S009	BOOL			R/W	FALSE		S009 - Source fan 1 circ.1 reset hour counters
34	1	S013	BOOL			R/W	FALSE		S013 - Source fan 1 circ.2 reset hour counters
35	1	S020	BOOL			R/W	FALSE		S020 - Enable low noise (0=Disabled, 1=Enabled)
37	1	S043	BOOL			R/W	FALSE		S043 - Enable sliding defrost (0=Disabled, 1=Enabled)
38	1	S055	BOOL			R/W	FALSE		S055 - Comp. behavior in post-defrost phase (0=Comp. is OFF, 1=Comp. is switched ON)
39	1	S061	BOOL			R/W	FALSE		S061 - Source fan output logic (0=N.O., 1=N.C.)
40	1	S062	BOOL			R/W	FALSE		S062 - Source pump output logic (0=N.O., 1=N.C.)
41	1	S063	BOOL			R/W	FALSE		S063 - Reverse valve output logic (0=N.O., 1=N.C.)
42	1	S064	BOOL			R/W	FALSE		S064 - Source flow type (0=Independent, 1=Common)
44	1	S065	BOOL			R/W	FALSE		S065 - Source fan type (0=Inverter, 1=ON/OFF)
45	1	rStr	BOOL			R/W	FALSE		rStr - Restore application to Carel settings (0=Disabled, 1=Enabled)
46	1	S068	BOOL			R/W	FALSE		S068 - Source type (0=Air, 1=Water)
47	1	UoM	BOOL			R/W	FALSE		UoM - Unit of measure used for Display 2-Row and BMS, not for Applica (0=°C/bar, 1=°F/PSI)
48	1	Hd07	BOOL			R/W	FALSE		Hd07 - BMS port database type (0= 32bit, 1= 16bit)
49	1	F027	BOOL			R/W	FALSE		F027 - Compressor with capacity control
50	1	Hc13	BOOL			R/W	TRUE		Hc13 - Enable buzzer (0=Disabled, 1=Enabled)
52	1	Ha02	BOOL			R/W	FALSE		Ha02 - Set controller internal clock (0=No set, 1=Set)
53	1	Hd03	BOOL			R/W	TRUE		#N/D
54	1	UnSt	BOOL			R/W	FALSE		UnSt - Unit ON/OFF command from keypad (0=OFF 1=ON)
55	1	ModE	BOOL			R/W	FALSE		ModE - Cool/Heat mode from keypad (0=Cool, 1=Heat)
56	1	RES	BOOL			R/W	FALSE		RES - Reset active alarms from BMS net (0=NO, 1=Reset)
57	1	DevRotReq_ Comp1Circ1	BOOL			R/W			Request comp.1 circ.1 by DeviceRotation

Index	Size	Acronym	Data Type	Min Value	Max Value	R/W	Init Value	UoM	Description
58	1	DevRotReq_Comp2Circ1	BOOL			R/W			Request comp.2 circ.1 by DeviceRotation
59	1	ClrH	BOOL			R/W	FALSE		ClrH - Delete alarms log (0=No, 1=Yes)
60	1	UnitOn_Slv	BOOL			R/W			Unit ON/OFF status (0=OFF, 1=ON) sent to Secondary board
61	1	UsrPmp2_On_Slv	BOOL			R/W			Command to manage user pump 2 (Secondary board)
62	1	AFreezeHeat_Slv	BOOL			R/W			Command to manage the frost heater (Secondary board)
63	1	Hd05	BOOL			R/W	FALSE		Hd05 - Enable unit ON/OFF command by BMS net (0=Disabled, 1=Enabled)
64	1	BmsOnOff	BOOL			R/W			Unit On/Off command from BMS (0=OFF, 1=ON)
65	1	HeatCool_Slv	BOOL			R/W			Unit in cooling mode sent to secondary board (0=Heating, 1=Cooling)
66	1	P016	BOOL			R/W	FALSE		P016 - Oil equalisation solenoid valve circ.1 output logic (0=NC, 1=NO)
67	1	P017	BOOL			R/W	TRUE		P017 - Enable oil equalisation function (0=OFF, 1=ON)
68	1	P018	BOOL			R/W	FALSE		P018 - Enable oil recovery function (0=OFF, 1=ON)
69	1	P034	BOOL			R/W	FALSE		P034 - Enable crancckase heater (0=OFF, 1=ON)
70	1	Al_SrsUnit_StopSlv	BOOL			R/W			Main sends Serious alarm to stop Secondary
71	1	CompCfg_BLDC_En_VaporInjection	BOOL			R/W	FALSE		#N/D
72	1	SlaveTyp_OnOff	BOOL			R/W	FALSE		Secondary type (0=Secondary connected to CORE-1 with Rotation, 1= Secondary connected to CORE-0 with EasyRot for ON/OFF)
73	1	ManInstDef_PWRP	BOOL			R/W			Request default installation of Power+ circ.1
74	1	MC_UnitTyp	BOOL			R/W	FALSE		MC unit(0= NO, 1= YES)
75	1	En_uC2SE	BOOL			R/W	FALSE		#N/D
76	1	C051	BOOL			R/W	FALSE		C051 - Low press. switch input logic (0=N.C., 1=N.O.)
77	1	F003	BOOL			R/W	FALSE		F003 - Evaporator number uC2SE (0=1, 1=2)
78	1	F020	BOOL			R/W	TRUE		F020 - Remote compressor command input logic (0=N.C., 1=N.O.)
79	1	F007	BOOL			R/W	FALSE		F007 - S4 probe fitted on source exchanger [uCH2SE] (0= NO, 1=YES: in CH read cond., in HP read evap.)
80	1	U078	BOOL			R/W	FALSE		U078 - Enable burst function (0=Disabled, 1=Enabled)
81	1	F016	BOOL			R/W	FALSE		F016 - Heaters active during defrost (0=OFF, 1=ON)
82	1	F017	BOOL			R/W	FALSE		F017 - User fan device activation mode (0=Always ON, 1=ON by control)
83	1	UsrHeater1	BOOL			R/W	FALSE		UsrHeater1 - User heater 1 status
84	1	F011	BOOL			R/W	FALSE		F011 - Heater output logic (0=N.O., 1=N.C.)
85	1	F023	BOOL			R/W	FALSE		F023 - Correspondence D.I. to D.O. compressors (for MC units only) (0=FALSE, 1=TRUE)
87	1	UsrFanON	BOOL			R/W	FALSE		UsrFanON - User fan ON
88	1	FC_Agree	BOOL			R/W			Free cooling condition exists (0=FC not possible; 1=FC possible)
89	1	En_SrcRetTempPrb	BOOL			R/W	FALSE		En_SrcRetTempPrb - Connected source return temperature probe
90	1	WaitOtherDevCirc1_SmartOpnExV	BOOL			R/W			0
91	1	LowNoiseActive	BOOL			R/W	FALSE		Low noise function active
92	1	S073	BOOL			R/W	FALSE		S073 - Compressor status at defrost in (0: Minimum speed, 1: OFF)
93	1	U082	BOOL			R/W	FALSE		U082 - Frost measurement type (0=ON EVAP., 1=ON WATER)
94	1	F028	BOOL			R/W	FALSE		F028 - Air heating: Control temp. probe for user heaters (0=ROOM, 1=DELIVERY)
95	1	AFreezeHeatUsr	BOOL			R/W			User frost heater status
97	1	AFreezeHeatSrc	BOOL			R/W			Source frost heater status
96	1	S066	BOOL			R/W	TRUE		S066 - Source water flow type (0=Independent, 1=Common)
117	1	S074	BOOL			R/W	FALSE		S074 - Source fan/pmp alarm input logic (0=N.C., 1=N.O.)
121	1	U093	BOOL			R/W	FALSE		U093 - Flow alarm management

Tab. 7.a

## 7.2 Holding Register

Index	Size	Acronym	Data Type	Min Value	Max Value	R/W	Init Value	UoM	Description
0	2	Ha00	DATE_ AND_TIME			R/W	0		Ha00 - New date and time to set on the controller's internal clock
2	1	U000	UINT(0..999)			R/W	99	HOUR	U000 - User pump 1 maintenance hour threshold (x100)
3	1	U002	UINT(0..2)			R/W	0		U002 - User pump 1/fan manual mode (0=AUTO, 1=OFF, 2=ON)
4	1	U003	UINT(0..999)			R/W	0	HOUR	U003 - User pump 2 maintenance hour threshold (x100)
5	1	U005	UINT(0..2)			R/W	0		U005 - User pump 2 manual mode (0=AUTO, 1=OFF, 2=ON)
6	1	U083	USINT(0..3)			R/W	0		U083 - Automatic changeover type
7	2	U006	REAL			R/W	5	CELSIUS	U006 - Cool set point low limit
9	2	U007	REAL			R/W	20	CELSIUS	U007 - Cool set point high limit
11	2	U008	REAL			R/W	30	CELSIUS	U008 - Heat set point low limit
13	2	U009	REAL			R/W	45	CELSIUS	U009 - Heat set point high limit
15	2	U011	REAL			R/W	25	CELSIUS	U011 - Start temp. for cool set point compensation
17	2	U012	REAL			R/W	10	CELSIUS	U012 - End temp. for cool set point compensation
19	2	U013	REAL			R/W	5	DELTAKELVIN	U013 - Max compensation for cool set point
21	2	U014	REAL			R/W	5	CELSIUS	U014 - Start temp. for heat set point compensation
23	2	U015	REAL			R/W	-10	CELSIUS	U015 - Outside temp. diff. for heat set point compensation
25	2	U016	REAL			R/W	5	DELTAKELVIN	U016 - Max compensation for heat set point
27	1	U018	UINT			R/W	0	HOUR	Time band hours
28	1	U019	UINT			R/W	0	MINUTE	Time band minutes
29	1	U020	UINT			R/W	0	HOUR	Time band hours
30	1	U021	UINT			R/W	0	MINUTE	Time band minutes
31	2	U023	REAL			R/W	10	CELSIUS	U023 - 2nd cool set point
33	2	U024	REAL			R/W	35	CELSIUS	U024 - 2nd heat set point
35	1	U025	USINT(0..2)			R/W	0		U025 - Analogue set point input type (0=0-5V, 1=0-10V, 2=4-20mA)
36	1	F008	UINT(0..999)			R/W	10	SECOND	F008 - Antifreeze alarm delay
37	2	U026	REAL			R/W	5	CELSIUS	U026 - Remote set point min value
39	2	U027	REAL			R/W	35	CELSIUS	U027 - Remote set point max value
41	1	S023	UINT			R/W	0	HOUR	Time band hours
42	1	S024	UINT			R/W	0	MINUTE	Time band minutes



Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
43	2	U028	REAL			R/W	0	DELTAKELVIN	U028 - Remote set point offset
48	1	E046	UINT	0	35	R/W	1		E046 - ExV valve type for EVD EVO (1=CAREL EXV, ...)
49	2	U031	REAL			R/W	10	DELTAKELVIN	U031 - High water temp. set point offset
51	1	U032	USINT(0..99)			R/W	15	MINUTE	U032 - High water temp. startup delay
52	1	U033	UINT(0..999)			R/W	180	SECOND	U033 - High water temp.run delay
53	1	U035	UINT(0..999)			R/W	1	MINUTE	U035 - Changeover delay time
54	1	U037	UINT(0..999)			R/W	180	SECOND	U037 - Delay time between Startup PID and Run PID
55	2	U039	REAL			R/W	8.3		U039 - Startup PID Kp
57	1	U040	UINT(0..999)			R/W	180	SECOND	U040 - Startup PID Ti
58	1	U041	UINT(0..99)			R/W	0	SECOND	U041 - Startup PID Td
59	2	U042	REAL			R/W	10		U042 - Run PID Kp
61	1	U043	UINT(0..999)			R/W	120	SECOND	U043 - Run PID Ti
62	1	U044	UINT(0..99)			R/W	0	SECOND	U044 - Run PID Td
63	1	U045	UINT(0..999)			R/W	10	SECOND	U045 - User pump flow alarm startup delay
64	1	U046	UINT(0..99)			R/W	3	SECOND	U046 - User pump flow alarm run delay
65	1	U047	UINT(0..999)			R/W	30	SECOND	U047 - Comp.ON delay after user pump ON
66	1	U048	UINT(0..999)			R/W	180	SECOND	U048 - User pump delay OFF from comp. OFF
67	1	U049	UINT(0..999)			R/W	5	HOUR	U049 - User pump rotation time
68	2	U050	REAL			R/W	-0.8	CELSIUS	U050 - User frost alarm threshold
70	2	U051	REAL			R/W	30	DELTAKELVIN	U051 - User frost alarm differential
72	1	U052	UINT(0..999)			R/W	30	SECOND	U052 - User frost alarm delay time at 1K below threshold
73	2	U053	REAL			R/W	4	CELSIUS	U053 - Frost (with unit OFF) set point
75	2	U054	REAL			R/W	2	DELTAKELVIN	U054 - Frost (with unit OFF) differential
78	1	DFr	USINT(0..3)			R/W	0		DFr - Force manual defrost (0= None, 1= Force defrost on circ. 1, 2= Force defrost on circ. 2, 3= Force defrost on all circuits)
79	2	U055	REAL			R/W	0	DELTAKELVIN	U055 - Probe offset for return water temp. from user
83	2	U056	REAL			R/W	0	DELTAKELVIN	U056 - Probe offset for delivery water temp. to user
85	2	U069	REAL			R/W	3	DELTAKELVIN	U069 - Delta temp. to activate Free Cooling
87	2	U070	REAL			R/W	1.5	DELTAKELVIN	U070 - Free-Cooling ON/OFF hysteresis
89	2	U071	REAL			R/W	8	DELTAKELVIN	U071 - Delta temp. Free-Cooling design (to reach unit nominal capacity)
91	2	U072	REAL			R/W	5	CELSIUS	U072 - Free Cooling limit threshold (used to close FC valve: because FC gives water with very low temp.)
93	2	U073	REAL			R/W	3	DELTAKELVIN	U073 - Free-Cooling limit differential
95	1	U074	USINT(0..2)			R/W	0		U074 - Free-Cooling type (0=Air, 1=Remote air coil, 2=Water)
96	1	U075	USINT(0..2)			R/W	2		U075 - Frost type (0=Heater, 1=Pump, 2=Heater-Pump)
97	1	U076	USINT(1..2)			R/W	1		U076 - User pump number
98	1	U077	USINT	0	2	R/W	0		U077 - Unit type (0=CH, 1=HP, 2=CH/HP, 3=MC CH, 4=MC CH/HP, 5=A/A CH, 6=A/A CH/HP, 7=W/W CH/HP with water reverse)
99	1	E001	UINT(0..65535)			R/W	0	STEPS	E001 - ExV circ.1 manual mode steps
100	1	E003	UINT(0..65535)			R/W	0	STEPS	E003 - ExV circ.2 manual mode steps
101	2	E004	REAL			R/W	6	DELTAKELVIN	E004 - ExV SH set point in cool
103	2	E005	REAL			R/W	15		E005 - ExV SH control Kp in cool
105	2	E006	REAL			R/W	150	SECOND	E006 - ExV SH control Ti in cool
107	2	E007	REAL			R/W	1	SECOND	E007 - ExV SH control Td in cool
109	2	E008	REAL			R/W	6	DELTAKELVIN	E008 - ExV SH set point in heat
111	2	E009	REAL			R/W	15		E009 - ExV SH control Kp in heat
113	2	E010	REAL			R/W	150	SECOND	E010 - ExV SH control Ti in heat
115	2	E011	REAL			R/W	1	SECOND	E011 - ExV SH control Td in heat
117	2	E012	REAL			R/W	1	DELTAKELVIN	E012 - ExV low SH threshold in cool
119	2	E013	REAL			R/W	10	SECOND	E013 - ExV low SH Ti in cool
121	2	E014	REAL			R/W	1	DELTAKELVIN	E014 - ExV low SH threshold in heat
123	2	E015	REAL			R/W	10	SECOND	E015 - ExV low SH Ti in heat
125	2	E016	REAL			R/W	-5	CELSIUS	E016 - ExV LOP control threshold in cool
127	2	E017	REAL			R/W	5	SECOND	E017 - ExV LOP control Ti in cool
129	2	E018	REAL			R/W	-50	CELSIUS	E018 - ExV LOP control threshold in heat
131	2	E019	REAL			R/W	5	SECOND	E019 - EEV LOP control Ti in heat
133	2	E020	REAL			R/W	30	CELSIUS	E020 - ExV MOP control threshold in cool
135	2	E021	REAL			R/W	15	SECOND	E021 - ExV MOP control Ti in cool
137	2	E022	REAL			R/W	20	CELSIUS	E022 - ExV MOP control threshold in heat
139	2	E023	REAL			R/W	15	SECOND	E023 - ExV MOP control Ti in heat
141	1	E024	UINT(0..18000)			R/W	300	SECOND	E024 - ExV low SH alarm delay time
142	1	E025	UINT(0..18000)			R/W	300	SECOND	E025 - ExV LOP alarm delay time
143	1	E026	UINT(0..18000)			R/W	300	SECOND	E026 - ExV MOP alarm delay time
144	1	E032	UINT(0..100)			R/W	100	PERCENT	E032 - ExV startup valve opening % (capacity ratio EVAP / EEV) in cool
145	1	E033	UINT(0..100)			R/W	100	PERCENT	E033 - ExV startup valve opening % (capacity ratio EVAP / EEV) in heat
146	1	E034	UINT(0..18000)			R/W	6	SECOND	E034 - ExV control delay after pre-positioning
147	1	Hd00	USINT(1..247)			R/W	1		Hd00 - BMS port serial address
148	1	Hd01	USINT(3..7)			R/W	4		Hd01 - BMS port baud rate (3=9600, 4=19200, 5=38400, 6=57600, 7=115200)
149	1	Hd02	USINT(0..5)			R/W	1		Hd02 - BMS port network settings (0=8-NONE-1, 1=8-NONE-2, 2=8-EVEN-1, 3=8-EVEN-2, 4=8-ODD-1, 5=8-ODD-2)
153	1	C000	UINT(0..999)			R/W	99	HOUR	C000 - Comp.1 circ.1 maintenance hour threshold (x100)
154	1	C002	USINT(0..2)			R/W	0		C002 - Comp.1 circ.1 manual mode (0=AUTO, 1=OFF, 2=ON)
155	1	C003	UINT(0..999)			R/W	99	HOUR	C003 - Comp.2 circ.1 maintenance hour threshold (x100)
156	1	C005	USINT(0..2)			R/W	0		C005 - Comp.2 circ.1 manual mode (0=AUTO, 1=OFF, 2=ON)
157	1	C006	UINT(0..999)			R/W	99	HOUR	C006 - Comp.1 circ.2 maintenance hour threshold (x100)
158	1	C008	USINT(0..2)			R/W	0		C008 - Comp.1 circ.2 manual mode (0=AUTO, 1=OFF, 2=ON)
159	1	C009	UINT(0..999)			R/W	99	HOUR	C009 - Comp.2 circ.2 maintenance hour threshold (x100)
160	1	C011	USINT(0..2)			R/W	0		C011 - Comp.2 circ.2 manual mode (0=AUTO, 1=OFF, 2=ON)
162	1	C012	UINT(0..999)			R/W	180	SECOND	C012 - Comp. min On time
163	1	C013	UINT(0..999)			R/W	60	SECOND	C013 - Comp. min Off time
164	1	C014	UINT(0..999)			R/W	360	SECOND	C014 - Min time between On of same comp.

Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
165	1	C015	UINT(5..999)			R/W	30	SECOND	C015 - Comp. load up time
166	1	C016	UINT(5..999)			R/W	10	SECOND	C016 - Comp. load down time
167	1	S021	UINT			R/W	0	HOUR	Time band hours
168	1	C020	UINT(5..999)			R/W	720	MINUTE	C020 - Circuit destabilisation max time with one or more comp. OFF
169	1	C021	USINT(0..1)			R/W	0		C021 - Circuit capacity distribution (0=Equalised, 1=Grouped)
170	2	C022	REAL			R/W	0	DELTAKELVIN	C022 - Discharge temp. probe offset for circ.1
172	2	C023	REAL			R/W	0	DELTAKELVIN	C023 - Suction temp. probe offset for circ.1
174	2	C024	REAL			R/W	0	DELTAKELVIN	C024 - Discharge temp. probe offset for circ.2
176	2	C025	REAL			R/W	0	DELTAKELVIN	C025 - Suction temp. probe offset for circ.2
178	2	C026	REAL			R/W	0	BAR	C026 - Discharge press. probe offset for circ.1
180	2	C027	REAL			R/W	0	BAR	C027 - Suction press. probe offset for circ.1
182	2	C028	REAL			R/W	0	DELTAKELVIN	C028 - Cond. temp. probe offset for circ.1
184	2	C029	REAL			R/W	0	DELTAKELVIN	C029 - Evap. temp. probe offset for circ.1
186	2	C030	REAL			R/W	0	BAR	C030 - Discharge press. probe offset for circ.2
188	2	C031	REAL			R/W	0	BAR	C031 - Suction press. probe offset for circ.2
190	2	C032	REAL			R/W	0	DELTAKELVIN	C032 - Cond. temp. probe offset for circ.2
192	2	C033	REAL			R/W	0	DELTAKELVIN	C033 - Evap. temp. probe offset for circ.2
194	1	C037	USINT(0..1)			R/W	0		C037 - Suction press. probe type (0=0..5V, 1=4..20mA)
195	2	C038	REAL			R/W	0	BAR	C038 - Suction press. probe min value
197	2	C039	REAL			R/W	17.3	BAR	C039 - Suction press. probe max value
199	1	C040	USINT(0..1)			R/W	0		C040 - Discharge press. probe type (0=0..5V, 1=4..20mA)
200	2	C041	REAL			R/W	0	BAR	C041 - Discharge press. probe min value
202	2	C042	REAL			R/W	45	BAR	C042 - Discharge press. probe max value
204	1	C043	USINT(0..1)			R/W	1		C043 - Discharge temp. probe type (0=NTC, 1=NTC-HT)
206	1	C046	USINT(1..2)			R/W	1		C046 - Number of circuit in the unit
207	1	C047	USINT	2	3	R/W	2		C047 - Type of compressors used (0=1 ON/OFF, 1=2 ON/OFF, 2=BLDC, 3=BLDC + ON/OFF)
208	1	C048	USINT(1..2)			R/W	1		C048 - Compressor rotation type (1=FIFO, 2=TIME)
209	1	S000	UINT(0..999)			R/W	99	HOUR	S000 - Source pump 1 maintenance hour threshold (x100)
210	1	S002	UINT(0..2)			R/W	0		S002 - Source pump 1 manual mode (0=AUTO, 1=OFF, 2=ON)
212	1	S022	UINT			R/W	0	MINUTE	Time band minutes
213	1	S072	USINT(0..2)			R/W	0		S072 - Source pump activation (0=always on, 1=on with compressor, 2=modulate on discharge)
214	1	S008	UINT(0..999)			R/W	99	HOUR	S008 - Source fan 1 circ.1 maintenance hour threshold (x100)
215	1	S010	USINT(0..2)			R/W	0		S010 - Source fan ON/OFF circ.1 manual mode (0=AUTO, 1=OFF, 2=ON)
216	1	S011	USINT(0..101)			R/W	0	PERCENT	S011 - Source fan inverter circ.1 manual mode (0=AUTO, 1=0%, 2=1%, ... 101=100%)
217	1	S012	UINT(0..999)			R/W	0	HOUR	S012 - Source fan 1 circ.2 maintenance hour threshold (x100)
218	1	S014	USINT(0..2)			R/W	0		S014 - Source fan ON/OFF circ.2 manual mode (0=AUTO, 1=OFF, 2=ON)
219	1	S015	USINT(0..101)			R/W	0	PERCENT	S015 - Source fan inverter circ.2 manual mode (0=AUTO, 1=0%, 2=1%, ... 101=100%)
220	2	S016	REAL			R/W	-5	CELSIUS	S016 - Source fan temp. threshold for cold climates
222	2	S017	REAL			R/W	10	PERCENT	S017 - Source fan min speed for cold climates
224	2	S018	REAL			R/W	50	PERCENT	S018 - Source fan speed up speed for cold climates
226	1	S019	UINT(0..300)			R/W	5	SECOND	S019 - Source fan speed up time for cold climates
229	2	Sprb	REAL			R	0	CELSIUS	SPrb - Source external air temperature
231	2	S025	REAL			R/W	45	CELSIUS	S025 - Low noise source fan set point in cooling
233	1	S026	UINT(0..999)			R/W	30	SECOND	S026 - Comp. ON delay after source pump ON
234	1	S027	UINT(0..999)			R/W	10	SECOND	S027 - Source pump delay OFF from comp. OFF
235	2	S028	REAL			R/W	30	CELSIUS	S028 - Source device cool set point
237	2	S029	REAL			R/W	10	CELSIUS	S029 - Source device heat set point
239	1	U081	USINT(0..7)			R/W	0		U081 - Pressure alarm reset configuration
240	1	Hc71	USINT(0..3)			R/W	1		Hc71 - Analogue output 1 config. (0= Not used, 1=Source pump - Source fan on/off, 2=Source fan mod, 3=Free cooling valve)
241	2	S031	REAL			R/W	45	CELSIUS	S031 - Source fan cool set point at startup
243	1	S032	UINT(0..999)			R/W	240	SECOND	S032 - Source fan cool startup delay
244	1	Hc81	USINT(0..2)			R/W	1		Hc81 - Analogue output 1 secondary config. (0= Not used, 1=Source fan on/off, 2=Source fan mod)
245	1	Hc72	USINT(0..3)			R/W	1		Hc72 - Analogue output 2 config. (0= Not used, 1=Source pump - Source fan on/off, 2=Source fan mod, 3=Free cooling valve)
246	2	S034	REAL			R/W	15	DELTAKELVIN	S034 - Source device cool differential
248	2	S035	REAL			R/W	5	DELTAKELVIN	S035 - Source device heat differential
250	2	S036	REAL			R/W	20	PERCENT	S036 - Source fan inverter min speed
252	2	S037	REAL			R/W	80	PERCENT	S037 - Source fan inverter max speed
254	2	S039	REAL			R/W	-1	CELSIUS	S039 - Defrost start threshold
256	2	S040	REAL			R/W	1	CELSIUS	S040 - Defrost start threshold reset
258	1	S041	UINT(0..999)			R/W	30	MINUTE	S041 - Defrost start delay
259	2	S042	REAL			R/W	52	CELSIUS	S042 - Defrost end threshold
261	1	S044	UINT(0..999)			R/W	20	SECOND	S044 - Defrost begin delay before actuating the 4 way valve
262	1	S045	UINT(0..999)			R/W	30	SECOND	S045 - Defrost ending delay after actuating the 4 way valve
263	1	S046	UINT(0..99)			R/W	1	MINUTE	S046 - Defrost min duration
264	1	S047	UINT(0..99)			R/W	5	MINUTE	S047 - Defrost max duration
265	1	S048	UINT(0..999)			R/W	90	SECOND	S048 - Dripping duration
266	1	S049	UINT(0..999)			R/W	30	SECOND	S049 - Post dripping duration
267	1	S050	UINT(0..999)			R/W	20	MINUTE	S050 - Delay between defrosts
268	1	C049	UINT(0..999)			R/W	90	SECOND	C049 - Low pressure alarm start delay
269	1	C050	UINT(0..999)			R/W	15	SECOND	C050 - Low pressure alarm run delay
270	1	F024	USINT			R/W	0		F024 - Heater 1 manual mode (0=AUTO, 1=OFF, 2=ON)
271	1	F025	USINT			R/W	0		F025 - Heater 2 manual mode (0=AUTO, 1=OFF, 2=ON)
272	1	S053	USINT(0..2)			R/W	0		S053 - Defrost synchronisation type (0=Independent, 1=Separate, 2=Simultaneous)
274	2	S054	REAL			R/W	3	BAR	S054 - Delta press. to reverse the 4 way valve



Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
276	1	Hc82	USINT(0..2)			R/W	1		Hc82 - Analogue output 2 secondary config. (0= Not used, 1=Source fan on/off, 2=Source fan mod)
277	1	Al_CfgLim-Max_Grp3	USINT			R/W	9		Al_CfgLimMax_Grp3 - Lim max probe group 3
278	1	S056	UINT(20..999)			R/W	20	SECOND	S056 - Duration of smart start function
279	2	S057	REAL			R/W	-0.8	CELSIUS	S057 - Source frost alarm threshold
281	2	S058	REAL			R/W	30	DELTAKEL-VIN	S058 - Source frost alarm differential
283	1	S059	UINT(0..999)			R/W	30	SECOND	S059 - Source frost alarm delay time at 1K below threshold
284	2	S060	REAL			R/W	0	DELTAKEL-VIN	S060 - Source external air temperature offset
286	1	Hc00	USINT	0	4	R/W	1		Hc00 - Analogue input 3 config. (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7= Return water temp. from user, 8= Delivery water temp. to user)
287	1	Al_CfgLim-Max_Grp3_Slv	USINT			R/W	11		Al_CfgLimMax_Grp3 - Lim max probe group 3 secondary
288	1	Hc03	USINT	0	2	R/W	0		Hc03 - Analogue input 6 config. (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Remote set point, 4= Discharge temp., 5= Condensing temp., 6= Suction temp., 7= Evaporation temp., 8= Condensing press., 9= Evaporating press., 10= Return water temp. from user, 11= Delivery water temp. to user, 12= Capacity request from AIN)
289	1	Hc04	USINT	0	1	R/W	0		Hc04 - Analogue input 7 config. (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7= Return water temp. from user, 8= Delivery water temp. to user)
290	1	Hc05	USINT	0	1	R/W	0		Hc05 - Analogue input 6 config. on Secondary board (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Remote set point, 4= Discharge temp., 5= Condensing temp., 6= Suction temp., 7= Evaporation temp., 8= Condensing press., 9= Evaporating press., 10= Common delivery temp., 11= Delivery water evap.2 temp., 12= Capacity request from AIN)
291	1	Hc06	USINT	0	6	R/W	1		Hc06 - Digital input 4 config. (0=Not used, 1=User flow switch, 2=Comp.1 circ.1 overload, 3=Comp.2 circ.1 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 1, 12=Remote cmd 2, 13=Source alarm)
292	1	Hc07	USINT	0	6	R/W	5		Hc07 - Digital input 5 config. (0=Not used, 1=User flow switch, 2=Comp.1 circ.1 overload, 3=Comp.2 circ.1 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 1, 12=Remote cmd 2, 13=Source alarm)
293	1	Hc08	USINT	0	6	R/W	4		Hc08 - Digital input 6 config. (0=Not used, 1=User flow switch, 2=Comp.1 circ.1 overload, 3=Comp.2 circ.1 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 1, 12=Remote cmd 2, 13=Source alarm)
294	1	Hc09	USINT	0	5	R/W	0		Hc09 - Digital input 4 config. on Secondary board (0=Not used, 1=User flow switch, 2=Comp.1 circ.2 overload, 3=Comp.2 circ.2 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 3, 12=Remote cmd 4, 13=Source alarm)
295	1	Hc10	USINT	0	5	R/W	0		Hc10 - Digital input 5 config. on Secondary board (0=Not used, 1=User flow switch, 2=Comp.1 circ.2 overload, 3=Comp.2 circ.2 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 3, 12=Remote cmd 4, 13=Source alarm)
296	1	Hc11	USINT	0	5	R/W	0		Hc11 - Digital input 6 config. on Secondary board (0=Not used, 1=User flow switch, 2=Comp.1 circ.2 overload, 3=Comp.2 circ.2 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 3, 12=Remote cmd 4, 13=Source alarm)
297	1	Hc14	USINT			R/W	1		Hc14 - Digital input 1 config. (0=Not used, 1=User flow switch, 2=Comp.1 circ.1 overload, 3=Comp.2 circ.1 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 1, 12=Remote cmd 2, 13=Source alarm)
298	1	Hc15	USINT			R/W	2		Hc15 - Digital input 2 config. (0=Not used, 1=User flow switch, 2=Comp.1 circ.1 overload, 3=Comp.2 circ.1 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 1, 12=Remote cmd 2, 13=Source alarm)

Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
299	1	Hc16	USINT			R/W	0		Hc16 - Digital input 1 config. on Secondary board (0=Not used, 1=User flow switch, 2=Comp.1 circ.2 overload, 3=Comp.2 circ.2 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 3, 12=Remote cmd 4, 13=Source alarm)
300	1	Hc17	USINT			R/W	0		Hc17 - Digital input config. on Secondary board (0=Not used, 1=User flow switch, 2=Comp.1 circ.2 overload, 3=Comp.2 circ.2 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 3, 12=Remote cmd 4, 13=Source alarm)
301	1	Al_CfgLim-Max_Grp2	USINT			R/W	8		Al_CfgLimMax_Grp2 - Lim max probe group 2
302	1	He00	UINT(0..9999)			R/W	1		He00 - USER profile password
303	1	He01	UINT(0..9999)			R/W	0		He01 - SERVICE profile password
304	1	He02	UINT(0..9999)			R/W	1234		He02 - MANUFACTURER profile password
305	2	Hd04	STRING[4]			R/W	0		Hd04 - NFC password
307	2	SEtC	REAL			R/W	7	CELSIUS	SEtC - Cool set point
309	2	SEtH	REAL			R/W	40	CELSIUS	SEtH - Heat set point
311	1	Al_CfgLim-Max_Grp1	USINT			R/W	8		Al_CfgLimMax_Grp1 - Lim max probe group 1
324	2	C017	REAL			R/W	65	CELSIUS	C017 - Threshold of max high pressure (HP)
326	2	C018	REAL			R/W	0.2	BAR	C018 - Threshold of min low pressure (LP)
328	1	E047	USINT(0..2)			R/W	0		E047 - Type of ExV driver (0= Disabled, 1= EVD embedded, 2=EVD EVO)
331	2	BMS_PwrReq	REAL					PERCENT	Capacity request using BMS net
335	2	P000	REAL			R/W	-25	CELSIUS	P000 - Evaporating min temp. custom envelope limit
337	2	P001	REAL			R/W	70	CELSIUS	P001 - Condensing max temp. custom envelope limit
339	1	P002	UINT(0..999)			R/W	15	SECOND	P002 - Prevent min duration
340	1	P003	UINT(0..999)			R/W	120	SECOND	P003 - Out of envelope alarm delay time
341	1	P004	UINT(0..999)			R/W	60	SECOND	P004 - Low pressure difference alarm delay
342	2	P005	REAL			R/W	35	RPS	P005 - Circuit destabilisation min BLDC speed threshold
344	2	P006	REAL			R/W	35	PERCENT	P006 - Oil recovery min request for activation
346	2	P007	REAL			R/W	35	RPS	P007 - Oil recovery min comp. speed for activation
348	1	P008	UINT(0..999)			R/W	15	MINUTE	P008 - Oil recovery time before activation in which the comp. can run at min speed
349	1	P009	UINT(0..999)			R/W	3	MINUTE	P009 - Oil recovery duration in which the comp. speed is forced
350	2	P010	REAL			R/W	50	RPS	P010 - Oil recovery comp. speed in which the comp. is forced
352	1	P011	UINT(0..999)			R/W	30	SECOND	P011 - Oil equalisation startup time for solenoid valve on comp. starts
353	1	P012	UINT(0..999)			R/W	3	SECOND	P012 - Oil equalisation solenoid valve open time
354	1	P013	UINT(0..999)			R/W	1	MINUTE	P013 - Oil equalisation solenoid valve min off time
355	1	P014	UINT(0..999)			R/W	20	MINUTE	P014 - Oil equalisation solenoid valve max off time
356	1	P015	UINT(0..999)			R/W	20	MINUTE	P015 - Oil equalisation max time for management
357	1	P019	USINT(0..101)			R/W	0	PERCENT	P019 - Compressor 1 circuit 1 manual mode (0=AUTO, 1=0%, ... 101=100%)
358	1	P020	USINT(0..101)			R/W	0	PERCENT	P020 - Compressor 1 circuit 2 manual mode (0=AUTO, 1=0%, ... 101=100%)
359	2	P021	REAL			R/W	0	KILOPASCAL	P021 - Max permitted Delta P to start up
361	1	P022	UINT			R/W	0	SECOND	P022 - Max EVD pre-opening time to equalise pressure
362	1	P023	UINT			R/W	0	PERCENT	P023 - EVD pre-opening in case of pre-start to equalise pressure
363	2	P024	REAL			R/W	0	RPS	P024 - Start-up speed
365	2	P025	REAL			R/W	0	RPS	P025 - Max custom speed (rps)
367	2	P026	REAL			R/W	0	RPS	P026 - Min custom speed (rps)
369	2	P027	REAL			R/W	45	PERCENT	P027 - BLDC speed request threshold % to call on
371	2	P028	REAL			R/W	90	PERCENT	P028 - BLDC speed threshold to call on fixed speed compressor
373	2	P029	REAL			R/W	30	PERCENT	P029 - BLDC speed threshold to switch off fixed speed compressor
375	2	P030	REAL			R/W	0		P030 - Skip frequency: set 1 [010]
377	2	P031	REAL			R/W	0		P031 - Skip frequency: band 1 [011]
379	1	P032	UINT			R/W	0		P032 - Enable motor overtemperature alarm (PTC) (0=OFF, 1=ON) [027]
380	1	P033	UINT			R/W	0		P033 - Motor overtemperature alarm delay [028]
382	2	S051	REAL			R/W	80	RPS	S051 - BLDC defrost speed
384	2	S052	REAL			R/W	40	RPS	S052 - BLDC cycle reverse speed in defrost
386	40	Ha01	STRING			R/W	0		New time zone to set for the controller's internal clock
705	2	E048	REAL			R/W	1	DELTAKELVIN	E048 - RESERVED, Delta evap. temp. (Smart opening ExV)
707	2	E049	REAL			R/W	0.2	DELTAKELVIN	E049 - RESERVED, Delta suction temp. (Smart opening ExV)
709	1	U079	UINT(1..15)			R/W	3	MINUTE	U079 - Burst funct. time for unit pump on
710	1	U080	UINT(3..99)			R/W	15	MINUTE	U080 - Burst funct. time for unit pump off
711	2	F009	REAL			R/W	14	CELSIUS	F009 - Delivery air min. temp. threshold
713	2	F010	REAL			R/W	4	DELTAKELVIN	F010 - Delivery limit proportional band
715	1	ID_CfgLim-Max_Slv	USINT			R/W	0		ID_CfgLimMax_Slv - Lim digital input
716	2	F012	REAL			R/W	1	DELTAKELVIN	F012 - Heater offset in cool
718	2	F013	REAL			R/W	0.5	DELTAKELVIN	F013 - Heater differential in cool
720	2	F014	REAL			R/W	3	DELTAKELVIN	F014 - Heater offset in heat
722	2	F015	REAL			R/W	1	DELTAKELVIN	F015 - Heater differential in heat
724	2	F018	REAL			R/W	40	CELSIUS	F018 - Hot-Start set point
726	2	F019	REAL			R/W	5	DELTAKELVIN	F019 - Hot-Keep differential
728	2	F021	REAL			R/W	0	DELTAKELVIN	F021 - Common delivery user water temp. probe offset
730	2	F022	REAL			R/W	0	DELTAKELVIN	F022 - Evap.2 frost temp. probe offset

Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
732	2	S070	REAL			R/W	0	DELTAKEL-VIN	S070 - Cond.1 frost temp. probe offset
734	2	S071	REAL			R/W	0	DELTAKEL-VIN	S071 - Cond.2 frost temp. probe offset
736	2	S069	REAL			R/W	0	CELSIUS	S069 - Temperature set point for fan-defrost function (0=Function disabled)
738	2	UsrDivW-Temp_FromMst	REAL					CELSIUS	Delivery water temperature to user received from Main (Single evaporator)
740	1	Hc51	USINT(0..11)			R/W	1		Hc51 - Digital output 1 config. (0= Not used, 1=Comp. 1 circ. 1, 2=Comp. 2 circ. 1, 3=User heater step 1, 4=User pump 1, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve, 9=Freecooling valve, 10=General alarm, 11=User pump 2
741	1	Hc52	USINT(0..11)			R/W	1		Hc52 - Digital output 2 config. (0= Not used, 1=Comp. 1 circ. 1, 2=Comp. 2 circ. 1, 3=User heater step 1, 4=User pump 1, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve, 9=Freecooling valve, 10=General alarm, 11=User pump 2
742	1	Hc53	USINT(0..11)			R/W	1		Hc53 - Digital output 3 config. (0= Not used, 1=Comp. 1 circ. 1, 2=Comp. 2 circ. 1, 3=User heater step 1, 4=User pump 1, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve, 9=Freecooling valve, 10=General alarm, 11=User pump 2
743	1	Hc54	USINT(0..11)			R/W	1		Hc54 - Digital output 4 config. (0= Not used, 1=Comp. 1 circ. 1, 2=Comp. 2 circ. 1, 3=User heater step 1, 4=User pump 1, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve, 9=Freecooling valve, 10=General alarm, 11=User pump 2
744	1	Hc55	USINT(0..11)			R/W	1		Hc55 - Digital output 5 config. (0= Not used, 1=Comp. 1 circ. 1, 2=Comp. 2 circ. 1, 3=User heater step 1, 4=User pump 1, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve, 9=Freecooling valve, 10=General alarm, 11=User pump 2
745	1	Hc56	USINT(0..11)			R/W	1		Hc56 - Digital output 6 config. (0= Not used, 1=Comp. 1 circ. 1, 2=Comp. 2 circ. 1, 3=User heater step 1, 4=User pump 1, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve, 9=Freecooling valve, 10=General alarm, 11=User pump 2
746	1	Hc61	USINT(0..8)			R/W	1		Hc61 - Digital output 1 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve
747	1	Hc62	USINT(0..8)			R/W	1		Hc62 - Digital output 2 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve
748	1	Hc63	USINT(0..8)			R/W	1		Hc63 - Digital output 3 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve
749	1	Hc64	USINT(0..8)			R/W	1		Hc64 - Digital output 4 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve
750	1	Hc65	USINT(0..8)			R/W	1		Hc65 - Digital output 5 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve
751	1	Hc66	USINT(0..8)			R/W	1		Hc66 - Digital output 6 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve
752	1	Hc31	USINT			R/W	0		Hc31 - Analogue input 1 config. (0= Not used, 1= Source water delivery temp, 2= Outside temp, 3= Discharge temp., 4= Condensing temp, 5= Suction temp, 6= Evaporation temp., 7= Return water temp. from user, 8= Delivery water temp. to user)
753	1	Hc32	USINT			R/W	0		Hc32 - Analogue input 2 config. (0= Not used, 1= Source water delivery temp., 2= Outside temp, 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7= Return water temp. from user, 8= Delivery water temp. to user)
754	1	Hc34	USINT			R/W	0		Hc34 - Analogue input 4 config. (0= Not used, 1= Source water delivery temp., 2= Outside temp, 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7= Condensing press., 8= Evaporating press., 9= Return water temp. from user, 10= Delivery water temp. to user)
755	1	Hc35	USINT			R/W	0		Hc35 - Analogue input 5 config. (0= Not used, 1= Source water delivery temp., 2= Outside temp, 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7= Condensing press., 8= Evaporating press., 9= Return water temp. from user, 10= Delivery water temp. to user)
756	1	Hc41	USINT			R/W	0		Hc41 - Analogue input 1 config. on Secondary board (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7=Common delivery temp., 8= Delivery water evap.2 temp.)
757	1	Hc42	USINT			R/W	0		Hc42 - Analogue input 2 config. on Secondary board (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7=Common delivery temp., 8= Delivery water evap.2 temp.)

Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
758	1	Hc43	USINT			R/W	0		Hc43 - Analogue input 3 config. on Secondary board (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7=Common delivery temp., 8= Delivery water evap.2 temp.)
759	1	Hc44	USINT			R/W	0		Hc44 - Analogue input 4 config. on Secondary board (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7= Condensing press., 8= Evaporating press., 9= Common delivery temp., 10= Delivery water evap.2 temp.)
760	1	Hc45	USINT			R/W	0		Hc45 - Analogue input 5 config. on Secondary board (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7= Condensing press., 8= Evaporating press., 9= Common delivery temp., 10= Delivery water evap.2 temp.)
761	1	Hc47	USINT			R/W	0		Hc47 - Analogue input 7 config. on Secondary board (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7=Common delivery temp., 8= Delivery water evap.2 temp.)
762	1	Al_CfgLim-Max_Grp2_Slv	USINT			R/W	10		Al_CfgLimMax_Grp2 - Lim max probe group 2 secondary
763	1	Al_CfgLim-Max_Grp1_Slv	USINT			R/W	8		Al_CfgLimMax_Grp1 - Lim max probe group 1 secondary
764	1	UnitTyp_Lim-Max	USINT			R/W	4		UnitTyp_LimMax - Lim max unit type
765	2	U084	REAL			R/W	23	CELSIUS	U084 - Automatic changeover threshold (type 1) (°C)
767	2	SEtU	REAL			R/W	23	CELSIUS	SEtU - Automatic changeover set point (type 2,3) (°C)
769	1	U088	USINT(0..2)			R/W	0		U088 - Frost heater position
770	2	F026	REAL			R/W	-40	CELSIUS	F026 - Compressor cut-off by outside temperature
772	2	U085	REAL			R/W	2	DELTAKELVIN	U085 - Automatic changeover deadband (°C)
774	2	U086	REAL			R/W	5	CELSIUS	U086 - Automatic changeover set point low limit (°C)
776	2	U087	REAL			R/W	20	CELSIUS	U087 - Automatic changeover set point high limit (°C)
818	2	U090	REAL			R/W	0	PERCENT	U090 - Analogue capacity request offset
820	2	U091	REAL			R/W	0	PERCENT	U091 - Analogue capacity request min value
822	2	U092	REAL			R/W	100	PERCENT	U092 - Analogue capacity request max value
817	1	U089	USINT(0..2)			R/W	0		U089 - Analogue capacity request input type (0=0-5V, 1=0-10V, 2=4-20mA)
788	1	Hc90	USINT	0	8	R/W	0		Hc90 - Display value selection - Large area
789	1	Hc91	USINT	0	8	R/W	0		Hc91 - Display value selection - Small area

Tab. 7.b

### 7.3 Input Register

Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
0	2	HuP1	UDINT			R	0	HOUR	HuP1 - User pump 1 operating hours
2	2	HuP2	UDINT			R	0	HOUR	HuP2 - User pump 2 operating hours
4	2	H1C1	UDINT			R	0	HOUR	H1C1 - Comp.1 circ.1 operating hours
6	2	H1C2	UDINT			R	0	HOUR	H1C2 - Comp.2 circ.1 operating hours
8	2	H2C1	UDINT			R	0	HOUR	H2C1 - Comp.1 circ.2 operating hours
10	2	H2C2	UDINT			R	0	HOUR	H2C2 - Comp.2 circ.2 operating hours
12	2	dSt1	REAL			R	0	CELSIUS	dSt1 - Discharge temp. probe on circ.1
14	2	Sct1	REAL			R	0	CELSIUS	Sct1 - Suction temp. on circ.1
16	2	dSt2	REAL			R	0	CELSIUS	dSt2- Discharge temp. probe on circ.2
18	2	Sct2	REAL			R	0	CELSIUS	Sct2 - Suction temp. on circ.2
20	2	dSP1	REAL			R	0	BAR	dSP1 - Discharge press. probe on circ.1
22	2	ScP1	REAL			R	0	BAR	ScP1 - Suction press. on circ.1
24	2	Cnd1	REAL			R	0	CELSIUS	Cnd1 - Cond. temp. probe (or press. probe converted value) on circ.1
26	2	EuP1	REAL			R	0	CELSIUS	EuP1 - Evap. temp. probe (or press. probe converted value) on circ.1
28	2	dSP2	REAL			R	0	BAR	dSP2 - Discharge press. probe on circ.2
30	2	ScP2	REAL			R	0	BAR	ScP2 - Suction press. on circ.2
32	2	Cnd2	REAL			R	0	CELSIUS	Cnd2 - Cond. temp. probe (or press. probe converted value) on circ.2
34	2	EuP2	REAL			R	0	CELSIUS	EuP2 - Evap. temp. probe (or press. probe converted value) on circ.2
36	2	HSP1	UDINT			R	0	HOUR	HSP1 - Source pump 1 operating hours
38	1	C045	UINT			R	0		C045 - Refrigerant type (3=R407C, 4=R410a, 6=R290, 10=R744, 22=R32)
39	1	UnitCompTyp_Lim-Max	USINT			R	0		UnitCompTyp_LimMax - Limit max of UnitCompTyp variable
40	2	HFn1	UDINT			R	0	HOUR	HFn1 - Source fan 1 circ.1 operating hours
42	2	HFn2	UDINT			R	0	HOUR	HFn2 - Source fan 1 circ.2 operating hours
46	2	SEtA	REAL			R	0	CELSIUS	SEtA - Actual set point used by temp. control
48	2	SSH1	REAL			R	0	DELTAKELVIN	SSH1 - Suction superheat on circ.1
50	1	Opn1	UINT			R	0	PERCENT	Opn1 - EEV position on circ.1
51	2	SSH2	REAL			R	0	DELTAKELVIN	SSH2 - Suction superheat on circ.2
53	1	Opn2	UINT			R	0	PERCENT	Opn2 - EEV position on circ.2
54	2	rUSr	REAL			R	0	CELSIUS	rUSr - Return water temp. from user
56	2	dUSr	REAL			R	0	CELSIUS	dUSr - Delivery water temperature to user

Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
58	1	PwrReq_MC	USINT			R	0	PERCENT	PwrReq_MC - MC capacity request
59	1	PwrOut_MC	USINT			R	0	PERCENT	PwrOut_MC - MC output capacity
65	2	Fan1Req	REAL			R	0	PERCENT	Fan1Req - Inverter request source fan circ.1
67	2	Fan2Req	REAL			R	0	PERCENT	Fan2Req - Inverter request source fan circ.2
69	2	WoutMixVlv	REAL			R			Water output mixing valve (from tank)
71	1	UnitStatus	USINT			R	0		UnitStatus - Unit status (0=OFF from remote DI, 1=OFF from keypad, 2=OFF from scheduler, 3=OFF from BMS, 4=OFF from CH/HP changeover mode, 5=OFF from alarm, 6=Unit defrosting, 7=Unit ON, 8=Manual mode)
72	2	Comp1Circ1HrsR	UDINT			R	0	HOUR	Comp1Circ1HrsR - Comp.1 circ.1 operating hours (partial)
74	2	Comp2Circ1HrsR	UDINT			R	0	HOUR	Comp2Circ1HrsR - Comp.2 circ.1 operating hours (partial)
76	2	SrcFan1Circ1HrsR	UDINT			R	0	HOUR	SrcFan1Circ1HrsR - Source fan 1 circ.1 operating hours (partial)
78	1	FrcCompDestabil_Circ1	UINT			R			Destabilisation status for circ.1 (0=No comp. forcing request , 1=Check if forcing is possible , 2=Enable to force comp., 3=Wait status)
79	1	FrcCompDestabil_Circ2	UINT			R			Destabilisation status for circ.2 (0=No comp. forcing request , 1=Check if forcing is possible , 2=Enable to force comp., 3=Wait status)
90	2	rSPt	REAL			R/W	0	CELSIUS	rSPt - Remote set point
92	2	PwrReq	REAL			R	0	PERCENT	PwrReq - Power request
96	2	SrcSetP_Circ1	REAL			R	0	CELSIUS	SrcSetP_Circ1 - Source fan circ.1 set point
98	2	SrcSetP_Circ2	REAL			R	0	CELSIUS	SrcSetP_Circ2 - Source fan circ.2 set point
100	2	rps1	REAL			R	0	RPS	rps1 - Actual rotor speed coming from inverter
102	2	Mc1	REAL			R	0	AMPERE	Mc1 - Current motor current [A]
104	2	MP1	REAL			R	0	KILOWATT	MP1 - Current motor consumption [kW]
106	2	Drt1	REAL			R	0	CELSIUS	Drt1 - Current drive temperature [°C]
108	1	AlHs1_1	UINT			R	0		PSD circuit 1: the last alarm log
109	1	AlHs2_1	UINT			R	0		PSD circuit 1: the last-but-1st alarm log
110	1	AlHs3_1	UINT			R	0		PSD circuit 1: the last-but-2nd alarm log
111	1	AlHs4_1	UINT			R	0		PSD circuit 1: the last-but-3rd alarm log
112	2	DxPwrReq	REAL			R		PERCENT	Direct expansion capacity request
114	1	MotTyp	UINT			R	0		MotTyp - BLDC circ.1 Carel Database ID
115	1	EnvelopeZone_Circ1	USINT			R	0		EnvelopeZone_Circ1 - Envelope zone circ.1
116	2	EnvPnt_X1	REAL			R	0	CELSIUS	EnvPnt_X1 - Envelope point
118	2	EnvPnt_Y1	REAL			R	0	CELSIUS	EnvPnt_Y1 - Envelope point
120	2	EnvPnt_X2	REAL			R	0	CELSIUS	EnvPnt_X2 - Envelope point
122	2	EnvPnt_Y2	REAL			R	0	CELSIUS	EnvPnt_Y2 - Envelope point
124	2	EnvPnt_X3	REAL			R	0	CELSIUS	EnvPnt_X3 - Envelope point
126	2	EnvPnt_Y3	REAL			R	0	CELSIUS	EnvPnt_Y3 - Envelope point
128	2	EnvPnt_X4	REAL			R	0	CELSIUS	EnvPnt_X4 - Envelope point
130	2	EnvPnt_Y4	REAL			R	0	CELSIUS	EnvPnt_Y4 - Envelope point
132	2	EnvPnt_X5	REAL			R	0	CELSIUS	EnvPnt_X5 - Envelope point
134	2	EnvPnt_Y5	REAL			R	0	CELSIUS	EnvPnt_Y5 - Envelope point
136	2	EnvPnt_X6	REAL			R	0	CELSIUS	EnvPnt_X6 - Envelope point
138	2	EnvPnt_Y6	REAL			R	0	CELSIUS	EnvPnt_Y6 - Envelope point
140	2	EnvPnt_X7	REAL			R	0	CELSIUS	EnvPnt_X7 - Envelope point
142	2	EnvPnt_Y7	REAL			R	0	CELSIUS	EnvPnt_Y7 - Envelope point
144	2	EnvPnt_X8	REAL			R	0	CELSIUS	EnvPnt_X8 - Envelope point
146	2	EnvPnt_Y8	REAL			R	0	CELSIUS	EnvPnt_Y8 - Envelope point
148	1	EnvelopeZone_Circ2	USINT			R	0		EnvelopeZone_Circ2 - Envelope zone circ.2
149	2	EnvPnt2_X1	REAL			R	0	CELSIUS	EnvPnt2_X1 - Envelope point
151	2	EnvPnt2_Y1	REAL			R	0	CELSIUS	EnvPnt2_Y1 - Envelope point
153	2	EnvPnt2_X2	REAL			R	0	CELSIUS	EnvPnt2_X2 - Envelope point
155	2	EnvPnt2_Y2	REAL			R	0	CELSIUS	EnvPnt2_Y2 - Envelope point
157	2	EnvPnt2_X3	REAL			R	0	CELSIUS	EnvPnt2_X3 - Envelope point
159	2	EnvPnt2_Y3	REAL			R	0	CELSIUS	EnvPnt2_Y3 - Envelope point
161	2	EnvPnt2_X4	REAL			R	0	CELSIUS	EnvPnt2_X4 - Envelope point
163	2	EnvPnt2_Y4	REAL			R	0	CELSIUS	EnvPnt2_Y4 - Envelope point
165	2	EnvPnt2_X5	REAL			R	0	CELSIUS	EnvPnt2_X5 - Envelope point
167	2	EnvPnt2_Y5	REAL			R	0	CELSIUS	EnvPnt2_Y5 - Envelope point
169	2	EnvPnt2_X6	REAL			R	0	CELSIUS	EnvPnt2_X6 - Envelope point
171	2	EnvPnt2_Y6	REAL			R	0	CELSIUS	EnvPnt2_Y6 - Envelope point
173	2	EnvPnt2_X7	REAL			R	0	CELSIUS	EnvPnt2_X7 - Envelope point
175	2	EnvPnt2_Y7	REAL			R	0	CELSIUS	EnvPnt2_Y7 - Envelope point
177	2	EnvPnt2_X8	REAL			R	0	CELSIUS	EnvPnt2_X8 - Envelope point
179	2	EnvPnt2_Y8	REAL			R	0	CELSIUS	EnvPnt2_Y8 - Envelope point
181	2	rps2	REAL			R	0	RPS	rps2 - Actual rotor speed coming from inverter
183	2	Mc2	REAL			R	0	AMPERE	Mc2 - Current motor current [A]
185	2	MP2	REAL			R	0	KW	MP2 - Current motor consumption [kW]
187	2	Drt2	REAL			R	0	CELSIUS	Drt2 - Current drive temperature [°C]
189	1	AlHs1_2	UINT			R	0		PSD circuit 2: the last alarm log
190	1	AlHs2_2	UINT			R	0		PSD circuit 2: the last-but-1st alarm log
191	1	AlHs3_2	UINT			R	0		PSD circuit 2: the last-but-2nd alarm log
192	1	AlHs4_2	UINT			R	0		PSD circuit 2: the last-but-3rd alarm log
193	1	MotTyp2	UINT			R	0		MotTyp2 - BLDC circ.2 Carel Database ID
203	1	EEV_Protection_Circ1	EEV_ProtectionStatus(1..5)			R	0		EEV_Protection_Circ1 - ExV protection status on circ.1 (1=NONE, 2=LOWSH, 3=LOP, 4=MOP, 5=HITCOND)
204	1	EEV_Protection_Circ2	EEV_ProtectionStatus(1..5)			R	0		EEV_Protection_Circ2 - ExV protection status on circ.2 (1=NONE, 2=LOWSH, 3=LOP, 4=MOP, 5=HITCOND)
205	1	EEV_Reg_Circ1	INT			R	0		EEV_Reg_Circ1 - ExV control status on circ.1
206	1	EEV_Reg_Circ2	INT			R	0		EEV_Reg_Circ2 - ExV control status on circ.2
207	2	AFE2	REAL			R	0	CELSIUS	AFE2 - Evap.2 frost temp.
209	2	cUSr	REAL			R	0	CELSIUS	User delivery common water temperature

Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
211	2	PwrRunCircs_Perc	REAL			R	0	PERCENT	PwrRunCircs_Perc - Circuit capacity percentage by compressors ON
213	2	AFC2	REAL			R	0	CELSIUS	AFC2 - Cond.2 frost temp
215	2	AFE1	REAL			R	0	CELSIUS	AFE1 - Evap.1 frost temp.
217	2	AFC1	REAL			R	0	CELSIUS	AFC1 - Cond.1 frost temp
219	1	IOprbCfgWrn	UINT			R	0		IOcFgPrbWrn - I/O probe configuration warnings
220	2	W_UsrTempRegPID	REAL			R	0	CELSIUS	W_UsrTempRegPID - Water temperature value used by control
226	1	DfrStatus_Circ1	UINT						Defrost status of circ 1
227	2	AIN_PwrReq_Circ1	REAL			R	0	PERCENT	Capacity request using analogue input on circuit 1
231	1	SWverEXP	UINT			R	0		Firmware B version on expansion board
232	1	SWverMAIN	UINT			R	0		Firmware B version on main board
233	1	PWRP_ErrCode_Circ1	UDINT	-	-	R	-	-	Power+ circuit 1 error code
234	1	PWRP_ErrCode_Circ2	UDINT	-	-	R	-	-	Power+ circuit 2 error code

Tab. 7.c

## 7.4 Input Status

Index	Size	Acronym	DataType	Min Value	Max Value	R/W	InitValue	UoM	Description
0	1	A01	BOOL			R	FALSE		Unit - Error in the number of retain memory writes
1	1	A02	BOOL			R	FALSE		Unit - Error in retain memory writes
2	1	A03	BOOL			R	FALSE		Unit - Remote alarm by digital input
3	1	A04	BOOL			R	FALSE		Unit - Remote set point out of range alarm
4	1	A05	BOOL			R	FALSE		Unit - User return water temperature probe broken or disconnected alarm
5	1	A06	BOOL			R	FALSE		Unit - User delivery water temperature probe broken or disconnected alarm
6	1	A07	BOOL			R	FALSE		Unit - Tank temperature probe broken or disconnected alarm
7	1	A08	BOOL			R	FALSE		Unit - User pump 1 overload
8	1	A09	BOOL			R	FALSE		Unit - User pump 2 overload
9	1	A10	BOOL			R	FALSE		Unit - Flow switch alarm, no flow present with user pump 1 active
10	1	A11	BOOL			R	FALSE		Unit - Flow switch alarm, no flow present with user pump 2 active
11	1	A12	BOOL			R	FALSE		Unit - User pump group alarm
12	1	A13	BOOL			R	FALSE		Unit - User 1 pump maintenance
13	1	A14	BOOL			R	FALSE		Unit - User 2 pump maintenance
14	1	A15	BOOL			R	FALSE		Unit - High chilled water temperature
15	1	A16	BOOL			R	FALSE		Unit - Source return water/air temperature probe broken or disconnected alarm
16	1	A17	BOOL			R	FALSE		Unit - Source 1 pump maintenance
17	1	A18	BOOL			R	FALSE		Unit - Free cooling fault
18	1	A19	BOOL			R	FALSE		Circuit 1 - Discharge pressure probe broken or disconnected alarm
19	1	A20	BOOL			R	FALSE		Circuit 1 - Condensing temperature probe broken or disconnected alarm
20	1	A21	BOOL			R	FALSE		Circuit 1 - Suction pressure probe broken or disconnected alarm
21	1	A22	BOOL			R	FALSE		Circuit 1 - Evaporation temperature probe broken or disconnected alarm
22	1	A23	BOOL			R	FALSE		Circuit 1 - Discharge temperature probe broken or disconnected alarm
23	1	A24	BOOL			R	FALSE		Circuit 1 - Suction temperature probe broken or disconnected alarm
24	1	A25	BOOL			R	FALSE		Circuit 1 - High pressure alarm from pressure switch
25	1	A26	BOOL			R	FALSE		Circuit 1 - High pressure alarm from transducer
26	1	A27	BOOL			R	FALSE		Circuit 1 - Low pressure alarm from transducer
27	1	A28	BOOL			R	FALSE		Circuit 1 or unit - Frost evaporation temperature alarm
28	1	A29	BOOL			R	FALSE		Circuit 1 - Low pressure alarm from pressure switch
29	1	A30	BOOL			R	FALSE		Circuit 1 - Overload compressor 1
30	1	A31	BOOL			R	FALSE		Circuit 1 - Overload compressor 2
31	1	A32	BOOL			R	FALSE		Circuit 1 - Compressor 1 maintenance
32	1	A33	BOOL			R	FALSE		Circuit 1 - Compressor 2 maintenance
33	1	A34	BOOL			R	FALSE		Circuit 1 - Source fan 1 maintenance
34	1	A35	BOOL			R	FALSE		Circuit 1 EVD - Low superheat (SH)
35	1	A36	BOOL			R	FALSE		Circuit 1 EVD - Low evaporation pressure (LOP)
36	1	A37	BOOL			R	FALSE		Circuit 1 EVD - Maximum evaporating pressure (MOP)
37	1	A38	BOOL			R	FALSE		Circuit 1 EVD - Valve motor error
38	1	A39	BOOL			R	FALSE		Circuit 1 EVD - Emergency closing
39	1	A40	BOOL			R	FALSE		Circuit 1 EVD - Incomplete valve closing
40	1	A41	BOOL			R	FALSE		Circuit 1 EVD - Offline
41	1	A42	BOOL			R	FALSE		Circuit 1 Envelope - General alarm + Zone alarm
42	1	A43	BOOL			R	FALSE		Circuit 1 BLDC - Delta pressure greater than the allowable at startup
43	1	A44	BOOL			R	FALSE		Circuit 1 BLDC - Starting failure
44	1	A45	BOOL			R	FALSE		Circuit 1 BLDC - Low differential pressure
45	1	A46	BOOL			R	FALSE		Circuit 1 BLDC - High discharge gas temperature
46	1	A47	BOOL			R	FALSE		Circuit 1 Inverter - Offline
47	1	A48	BOOL			R	FALSE		Circuit 1 Inverter - General alarm + Error code
48	1	A49	BOOL			R	FALSE		Unit - Secondary board is offline
49	1	A50	BOOL			R	FALSE		Unit - Error in the number of retain memory writes on Secondary board
50	1	A51	BOOL			R	FALSE		Unit - Error in retain memory writes on Secondary board



Index	Size	Acronym	DataType	Min Value	Max Value	R/W	InitValue	UoM	Description
51	1	A52	BOOL			R	FALSE		Circuit 2 - Discharge pressure probe broken or disconnected alarm
52	1	A53	BOOL			R	FALSE		Circuit 2 - Condensing temperature probe broken or disconnected alarm
53	1	A54	BOOL			R	FALSE		Circuit 2 - Suction pressure probe broken or disconnected alarm
54	1	A55	BOOL			R	FALSE		Circuit 2 - Evaporation temperature probe broken or disconnected alarm
55	1	A56	BOOL			R	FALSE		Circuit 2 - Discharge temperature probe broken or disconnected alarm
56	1	A57	BOOL			R	FALSE		Circuit 2 - Suction temperature probe broken or disconnected alarm
57	1	A58	BOOL			R	FALSE		Circuit 2 - High pressure alarm from pressure switch
58	1	A59	BOOL			R	FALSE		Circuit 2 - High pressure alarm from transducer
59	1	A60	BOOL			R	FALSE		Circuit 2 - Low pressure alarm from transducer
60	1	A61	BOOL			R	FALSE		Circuit 2 - Frost evaporation temperature alarm
61	1	A62	BOOL			R	FALSE		Circuit 2 - Low pressure alarm from pressure switch
62	1	A63	BOOL			R	FALSE		Circuit 2 - Overload compressor 1
63	1	A64	BOOL			R	FALSE		Circuit 2 - Overload compressor 2
64	1	A65	BOOL			R	FALSE		Circuit 2 - Compressor 1 maintenance
65	1	A66	BOOL			R	FALSE		Circuit 2 - Compressor 2 maintenance
66	1	A67	BOOL			R	FALSE		Circuit 2 - Source fan 1 maintenance
67	1	A68	BOOL			R	FALSE		Circuit 2 EVD - Low superheat (SH)
68	1	A69	BOOL			R	FALSE		Circuit 2 EVD - Low evaporation pressure (LOP)
69	1	A70	BOOL			R	FALSE		Circuit 2 EVD - Maximum evaporating pressure (MOP)
70	1	A71	BOOL			R	FALSE		Circuit 2 EVD - Valve motor error
71	1	A72	BOOL			R	FALSE		Circuit 2 EVD - Emergency closing
72	1	A73	BOOL			R	FALSE		Circuit 2 EVD - Incomplete valve closing
73	1	A74	BOOL			R	FALSE		Circuit 2 EVD - Offline
74	1	A75	BOOL			R	FALSE		Circuit 2 Envelope - General alarm + Zone alarm
75	1	A76	BOOL			R	FALSE		Circuit 2 BLDC - Delta pressure greater than the allowable at startup
76	1	A77	BOOL			R	FALSE		Circuit 2 BLDC - Starting failure
77	1	A78	BOOL			R	FALSE		Circuit 2 BLDC - Low differential pressure
78	1	A79	BOOL			R	FALSE		Circuit 2 BLDC - High discharge gas temperature
79	1	A80	BOOL			R	FALSE		Circuit 2 Inverter - Offline
80	1	A81	BOOL			R	FALSE		Circuit 2 Inverter - General alarm + Error code
81	1	PrevAFreeze_C1	BOOL			R	FALSE		PrevAFreeze_C1 - Prevent request for frost condition active inside circ.1
82	1	PrevHP_C1	BOOL			R	FALSE		PrevHP_C1 - Prevent request for high pressure condition active inside circ.1
83	1	PrevAFreeze_C2	BOOL			R	FALSE		PrevAFreeze_C2 - Prevent request for frost condition active inside circ.2
84	1	PrevHP_C2	BOOL			R	FALSE		PrevHP_C2 - Prevent request for high pressure condition active inside circ.2
92	1	Comp1Circ1_DevAlrm	BOOL			R	FALSE		Comp1Circ1_DevAlrm - Comp.1 circ.1 in alarm condition
93	1	Comp1Circ1_AbleToOn	BOOL			R	FALSE		Comp.1 circ.1 enabled to start
94	1	Comp1Circ1_AbleToOff	BOOL			R	FALSE		Comp.1 circ.1 enabled to stop
95	1	Comp1Circ1_FrcdOnByT	BOOL			R	FALSE		Comp.1 circ.1 forced ON by timings (min comp. ON)
96	1	Comp1Circ1_FrcdOffByT	BOOL			R	FALSE		Comp1Circ1_FrcdOffByT - Comp.1 circ.1 forced OFF by timings (min comp. OFF)
97	1	Comp2Circ1_DevAlrm	BOOL			R	FALSE		Comp2Circ1_DevAlrm - Comp.2 circ.1 in alarm condition
98	1	Comp2Circ1_AbleToOn	BOOL			R	FALSE		Comp.2 circ.1 enabled to start
99	1	Comp2Circ1_AbleToOff	BOOL			R	FALSE		Comp.2 circ.1 enabled to stop
100	1	Comp2Circ1_FrcdOnByT	BOOL			R	FALSE		Comp.2 circ.1 forced ON by timings (min comp. ON)
101	1	Comp2Circ1_FrcdOffByT	BOOL			R	FALSE		Comp.2 circ.1 forced OFF by timings (min comp. OFF)
102	1	Comp1Circ1_On	BOOL			R	FALSE		Comp1Circ1_On - Comp.1 circ.1 status (0=OFF, 1=ON)
103	1	Comp2Circ1_On	BOOL			R	FALSE		Comp2Circ1_On - Comp.2 circ.1 status (0=OFF, 1=ON)
104	1	Comp1Circ2_On	BOOL			R	FALSE		Comp1Circ2_On - Comp.1 circ.2 status (0=OFF, 1=ON)
105	1	Comp2Circ2_On	BOOL			R	FALSE		Comp2Circ2_On - Comp.2 circ.2 status (0=OFF, 1=ON)
106	1	RelayAlrm	BOOL			R	FALSE		RelayAlrm - Global alarm relay
107	1	CoolHeat	BOOL			R	FALSE		CoolHeat - Unit in heating mode (0=Cooling, 1=Heating)
108	1	FC_Status	BOOL			R	FALSE		FC_Status - Free cooling valve status (0=OFF, 1=ON)
109	1	AFreezeHeat	BOOL			R	FALSE		Frost heater status
110	1	SchedOnOff	BOOL			R	FALSE		Unit ON/OFF command by scheduler (0=On, 1=Off)
111	1	A83	BOOL			R	FALSE		Unit - User delivery water temp. probe common broken or disconnected alarm
112	1	A84	BOOL			R	FALSE		Circuit 2 - User delivery water temp. probe broken or disconnected alarm
113	1	A86	BOOL			R	FALSE		Circuit 2 - Source delivery water temp. probe broken or disconnected alarm
114	1	A85	BOOL			R	FALSE		Circuit 1 - Source delivery water temp. probe broken or disconnected alarm
115	1	Comp1Circ1_FrcOffDev	BOOL			R	FALSE		Comp1Circ1_FrcOffDev - Force OFF comp.1 circ.1
116	1	Comp2Circ1_FrcOffDev	BOOL			R	FALSE		Comp2Circ1_FrcOffDev - Force OFF comp.2 circ.1
117	1	Comp1Circ2_FrcOffDev	BOOL			R	FALSE		Comp1Circ2_FrcOffDev - Force OFF comp.1 circ.2
118	1	Comp2Circ2_FrcOffDev	BOOL			R	FALSE		Comp2Circ2_FrcOffDev - Force OFF comp.2 circ.2
119	1	A87	BOOL			R	FALSE		EVD - Incompatible HW alarm
120	1	SrcFanCirc1_On	BOOL			R	FALSE		SrcFanCirc1_On - Source fan circ.1 status (0=OFF, 1=ON)
121	1	SrcPmp1_On	BOOL			R	FALSE		SrcPmp1_On - Source pump 1 status (0=OFF, 1=ON)
122	1	UsrPmp1_On	BOOL			R	FALSE		UsrPmp1_On - User pump 1 status
123	1	RevVlv_Circ1	BOOL			R	FALSE		RevVlv_Circ1 - Reversing valve for refr. circ.1 (0=Cooling, 1=Heating)
124	1	OilEquVlv_Circ1	BOOL			R	FALSE		Oil equalisation solenoid valve circ.1
125	1	SrcFanCirc2_On	BOOL			R	FALSE		SrcFanCirc2_On - Source fan circ.2 status (0=OFF, 1=ON)
126	1	SrcPmp2_On	BOOL			R	FALSE		Source pump 2 on
127	1	UsrPmp2_On	BOOL			R	FALSE		UsrPmp2_On - User pump 2 status

Index	Size	Acronym	DataType	Min Value	Max Value	R/W	InitValue	UoM	Description
128	1	RevVlv_Circ2	BOOL			R	FALSE		RevVlv_Circ2 - Reversing valve for refr. circ.2 (0=Cooling, 1=Heating)
129	1	OilEquVlv_Circ2	BOOL			R	FALSE		Oil equalisation solenoid valve circ.2
130	1	HeatCool	BOOL			R	TRUE		HeatCool - Unit in cooling mode (0=Heating, 1=Cooling)
131	1	DfrRun_Circ1	BOOL			R	FALSE		Defrost is running on circ.1
132	1	DfrRun_Circ2	BOOL			R	FALSE		Defrost is running on circ.2
133	1	DfrFrcCompDfrPwr_Circ1	BOOL			R	FALSE		Force circ.1 comp. to defrost capacity
134	1	UnitOn	BOOL			R	FALSE		Unit ON/OFF status (0=OFF, 1=ON)
140	1	EVD_CanGo	BOOL			R	FALSE		Enable EVD EVO driver to control superheat
141	1	ManPmpReqCirc1	BOOL			R	FALSE		Request user pump activation by manual-compressor control in circ.1
142	1	CompsManCirc1	BOOL			R	FALSE		Manual status of comp. in circ.1
143	1	FrcOn_Comp1Circ1_Oil-Migr	BOOL			R	FALSE		Force ON comp.1 circ.1 to avoid oil migration
144	1	FrcOn_Comp2Circ1_Oil-Migr	BOOL			R	FALSE		Force ON comp.2 circ.1 to avoid oil migration
145	1	FrcOn_Comp1Circ2_Oil-Migr	BOOL			R	FALSE		Force ON comp.1 circ.2 to avoid oil migration
146	1	FrcOn_Comp2Circ2_Oil-Migr	BOOL			R	FALSE		Force ON comp.2 circ.1 to avoid oil migration
148	1	UsrFlw_Absent	BOOL			R	FALSE		UsrFlw_Absent - User pump flow absent (0=Flow OK, 1=Flow absent)
149	1	En_DscgPPrb_Circ1	BOOL			R	FALSE		En_DscgTempPrb_Circ1 - Connected discharge temp. probe for circ.1
150	1	En_DscgTempPrb_Circ1	BOOL			R	FALSE		En_DscgTempPrb_Circ1 - Connected discharge temp. probe for circ.1
151	1	En_OvldComp1Circ1_Din	BOOL			R	FALSE		Enable comp.1 circ.1 overload input
152	1	UnitCh	BOOL			R	FALSE		Unit is chiller
153	1	UnitHp	BOOL			R	FALSE		Unit is heat pump
154	1	SrcFan1Circ1Status	BOOL			R	FALSE		Source fan circ.1 status (0=OFF, 1=ON)
155	1	SrcFan1Circ2Status	BOOL			R	FALSE		Source fan circ.2 status (0=OFF, 1=ON)
156	1	RegTypPrb	BOOL			R	FALSE		Control probe (0=Return; 1=Delivery)
157	1	En_SuctPPrb_Circ1	BOOL			R	FALSE		En_SuctPPrb_Circ1 - Connected suction press. probe for circ.1
159	1	ACU_PANEL	BOOL			R	FALSE		ACU panel
160	1	En_Circ2	BOOL			R	FALSE		Enable circ.2
161	1	En_Comp2Circ1	BOOL			R	FALSE		Enable compr.2 circ.1
162	1	En_Comp2Circ2	BOOL			R	FALSE		Enable compr.2 circ.2
163	1	En_CompsOnOffCirc1	BOOL			R	FALSE		Enable comp. ON/OFF for circ.1
164	1	En_CompsOnOffCirc2	BOOL			R	FALSE		Enable comp. ON/OFF for circ.2
165	1	En_CondTempPrb_Circ1	BOOL			R	FALSE		Connected cond. temp. probe for circ.1
166	1	En_SuctTempPrb_Circ1	BOOL			R	FALSE		En_SuctTempPrb_Circ1 - Connected suction temp. probe for circ.1
167	1	UsrHeater2	BOOL			R	FALSE		UsrHeater2 - User heater 2 status
168	1	Al_RegulationAlrms	BOOL			R	FALSE		Al_RegulationAlrms - Control alarms
169	1	Al_MiscAlrms	BOOL			R	FALSE		Al_MiscAlrms - Miscellaneous alarms
170	1	Al_SrsCirc1	BOOL			R	FALSE		Al_SrsCirc1 - Serious alarm circ.1
171	1	Al_SrsCirc2	BOOL			R	FALSE		Al_SrsCirc2 - Serious alarm circ.2
172	1	Al_SrsCircs	BOOL			R	FALSE		Al_SrsCircs - Serious alarm circ.1 and circ.2
173	1	RemCmdComp1Circ1	BOOL			R	FALSE		RemCmdComp1Circ1 - Remote comand comp.1 circ.1
174	1	RemCmdComp2Circ1	BOOL			R	FALSE		RemCmdComp2Circ1 - Remote comand comp.2 circ.1
175	1	RemCmdComp1Circ2	BOOL			R	FALSE		RemCmdComp1Circ2 - Remote comand comp.1 circ.2
176	1	RemCmdComp2Circ2	BOOL			R	FALSE		RemCmdComp2Circ2 - Remote comand comp.2 circ.2
178	1	En_RemCmdComp-1Circ1_Din	BOOL			R	FALSE		Enable remote command comp.1 circ.1 input
179	1	En_RemCmdComp-2Circ1_Din	BOOL			R	FALSE		Enable remote command comp.2 circ.1 input
180	1	En_UsrRetWTempPrb	BOOL			R	FALSE		En_UsrRetWTempPrb - Connected user return water temperature probe
181	1	En_UsrDlvWTempPrb	BOOL			R	FALSE		En_UsrDlvWTempPrb - Connected user delivery water temperature probe
183	1	AFreezeHeatUsr_Circ2	BOOL			R	FALSE		Circuit 2 user frost heater status
190	1	Active2ndSetPDin	BOOL			R	FALSE		Second set point input
191	1	CoolHeatDin	BOOL			R	FALSE		Cool/Heat input status (0=Cooling, 1=Heating)
192	1	HiP_Pstat_Circ1	BOOL			R	FALSE		High pressure switch on circ.1
193	1	OvldComp1Circ1	BOOL			R	FALSE		Comp.1 circ.1 overload
194	1	OvldComp2Circ1	BOOL			R	FALSE		Comp.2 circ.1 overload
195	1	RemAlrmDin	BOOL			R	FALSE		Remote alarm
196	1	RemOnOffDin	BOOL			R	FALSE		Remote unit ON/OFF command from digital input (0= OFF, 1=ON)
198	1	UsrPmp1Ovld	BOOL			R	FALSE		User pump 1 overload input logic
199	1	UsrPmp2Ovld	BOOL			R	FALSE		User pump 2 overload input logic
200	1	UnitChOnly	BOOL			R	FALSE		Unit is chiller only
197	1	UnitWW	BOOL			R	FALSE		Unit is WW - FALSE: Unit is not WW, TRUE: Unit is WW
201	1	UnitChHp	BOOL			R	FALSE		Unit is Chiller/Heat pump with reversal of refrigeration cycle
205	1	UnitHpOnly	BOOL			R	FALSE		Unit is heat pump only
202	1	UnitChHp_NotAA	BOOL			R	FALSE		Unit is reverse-cycle but not AA
203	1	UnitChHp_WR	BOOL			R	FALSE		UnitChHp_WR - WW Chiller/Heat pump with reversal on water circuit
206	1	Rev4WayValve_Circ2_Out-STATUS	BOOL			R	FALSE		4WayValve reverse output command for circ 2
204	1	En_AIN_PwrReqPrb_Circ1	BOOL			R	FALSE		Connected analogue capacity request probe on circuit 1
207	1	A88	BOOL			R	FALSE		Circuit 1 - Source fan/pump alarm
209	1	LP_Pstat_Circ1	BOOL			R	FALSE		Low pressure switch on circ.1
210	1	A90	BOOL			R	FALSE		Unit - Power failure

Tab. 7.d



# 8. ALARMS AND SIGNALS

## 8.1 Types of alarms

The controller manages three types of alarms, depending on the reset mode:

- **A - automatic:** the alarm is reset and the device restarts automatically when the alarm condition is no longer present;
- **R - semi-automatic:** if the alarm occurs several times, reset becomes manual and an operator needs to physically restart the device.
- **M - manual:** an operator an operator needs to physically restart the device.

Alarms that require technical service are shown on the display with the flashing spanner icon.

If the spanner icon is on, it means that a device has reached the programmed operating hour threshold, and maintenance is required (the alarm code indicates which device is affected).

For some alarms, the reset mode can be configured by parameter. The configurable alarms are:

- High pressure switch
- Low pressure switch
- Frost protection alarm

User	Code	Description	Def	Min	Max	UOM
M	U081	Pressure-frost alarm reset configuration 0 = high pressure switch, low pressure switch, frost all with manual reset 1 = high pressure switch, low pressure switch, frost all with automatic reset 2 = high pressure and switch and frost with manual reset, low pressure switch with automatic reset 3 = high pressure switch with manual reset, low pressure switch, and frost with automatic reset 4 = high pressure switch and low pressure switch with manual reset, frost with automatic reset 5 = high pressure switch and low pressure switch with semi-automatic reset, frost with automatic reset 6 = high pressure switch and low pressure switch with semi-automatic reset, frost with manual reset 7 = high pressure and switch and frost with manual reset, low pressure switch with semi-automatic reset	7	0	7	-

Tab. 8.a

### 8.1.1 Active alarms

**Note:** the user terminal can only access the active alarms without password protection, or, with password protection, to the alarms relating to unit initialisation and optimisation.

Active alarms are signalled by buzzer and the Alarm button lighting up. Pressing Alarm mutes the buzzer and displays the alarm code (on the top row) and any additional information (on the bottom row). Alarm activation is recorded in the alarm log.

If the alarm is reset automatically, the Alarm button goes off, the alarm code is cleared from the list and the alarm reset event is recorded in the alarm log.

Procedure (alarm acknowledgement):

1. press Alarm: the buzzer is muted, the alarm code is shown on the display;
2. press UP/DOWN to scroll through the list of alarms;
3. when finished, press Esc and then PRG to exit.

#### Procedure



When an alarm is active, the buzzer sounds and the Alarm button lights up



Pressing Alarm mutes the buzzer and displays the alarm code; pressing UP/DOWN scrolls the list of any other alarms.



When reaching the end of the alarm list, "ESC" is shown: press PRG to exit the alarm list.



Pressing the Alarm button for more than 3 s resets the alarms: noAL indicates that there are no more active alarms. Press PRG to exit the alarm list.

A single alarm can be reset by pressing Alarm for more than 3 s. If the condition that generated the alarm is still present, the alarm will be reactivated. The alarm log can be deleted using parameter ClrH, accessible via the Service level on the terminal or APPLICA via smartphone, with BLE connection, using the specific function on the alarm page ("Service" level access). The same operations can be performed with APPLICA via smartphone, using the specific function on the alarm page (a BLE connection and "Service" level access are required).

#### 📌 Notes:

- deletion of the alarm log is irreversible;
- See chapter "Functions" for the alarm parameters: evaporator outlet temperature, frost protection, compressor;
- the buzzer is activated for all alarms.

## 8.1.2 Alarms A48 and A81

On uChiller these alarms signal that there is an alarm on the Power+ inverter relating to circuit 1 (A48) and circuit 2 (A81). When one of the alarms is detected on the Power+, alarm A48 is displayed on uChiller for circuit 1 and/or A81 for circuit 2. Furthermore, these two alarms also report the error code that caused the alarm on the Power+.

For 2-row displays, this code can be viewed using the arrows, once having accessed the alarm list or the alarm log.

If alarm A48 and/or A81 is active, the error code can be seen in Applica mobile, tablet and desktop under parameters PWRP\_ErrCode\_Circ1 and PWRP\_ErrCode\_Circ2 for circuits 1 and 2, respectively.

Otherwise, if the alarm is no longer active, the same code can be viewed in the alarm log from the display, Applica mobile, tablet and desktop. The list of Power+ error codes and their meanings is available in the Power+ manual.

## 8.2 Alarm list

Code	Description	Reset	Effect	Priority	Delay	No. of attempts	Period for eval. (s)
A01	Unit: no. of permanent memory writes	M	-	Fault	No	-	-
A02	Unit: permanent memory writes	M	-	Fault	No	-	-
A03	Unit: remote alarm from digital input	M	Unit shutdown	Serious, unit	No	-	-
A04	Unit: remote set point probe	A	Use standard set point	Fault	10s	-	-
A05	Unit: user return water temperature probe	A	Unit shutdown	Serious, unit	10s	-	-
A06	Unit: user delivery water temperature probe	A	Unit shutdown	Serious, unit	10s	-	-
A08	Unit: user pump 1 overload	M	-	Fault	No	-	-
A09	Unit: user pump 2 overload	M	-	Fault	No	-	-
A10	Unit: flow switch (with user pump 1 active)	M	Unit shutdown	Serious, unit	Par. U045/U046	-	-
A11	Unit: flow switch (with user pump 2 active)	M	Unit shutdown	Serious, unit	Par. U045/U046	-	-
A12	Unit: user pump group	M	Unit shutdown	Serious, unit	No	-	-
A13	Unit: user pump 1 maintenance	A	Fault	Par.	U000	-	-
A14	Unit: user pump 2 maintenance	A	-	Fault	Par. U003	-	-
A15	Unit: high chilled water temperature	A	-	Fault	Par. U032/U033	-	-
A16	Unit: source return water/air temperature probe	A	Disable FC and Compensation (A/W units)	Fault	10s	-	-
A17	Unit: source pump 1 maintenance	A	-	Fault	Par. S000	-	-
A18	Unit: freecooling warning	M	Disable FC	Fault	Par. U032/180s	-	-
A19	Circuit 1: condensing pressure probe	A	Shutdown circuit 1	Serious, circuit 1	10s	-	-
A20	Circuit 1: condensing temperature probe	A	Shutdown circuit 1	Serious, circuit 1	10s	-	-
A21	Circuit 1: evaporation pressure probe	A	Shutdown circuit 1	Serious, circuit 1	10s	-	-
A22	Circuit 1: evaporation temperature probe	A	Shutdown circuit 1	Serious, circuit 1	10s	-	-
A23	Circuit 1: discharge temperature probe	A	Shutdown circuit 1	Serious, circuit 1	10s	-	-
A24	Circuit 1: suction temperature probe	A	Shutdown circuit 1	Serious, circuit 1	10s	-	-
A25	Circuit 1: high pressure switch	Param. U081.	Shutdown circuit 1	Serious, circuit 1	No	-	-
A26	Circuit 1: high condensing pressure/temperature transducer	M	Shutdown circuit 1	Serious, circuit 1	No	-	-
A27	Circuit 1: low pressure transducer	A (R)	Shutdown circuit 1	Serious, circuit 1	No	3	3600
A28	Circuit 1: frost protection temperature	Par. U081	Shutdown circuit 1	Serious, circuit 1	Par. U052	-	-
A29	Circuit 1: low pressure switch	Par. U081	Shutdown circuit 1	Serious, circuit 1	Par. C049, C050	3	3600
A30	Circuit 1: compressor 1 overload	M	Comp. 1 circ. 1 shutdown	Fault, circuit 1	No	-	-
A31	Circuit 1: compressor 2 overload	M	Comp. 2 circ. 1 shutdown	Fault, circuit 1	No	-	-
A32	Circuit 1: compressor 1 maintenance	A	-	Fault, circuit 1	Par. C000	-	-
A33	Circuit 1: compressor 2 maintenance	A	-	Fault, circuit 1	Par. C003	-	-
A34	Circuit 1: source fan maintenance	A	-	Fault, circuit 1	Par. S008	-	-
A35	EVD circuit 1: LowSH	M	Shutdown circuit 1	Serious, circuit 1	Par. E024	-	-

Code	Description	Reset	Effect	Priority	Delay	No. of attempts	Period for eval. (s)
A36	EVD circuit 1: LOP	A	-	Fault, circuit 1	Par. E025	-	-
A37	EVD circuit 1: MOP	A	Shutdown circuit 1	Serious, circuit 1	Par. E026	-	-
A38	EVD circuit 1: motor error	M	Shutdown circuit 1	Serious, circuit 1	No	-	-
A39	EVD circuit 1: emergency closing	A	-	Fault, circuit 1	No	-	-
A40	EVD circuit 1: incomplete valve closing	A	-	Fault, circuit 1	No	-	-
A41	EVD circuit 1: offline	A	Circuit 1 & 2 shutdown	Serious, circuits 1 & 2	30s	-	-
A42	Circuit 1: envelope alarm + zone alarm	A (R)	Shutdown circuit 1	Serious, circuit 1	Par. P003	3	3600
A43	BLDC circuit 1: high pressure differential at start-up	A	Does not allow BLDC 1 to start	Serious, circuit 1	5min	-	-
A44	BLDC circuit 1: failed start-up	A (R)	-	Serious, circuit 1	45s	5	3600
A45	BLDC circuit 1: low pressure differential	A	Shutdown circuit 1	Serious, circuit 1	Par. P004	-	-
A46	BLDC circuit 1: high gas discharge temp.	M	Shutdown circuit 1	Serious, circuit 1	No	-	-
A47	Speed drive 1: offline	A	Shutdown circuit 1 / BLDC 1	Serious, circuit 1	30s	-	-
A48	Speed drive 1: alarm + error code	A (R)	Shutdown circuit 1 / BLDC 1	Serious, circuit 1	No	3	3600
A49	Unit: circuit 2 offline	A	-	Serious, circuit 2	30s	-	-
A50	Unit circuit 2: no. of permanent memory writes	M	-	Fault	No	-	-
A51	Unit circuit 2: permanent memory writes	M	-	Fault	No	-	-
A52	Circuit 2: condensing pressure probe	A	Shutdown circuit 2	Serious, circuit 2	10s	-	-
A53	Circuit 2: condensing temperature probe	A	Shutdown circuit 2	Serious, circuit 2	10s	-	-
A54	Circuit 2: evaporation pressure probe	A	Shutdown circuit 2	Serious, circuit 2	10s	-	-
A55	Circuit 2: evaporation temperature probe	A	Shutdown circuit 2	Serious, circuit 2	10s	-	-
A56	Circuit 2: discharge temperature probe	A	Shutdown circuit 2	Serious, circuit 2	10s	-	-
A57	Circuit 2: suction temperature probe	A	Shutdown circuit 2	Serious, circuit 2	10s	-	-
A58	Circuit 2: high pressure switch	Par. U081	Shutdown circuit 2	Serious, circuit 2	No	-	-
A59	Circuit 2: high condensing pressure/temperature transducer	M	Shutdown circuit 2	Serious, circuit 2	No	-	-
A60	Circuit 2: low pressure transducer	A (R)	Shutdown circuit 2	Serious, circuit 2	No	3	3600
A61	Circuit 2: frost protection temperature	Par. U081	Shutdown circuit 2	Serious, circuit 2	Par. U052	-	-
A62	Circuit 2: low pressure switch	Par. U081	Shutdown circuit 2	Serious, circuit 2	Par. C049, C050	3	3600
A63	Circuit 2: compressor 1 overload	M	Comp. 1 circ. 2 shutdown	Fault, circuit 2	No	-	-
A64	Circuit 2: compressor 2 overload	M	Comp. 2 circ. 2 shutdown	Fault, circuit 2	No	-	-
A65	Circuit 2: compressor 1 maintenance	A	-	Fault	Par. C006	-	-
A66	Circuit 2: compressor 2 maintenance	A	-	Fault	Par. C003	-	-
A67	Circuit 2: source fan maintenance	A	-	Fault	Par. S012	-	-
A68	EVD circuit 2: LowSH	M	Shutdown circuit 2	Serious, circuit 2	Par. E024	-	-
A69	EVD circuit 2: LOP	A	Shutdown circuit 2	Serious, circuit 2	Par. E025	-	-
A70	EVD circuit 2: MOP	A	Shutdown circuit 2	Serious, circuit 2	Par. E026	-	-
A71	EVD circuit 2: motor error	M	Shutdown circuit 2	Serious, circuit 2	No	-	-
A72	EVD circuit 2: emergency closing	A	Shutdown circuit 2	Serious, circuit 2	No	-	-
A73	EVD circuit 2: incomplete valve closing	A	Shutdown circuit 2	Serious, circuit 2	No	-	-
A74	EVD circuit 2: offline	A	Shutdown circuit 2	Serious, circuit 2	30s	-	-
A75	Circuit 2: envelope alarm + zone alarm	A (R)	Shutdown circuit 2	Serious, circuit 2	Par. P003	3	3600
A76	BLDC circuit 2: high pressure differential at start-up	A	BLDC 2 not enabled to start	Serious, circuit 2	5min	-	-
A77	BLDC circuit 2: failed start-up	A (R)	-	Serious, circuit 2	45	5	3600
A78	BLDC circuit 2: low pressure differential	A	Shutdown circuit 2	Serious, circuit 2	P004	-	-
A79	BLDC circuit 2: high gas discharge temp.	M	Shutdown circuit 2	Serious, circuit 2	No	-	-
A80	Speeddrive circuit 2: offline	A	Circuit 2 / BLDC 2 shutdown	Serious, circuit 2	30s	-	-
A81	Speed drive circuit 2: alarm + error code	A (R)	Circuit 2 / BLDC 2 shutdown	Serious, circuit 2	No	3	3600
A85	Source delivery water temperature probe broken or disconnected - circuit 1	A	Shutdown circuit 1	Serious, circuit 1	No	-	-
A87	Unit: EVD Evolution not compatible	A	Unit shutdown	Serious, unit	No	-	-
A88	Circuit 1 - Source fan/pump alarm	M	Shutdown circuit 1	Serious, unit	No	-	-
A89	Circuit 2 - Source fan/pump alarm	M	Shutdown circuit 2	Serious, unit	No	-	-
A90	No power (blackout)	A	Unit shutdown	Serious, unit	No	-	-

**Tab. 8.b**

## 9. TECHNICAL SPECIFICATIONS

Model	UCHBP* (panel models)	UCHBD* (DIN rail models)
<b>Physical specifications</b>		
Dimensions	See figures	See figures
Case	Polycarbonate	Polycarbonate
Assembly	panel	DIN rail
Ball pressure test temperature	125°C	125°C
Ingress protection	IP20 (rear) - IP65 (front)	IP00
Front cleaning	Use soft, non-abrasive cloth and neutral detergent or water	-
<b>Environmental conditions</b>		
Storage conditions	-40T85°C, <90 % RH non-condensing	-40T85°C, <90 % RH non-condensing
Operating conditions	-20T60°C, <90 % RH non-condensing	-20T60°C, <90 % RH non-condensing
<b>Electrical specifications</b>		
Rated power supply	24 Vac/dc (SELV or PELV power supply, Class 2)	24 Vac/dc (SELV or PELV power supply, Class 2)
Operating power supply voltage	24 Vac/dc, +10% -15%	24 Vac/dc, +10% -15%
Input frequency (AC)	50/60 Hz	50/60 Hz
Maximum current draw	600 mA rms	DIN without ExV valve driver: 600 mArms DIN with ExV valve driver: 1.25 Arms
Absorbed power for transformer sizing	15 VA	Models without valve driver: 15 VA Models with valve driver: 30 VA
Clock	precision: ± 50 ppm; min time maintenance after power off: 72 h	precision: ± 50 ppm; min time maintenance after power off: 72 h
Software class and structure	A	A
Pollution degree	3	3
Class of protection against electric shock	To be incorporated in class I or II appliances	To be incorporated in class I or II appliances
Type of action and disconnection	1.C	1.C
Rated impulse voltage	relay outputs: 4 kV; 24 V input: 0.5 kV	relay outputs: 4 kV; 24 V input: 0.5 kV
Surge immunity category	relay outputs: III; input 24V: II	relay outputs: III; input 24V: II
Control device construction	Device to be incorporated	Device to be incorporated
Terminal block	Plug-in male-female. Wire sizes: see the connector table	Plug-in male-female. Wire sizes: see the connector table
Purpose of the controller	Electrical operating control	Electrical operating control
<b>User interface</b>		
Buzzer	integrato	not included on the controller, built into the user terminal
Display	LED 2 rows, decimal point, and multi-function icons	LED 2 rows, decimal point, and multi-function icons
<b>Connectivity</b>		
NFC	Max distance 10mm, variable according to the mobile device used	Max distance 10mm, variable according to the mobile device used
Bluetooth Low Energy	Max distance 10m, variable according to the mobile device used	Max distance 10m, variable according to the mobile device used
BMS serial interface	Modbus over RS485, not opto-isolated	Modbus over RS485, not opto-isolated
FieldBUS serial interface	Modbus over RS485, not opto-isolated	Modbus over RS485, not opto-isolated
HMI interface	Modbus over RS485, not opto-isolated	Modbus over RS485, not opto-isolated
<b>Analogue inputs (Lmax=10m)</b>		
J2 S1, S2, S3: NTC S5: 0-5V ratiometric / 4-20 mA / NTC	NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error:±1°C in the range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1%	NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error:±1°C in the range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1%
J3 S4: 0-5 V ratiometric / 4-20 mA / NTC S6: 0-5 V ratiometric / 0-10V / 4-20 mA / NTC	0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1%; 0-10 V: error 2% fs, typical 1%	0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1%; 0-10 V: error 2% fs, typical 1%
J9 S7: NTC (DIN version only)	-	NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error:±1°C in the range -50T50°C, ±3°C in the range 50T90°C;
<b>Digital inputs (Lmax=10m)</b>		
Model	UCHBP* (panel models)	UCHBD* (DIN rail models)
J2	ID1(*)	Voltage-free contact, not optically-isolated, typical closing current 6 mA, voltage with contact open 13 V, max contact resistance 50Ω (*) Fast digital input: 0-2 kHz; error 2% fs
J2	ID2	
J3	ID3(*), ID4, ID5,	
J9	ID6 - avail. only on DIN vers	

Model	UCHBP* (panel models)	UCHBD* (DIN rail models)
<b>Valve output</b>		
J14	Available only on DIN version	CAREL E*V unipolar valve power supply: 13 Vdc, min winding resistance 40 Ω
<b>Analogue outputs (Lmax=10m)</b>		
J14	Y1, Y2	0...10 Vdc: 10 mA max
<b>Digital outputs (Lmax=10m)</b>		
<p><b>Note:</b> the sum of current draw on NO1, NO2, NO3 and NO4 must not exceed 8 A</p>		
J6	NO1(5A), NO2(5A), NO3(5A), NO4(5A)	5A: EN60730: 5A resistive, 250Vac, 50k cycles; 4(1), 230Vac, 100k cycles; 3 (1), 230Vac, 100k cycles
J7	NO5(5A)	UL60730: 5A resist., 250Vac, 30k cycles; 1FLA, 6LRA, 250Vac, 30k cycles; Pilot Duty C300, 30k cycles
J11	NO6(5A) - only for DIN	250Vac, 30k cycles; Pilot Duty C300, 30k cycles
<b>Emergency powersupply</b>		
J10: Ultracap module (optional, available only on DIN version)	-	13 Vdc ±10%
<b>Probe and terminal powersupply (Lmax=10m)</b>		
5V	5 Vdc ± 2% to power the 0 to 5 V ratiometric probes. Maximum current delivered: 35 mA protected against short-circuits	5 Vdc ± 2% to power the 0 to 5 V ratiometric probes. Maximum current delivered: 35 mA protected against short-circuits
+V	8-11 V to power the 4-20 mA current probes. Maximum current delivered: 80 mA protected against short-circuits	8-11 V to power the 4-20 mA current probes. Maximum current delivered: 80 mA protected against short-circuits
VL	Not used	Not used
J8	User terminal power supply	User terminal power supply
<b>Serialports</b>		
BMS	<ul style="list-style-type: none"> <li>Integrated</li> <li>Protocol: Modbus</li> </ul>	<ul style="list-style-type: none"> <li>Integrated</li> <li>Protocol: Modbus</li> </ul>
Lmax=500 m, shielded cable (RS485 1½ twisted pair) (1)	<ul style="list-style-type: none"> <li>HW driver: asynchronous half duplex RS 485 Circuit 2</li> <li>Not optically-isolated</li> <li>3-pin plug-in connector, 3.81 mm pitch</li> <li>Max data rate: 115200 bit/s</li> <li>Maximum number of connectable devices: 16</li> </ul>	<ul style="list-style-type: none"> <li>HW driver: asynchronous half duplex RS 485 Circuit 2</li> <li>Not optically-isolated</li> <li>3-pin plug-in connector, 3.81 mm pitch</li> <li>Max data rate: 115200 bit/s</li> <li>Maximum number of connectable devices: 16</li> </ul>
FieldBus	<ul style="list-style-type: none"> <li>Integrated</li> <li>HW driver: asynchronous half duplex RS 485 Circuit 1.</li> </ul>	<ul style="list-style-type: none"> <li>Integrated</li> <li>HW driver: asynchronous half duplex RS 485 Circuit 1.</li> </ul>
J5: Lmax=10 m, shielded cable (RS485 1½ twisted pair) (1)	<ul style="list-style-type: none"> <li>Typical reception resistance 96 kohms, equal to 1/8 of unit load, i.e. 1/256 of maximum load applicable on the line</li> <li>Not optically-isolated</li> <li>Max data rate: 19200 bit/s</li> <li>Maximum number of connectable devices: 16</li> <li>Protocol: Modbus RTU</li> </ul>	<ul style="list-style-type: none"> <li>Typical reception resistance 96 kohms, equal to 1/8 of unit load, i.e. 1/256 of maximum load applicable on the line</li> <li>Not optically-isolated</li> <li>Max data rate: 19200 bit/s</li> <li>Maximum number of connectable devices: 16</li> <li>Protocol: Modbus RTU</li> </ul>
<b>Cable lengths</b>		
Analogue inputs/outputs, digital inputs/outputs, probe power	<10m (*) (*) in the panel version, if using the +13 V power supply in domestic environments, the maximum cable length is 2 m.	
Valve	< 2 m, < 9 m with shielded cable	< 2 m, < 9 m with shielded cable
BMS and Fieldbus serial cables	<500m with shielded cable	<500m with shielded cable
<b>Conformity</b>		
Electrical safety	EN/UL 60730-1, EN/UL 60335-1	EN/UL 60730-1, EN/UL 60335-1
Electromagnetic compatibility	EN 61000-6-1, EN 61000-6-2, EN 61000-6-3, EN 61000-6-4	EN 61000-6-1, EN 61000-6-2, EN 61000-6-3, EN 61000-6-4
Applications with flammable refrigerant gases	EN/UL 60079-15, EN/UL 60335-2-34, EN/UL 60335-2-40, EN/UL 60335-2-89	EN/UL 60079-15, EN/UL 60335-2-34, EN/UL 60335-2-40, EN/UL 60335-2-89
Wireless compliance	RED, FCC, IC	RED, FCC, IC

**Tab. 9.a**

**Note:** (1) it is recommended to use a BELDEN 8761 cable (AWG 22).

## 9.1 Connector/cable table

Ref.	Description	Wiring terminals	Wire cross-section (mm <sup>2</sup> )	Lmax (m)
J1	Controller power supply	Panel model: plug-in terminal, screw, 2-pin, pitch 5.08 DIN rail model: plug-in terminal, screw, 2-pin, pitch 5.08	0.5...1.5 0.21...3.31	10 10
J2	Inputs S1, S2, S3, S5, ID1, ID2; outputs Y2, Y2	10-pin Microfit crimp connector	0.05...0.52	10
J3	Inputs S4, S6, ID3, ID4, ID5	8-pin Microfit crimp connector	0.05...0.52	10
J4	BMS	Plug-in screw terminal, 3-pin, pitch 3.81	0.081...1.31	500
J5	Fbus	Plug-in screw terminal, 3-pin, pitch 3.81	0.081...1.31	10
J6	Outputs NO1, NO2, NO3, NO4	6-pin Microfit crimp connector	0.5...1.31	10
J7	Output NO5	3-pin Microfit crimp connector	0.5...1.31	10
J8	Unit terminal	Connection cable P/N: ACS00CB000010 (L=3m)-/20 (L=1.5m)	0.13	2 (*)
J9	Inputs S7, ID6	4-pin Microfit crimp connector	0.05...0.52	10
J10	Ultracap	3-pin JST connector	0.13	2
J11	Output NO6	3-pin Microfit crimp connector	0.5...1.31	10
J14	Unipolar ExV valve	CAREL ExV unipolar valve connector, pre-wired	-	2, 6 with shielded cable

Tab. 9.b

(\*) device to be incorporated.

## 10. RELEASE NOTES

The information and functions described in this manual refer to uChiller versions 3.3.4 or higher.



# CAREL

---

CAREL INDUSTRIES - Headquarters

Via dell'Industria, 11 - 35020 Brugine - Padova (Italy)

Tel. (+39) 049.9716611 - Fax (+39) 049.9716600

e-mail: [carel@carel.com](mailto:carel@carel.com) - [www.carel.com](http://www.carel.com)

µchiller +0300053EN rel. 2.3 - 12.07.2022